 


APPLICATION TOOLING

Crimping tools and machines

 
Crimping tools and machines

The arrow mark indicates the press that is applicable to the applicator.

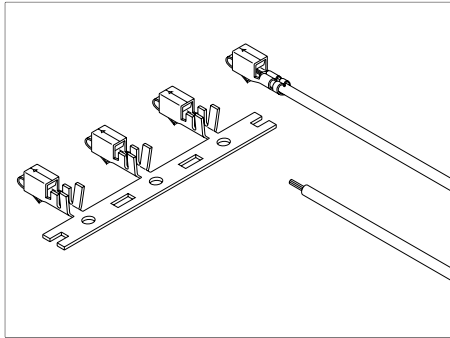

Strip-crimp applicator for side feeding terminals

MKS-SC

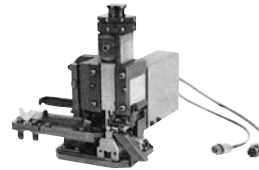

Crimping applicator for end-feeding terminals

 
MK-L



Semi-automatic press

Semi-automatic crimping machines (presses) contact a wire to a chain terminal each time a footswitch is pressed.


AP-K2N

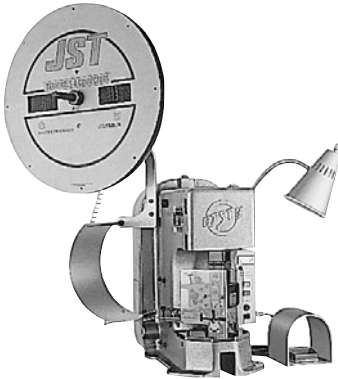

- Dimensions:
(W×L×H) 280×480×505mm
- Weight:
Approx. 90kg(198lb)
- Power source:
100V AC, Single-phase 50/60Hz
- Pressure output:
14.7kN[1,500kg(3307lb)]
- Dies:
Applicator replacement

Crimping applicator for side-feeding terminals

 MKS-L

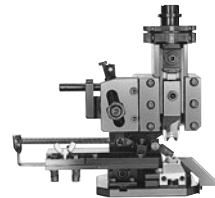


Crimping applicator for end-feeding flag terminals

MKF-L



Compact crimping applicator for side-feeding terminals

 MKS-LS

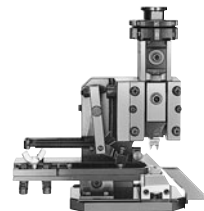

Terminals and parts model number in alphabetical order	Hand tools						Extraction and Insertion tools	
	for chain terminals	for loose piece terminals					Extraction tool	Insertion tool
	YRS series	YC series	YRM series	YRF series	YRK series	YRK-EX series		
								
	Dimensions: (W×L) 59×224mm	Dimensions: (W×L) 70×296mm	Dimensions: (W×L) 59×224mm	Dimensions: (W×L) 70×295mm 80×305mm	Dimensions: (W×L×D) 75×314×25mm	Dimensions: (W×L×D) 75×314×25mm		
	Crimping tools It is the manual tool that is convenient to terminate very small quantity of contacts for prototype or maintenance. It is composed of two crimping dies for the conductor and insulation, and can be crimp easily. YRK and YRK-EX can be used for mass-production. Note: (1) These tools are for prototype tooling or repair. (2) YC tool has two crimping sections (A and B). YRS tool has also two crimping sections by inverting upper dies. Be sure to check applicable wires before use. Since the dies are fixed, the crimping height cannot be adjusted. Therefore, some of the applicable wires described in this catalog may not be crimped properly. Before use, check for proper crimping (such as tensile strength, terminal/contact deformation). (3) These tools are not applicable to 2-wire crimping. (4) When hand crimping board-in terminals (SAN, SCM, SDN, SGN, SIN, SJN, SZN), care should be taken not to contaminate the solder tails of the terminals, as with greasy or oily fingers. If a solder problem arises, some cleaning of the tips of the terminal is advisable. (5) WC and JUC hand tools are provided by J.S.T.(U.K.) LTD. and contact them about the details of these hand tools.							
	YRS series	YC series	YRM series	YRF series	YRK · YRK-EX series		WC & JUC series JUK's Hand Tools	Terminal in loose form model No.
JK-SP/SS2***	YRS-370	—	—	—	—		—	—
J-SP/SS1***	YRS-440	YC-440	—	—	—		—	J-BP/BS1***
J-SP/SS2***	YRS-330	—	—	—	—		—	—
LFO-1.0-250N	—	—	—	—	—		JUCS-FO	—
LFO-2.5-250N	—	—	—	—	—		JUCS-FO	—
MD-SP12**	YRS-470	—	—	—	—		—	MEJ-06
MD-SP22**	YRS-460	—	—	—	—		—	MEJ-06
RA-SC1290	YRS-231	—	YRM-232 YRM-233	—	—		—	RA-BC12**
RF-SC22**	—	—	YRM-230	—	—		—	RF-BC22**
RPJ-SP/SS2331	YRS-331	—	—	—	—		—	—
SAA-21(T)-**	—	YC-141	—	—	—		—	LAA-21(T)-**
SAA-50(T)-**	—	YC-182	—	—	—		—	LAA-50(T)-**
SAA-51(T)-**	—	YC-142	—	—	—		—	LAA-51(T)-**
SAB-51(T)-**	—	YC-142	—	—	—		—	LAB-51(T)-**
SACH-003G-P0.2	YRS-1190	—	—	—	—		—	—
SACH-002GU-P0.3	YRS-858	—	—	—	—		—	—
SAN-002T-0.8A SAN-002T-0.8K	YRS-220	—	—	—	—		—	—
SBH-001T-P0.5	—	YC-670R	—	—	—		WC-670	BBH-001T-P0.5
SBHL-002T-P0.5	YRS-857	—	—	—	—		—	—
SBHM-001T-P0.5	—	YC-670R	—	—	—		—	BBHM-001T-P0.5
SBHS-002T-P0.5A	YRS-852	—	—	—	—		—	EJ-BHS2
SBHS-002T-P0.5A	—	—	—	—	—		—	EJ-BHS2
SBHSM-002T-P0.5	YRS-854	—	—	—	—		—	—
SBHT-002T-P0.5	YRS-856 YRS-857	—	—	—	—		—	—
SBN-001T-1.0	YRS-170	YC-170R	—	—	—		—	BBN-001T-1.0

Note: Contact JST for wire range.

Crimping tools

Terminals and parts model number in alphabetical order	Hand tools						Hand tools		Extraction and Insertion tools	
	for chain terminals	for loose piece terminals					for loose piece terminals		Extraction tool	Insertion tool
	YRS series	YC series	YRM series	YRF series	YRK · YRK-EX series		WC & JUC series JUK's Hand Tools	Terminal in loose form model No.		
SCN-001T-1.0K SCN-001T-P1.0	YRS-191	YC-191R	—	—	—		WC-191	BCN-001T-1.0K BCN-001T-P1.0	—	—
SCS-41T-2.3	—	—	—	—	—		—	—	CSJ-23	—
SCZH-002T-P0.5	YRS-492	—	—	—	—		—	—	—	—
SDF-01T-1.0A	—	YC-045	—	—	—		—	LDF-01T-1.0A	—	—
SDF-01T-1.3AS	—	YC-045	—	—	—		—	LDF-01T-1.3AS	—	—
SDN-21T-P1.5	—	YC-600R	—	—	—		—	BDN-21T-P1.5	—	—
SDY-01T-P1.6ASV	—	YC-525R	—	—	—		—	BDY-01T-P1.6ASV	SLJ-1.4	—
SEH-001T-P0.6	YRS-260	YC-260R	—	—	—		WC-260	BEH-001T-P0.6	—	—
SF1F-002(*)-P0.6	—	—	—	—	YRK-1220		—	—	EJ-JFAJ1100	—
SF1M-002(*)-M0.6A	—	—	—	—	YRK-1220		—	—	EJ-JFAJ1100	—
SF1F-21(*)-P0.6	—	—	—	—	YRK-1210		—	—	EJ-JFAJ1100	—
SF1M-21(*)-M0.6A	—	—	—	—	YRK-1210		—	—	EJ-JFAJ1100	—
SF3F-002(*)-P2.0	—	—	—	YRF-882	YRK-8821		—	BF3F-002(*)-P2.0	EJ-JFAJ3	—
SF3F-01(*)-P2.0	—	—	—	YRF-881	YRK-8811		—	BF3F-01(*)-P2.0	EJ-JFAJ3	—
SF3M-01(*)-M2.0N	—	—	—	YRF-881	YRK-8811		—	BF3M-01(*)-M2.0N	EJ-JFAJ3	—
SF3F-41(*)-P2.0	—	—	—	YRF-880	YRK-8801		—	LF3F-41(*)-P2.0	EJ-JFAJ3	—
SF3M-41(*)-M2.0N	—	—	—	YRF-880	YRK-8801		—	LF3M-41(*)-M2.0N	EJ-JFAJ3	—
SF3F-71(*)-P2.0	—	—	—	YRF-1070	YRK-1071		—	BF3F-71(*)-P2.0	EJ-JFAJ3	—
SF3M-71(*)-M2.0N	—	—	—	YRF-1071	YRK-1071		—	BF3M-71(*)-M2.0N	EJ-JFAJ3	—
SFO-41(T)-187N(-8)	—	YC-271	—	—	—		—	LFO-41(T)-187N	—	—
SFO-61(T)-250A	—	YC-270	—	—	—		—	LFO-61(T)-250A	—	—
SFPS-61T-250	—	YC-272	—	—	—		—	LFPS-61(T)-250	—	—
SFT-61T-250N	—	YC-510	—	—	—		—	LFT-61T-250N	—	—
SGF-41(T)-4	—	YC-055	—	—	—		—	LGF-41(T)-4	—	—
SGF-51(T)-5	—	YC-065	—	—	—		—	LGF-51(T)-5 LGF-51(T)-5A	—	—
SGM-51T-5	—	YC-056	—	—	—		—	LGM-51T-5	—	—
SHCM-A03T-P025	YRS-960	—	—	—	—		WC-SHCM-A03	—	—	—
SHF-001T-0.8BS	YRS-122	YC-122R	—	—	—		WC-122	BHF-001T-0.8BS	—	—
SHF-002T-0.8BS	YRS-300	—	—	—	—		—	—	—	—
SHR-001T-P0.6	YRS-580	YC-580R	—	—	—		—	BHR-001T-P0.6	—	—
SIM-01(T)-110A	—	YC-054	—	—	—		—	LIM-01(T)-110A	—	—
SIM-1.0-250D/N	—	—	—	—	—		JUCS-IM	—	—	—
SIM-2.5-250D/N	—	—	—	—	—		JUCS-IM	—	—	—
SIM-41(T)-110B	—	YC-067	—	—	—		—	LIM-41(T)-110B	—	—
SIM-51(T)-250N	—	YC-321	—	—	—		—	LIM-51(T)-250N	—	—
SIN-001T-1.2	YRS-034	—	—	—	—		—	—	—	—
SIN-002T-1.0S	YRS-035	—	—	—	—		—	—	—	—
SIN-01T-1.2	—	YC-340R	—	—	—		—	LIN-01T-1.2	—	—
SIN-01T-1.8	—	YC-032	—	—	—		—	LIN-01T-1.8	—	—
SIN-01T-1.8N	—	YC-032	—	—	—		—	LIN-01T-1.8N	—	—
SIN-21T-1.8	—	YC-350	—	—	—		—	LIN-21T-1.8	—	—
SIN-21T-1.8S	—	YC-570 YC-571	—	—	—		—	LIN-21T-1.8S	—	—
SIN-61T-2.6S	—	YC-560	—	—	—		—	LIN-61T-2.6S	—	—
SIN-81T-3.6S	—	YC-940	—	—	—		—	LIN-81T-3.6S	—	—

Note: Contact JST for wire range.

Crimping tools

Terminals and parts model number in alphabetical order	Hand tools						Hand tools		Extraction and Insertion tools	
	for chain terminals	for loose piece terminals					for loose piece terminals		Extraction tool	Insertion tool
		YRS series	YC series	YRM series	YRF series		WC & JUC series JUK's Hand Tools	Terminal in loose form model No.		
SJ2F-002GF-P1.0	YRS-8851	—	—	—	—	YRK-8851	—	—	EJ-JFAJ2N	—
SJ2M-002GF-M1.0N	YRS-8851	—	—	—	—	YRK-8851	—	—	EJ-JFAJ2N	—
SJ2F-01GF-P1.0	YRS-8861	—	—	—	—	YRK-8861	—	—	EJ-JFAJ2N	—
SJ2M-01GF-M1.0N	YRS-8861	—	—	—	—	YRK-8861	—	—	EJ-JFAJ2N	—
SJ2M-01GF-M1.0S	YRS-8861	—	—	—	—	YRK-8861	—	—	EJ-JFAJ2N	—
SJ2F-21GF-P1.0	—	—	—	—	YRF-1120	YRK-1120	—	LJ2F-21GF-P1.0	EJ-JFAJ2N	—
SJ2M-21GF-M1.0N	—	—	—	—	YRF-1120	YRK-1120	—	LJ2M-21GF-M1.0N	EJ-JFAJ2N	—
SJ4F-71GF-M3.0	—	—	—	—	YRF-1130	—	—	BJ4F-71GF-M3.0	EJ-JFAJ4	—
SJ4F-81GF-M3.0	—	—	—	—	YRF-1370	—	—	BJ4F-81GF-M3.0	EJ-JFAJ4	—
SJ5F-71GF-M6.5	—	—	—	—	YRF-888	—	—	LJ5F-71GF-M6.5	EJ-JFAJ5	—
SJ5M-71GF-M6.5	—	—	—	—	YRF-888	—	—	LJ5M-71GF-M6.5	EJ-JFAJ5	—
SJ5F-81GF-M6.5	—	—	—	—	YRF-889	—	—	LJ5F-81GF-M6.5	EJ-JFAJ5	—
SJ5M-81GF-M6.5	—	—	—	—	YRF-889	—	—	LJ5M-81GF-M6.5	EJ-JFAJ5	—
SJ5F-91GF-M6.5	—	—	—	—	—	—	—	LJ5F-91GF-M6.5	EJ-JFAJ5	—
SJ5M-91GF-M6.5	—	—	—	—	—	—	—	LJ5M-91GF-M6.5	EJ-JFAJ5	—
SJN-001PT-0.9	YRS-1181	—	—	—	—	—	—	—	—	—
SJN-002PT-0.9	YRS-036	—	—	—	—	—	—	—	—	—
SLC-21T-2.0	—	YC-310	—	—	—	—	WC-310	LLC-21T-2.0	—	—
SLF/M-01T-P1.3E	—	YC-202	YRM-201	—	—	—	WC-202	LLF/M-01T-P1.3E	LEJ-13	LIT-2013
SLF/M-41T-P1.3E	—	YC-203	—	—	—	—	WC-203	LLF/M-41T-P1.3E	LEJ-13	—
SMF-01T-1.0	—	YC-081	—	—	—	—	—	LMF-01T-1.0	—	—
SMF-01T-1.3	—	YC-082	—	—	—	—	—	LMF-01T-1.3	—	—
SMM-003T-P0.5	YRS-800	—	—	—	—	—	WC-800	—	—	—
SMR-001T-0.6	YRS-580	YC-580R	—	—	—	—	—	BMR-001T-0.6	HRWJ	—
SOM-21(T)-187	—	YC-680	—	—	—	—	—	LOM-21(T)-187	—	—
SOM-51(T)-250	—	YC-066	—	—	—	—	WC-066	LOM-51(T)-250	—	—
SPA-001T-P0.5	—	YC-610R YC-611R	—	—	—	—	—	BPA-001T-P0.5	EJ-PH	—
SPAL-001T-P0.5	—	YC-610R YC-611R	—	—	—	—	—	BPAL-001T-P0.5	EJ-PAL	—
SPAL-002T-P0.5	YRS-1340	—	—	—	—	—	—	—	EJ-PAL	—
SPB-1.0-250N-S	—	—	—	—	—	—	JUCS-PB	—	—	—
SPB-2.5-250N-S	—	—	—	—	—	—	JUCS-PB	—	—	—
SPF-01T-2.5C	—	YC-043R	—	—	—	—	—	LPF-01T-2.5C	—	—
SPH-001T-P0.5L	YRS-245	—	—	—	—	—	—	—	—	—
SPH-002T-P0.5L	YRS-241	—	—	—	—	—	—	—	EJ-PH	—
SPH-002T-P0.5S	YRS-240	—	YRM-240	—	—	—	WC-240	BPH-002T-P0.5S	EJ-PH	—
SPH-004T-P0.5S	YRS-243	—	—	—	—	—	—	—	EJ-PH	—
SPHD-001T-P0.5	—	YC-610R YC-611R	—	—	—	—	WC-610	BPHD-001T-P0.5	EJ-PHD	—
SPHD-002T-P0.5	YRS-620	—	YRM-620	—	—	—	WC-620	BPHD-002T-P0.5	EJ-PHD	—
SPND-001T-C0.5	YRS-1091	—	—	—	—	—	—	—	EJ-PND	—
SPND-002T-C0.5	YRS-1090	—	—	—	—	—	—	—	EJ-PND	—
SPS-01T-110	—	YC-740	—	—	—	—	WC-740	LPS-01T-110	—	—
SPS-01T-187(-8)	—	YC-730 YC-731	—	—	—	—	WC-730	LPS-01T-187(-8)	EJ-PS187	—
SPS-21T-205(-5)	—	YC-760	—	—	—	—	—	LPS-21T-205(-5)	—	—

Note: Contact JST for wire range.

Crimping tools

Terminals and parts model number in alphabetical order	Hand tools						Hand tools		Extraction and Insertion tools	
	for chain terminals	for loose piece terminals					for loose piece terminals		Extraction tool	Insertion tool
	YRS series	YC series	YRM series	YRF series	YRK · YRK-EX series		WC & JUC series JUK's Hand Tools	Terminal in loose form model No.		
SPS-21T-250	–	YC-780	–	–	–		WC-780	LPS-21T-250	EJ-PS250	–
SPS-21T-250S	–	YC-780	–	–	–		WC-780	LPS-21T-250S	EJ-PS250	–
SPS-41T-110	–	YC-750 YC-751	–	–	–		WC-750	LPS-41T-110	–	–
SPS-51T-187(-8)	–	YC-710 YC-711	–	–	–		WC-710	LPS-51T-187(-8)	EJ-PS187	–
SPS-51T-205	–	YC-770 YC-771	–	–	–		–	LPS-51T-205	–	–
SPS-61T-250	–	YC-720	–	–	–		WC-720	LPS-61T-250	EJ-PS250	–
SPS-61T-250S	–	YC-721	–	–	–		–	LPS-61T-250S	EJ-PS250	–
SPS-91T-250	–	–	–	YRF-790	–		–	BPS-91T-250	EJ-PS250	–
SPS-91T-250S	–	–	–	YRF-791	–		–	BPS-91T-250S	EJ-PS250	–
SPUD-001T-P0.5	YRS-1320	–	–	–	–		–	–	–	–
SRA-20(T)-**	–	YC-181	–	–	–		–	LRA-20(T)-**	–	–
SRA-21(T)-**	–	YC-141	–	–	–		–	LRA-21(T)-**	–	–
SRA-50(T)-**	–	YC-182	–	–	–		–	LRA-50(T)-**	–	–
SRA-51(T)-**	–	YC-142	–	–	–		–	LRA-51(T)-**	–	–
SRB-1.0(-)	–	–	–	–	–		JUCS-RB/RT	–	–	–
SRB-2.5(-)	–	–	–	–	–		JUCS-RB/RT	–	–	–
SRB-51(T)-**	–	YC-142	–	–	–		–	LRB-51(T)-**	–	–
SRC-01(T)-**	–	YC-033	–	–	–		–	LRC-01(T)-**	–	–
SRC-50(T)-**	–	YC-183	–	–	–		–	LRC-50(T)-**	–	–
SRC-51(T)-**	–	YC-142	–	–	–		–	LRC-51(T)-**	–	–
SRF-51(T)-**	–	YC-142	–	–	–		–	LRF-51(T)-**	–	–
SRT-1.0(-)	–	–	–	–	–		JUCS-RB/RT	–	–	–
SRT-2.5(-)	–	–	–	–	–		JUCS-RB/RT	–	–	–
SRT-51T-**	–	YC-143R	–	–	–		–	LRT-51T-**	–	–
SRWF-01GG-M0.6	–	–	–	–	–		–	–	EJ-RPZ	–
SRWM-01GG-S0.6	–	–	–	–	–		–	–	EJ-RPZ	–
SRWF-21GG-M0.6	–	–	–	–	–		–	–	EJ-RPZ	–
SRWM-21GG-S0.6	–	–	–	–	–		–	–	EJ-RPZ	–
SRWF-61GG-M0.6	–	YC-840R	–	–	–		–	BRWF-61GG-M0.6	EJ-RPZ	–
SRWM-61GG-S0.6	–	YC-840R	–	–	–		–	BRWM-61GG-S0.6	EJ-RPZ	–
SSH-003T-P0.2-H	YRS-859	–	–	–	–		WC-SH2832	–	–	–
SSH-003GA-P0.2	YRS-859	–	–	–	–		WC-SH2832	–	–	–
SSHL-002T-P0.2	YRS-1140	–	–	–	–		WC-GH2630	–	–	–
SSHL-003T-P0.2	YRS-859	–	–	–	–		WC-SH2832	–	–	–
SSHL-003GA1-P0.2	YRS-859	–	–	–	–		WC-SH2832	–	–	–
SSF/M-01T-P1.4	–	YC-500	–	–	–		–	BSF/M-01T-P1.4	SLJ-1.4	ITBL-08V
SSF/M-21T-P1.4	–	YC-550	–	–	–		WC-550	BSF/M-21T-P1.4	SLJ-1.4	–
STI-01(T)-110N	–	YC-041	–	–	–		–	LTI-01(T)-110N	–	–
STI-1.0-250D/N	–	–	–	–	–		JUCS-TI	–	–	–
STI-2.5-250D/N	–	–	–	–	–		JUCS-TI	–	–	–
STI-41(T)-110N	–	YC-063	–	–	–		–	LTI-41(T)-110N	–	–
STI-51(T)-250N	–	YC-322	–	–	–		–	LTI-51(T)-250N	–	–
STO-01(T)-110N(-8)	–	YC-041	–	–	–		–	LTO-01(T)-110N(-8)	–	–
STO-01(T)-187N(-8)	–	YC-042	–	–	–		–	LTO-01(T)-187N(-8)	–	–

Note: Contact JST for wire range.

Crimping tools

Terminals and parts model number in alphabetical order	Hand tools						Hand tools		Extraction and Insertion tools	
	for chain terminals	for loose piece terminals				for loose piece terminals			Extraction tool	Insertion tool
		YRS series	YC series	YRM series	YRF series	YRK · YRK-EX series		WC & JUC series JUK's Hand Tools		
STO-0.25-110N	–	YC-810	–	–	–		–	–	–	–
STO-0.5-110N	–	YC-820	–	–	–		JUCS-05110	–	–	–
STO-1.0-110N	–	–	–	–	–		JUCS-2.8/4.8	–	–	–
STO-1.0-187N	–	–	–	–	–		JUCS-2.8/4.8	–	–	–
STO-1.0-250N	–	–	–	–	–		JUCS-6.3	–	–	–
STO-2.5-250N	–	–	–	–	–		JUCS-6.3	–	–	–
STO-21(T)-205N	–	YC-053	–	–	–		–	LTO-21(T)-205N	–	–
STO-21(T)-250N	–	YC-102	–	–	–		–	LTO-21(T)-250N	–	–
STO-41(T)-110N(-8)	–	YC-062	–	–	–		–	LTO-41(T)-110N(-8)	–	–
STO-41(T)-187N(-8)	–	YC-051	–	–	–		–	LTO-41(T)-187N(-8)	–	–
STO-41T-187S	–	YC-064	–	–	–		–	LTO-41T-187S	–	–
STO-61(T)-250N	–	YC-047	–	–	–		–	LTO-61(T)-250N	–	–
STO-81(T)-250N	–	YC-280	–	YRF-280	–		–	LTO-81(T)-250N	–	–
STS/D-002GG-P0.6	YRS-1360	–	–	–	–		–	–	–	–
SVA-41T-P1.1	–	YC-450	–	–	–		–	BVA-41T-P1.1	EJ-SMP	–
SVF-01T-1.5A	–	YC-044	–	–	–		–	LVF-01T-1.5A	–	–
SVF-01T-1.5N	–	YC-151	–	–	–		–	LVF-01T-1.5N	–	–
SVF-01T-2.36N	–	YC-152	–	–	–		–	LVF-01T-2.36N	EJ-LV	–
SVF-42T-P2.0	–	YC-592	–	–	–		WC-592	BVF-42T-P2.0	VLJ-20	–
SVM-42T-P2.0	–	YC-593	–	–	–		WC-592	BVM-42T-P2.0	VLJ-20	–
SVF/M-61T-P2.0	–	YC-590	–	YRF-590	–		WC-590	BVF/M-61T-P2.0	VLJ-20	–
SVF/M-81T-P2.0	–	–	–	YRF-591	–		WC-591	BVF/M-81T-P2.0	VLJ-20	–
SVH-21T-P1.1	–	YC-160R YC-161R YC-164R	YRM-160 – YRM-164	–	–		WC-160	BVH-21T-(P)1.1	EJ-NV	–
SVH-41T-P1.1	–	YC-930R YC-931R	–	–	–		WC-930	BVH-41T-P1.1	–	–
SVT-41T-P1.1	–	YC-630	–	–	–		–	BVT-41T-P1.1	EJ-VT	–
SVU-21T-P0.6	–	YC-990R	–	–	–		–	BVU-21T-P0.6	EJ-VU4	–
SVYF-61T-P0.5A	–	–	–	YRF-536	–		–	–	–	–
SWPJT-21T-P0.5	–	–	–	–	–		–	–	EJ-WPJ	–
SWPJT-21T-P0.5A	–	–	–	–	–		–	–	EJ-WPJ	–
SWPJR-21T-M0.5	–	–	–	–	–		–	–	EJ-WPJ	–
SWPKP-21T-0.6	–	–	–	YRF-1051	–		–	BWPKP-21T-0.6	–	–
SWPKR-21T-0.6	–	–	–	YRF-1050	–		–	BWPKR-21T-0.6	–	–
SWPR-001T-P025	YRS-980	–	–	–	–		WC-JWPF	–	EJ-JWPF	–
SWPT-001T-P025	YRS-980	–	–	–	–		WC-JWPF	–	EJ-JWPF	–
SXA-01T-P0.6	YRS-701	YC-701R	–	–	–		WC-700M	BXA-01T-P0.6	EJ-XMP	–
SXM-01T-P0.6	YRS-701	YC-701R	–	–	–		–	BXM-01T-P0.6	EJ-XMP	–
SXA-001T-P0.6	YRS-692	YC-692R	–	–	–		–	BXA-001T-P0.6	EJ-XMP, EJ-XMR	IT-XA
SXM-001T-P0.6	YRS-692	YC-692R	–	–	–		–	BXM-001T-P0.6	EJ-XMP, EJ-XMR	IT-XA

Note: Contact JST for wire range.

Crimping tools

Terminals and parts model number in alphabetical order	Hand tools						Hand tools		Extraction and Insertion tools	
	for chain terminals	for loose piece terminals					for loose piece terminals		Extraction tool	Insertion tool
		YRS series	YC series	YRM series	YRF series		WC & JUC series JUK's Hand Tools	Terminal in loose form model No.		
SXA-001T-P0.6L	YRS-691	—	—	—	—		WC-691	—	—	—
SXAM-01T-P0.6	YRS-701	YC-701R	—	—	—		WC-700M	BXAM-01T-P0.6	—	—
SXAM-001T-P0.6	YRS-692	YC-692R	—	—	—		—	BXAM-001T-P0.6	—	—
SXF-01T-P0.7	—	YC-251	—	—	—		—	BXF-01T-(P)0.7	LEJ-7	—
SXF-41T-P0.7	—	YC-252	—	—	—		—	BXF-41T-(P)0.7	LEJ-7	—
SXH-001T-P0.6	YRS-110	YC-110R YC-111R	—	—	—		WC-110	BXH-001T-P0.6	XJ-06	—
SXH-001T-P0.6N	—	—	—	—	—		—	—	XJ-06	—
SXH-002T-P0.6	YRS-480	—	—	—	—		—	—	XJ-06	—
SXNI-001T-P0.6	YRS-1380	—	—	—	—		—	—	—	—
SXNI-003T-P0.6	YRS-1390	—	—	—	—		—	—	—	—
SYF-001T-P0.6	YRS-125	—	—	—	—		—	—	—	—
SYF/M-01T-P0.5A	—	YC-520	—	—	—		WC-520	BYF/M-01T-P0.5A	YLJ-0.5	—
SYF/M-41T-P0.5A	—	YC-530	—	—	—		WC-530	BYF/M-41T-P0.5A	YLJ-0.5	—
SYF-61T-P0.5A	—	—	—	YRF-536	—		—	—	—	—
SYM-001T-P0.6	YRS-121	YC-121R	—	—	—		WC-121	BYM-001T-P0.6	SMJ-06	—
SYM-01T-P0.7	—	YC-251	—	—	—		—	BYM-01T-(P)0.7	LEJ-7	—
SYM-41T-P0.7	—	YC-252	—	—	—		—	BYM-41T-(P)0.7	LEJ-7	—
SZE-002T-P0.3	YRS-1300	—	—	—	—		—	—	—	—
SZE-003T-P0.3	YRS-1330	—	—	—	—		—	—	—	—
SZF/M-01T-P0.7	—	YC-390R	—	—	—		—	BZF/M-01T-(P)0.7	ZLJ-07S	—
SZF/M-41T-P0.7	—	YC-380R	—	—	—		—	BZF/M-41T-(P)0.7	ZLJ-07S	—
SZH-002T-P0.5	YRS-491	—	—	—	—		WC-491	—	—	—
SZH-003T-P0.5	YRS-490	—	—	—	—		WC-490	—	—	—
SZN-002T-P0.7K	YRS-541	—	—	—	—		—	—	—	—
SZN-003T-P0.7K	YRS-540	—	—	—	—		—	—	—	—

Note: Contact JST for wire range.

