




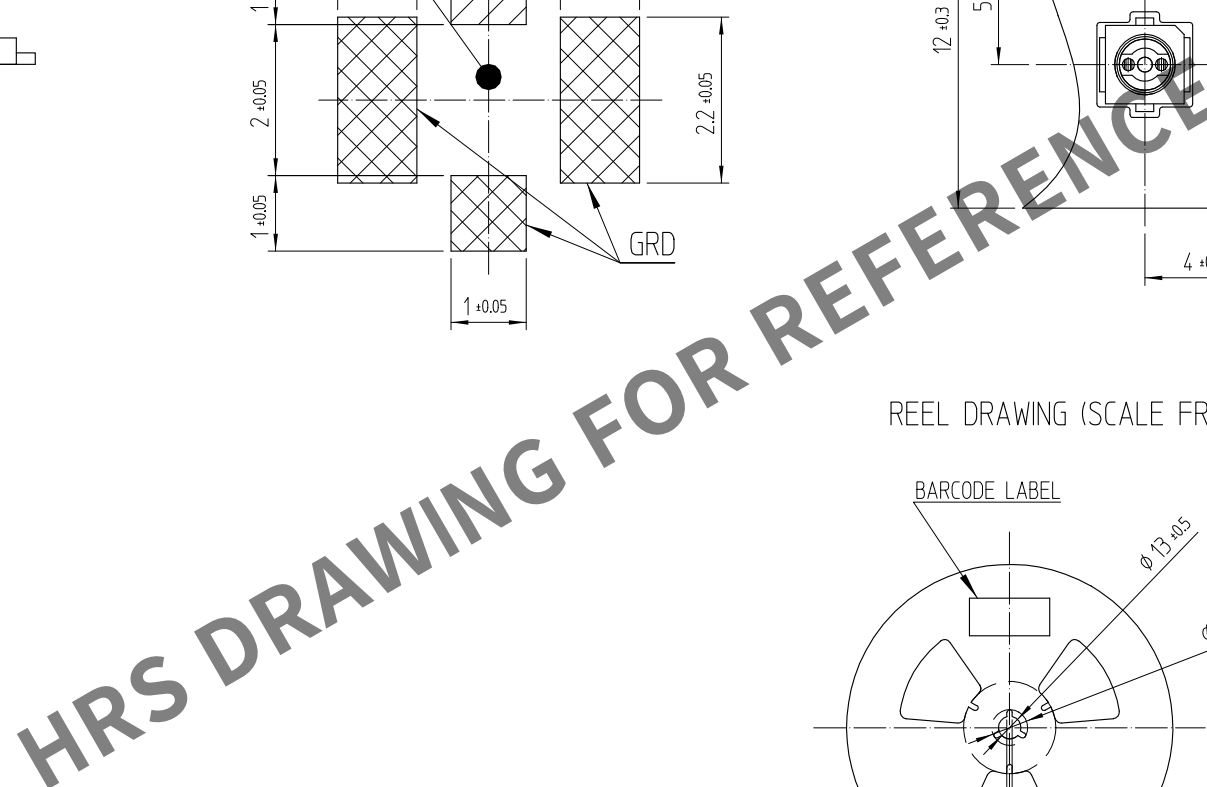

[Attention when wiring for U.FL-2LPK-066 harness]

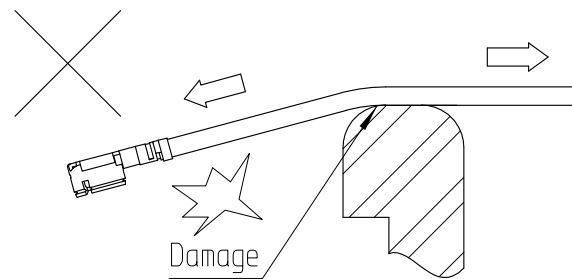


The cable must not touch the case directly in a movable part.

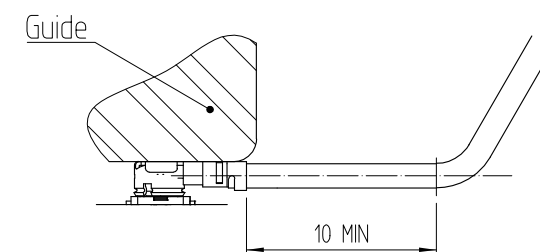




[When the part that winds repeatedly is near the plug]

Please install the guide so that the plug should not come off from the cable according to the winding direction.

Please separate the winding position from the plug edge by 10mm or more.

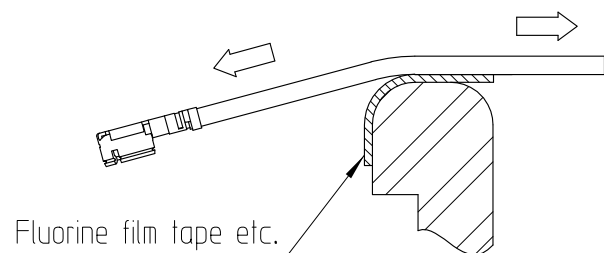

 

It is recommended to do to put among the tapes that slip easily and for the load not to hang directly to the cable.

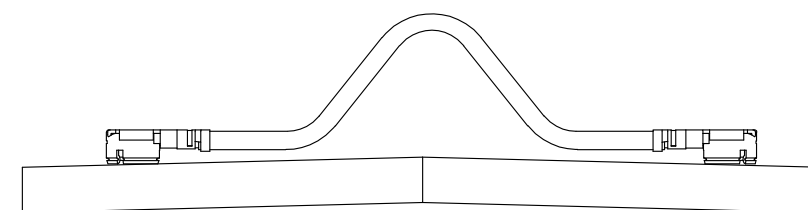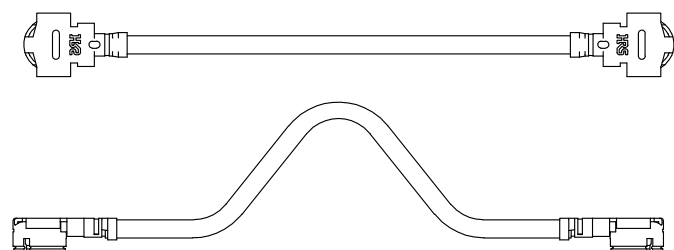

Please avoid the usage to which the cable bends repeatedly in the direction of the cable axis in a movable part.

[PRECAUTIONS FOR HANDLING]

- ◆ Connector insertion and extraction
 - a. Connector shall be extracted vertically by specialised extraction JIG.
Part No.:U.FL-LP(V)-N-2
Never hold the cable when extracting the cable because it damages the connector.
 - b. Insert the connector as perpendicularly to the mating surface as possible by aligning the mating axes of both connectors. Do not excessively slant the connectors when inserting.
- ◆ Allowable loads on the cable after the connectors are mated.
The figures below show the maximum allowable loads on the cable. Do not apply loads exceeding these values to the cable.

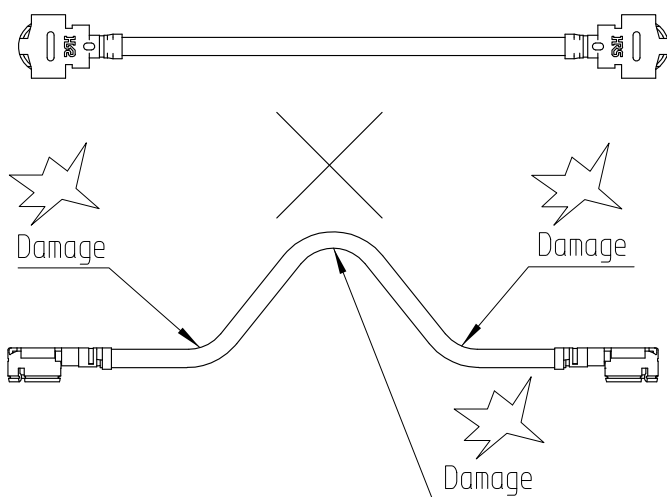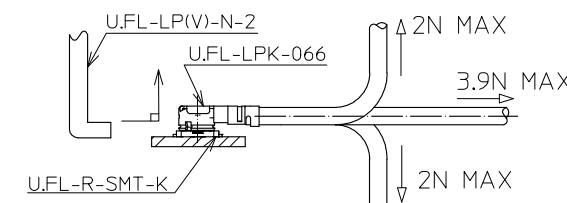

■ 番 DRAWING NO. EDC3-632635-80	製品名 PART NO. U.FL-R-SMT-K (800)
HRS HIROSE KOREA CO.,LTD.	製品 CODE NO. CL 6327-0362-5-800