

Arria 10 Transceiver PHY User Guide



Subscribe



Send Feedback

UG-01143
2014.12.15

101 Innovation Drive
San Jose, CA 95134
www.altera.com



Contents

Arria 10 Transceiver PHY Overview	1-1
Device Transceiver Layout.....	1-3
Arria 10 GX Device Transceiver Layout.....	1-3
Arria 10 GT Device Transceiver Layout.....	1-8
Arria 10 GX and GT Device Package Details	1-12
Arria 10 SX Device Transceiver Layout.....	1-13
Arria 10 SX Device Package Details.....	1-16
Transceiver PHY Architecture Overview.....	1-16
Transceiver Bank Architecture.....	1-16
PHY Layer Transceiver Components.....	1-20
Transceiver Phase-Locked Loops.....	1-22
Clock Generation Block (CGB).....	1-23
Calibration.....	1-23
 Implementing Protocols in Arria 10 Transceivers.....	 2-1
Transceiver Design IP Blocks.....	2-1
Transceiver Design Flow.....	2-2
Select and Instantiate PHY IP Core.....	2-2
Configure the PHY IP Core.....	2-4
Generate PHY IP Core.....	2-5
Select PLL IP Core.....	2-5
Configure PLL IP Core.....	2-7
Generate PLL IP Core	2-8
Reset Controller	2-8
Create Reconfiguration Logic.....	2-8
Connect PHY IP to PLL IP and Reset Controller.....	2-9
Connect the Transceiver Datapath to MAC IP Core or to a Data Generator or an Analyzer.....	2-9
Compile Design.....	2-9
Verify Design Functionality.....	2-9
Make analog parameter settings to I/O pins using the Assignment Editor or updating the Quartus II Settings File	2-9
Arria 10 Transceiver Protocols and PHY IP Support.....	2-10
Using the Arria 10 Transceiver Native PHY IP Core.....	2-16
Presets.....	2-19
General and Datapath Parameters	2-19
PMA Parameters.....	2-22
Enhanced PCS Parameters	2-28
Standard PCS Parameters.....	2-37
Dynamic Reconfiguration Parameters.....	2-44
PMA Ports.....	2-46
Enhanced PCS Ports.....	2-50

Standard PCS Ports.....	2-66
IP Core File Locations.....	2-74
Interlaken.....	2-76
Metaframe Format and Framing Layer Control Word.....	2-77
Interlaken Configuration Clocking and Bonding.....	2-79
How to Implement Interlaken in Arria 10 Transceivers.....	2-86
Design Example.....	2-89
Native PHY IP Parameter Settings for Interlaken.....	2-90
Ethernet.....	2-97
Gigabit Ethernet (GbE) and GbE with IEEE 1588v2.....	2-97
10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC Variants.....	2-112
10GBASE-KR PHY IP Core	2-126
1-Gigabit/10-Gigabit Ethernet (GbE) PHY IP Core.....	2-165
XAUI PHY IP Core.....	2-213
Acronyms.....	2-230
PCI Express (PIPE).....	2-231
Transceiver Channel Datapath for PIPE.....	2-232
Supported PIPE Features.....	2-232
How to Connect TX PLLs for PIPE Gen1, Gen2, and Gen3 Modes.....	2-242
How to Implement PCI Express (PIPE) in Arria 10 Transceivers.....	2-248
Native PHY IP Parameter Settings for PIPE Express.....	2-249
Native PHY IP Ports for PIPE.....	2-257
How to Place Channels for PIPE Configurations.....	2-264
PHY IP Core for PCIe (PIPE) Link Equalization for Gen3 Data Rate.....	2-267
Design Example.....	2-269
CPRI.....	2-270
Transceiver Channel Datapath and Clocking for CPRI.....	2-270
Supported Features for CPRI	2-272
Word Aligner in Manual Mode for CPRI.....	2-273
How to Implement CPRI in Arria 10 Transceivers.....	2-274
Native PHY IP Parameter Settings for CPRI.....	2-276
Other Protocols.....	2-281
Using the "Basic (Enhanced PCS)" and "Basic with KR FEC" Configurations of Enhanced PCS.....	2-281
Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS.....	2-292
Design Considerations for Data Rates Above 17.4 Gbps Using Arria 10 GT Channels....	2-313
How to Implement PCS Direct Transceiver Configuration Rule.....	2-321
Simulating the Transceiver Native PHY IP Core.....	2-322
NativeLink Simulation Flow.....	2-323
Custom Simulation Flow.....	2-328
PLLs and Clock Networks.....	3-1
PLLs.....	3-3
ATX PLL.....	3-3
fPLL.....	3-13
CMU PLL.....	3-21
Input Reference Clock Sources.....	3-27

Dedicated Reference Clock Pins.....	3-28
Receiver Input Pins.....	3-29
PLL Cascading as an Input Reference Clock Source.....	3-30
Reference Clock Network.....	3-30
Global Clock or Core Clock as an Input Reference Clock.....	3-30
Transmitter Clock Network.....	3-30
x1 Clock Lines.....	3-31
x6 Clock Lines.....	3-32
xN Clock Lines.....	3-33
GT Clock Lines.....	3-35
Clock Generation Block.....	3-36
FPGA Fabric-Transceiver Interface Clocking.....	3-39
Transmitter Data Path Interface Clocking.....	3-41
Receiver Data Path Interface Clocking.....	3-42
Channel Bonding.....	3-44
PMA Bonding.....	3-44
PMA and PCS Bonding.....	3-46
Selecting Channel Bonding Schemes.....	3-47
Skew Calculations.....	3-47
PLL Feedback and Cascading Clock Network.....	3-47
Using PLLs and Clock Networks.....	3-49
Non-bonded Configurations.....	3-49
Bonded Configurations.....	3-53
Implementing PLL Cascading.....	3-57
Mix and Match Example.....	3-59
Resetting Transceiver Channels.....	4-1
When Is Reset Required?	4-2
How Do I Reset?.....	4-2
Recommended Reset Sequence.....	4-3
Transceiver Blocks Affected by Reset and Powerdown Signals.....	4-8
Using the Altera Transceiver PHY Reset Controller.....	4-9
Parameterizing the Transceiver PHY Reset Controller IP.....	4-11
Transceiver PHY Reset Controller Parameters.....	4-11
Transceiver PHY Reset Controller Interfaces.....	4-13
Transceiver PHY Reset Controller Resource Utilization.....	4-17
Using a User-Coded Reset Controller.....	4-18
User-Coded Reset Controller Signals.....	4-18
Combining Status or PLL Lock Signals	4-19
Timing Constraints for Bonded PCS and PMA Channels.....	4-20
Arria 10 Transceiver PHY Architecture.....	5-1
Arria 10 PMA Architecture.....	5-1
Transmitter.....	5-1
Receiver.....	5-4
Loopback.....	5-16
Arria 10 Enhanced PCS Architecture.....	5-18

Transmitter Datapath.....	5-19
Receiver Datapath.....	5-28
Arria 10 Standard PCS Architecture.....	5-35
Transmitter Datapath.....	5-36
Receiver Datapath.....	5-42
Arria 10 PCI Express Gen3 PCS Architecture.....	5-54
Transmitter Datapath.....	5-55
Receiver Datapath.....	5-56
PIPE Interface.....	5-57
Reconfiguration Interface and Dynamic Reconfiguration	6-1
Interacting with the Reconfiguration Interface.....	6-3
Performing a Read to the Reconfiguration Interface.....	6-3
Performing a Write to the Reconfiguration Interface.....	6-3
Reconfiguring Channel and PLL Blocks.....	6-4
Step 1: Generate Required Configuration Files.....	6-5
Step 2: Determine Address Offsets and Differences.....	6-6
Step 3: Perform Read-Modify-Writes.....	6-6
Step 4: Reset Transceiver Channels or Transceiver PLLs.....	6-6
Using Configuration Files.....	6-7
Changing PMA Analog Parameters.....	6-8
Changing CTLE Settings in Manual Mode.....	6-10
Switching Transmitter PLL	6-11
Switching Reference Clocks.....	6-12
ATX Reference Clock Switching.....	6-12
fPLL Reference Clock Switching.....	6-13
CDR and CMU Reference Clock Switching.....	6-14
Ports and Parameters.....	6-15
Channel Merging Requirements.....	6-18
Embedded Debug.....	6-19
Native PHY IP Core Embedded Debug.....	6-20
PLL IP Core Embedded Debug	6-22
Using Data Pattern Generators and Checkers.....	6-23
Using PRBS and Square Wave Data Pattern Generator and Checker.....	6-23
Enabling PRBS Pattern Inversion.....	6-29
Timing Closure Recommendations.....	6-29
Unsupported Features.....	6-30
Arria 10 Transceiver Register Map.....	6-30
Calibration.....	7-1
Reconfiguration Interface and Arbitration with PreSICE Calibration Engine	7-1
Calibration Registers.....	7-2
Avalon-MM Interface Arbitration Registers.....	7-2
Transceiver Channel Calibration Registers.....	7-2
Fractional Calibration Registers.....	7-3
ATX PLL Calibration Registers.....	7-3
Power-up Calibration.....	7-3

User Recalibration.....	7-4
Calibration Example.....	7-5
ATX PLL Recalibration.....	7-5
Fractional PLL Recalibration	7-5
CMU or CDR PLL Recalibration.....	7-6
PMA Recalibration.....	7-6
Analog Parameter Settings.....	8-1
Making Analog Parameter Settings using the Assignment Editor.....	8-1
Updating Quartus Settings File with the Known Assignment.....	8-1
Analog Parameter Settings List.....	8-2
Receiver General Analog Settings.....	8-4
XCVR_A10_RX_LINK.....	8-4
XCVR_A10_RX_TERM_SEL.....	8-5
XCVR_VCCR_VCCT_VOLTAGE - RX.....	8-6
Receiver Equalization Settings.....	8-6
XCVR_A10_RX_EQ_DC_GAIN_TRIM.....	8-6
XCVR_A10_RX_ADP_CTLE_ACGAIN_4S.....	8-7
XCVR_A10_RX_ADP_CTLE_EQZ_1S_SEL.....	8-8
XCVR_A10_RX_ADP_VGA_SEL.....	8-8
XCVR_A10_RX_ONE_STAGE_ENABLE.....	8-9
Decision Feedback Equalizer (DFE) Settings.....	8-9
Transmitter General Analog Settings.....	8-11
XCVR_A10_TX_LINK.....	8-11
XCVR_A10_TX_COMPENSATION_EN.....	8-12
XCVR_VCCR_VCCT_VOLTAGE - TX.....	8-12
Transmitter Pre-Emphasis Settings.....	8-13
XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_1T.....	8-13
XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_2T.....	8-14
XCVR_A10_TX_PRE_EMP_SIGN_1ST_POST_TAP.....	8-14
XCVR_A10_TX_PRE_EMP_SIGN_2ND_POST_TAP.....	8-15
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_1T.....	8-15
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_2T.....	8-16
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_1ST_POST_TAP.....	8-16
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_2ND_POST_TAP.....	8-17
XCVR_A10_TX_VOD_OUTPUT_SWING_CTRL.....	8-17
Dedicated Reference Clock Settings.....	8-18
XCVR_A10_REFCLK_TERM_TRISTATE.....	8-18
Document Revision History for Current Release	9-1
Document Revision History for Previous Releases.....	9-10

2014.12.15

UG-01143



Subscribe



Send Feedback

This user guide provides details about the Arria® 10 transceiver physical (PHY) layer architecture, PLLs, clock networks and transceiver PHY IP. It also provides protocol specific implementation details and describes features such as reset controller, and dynamic reconfiguration.

Altera's Arria 10 devices offer up to 96 transceivers with integrated advanced high speed analog signal conditioning and clock data recovery techniques for chip-to-chip, chip-to-module, and backplane applications.

The Arria 10 GX and SX devices have GX transceiver channels that can support data rates up to 17.4 Gbps for chip-to-chip applications and 16.0 Gbps for backplane applications.

The Arria 10 GT devices have up to 16 GT transceiver channels, that can support data rates up to 28.3 Gbps for short reach chip-to-chip and chip-to-module applications. Additionally, the GT devices have GX transceiver channels that can support data rates up to 17.4 Gbps for both chip-to-chip and backplane applications. If all 16 GT channels are used in GT mode, then the largest GT devices also have up to 72 GX transceiver channels.

The Arria 10 transceivers support reduced power modes with data rates up to 11.3 Gbps (chip-to-chip) and 10.3125 Gbps (backplane) for critical power sensitive designs. In GX devices that have transceivers on both sides of the device, each side can be operated independently in standard and reduced power modes. You can achieve data rates down to 125 Mbps with oversampling.

Table 1-1: Data Rates Supported by GX Transceiver Channel Type

Device Variant	Standard Power Mode ⁽¹⁾		Reduced Power Mode ⁽¹⁾	
	Chip-to-Chip	Backplane	Chip-to-Chip	Backplane
SX ⁽²⁾	1.0 Gbps to 17.4 Gbps	1.0 Gbps to 16.0 Gbps	1.0 Gbps to 11.3 Gbps	1.0 Gbps to 10.3125 Gbps
GX ⁽²⁾	1.0 Gbps to 17.4 Gbps	1.0 Gbps to 16.0 Gbps	1.0 Gbps to 11.3 Gbps	1.0 Gbps to 10.3125 Gbps

(1) To operate GX transceiver channels at designated data rates in standard and reduced power modes, apply the corresponding core and periphery power supplies. Refer to the *Arria 10 Device Datasheet* for more details.

(2) For SX and GX device variants, the maximum transceiver data rates are specified for the fastest (-1) transceiver speed grade.

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Device Variant	Standard Power Mode ⁽¹⁾		Reduced Power Mode ⁽¹⁾	
	Chip-to-Chip	Backplane	Chip-to-Chip	Backplane
GT ⁽³⁾	1.0 Gbps to 17.4 Gbps	1.0 Gbps to 17.4 Gbps	1.0 Gbps to 11.3 Gbps	1.0 Gbps to 10.3125 Gbps

Table 1-2: Data Rates Supported by GT Transceiver Channel Type

Device Variant ⁽⁴⁾	Data Rates ⁽⁵⁾	
	Chip-to-Chip	Backplane
GT	1.0 Gbps to 28.3 Gbps	1.0 Gbps to 17.4 Gbps

Note: The device data rates depend on the device speed grade. Refer to *Arria 10 Device Datasheet* for details on available speed grades and supported data rates.

Related Information

[Arria 10 Device Datasheet](#)

(1) To operate GX transceiver channels at designated data rates in standard and reduced power modes, apply the corresponding core and periphery power supplies. Refer to the *Arria 10 Device Datasheet* for more details.

(3) For GT device variants, the maximum transceiver data rates are specified for (-2) transceiver speed grade.


(4) For GT device variants, the maximum transceiver data rates are specified for (-2) transceiver speed grade.

(5) Because the GT transceiver channels are designed for peak performance, they do not have a reduced power mode of operation.

Device Transceiver Layout

Figure 1-1: Arria 10 FPGA Architecture Block Diagram

The transceiver channels are placed on the left side periphery in most Arria 10 devices. For larger Arria 10 devices, additional transceiver channels are placed on the right side periphery.

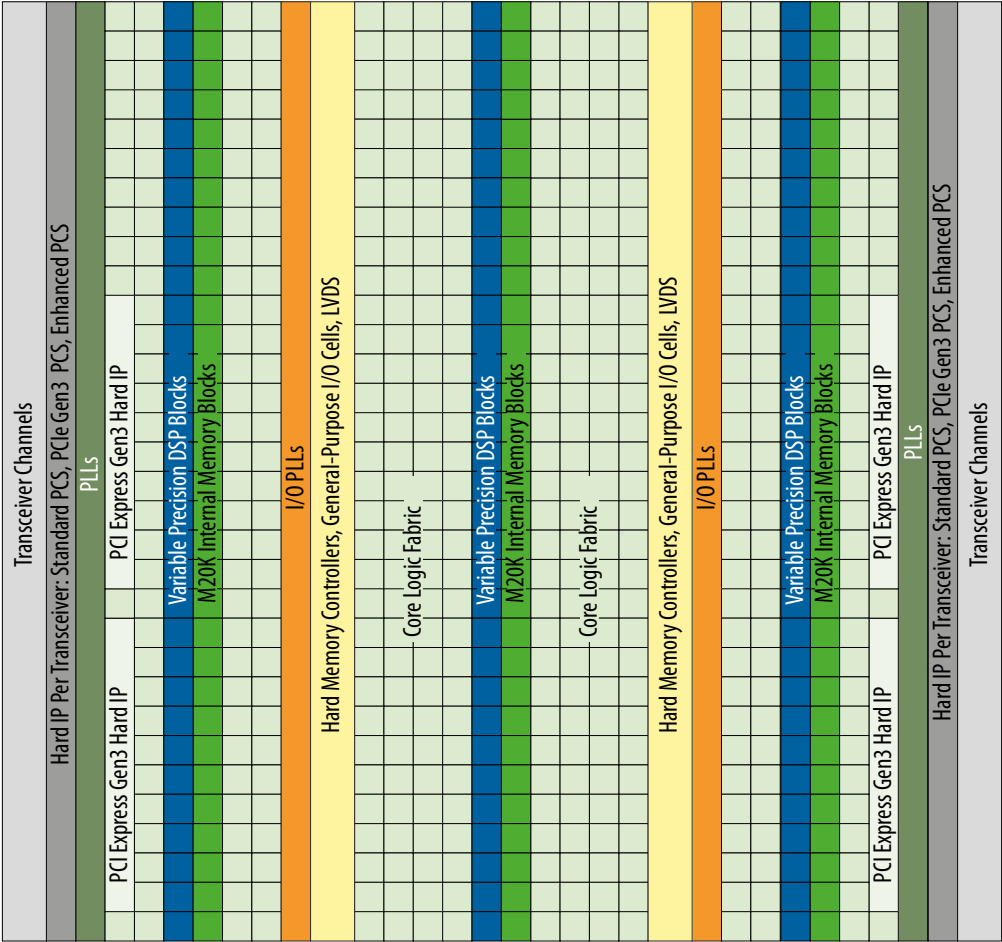

Arria 10 GX Device Transceiver Layout

The largest Arria 10 GX device includes 96 transceiver channels. A column array of eight transceiver banks on the left and the right side periphery of the device is shown in the following figure. Each transceiver bank has six transceiver channels. Some devices have transceiver banks with only three channels. The transceiver banks with only three channels are the uppermost transceiver banks. Arria 10 devices also include PCI Express Hard IP blocks.

The figures below illustrate different transceiver bank layouts for Arria 10 GX device variants.

Figure 1-2: Arria 10 GX Devices with 96 Transceiver Channels and Four PCIe Hard IP Blocks


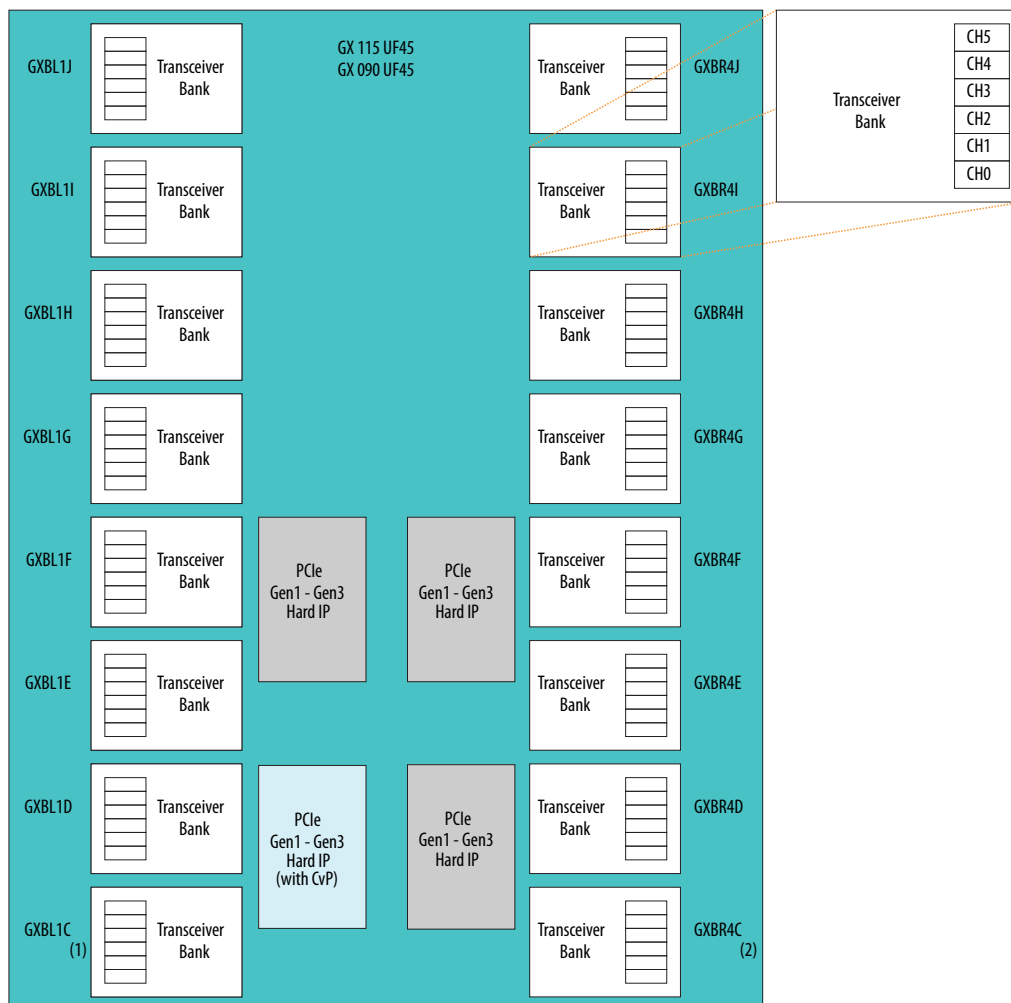


Figure 1-3: Arria 10 GX Devices with 72 and 48 Transceiver Channels and Four PCIe Hard IP Blocks.

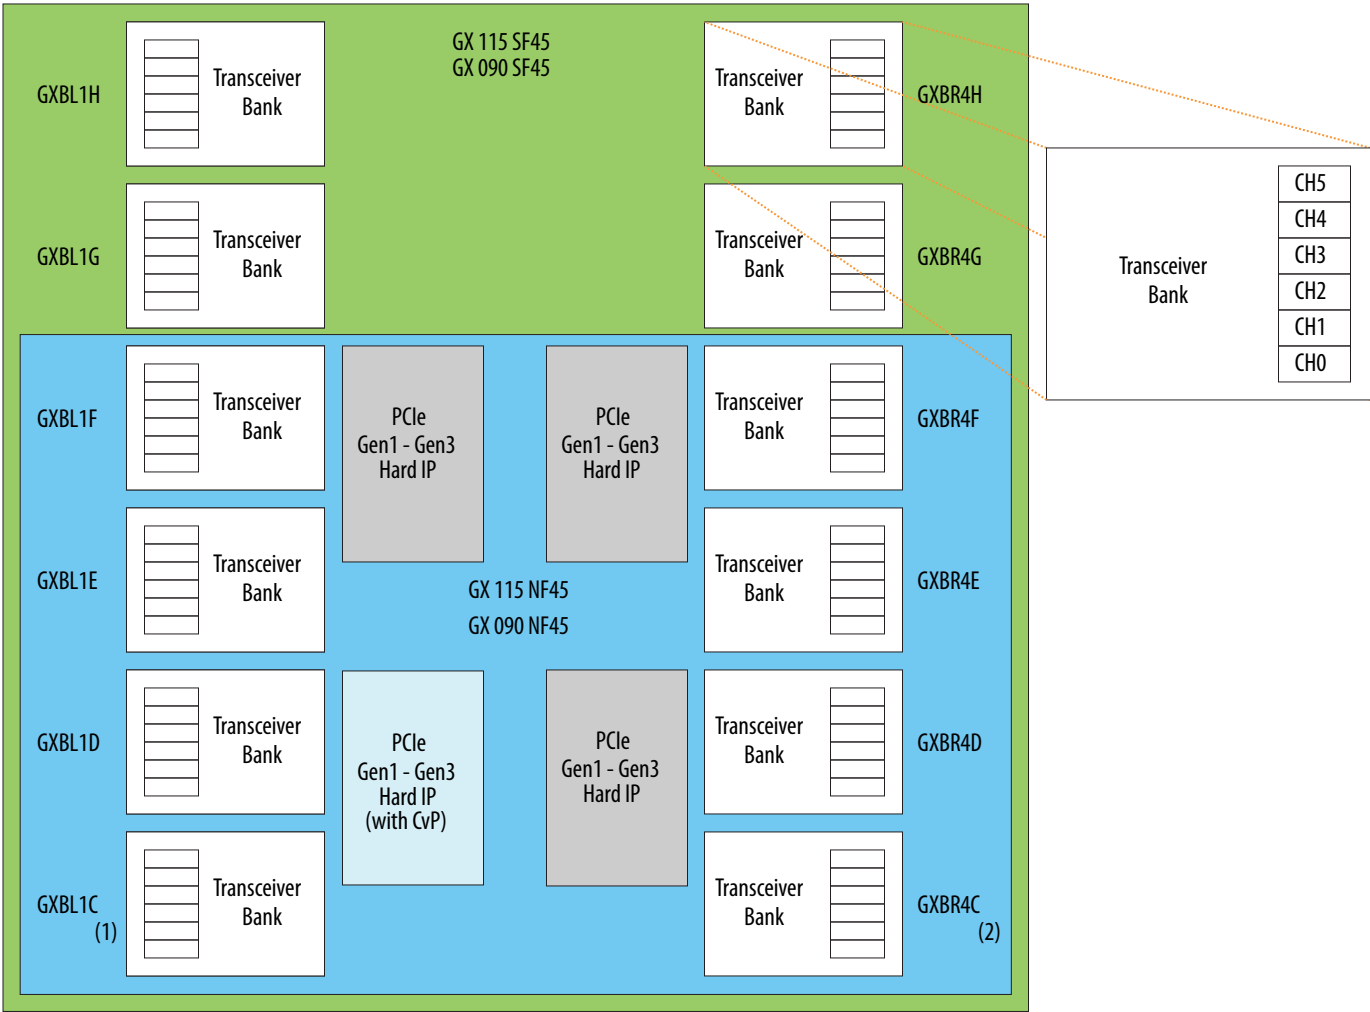


Notes:
(1) Nomenclature of left column bottom transceiver banks always ends with "C".
(2) Nomenclature of right column bottom transceiver banks may end with "C", "D", or "E".

Legend:

- PCIe Gen1 - Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.
- PCIe Gen1 - Gen3 Hard IP blocks without Configuration via Protocol (CvP) capabilities.
- Arria 10 GX device with 72 transceiver channels and four PCIe Hard IP blocks.
- Arria 10 GX device with 48 transceiver channels and four PCIe Hard IP blocks.

Figure 1-4: Arria 10 GX Devices with 66 Transceiver Channels and Three PCIe Hard IP Blocks

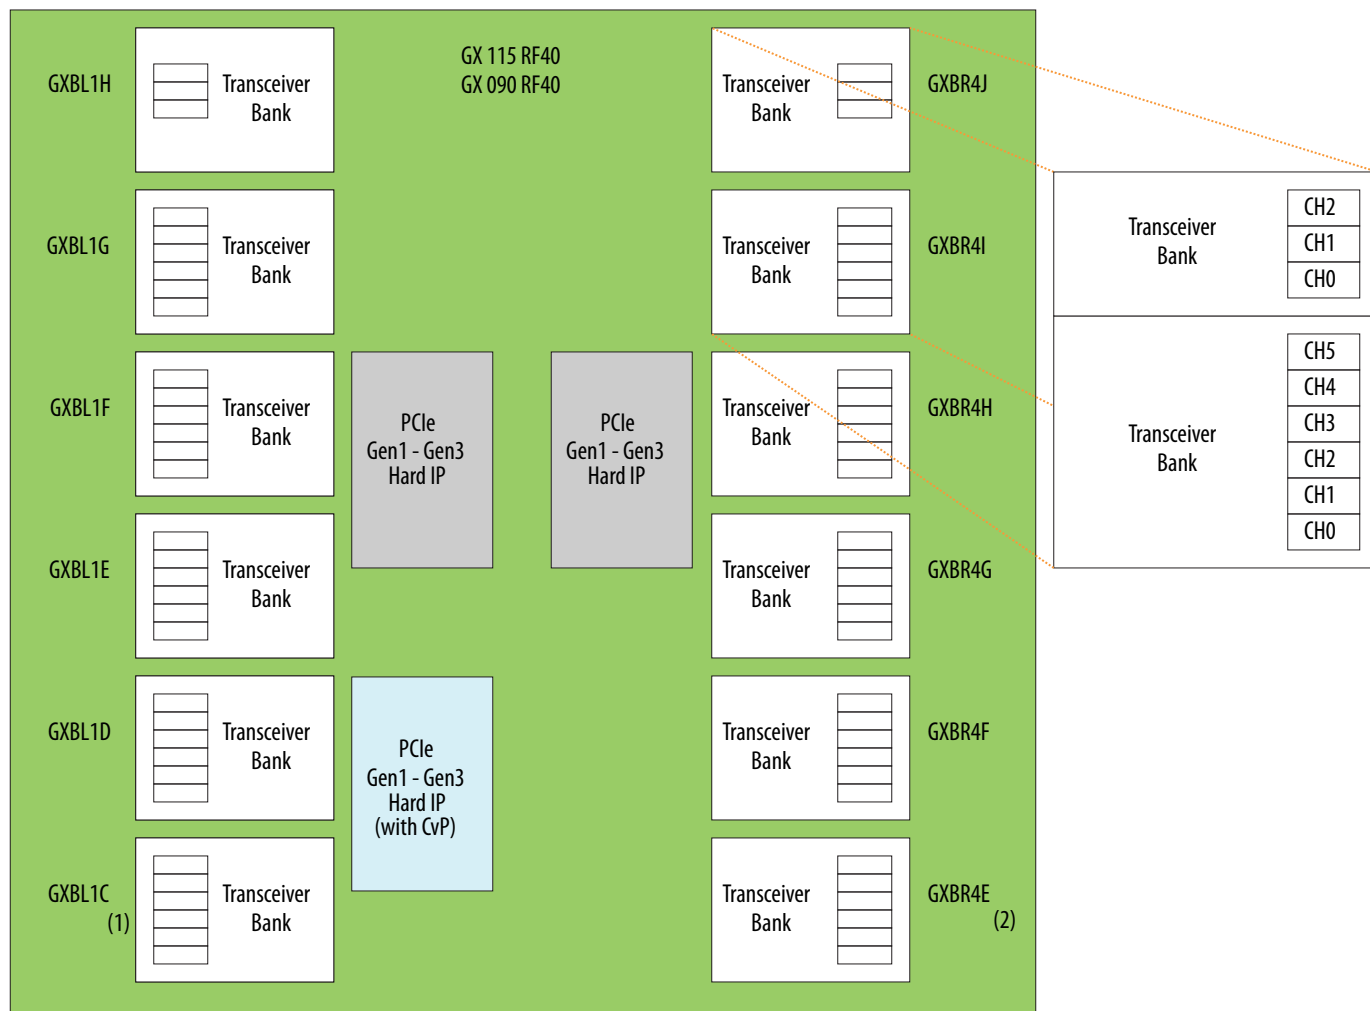

Notes:

- (1) Nomenclature of left column bottom transceiver banks always ends with "C".
 (2) Nomenclature of right column bottom transceiver banks may end with "C", "D", or "E".

Legend:

- PCIe Gen1 - Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.
- PCIe Gen1 - Gen3 Hard IP blocks without Configuration via Protocol (CvP) capabilities.
- Arria 10 GX device with 66 transceiver channels and three PCIe Hard IP blocks.

Figure 1-5: Arria 10 GX Devices with 48, 36, and 24 Transceiver Channels and Two PCIe Hard IP Blocks

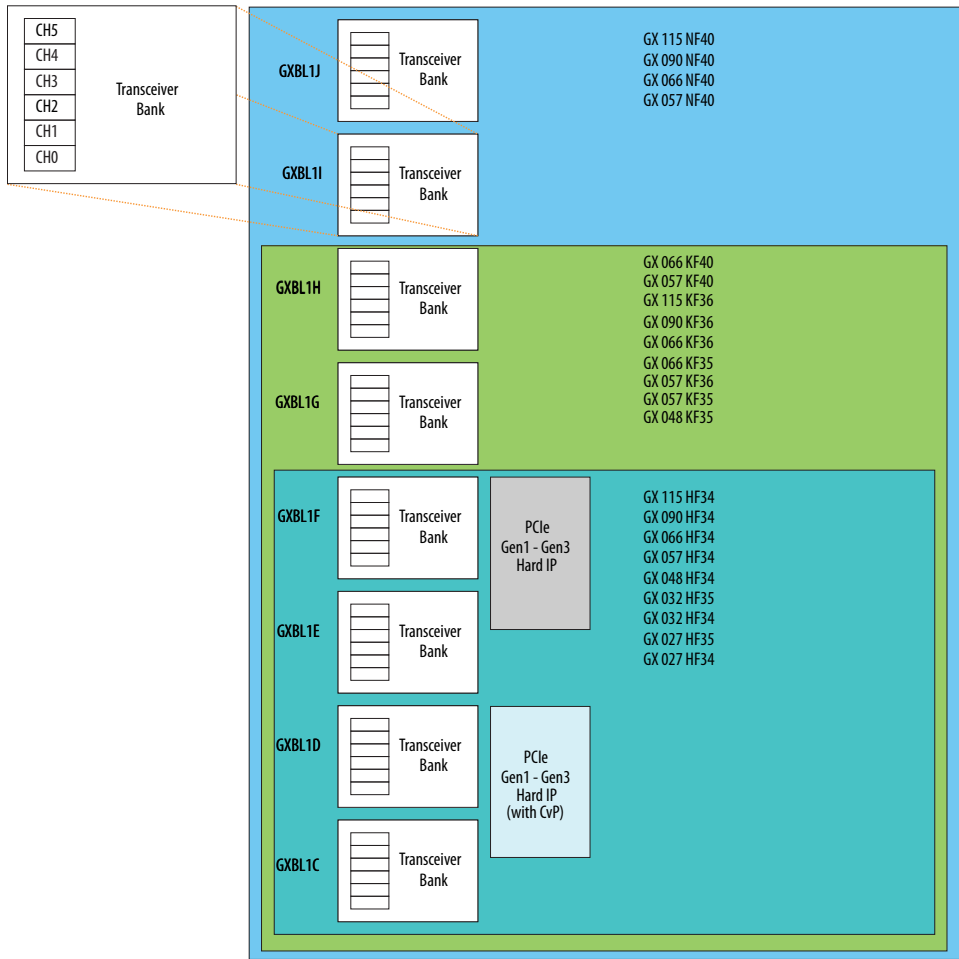
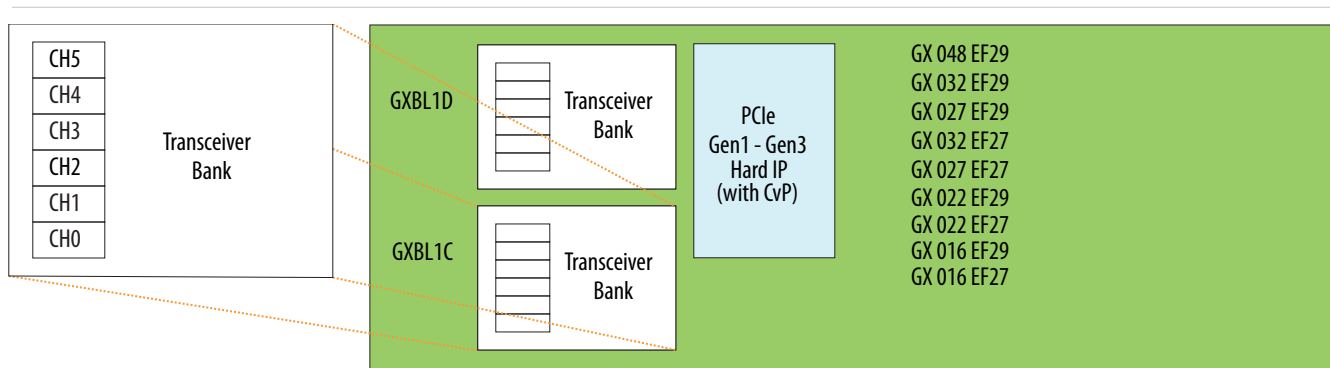


Figure 1-6: Arria 10 GX Devices with 12 Transceiver Channels and One PCIe Hard IP Block


Note:

(1) These devices have transceivers only on the left hand side of the device.

Legend:

PCIe Gen1 - Gen3 HIP blocks with Configuration via Protocol (CvP) capabilities.

Arria 10 GX device with 12 transceiver channels and one PCIe Hard IP block.

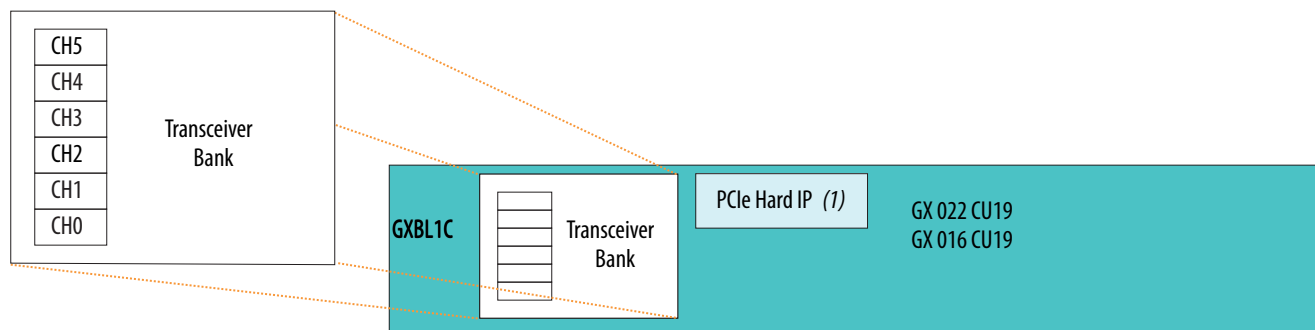Figure 1-7: Arria 10 GX Devices with 6 Transceiver Channels and One PCIe Hard IP Block

Note:

(1) Only CH5 and CH4 support PCIe Hard IP block with CvP capabilities.

(2) These devices have transceivers only on the left hand side of the device.

Legend:

PCIe Gen1 - Gen3 Hard IP block with Configuration via Protocol (CvP) capabilities.


Arria 10 GX device with six transceiver channels and one PCIe Hard IP block.

Arria 10 GT Device Transceiver Layout

The largest GT device has 96 transceiver channels and four PCI Express Hard IP blocks. All GT devices have a total of 16 GT transceiver channels that can support data rates up to 28.3 Gbps.

In GT devices, transceiver banks GXBL1E, GXBL1F, GXBL1G, and GXBL1H each contain four GT transceiver channels. Channels 0,1,3, and 4 can be used as GT or GX transceiver channels. Channels 2 and 5 are GX only transceiver channels.

Figure 1-8: Arria 10 GT Devices with 96 Transceiver Channels and Four PCIe Hard IP Blocks

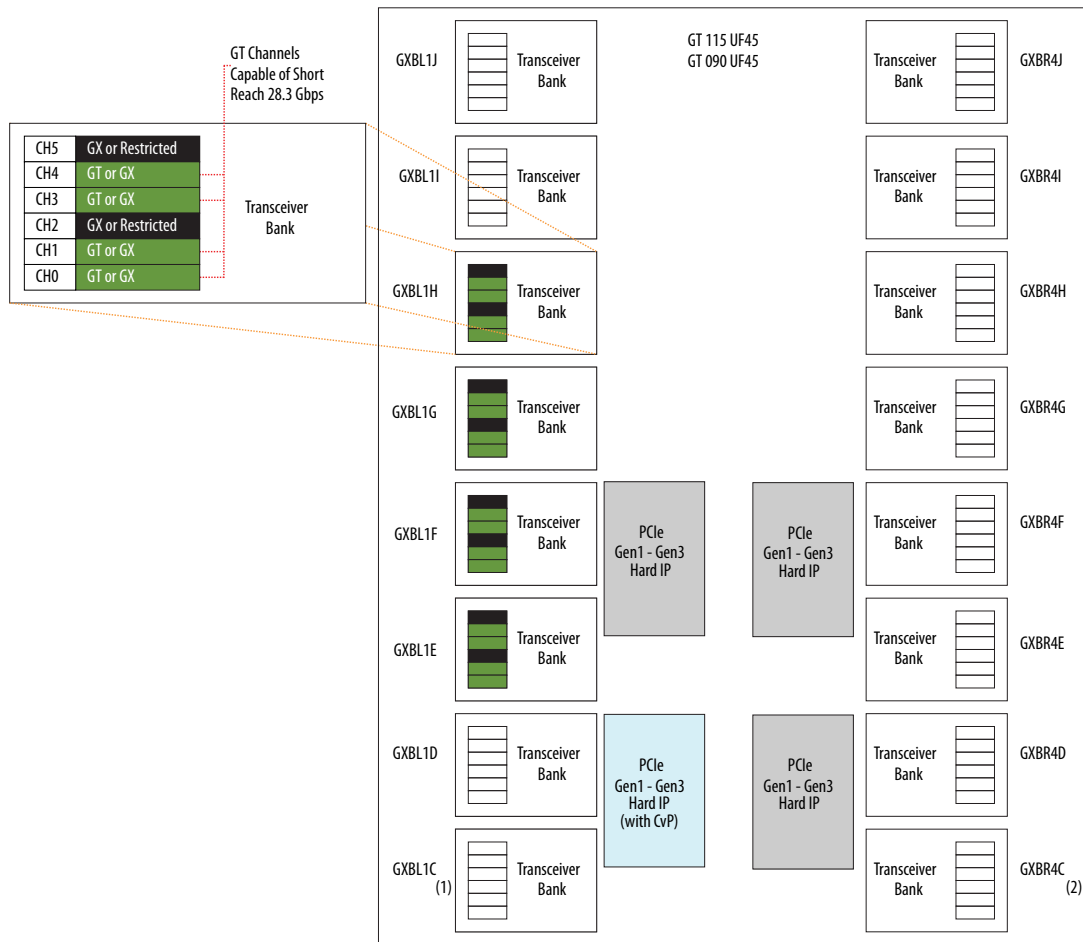

Notes:


- (1) Nomenclature of left column bottom transceiver banks always ends with "C".
(2) Nomenclature of right column bottom transceiver banks may end with "C", "D", or "E".

Legend:

-  GT transceiver channels (channel 0, 1, 3, and 4)
-  GX transceiver channels (channel 2 and 5) with usage restrictions.
-  GX transceiver channels without usage restrictions.
-  PCIe Gen1 - Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.
-  PCIe Gen1 - Gen3 Hard IP blocks without Configuration via Protocol (CvP) capabilities.

Note: Refer to [Arria 10 GT Channel Usage](#) on page 2-313 for details on Arria 10 GT channel usage restrictions.

Figure 1-9: Arria 10 GT Devices with 72 Transceiver Channels and Four PCIe Hard IP Blocks

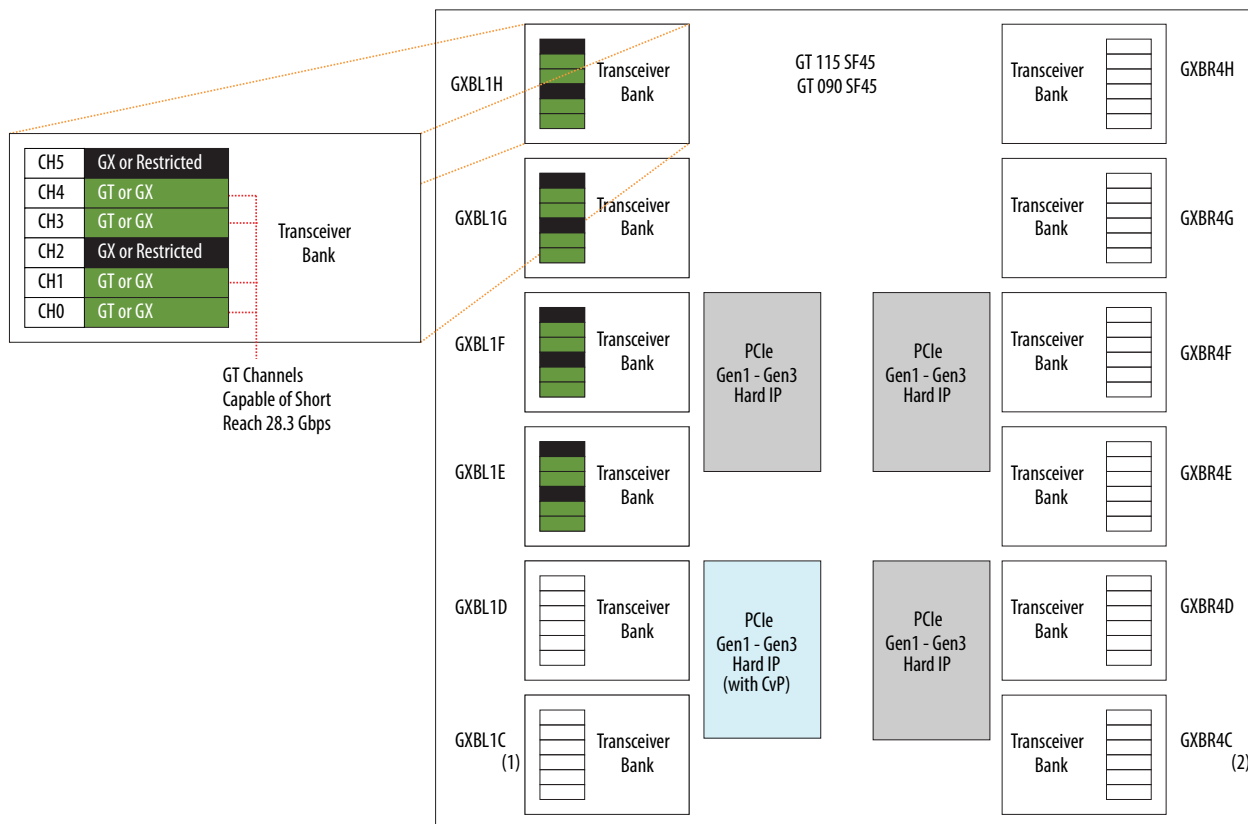


Notes:

- (1) Nomenclature of left column bottom transceiver banks always end with "C".
 (2) Nomenclature of right column bottom transceiver banks may end with "C", "D", or "E".

Legend:

- GT transceiver channels (channel 0, 1, 3, and 4).
- GX transceiver channels (channel 2 and 5) with usage restrictions.
- GX transceiver channels without usage restrictions.
- PCIe Gen1 - Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.
- PCIe Gen1 - Gen3 Hard IP blocks without Configuration via Protocol (CvP) capabilities.

Figure 1-10: Arria 10 GT Devices with 48 Transceiver Channels and Two PCIe Hard IP Blocks

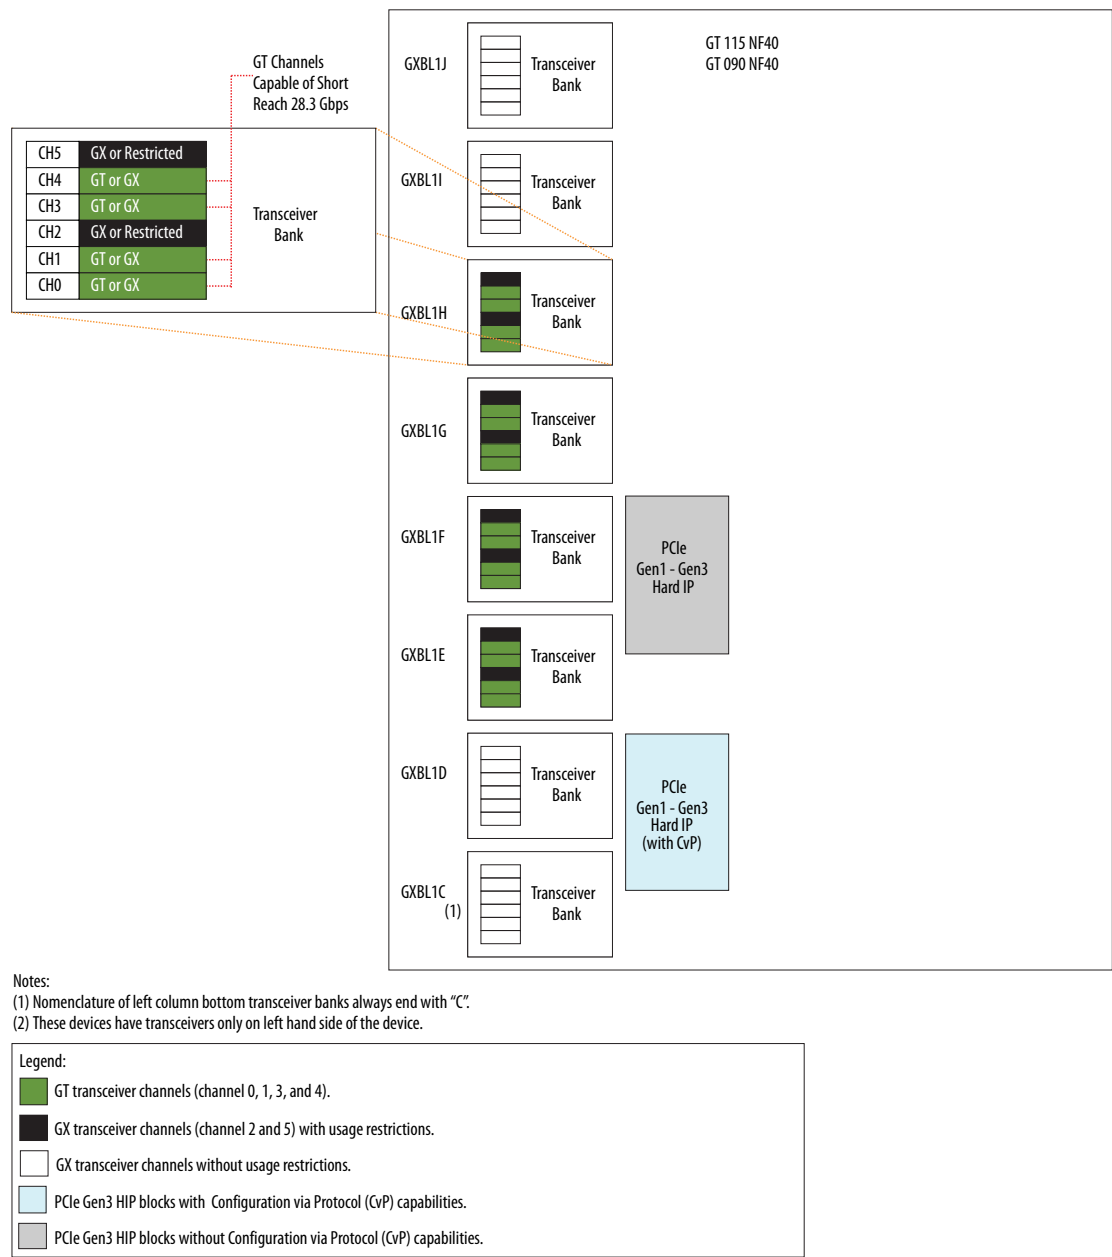

Note: Refer to [Arria 10 GT Channel Usage](#) on page 2-313 for details on Arria 10 GT channel usage restrictions.

The largest GT device has 96 transceiver channels, which include 16 GT transceiver channels supporting data rates greater than 17.4 Gbps. If all 16 GT transceiver channels are used in GT mode, then there will be 72 GX transceiver channels that can drive backplanes at data rates up to 17.4 Gbps and 8 GX channels that are unusable. In contrast, the GX transceiver channels in SX and GX device variants can drive backplanes at data rates up to 16.0 Gbps.

In GT devices that have transceivers on both sides of the device, the GX transceiver channels on the right side can be used in reduced power mode. In GT devices where none of the GT channels are used, the transceiver channels can be used as GX channels in standard or reduced power mode.

Related Information

[Arria 10 GT Channel Usage](#) on page 2-313

For details about Arria 10 GT channel usage guidelines

Arria 10 GX and GT Device Package Details

The following tables list package sizes, available transceiver channels, and PCI Express Hard IP blocks for Arria 10 GX and GT devices.

Table 1-3: Package Details for GX and GT Devices with Transceivers and HIP Blocks Located on the Left Side Periphery of the Device

- Package U19: 19mm x 19mm package; 484 pins.
- Package F27: 27mm x 27mm package; 672 pins.
- Package F29: 29mm x 29mm package; 780 pins.
- Packages F34, F35, and F36: 35 mm x 35 mm package size; 1152 pins.
- Package F40: 40 mm x 40 mm package size; 1517 pins.

Device	U19	F27	F29	F34	F35	F36	K F40	N F40
	Transceiver Count, PCIe Hard IP Block Count							
GX 016	6, 1	12, 1	12, 1					
GX 022	6, 1	12, 1	12, 1					
GX 027		12, 1	12, 1	24, 2	24, 2			
GX 032		12, 1	12, 1	24, 2	24, 2			
GX 048			12, 1	24, 2	36, 2			
GX 057				24, 2	36, 2	36, 2	36, 2	48, 2
GX 066				24, 2	36, 2	36, 2	36, 2	48, 2
GX 090				24, 2		36, 2		48, 2
GX 115				24, 2		36, 2		48, 2
GT 090								48, 2
GT 115								48, 2

Table 1-4: Package Details for GX and GT Devices with Transceivers and Hard IP Blocks Located on the Left and Right Side Periphery of the Device

- Package F40: 40 mm x 40 mm package size; 1517 pins.
- Package F45: 45mm x 45mm package size; 1932 pins.


Device	R F40	N F45	S F45	U F45
	Transceiver Count, PCIe Hard IP Block Count			
GX 090	66, 3	48, 4	72, 4	96, 4

Device	R F40	N F45	S F45	U F45
	Transceiver Count, PCIe Hard IP Block Count			
GX 115	66, 3	48, 4	72, 4	96, 4
GT 090			72, 4	96, 4
GT 115			72, 4	96, 4

Arria 10 SX Device Transceiver Layout

The largest SX device includes 48 transceiver channels. All SX devices include GX transceiver channel type. The transceiver banks in SX devices are located on the left side periphery of the device.

Figure 1-11: Arria 10 SX Device with 48, 36, and 24 Transceiver Channels and Two Hard IP Blocks

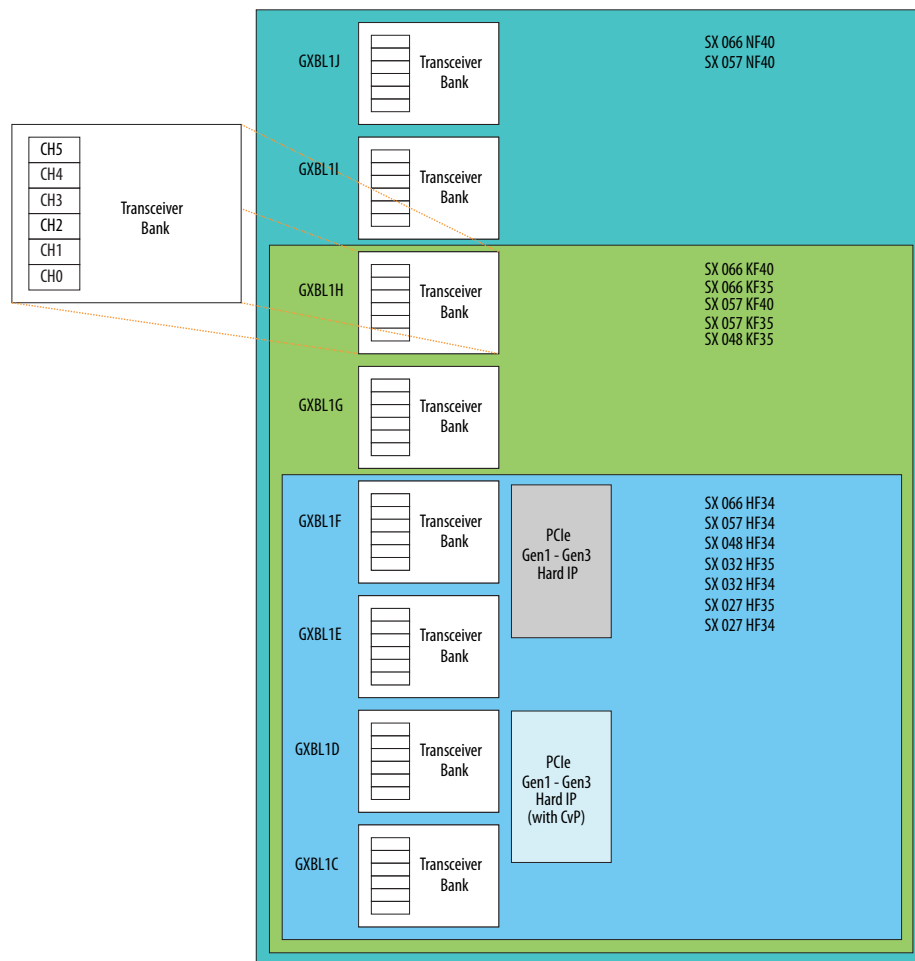


Note:

(1) These devices have transceivers only on the left hand side of the device.

Legend:

- Light blue square: PCIe Gen1- Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.
- Gray square: PCIe Gen1 - Gen3 Hard IP blocks without Configuration via Protocol (CvP) capabilities.
- Teal square: Arria 10 SX device with 48 transceiver channels and two PCIe Hard IP blocks.
- Green square: Arria 10 SX device with 36 transceiver channels and two PCIe Hard IP blocks.
- Blue square: Arria 10 SX device with 24 transceiver channels and two PCIe Hard IP blocks.

Figure 1-12: Arria 10 SX Device with 12 Transceiver Channels and One Hard IP Block

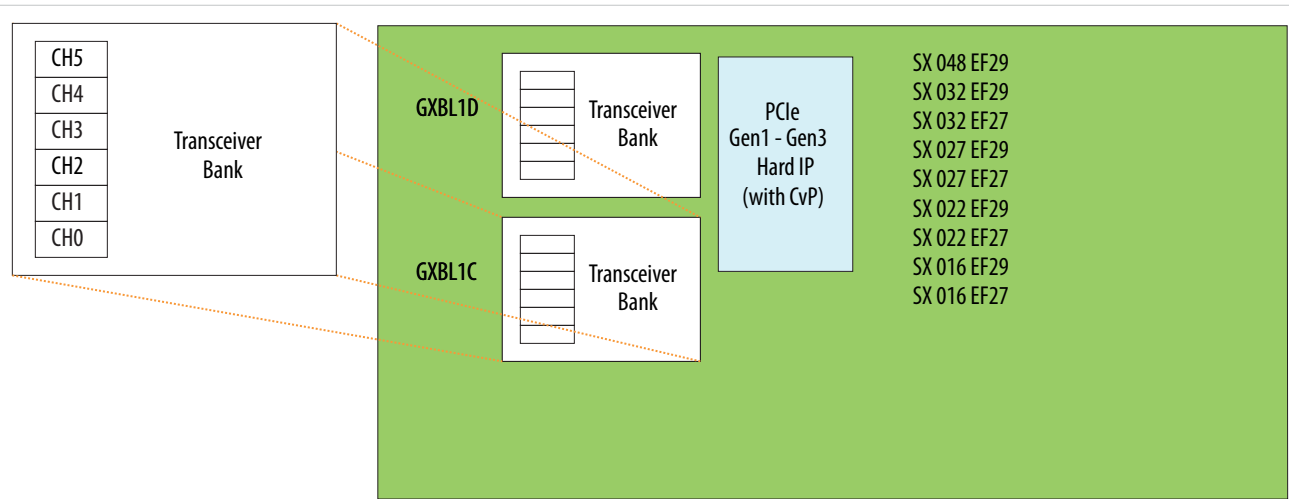


Note:
(1) These devices have transceivers only on the left hand side of the device.

Legend:

PCIe Gen1 - Gen3 Hard IP blocks with Configuration via Protocol (CvP) capabilities.

Arria 10 SX device with 12 transceiver channels and one Hard IP block.

Figure 1-13: Arria 10 SX Device with Six Transceiver Channels and One Hard IP Block

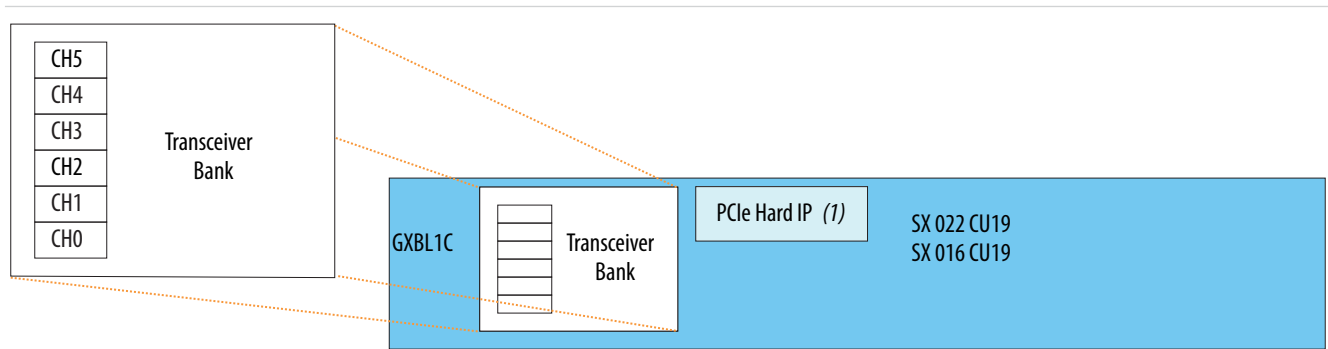

Note:
(1) Only CH5 and CH4 support PCIe Hard IP block with Configuration via Protocol (CvP) capabilities.
(2) These devices have transceivers only on the left hand side of the device.

Legend:

PCIe Gen1 - Gen3 Hard IP block with Configuration via Protocol (CvP) capabilities.

Arria 10 SX device with six transceiver channels and one PCIe Hard IP block.

Arria 10 SX Device Package Details

The following tables list package sizes, available transceiver channels, and PCI Express Hard IP blocks for Arria 10 SX devices.

Table 1-5: Package Details for SX Devices with Transceivers and HIP Blocks Located on the Left Side Periphery of the Device

Device	U19 ⁽⁶⁾	F27 ⁽⁷⁾	F29 ⁽⁸⁾	F34 ⁽⁹⁾	F35 ⁽⁹⁾	K F40 ⁽¹⁰⁾	N F40 ⁽¹⁰⁾
	Transceiver Count, PCIe Hard IP Block Count						
SX 016	6, 1	12, 1	12, 1				
SX 022	6, 1	12, 1	12, 1				
SX 027		12, 1	12, 1	24, 2	24, 2		
SX 032		12, 1	12, 1	24, 2	24, 2		
SX 048			12, 1	24, 2	36, 2		
SX 057				24, 2	36, 2	36, 2	48, 2
SX 066				24, 2	36, 2	36, 2	48, 2

Transceiver PHY Architecture Overview

A link is defined as a single entity communication port. A link can have one or more transceiver channels. A transceiver channel is synonymous with a transceiver lane.

For example, a 10GBASE-R link has one transceiver channel or lane with a data rate of 10.3125 Gbps. A 40GBASE-R link has four transceiver channels. Each transceiver channel operates at a lane data rate of 10.3125 Gbps. Four transceiver channels give a total collective link bandwidth of 41.25 Gbps (40 Gbps before and after 64B/66B PCS encoding and decoding).

Transceiver Bank Architecture

The transceiver bank is the fundamental unit that contains all the functional blocks related to the device's high speed serial transceivers.

Each transceiver bank includes six transceiver channels in all devices except for the devices with 66 transceiver channels. These devices (with 66 transceiver channels) have both six channel and three channel transceiver banks. The uppermost transceiver bank on the left and the right side of these devices is a three channel transceiver bank. All other devices contain only six channel transceiver banks.

The figures below show the transceiver bank architecture with the phase locked loop (PLL) and clock generation block (CGB) resources available in each bank.

⁽⁶⁾ Package U19: 19mm x 19mm package; 484 pins.


⁽⁷⁾ Package F27: 27mm x 27mm package; 672 pins.

⁽⁸⁾ Package F29: 29mm x 29mm package; 780 pins.

⁽⁹⁾ Packages F34 and F35: 35 mm x 35 mm package size ; 1152 pins.


⁽¹⁰⁾ Package F40: 40 mm x 40 mm package size ; 1517 pins.

Figure 1-14: Three-Channel GX Transceiver Bank Architecture

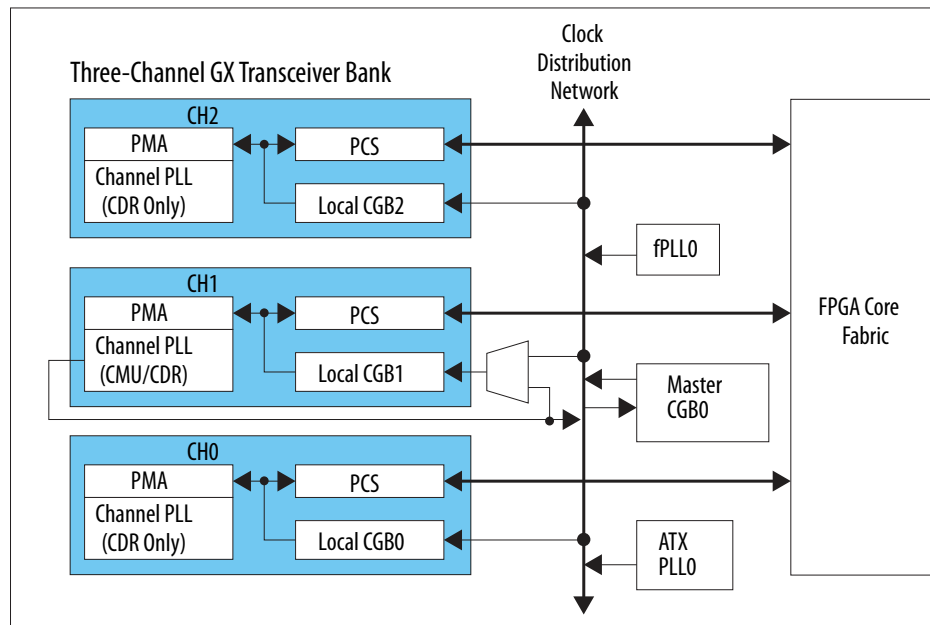

Note: This figure is a high level overview of the transceiver bank architecture. For details about the available clock networks refer to the *PLLs and Clock Networks* chapter.


Figure 1-15: Six-Channel GX Transceiver Bank Architecture

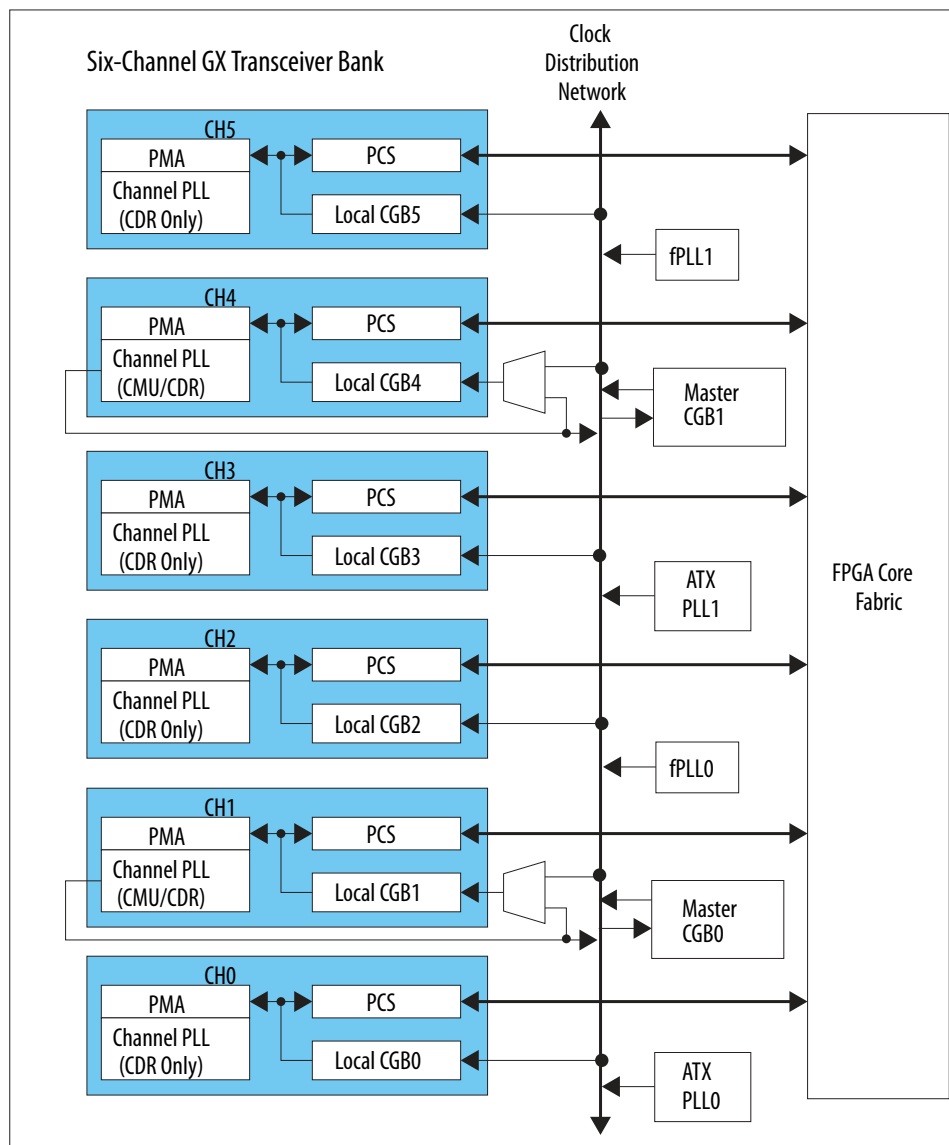

Note: This figure is a high level overview of the transceiver bank architecture. For details about the available clock networks refer to the *PLLs and Clock Networks* chapter.

Figure 1-16: GT Transceiver Bank Architecture

In GT devices, the transceiver banks GXBL1E, GXBL1F, GXBL1G, and GXBL1H include GT channels.

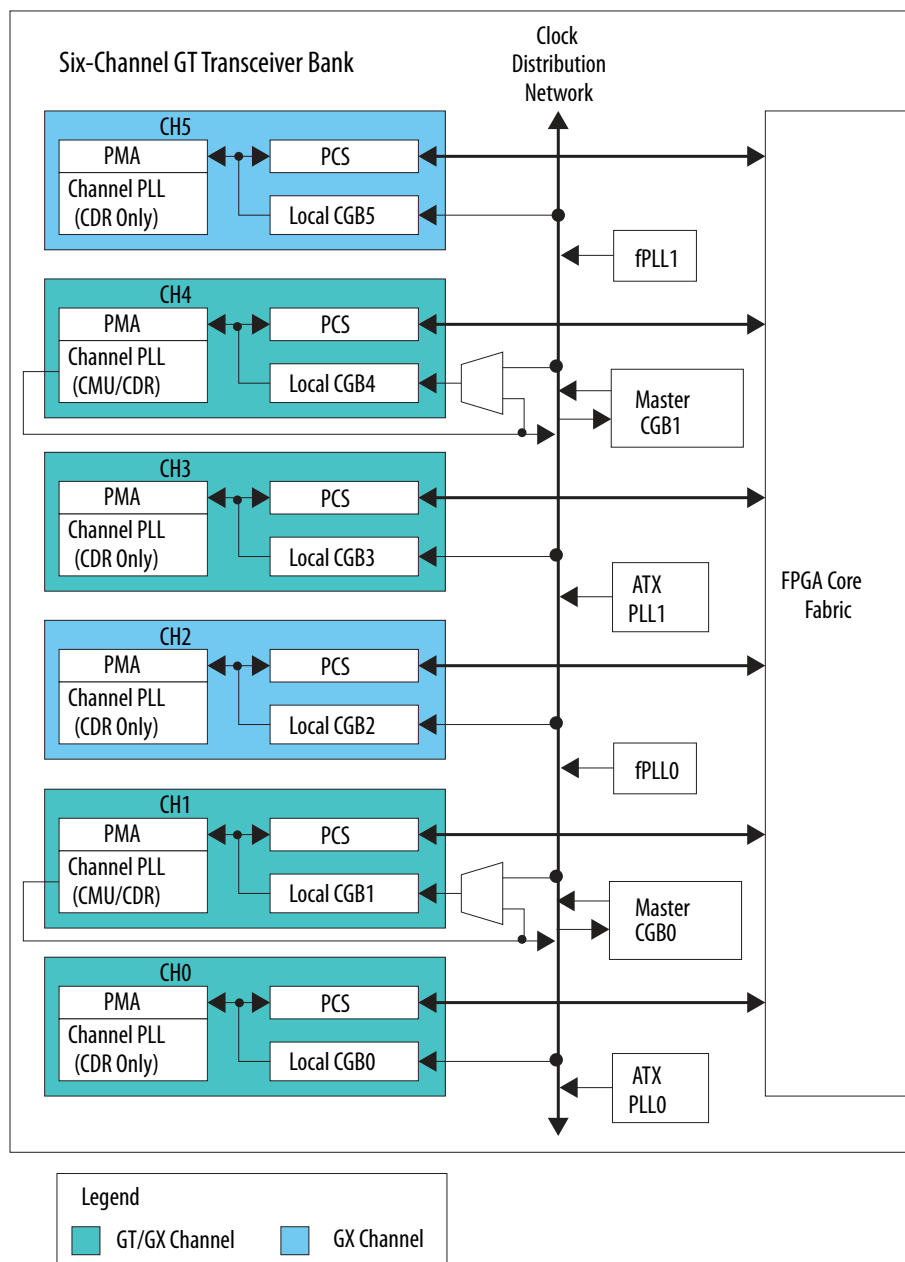

Note: This figure is a high level overview of the transceiver bank architecture. For details about the available clock networks refer to the *PLLs and Clock Networks* chapter.

The transceiver channels perform all the required PHY layer functions between the FPGA fabric and the physical medium. The high speed clock required by the transceiver channels is generated by the transceiver PLLs. The master and local clock generation blocks (CGBs) provide the necessary high speed serial and low speed parallel clocks to drive the non-bonded and bonded channels in the transceiver bank.

Related Information

- [PLLs and Clock Networks](#) on page 3-1
- [Transceiver Basics](#)
Online training course for transceivers.

PHY Layer Transceiver Components

Transceivers in Arria 10 devices support both Physical Medium Attachment (PMA) and Physical Coding Sublayer (PCS) functions at the physical (PHY) layer.


A PMA is the transceiver's electrical interface to the physical medium. The transceiver PMA consists of standard blocks such as:

- serializer/deserializer (SERDES)
- clock and data recovery PLL
- analog front end transmit drivers
- analog front end receive buffers

The PCS can be bypassed with a PCS-Direct configuration. Both the PMA and PCS blocks are fed by multiple clock networks driven by high performance PLLs. In PCS-Direct configuration, the data flow is through the PCS block, but all the internal PCS blocks are bypassed. In this mode, the PCS functionality is implemented in the FPGA fabric.

The GX Transceiver Channel

Figure 1-17: GX Transceiver Channel in Full Duplex Mode.

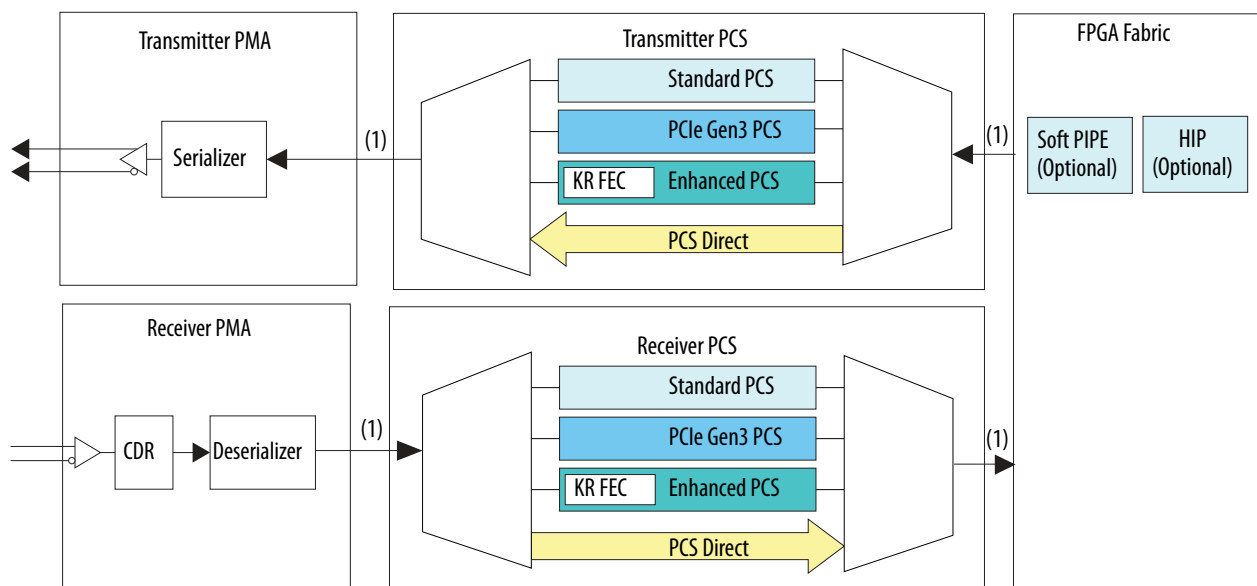**Notes:**

(1) The FPGA Fabric - PCS and PCS-PMA interface widths are configurable.

Arria 10 GX transceiver channels have three types of PCS blocks that together support continuous data rates between 1.0 Gbps and 17.4 Gbps.


Table 1-6: PCS Types Supported by GX Transceiver Channels

PCS Type	Data Rate
Standard PCS	1.0 Gbps to 10 Gbps
Enhanced PCS	1.0 Gbps to 17.4 Gbps
PCIe Gen3 PCS	8 Gbps

Note: The GX channel can also operate in PCS Direct configuration for data rates from 1.0 Gbps to 17.4 Gbps. Oversampling is required for data rates below 1.0 Gbps.

The GT Transceiver Channel

The GT transceiver channels are used for supporting data rates from 17.4 Gbps to 28.3 Gbps. The GT transceiver channels can also be reconfigured as GX transceiver channels. When they are reconfigured as GX transceiver channels, the Standard PCS, Enhanced PCS, and PCIe Gen3 PCS are available and they support data rates from 1.0 Gbps to 17.4 Gbps.

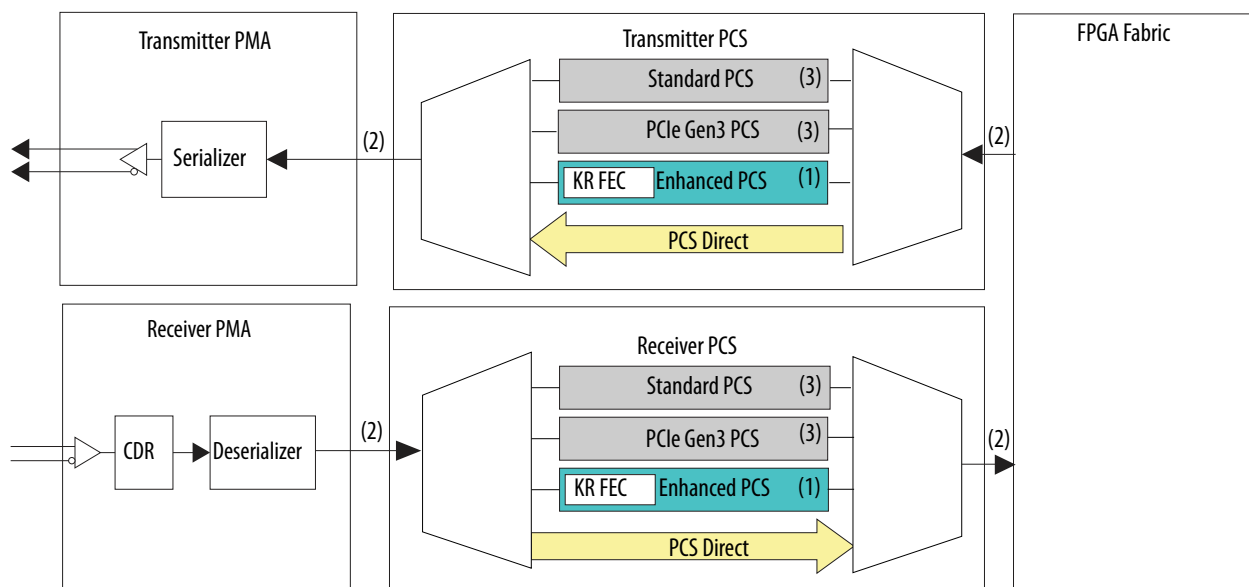Figure 1-18: GT Transceiver Channel in Full Duplex Mode Operating Between 17.4 Gbps and 28.3 Gbps

Notes:

- (1) The Enhanced PCS must be configured in low latency mode to support data rate range from 17.4 Gbps to 28.3 Gbps.
- (2) The FPGA Fabric - PCS and PCS-PMA interface widths are configurable.
- (3) The Standard PCS and PCIe Gen3 PCS blocks are available when the GT channel is reconfigured as a GX transceiver channel.

Table 1-7: PCS Types and Data Rates Supported by GT Channel Configurations

GT Channel Configuration	PCS Type	Data Rates Supported
GT	Standard PCS	Not available for GT configuration
	Enhanced PCS	17.4 Gbps to 28.3 Gbps ⁽¹¹⁾
	PCIe Gen3 PCS	Not available for GT configuration
GX	Standard PCS	1.0 Gbps to 10 Gbps
	Enhanced PCS	1.0 Gbps to 17.4 Gbps
	PCIe Gen3 PCS	8 Gbps

Note: The GT channels can also operate in PCS-Direct configuration for data rates between 1 Gbps to 28.3 Gbps. This configuration is also dependent upon the core speed grade.

Transceiver Phase-Locked Loops

Each transceiver channel in Arria 10 devices has direct access to three types of high performance PLLs:

- Advanced Transmit (ATX) PLL
- Fractional PLL (fPLL)
- Channel PLL / Clock Multiplier Unit (CMU) PLL.

These transceiver PLLs along with the Master or Local Clock Generation Blocks (CGB) drive the transceiver channels.

Related Information

[PLLs](#) on page 3-3

For more information on transceiver PLLs in Arria 10 devices.

Advanced Transmit (ATX) PLL

An advanced transmit (ATX) PLL is a high performance PLL. It supports both integer frequency synthesis and coarse resolution fractional frequency synthesis. The ATX PLL is the transceiver channel's primary transmit PLL. It can operate over the full range of supported data rates required for high data rate applications.

Related Information

- [ATX PLL](#) on page 3-3
For more information on ATX PLL.
- [ATX PLL IP Core](#) on page 3-6
For details on implementing the ATX PLL IP.

Fractional PLL (fPLL)

A fractional PLL (fPLL) is an alternate transmit PLL used for generating low clock frequencies for low data rate applications. fPLLs support both integer frequency synthesis and fine resolution fractional

⁽¹¹⁾ The Enhanced PCS must be configured in low latency mode to support data rate range from 17.4 Gbps to 28.3 Gbps.

frequency synthesis. Unlike the ATX PLL, the fPLL can be used to synthesize frequencies that can drive the core through the FPGA fabric clock networks.

Related Information

- [fPLL](#) on page 3-13
For more information on fPLL.
- [fPLL IP Core](#) on page 3-15
For details on implementing the fPLL IP.

Channel PLL (CMU/CDR PLL)

A channel PLL resides locally within each transceiver channel. Its primary function is clock and data recovery in the transceiver channel when the PLL is used in CDR mode. The channel PLLs of channel 1 and 4 can be used as a transmit PLL when configured in CMU mode. The channel PLLs of channel 0, 2, 3, and 5 cannot be configured in CMU mode and therefore cannot be used as a transmit PLL.

Related Information

- [CMU PLL](#) on page 3-21
For more information on CMU PLL.
- [CMU PLL IP Core](#) on page 3-24
For information on implementing CMU PLL IP.

Clock Generation Block (CGB)

In Arria 10 devices, there are two types of clock generation blocks (CGBs)

- Master CGB
- Local CGB

Transceiver banks with six transceiver channels have two master CGBs. Master CGB1 is located at the top of the transceiver bank and master CGB0 is located at the bottom of the transceiver bank. Transceiver banks with three channels have only one master CGB. The master CGB divides and distributes bonded clocks to a bonded channel group. It also distributes non-bonded clocks to non-bonded channels across the x6/xN clock network.

Each transceiver channel has a local CGB. The local CGB is used for dividing and distributing non-bonded clocks to its own PCS and PMA blocks.

Related Information

[Clock Generation Block](#) on page 3-36
For more information on clock generation block.

Calibration

Arria 10 FPGAs contain a dedicated calibration engine to compensate for process variations. The calibration engine calibrates the analog portion of the transceiver to allow both the transmitter and receiver to operate at maximum performance. Each Arria 10 device contains two calibration engines and each engine resides on either side of the device. A hard NIOS II processor controls the calibration flow.

The CLKUSR pin clocks the calibration engine. All transceiver reference clocks and the CLKUSR clock must be free running and stable upon device power-up to successfully complete the calibration process and for optimal transceiver performance.

Note: For more information about CLKUSR pin requirements, refer to *Arria 10 Device Datasheet*. For information about configuration requirements for the CLKUSR pin, refer to *Configuration, Design Security, and Remote System Upgrades in Arria 10 Devices* chapter. For more information about calibration, refer to the *Calibration* chapter. For more information about pin assignments, refer to the *Arria 10 GX, GT, and SX Device Family Pin Connection Guidelines*.

Related Information

- [Calibration](#) on page 7-1
- [Arria 10 Device Datasheet](#)
- [Configuration, Design Security, and Remote System Upgrades in Arria 10 Devices](#)
- [Arria 10 GX, GT, and SX Device Family Pin Connection Guidelines](#)

Implementing Protocols in Arria 10 Transceivers

2

2014.12.15

UG-01143




Subscribe



Send Feedback

Transceiver Design IP Blocks

Figure 2-1: Arria 10 Transceiver Design Fundamental Building Blocks

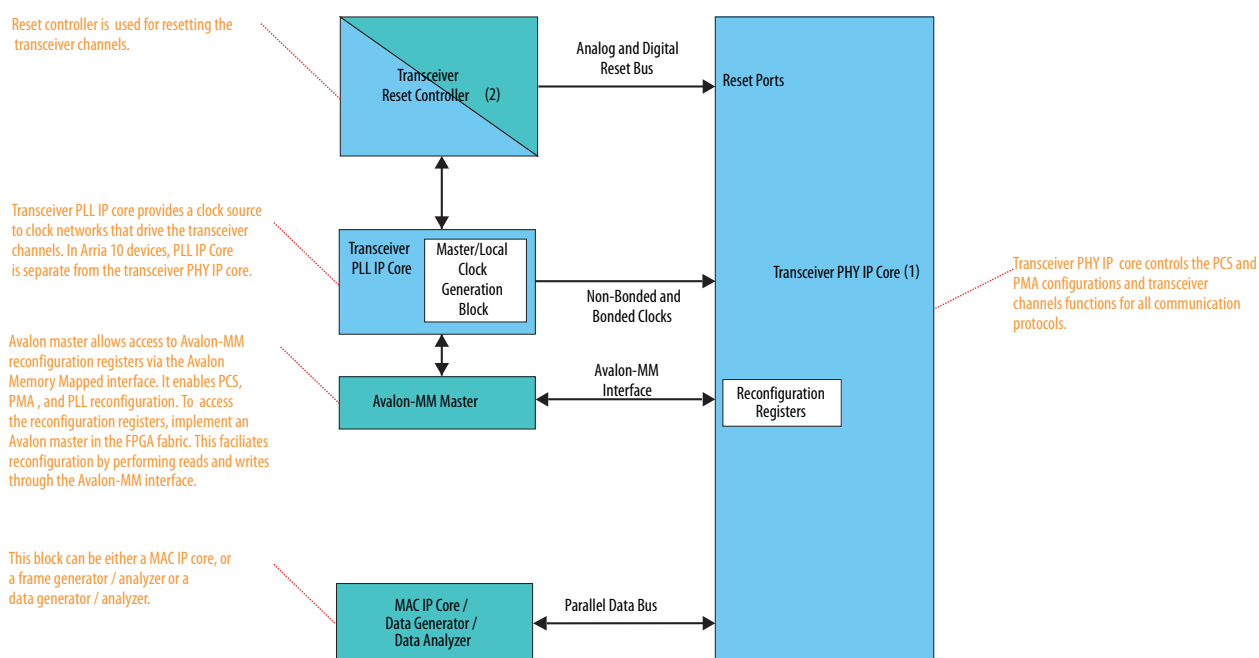

Note:

(1) The Transceiver PHY IP Core can be either the Native PHY IP Core or the 1G/10GbE and 10GBASE-KR PHY IP Core.

(2) You can either design your own reset controller or use the Altera Transceiver PHY Reset Controller IP Core.

Legend:

Altera generated IP block

User created IP block


© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

ALTERA®

Transceiver Design Flow

Figure 2-2: Transceiver Design Flow

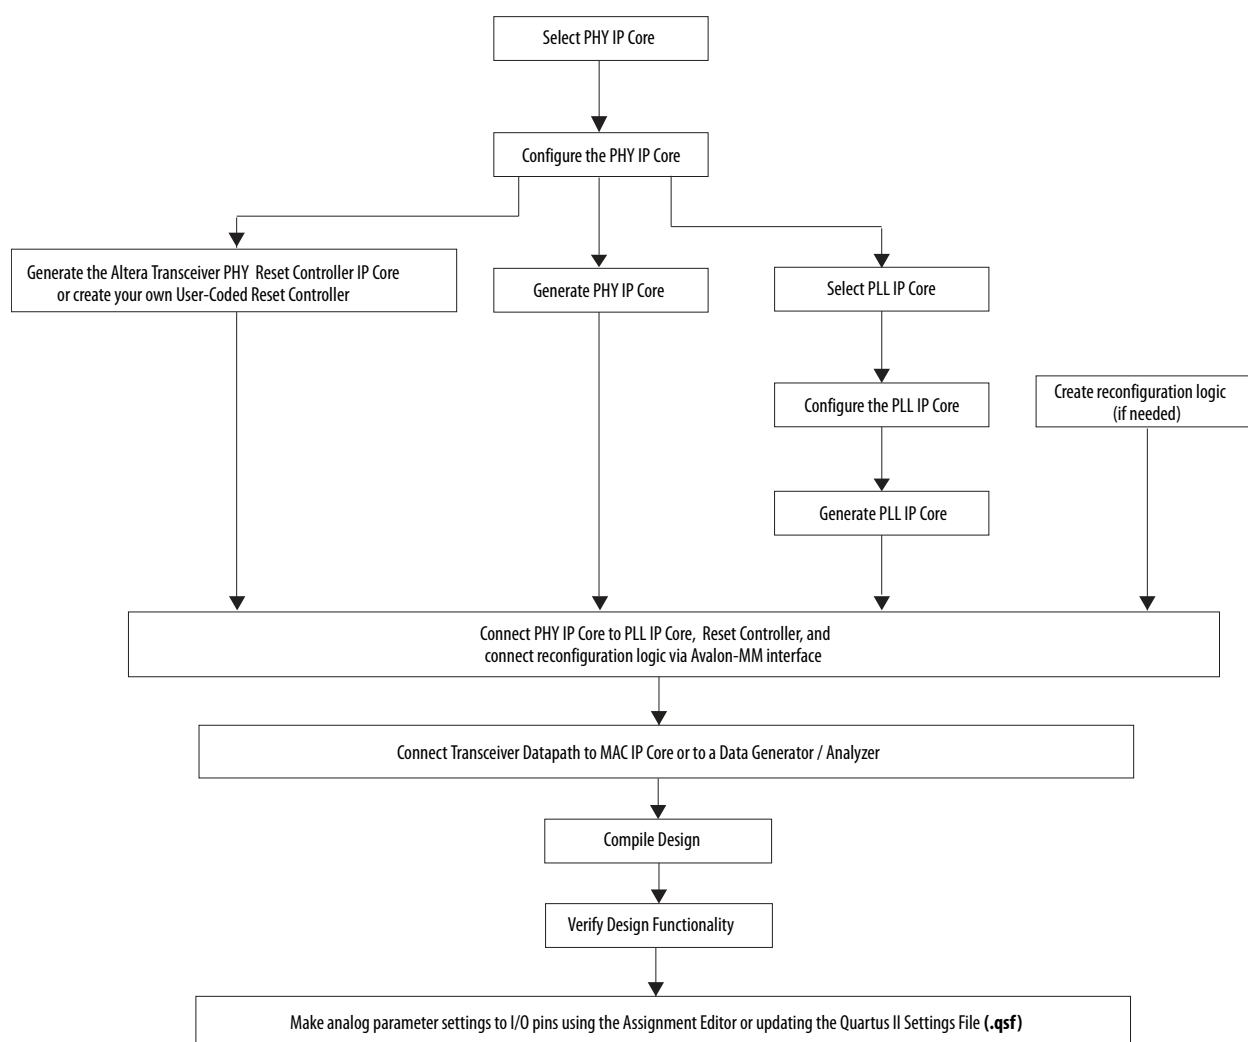

Related Information

Arria 10 Transceiver PHY Design Examples

Note: The design examples on the *alterawiki* page provide useful guidance for developing your own design. However, the content on the *alterawiki* page is not guaranteed by Altera.

Select and Instantiate PHY IP Core

Select the appropriate PHY IP core to implement your protocol. Refer to the *Arria 10 Transceiver Protocols and PHY IP Support* section to decide which PHY IP to select to implement your protocol.

You can create your Quartus® II project first, and then instantiate the various IPs required for your design. In this case, specify the location to save your IP HDL files. The current version of the PHY IP does

not have the option to set the speed grade. Specify the device family and speed grade when you create the Quartus II project.


You can also instantiate the PHY IP directly to evaluate the various features. In this case, the Quartus-II software saves the IP HDL files in the default installation directory.

To instantiate a PHY IP:

1. Open the Quartus II software.
2. Click **Tools > IP Catalog**.
3. In **IP Catalog**, under **Library > Interface Protocols**, select the appropriate PHY IP and then click **Add**.
4. In the **New IP Instance Dialog Box**, provide the IP instance name.
5. Select **Arria 10** device family.
6. Select the appropriate device and click **OK**.

The PHY IP Parameter Editor window opens.

Figure 2-3: Arria 10 Transceiver PHY Types

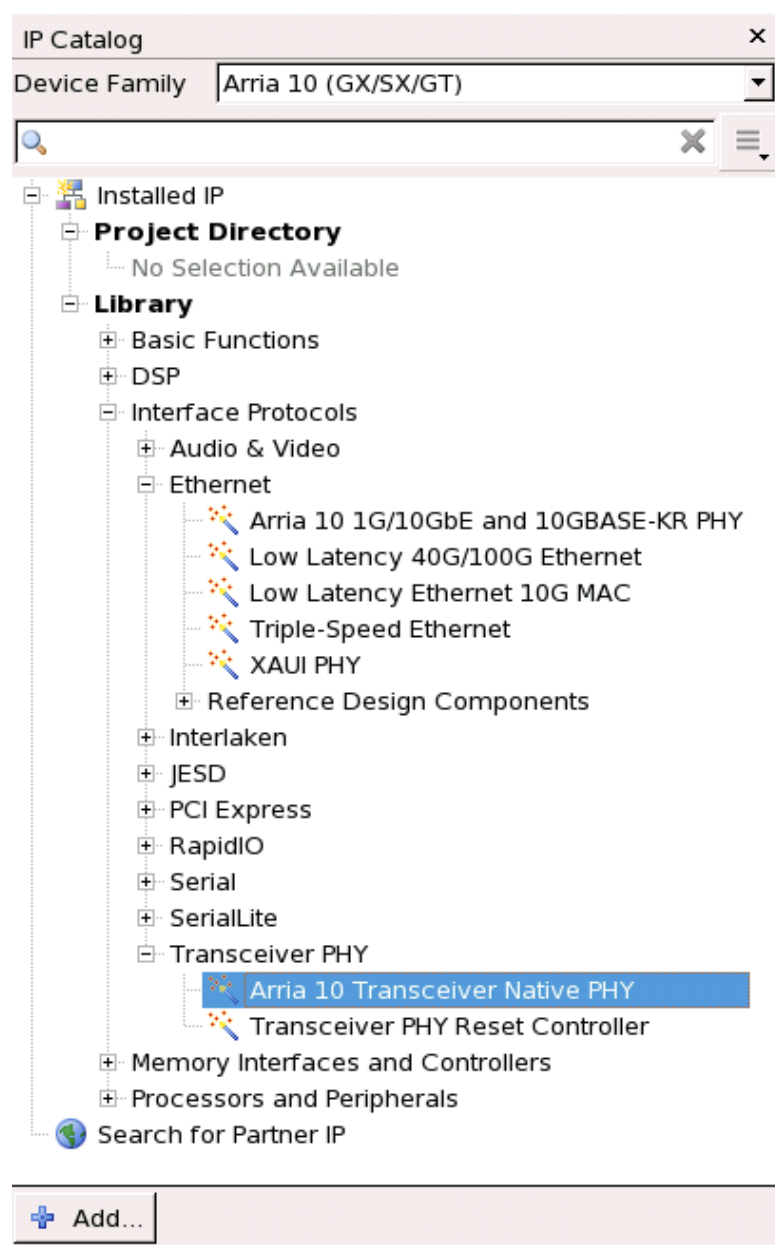**Related Information**

[Arria 10 Transceiver Protocols and PHY IP Support](#) on page 2-10

Configure the PHY IP Core

Configure the PHY IP core by selecting the valid parameters for your design. The valid parameter settings are different for each protocol. Refer to the appropriate protocol's section for selecting valid parameters for each protocol.

Related Information

- [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16
For information on Native PHY IP.
- [Interlaken](#) on page 2-76
- [Gigabit Ethernet \(GbE\) and GbE with IEEE 1588v2](#) on page 2-97
- [10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC Variants](#) on page 2-112
- [10GBASE-KR PHY IP Core](#) on page 2-126
- [1-Gigabit/10-Gigabit Ethernet \(GbE\) PHY IP Core](#) on page 2-165
- [PCI Express \(PIPE\)](#) on page 2-231
- [CPRI](#) on page 2-270
- [Using the "Basic \(Enhanced PCS\)" and "Basic with KR FEC" Configurations of Enhanced PCS](#) on page 2-281
- [Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS](#) on page 2-292
- [Design Considerations for Data Rates Above 17.4 Gbps Using Arria 10 GT Channels](#) on page 2-313

Generate PHY IP Core

After configuring the PHY IP, complete the following steps to generate the PHY IP.

1. Click the **Generate HDL** button in the **Parameter Editor** window. The **Generation** dialog box opens.
2. In **Synthesis** options, under **Create HDL design for synthesis** select **Verilog** or **VHDL**.
3. Select appropriate **Simulation** options depending on the choice the hardware description language you selected under **Synthesis** options.
4. In **Output Directory**, select **Clear output directories for selected generation targets** if you want to clear any previous IP generation files from the selected output directory.
5. Click **Generate**.

The Quartus II software generates a *<phy ip instance name>* folder, *<phy ip instance name>_sim* folder, *<phy ip instance name>.qip* file, *<phy ip instance name>.qsys* file, and *<phy ip instance name>.v* file or *<phy ip instance name>.vhd* file. This *<phy ip instance name>.v* file is the top level design file for the PHY IP and is placed in the *<phy ip instance name>/synth* folder. The other folders contain lower level design files used for simulation and compilation.

Related Information

[IP Core File Locations](#) on page 2-74

Select PLL IP Core

Arria 10 devices have three types of PLL IP cores:

- Advanced Transmit (ATX) PLL IP core
- Fractional PLL (fPLL) IP core
- Channel PLL / Clock Multiplier Unit (CMU) PLL IP core

Select the appropriate PLL IP for your design. Refer to the *PLLs and Clock Networks* chapter for detailed information on available PLLs and clock networks.


To instantiate a PLL IP:

1. Open the Quartus II software.
2. Click **Tools > IP Catalog**.
3. In **IP Catalog**, under **Library > Basic Functions > Clocks, PLLs, and Resets > PLL** choose the PLL IP (**Arria 10 fPLL**, **Arria 10 Transceiver ATX PLL**, or **Arria 10 Transceiver CMU PLL**) you want to include in your design and then click **Add**.
4. In the **New IP Instance Dialog Box**, provide the IP instance name.
5. Select **Arria 10** device family
6. Select the appropriate device and click **OK**

The PLL IP GUI window opens.



Figure 2-4: Arria 10 Transceiver PLL Types

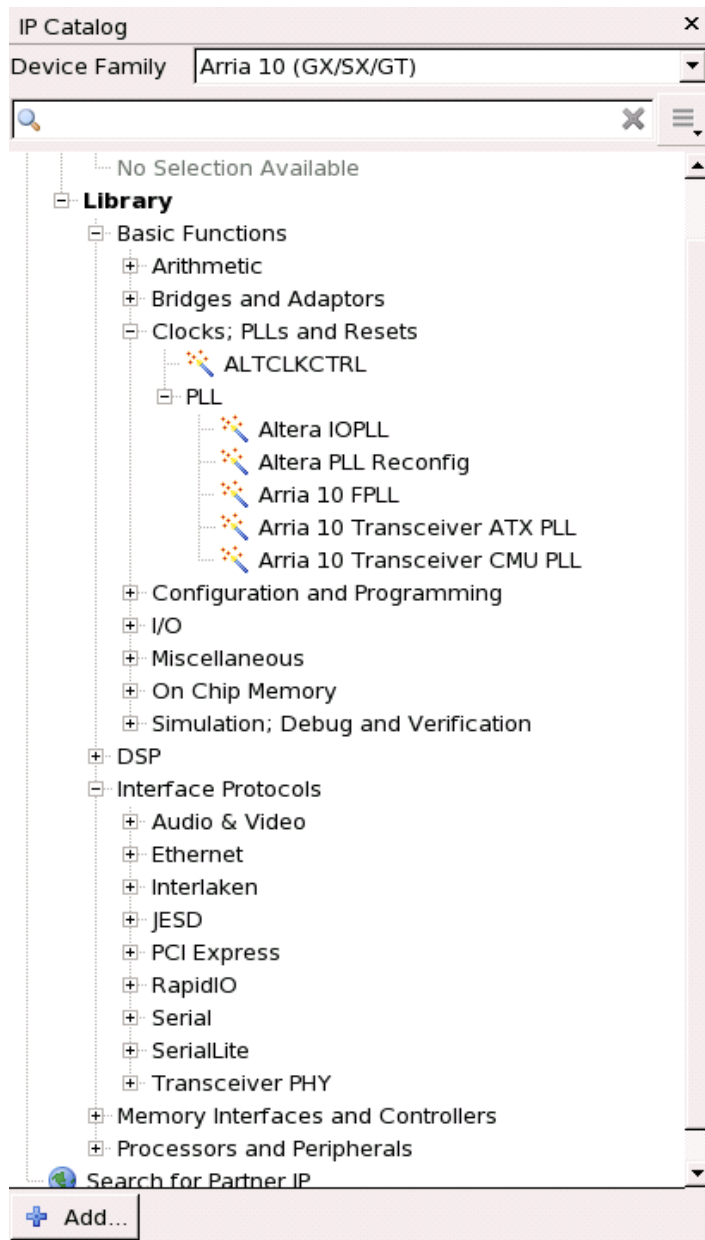

Related Information

PLLs on page 3-3

Configure PLL IP Core

Understand the available PLLs, clock networks and the supported clocking configurations. Configure the PLL IP to achieve adequate data rate for your design.

Related Information

- [ATX PLL IP Core](#) on page 3-6
- [fPLL IP Core](#) on page 3-15
- [CMU PLL IP Core](#) on page 3-24
- [Using PLLs and Clock Networks](#) on page 3-49

Generate PLL IP Core

After configuring the PLL IP, complete the following steps to generate the PLL IP.

1. Click the **Generate HDL** button in the **Parameter Editor** window. The **Generation** dialog box opens.
2. In **Synthesis** options, under **Create HDL design for synthesis** select **Verilog** or **VHDL**.
3. Select appropriate **Simulation** options depending on the choice of the hardware description language you select under **Synthesis** options.
4. In **Output Directory**, select **Clear output directories for selected generation targets** if you want to clear any previous IP generation files from the selected output directory.
5. Click **Generate**.

The Quartus® II software generates a *<pll ip instance name>* folder, *<pll ip instance name>_sim* folder, *<pll ip instance name>.qip* file, *<pll ip instance name>.qsys*, and *<pll ip instance name>.v* file or *<pll ip instance name>.vhd* file. The *<pll ip instance name>.v* file is the top level design file for the PLL IP and is placed in the *<pll ip instance name>/synth* folder. The other folders contain lower level design files used for simulation and compilation.

Related Information

[IP Core File Locations](#) on page 2-74

Reset Controller

There are two methods to reset the transceivers in Arria 10 devices:

- Using the Altera Transceiver PHY Reset Controller IP Core
- Creating your own reset controller that follows the recommended reset sequence.

Related Information

[Resetting Transceiver Channels](#) on page 4-1

Create Reconfiguration Logic

Dynamic reconfiguration is the ability to dynamically modify the transceiver channels and PLLs settings during device operation. To support dynamic reconfiguration, your design must include an Avalon master that can access the dynamic reconfiguration registers using the Avalon-MM interface.

The Avalon-MM master enables PCS dynamic switching, PLL and channel reconfiguration. You can adjust the PMA parameters such as differential output voltage swing (Vod), and pre-emphasis settings dynamically by writing to the Avalon-MM reconfiguration registers through the user generated Avalon-MM master.

Refer to the *Reconfiguration Interface and Dynamic Reconfiguration* chapter for details of dynamic reconfiguration.

Related Information

[Reconfiguration Interface and Dynamic Reconfiguration](#) on page 6-1

Connect PHY IP to PLL IP and Reset Controller

Connect the PHY IP, PLL IP, and the reset controller. Write the top level module to connect all the IP blocks.

All the I/O ports for each IP can be seen in the `<phy_instance_name>.v` file or `<phy_instance_name>.vhd`, and in the `<phy_instance_name>_bb.v` file.

Refer to the ports tables in the *PLL IP*, *Using the Transceiver Native PHY IP*, and *Resetting Transceiver Channels* chapters for the description of the ports.

Related Information

- [Enhanced PCS Ports](#) on page 2-50
- [Standard PCS Ports](#) on page 2-66

Connect the Transceiver Datapath to MAC IP Core or to a Data Generator or an Analyzer

Connect the transceiver PHY layer design to the Media Access Controller (MAC) IP or to a data generator / analyzer or a frame generator / analyzer.

Compile Design

To compile the transceiver design, add the `<phy_instancename>.qip` files for all the IP blocks generated using the IP Catalog to the Quartus II project library. Or you can also add the `.qsys` variants of the IP cores.

Related Information

[Quartus II Incremental Compilation for Hierarchical and Team-Based Design](#)
Compilation details.

Verify Design Functionality

Simulate your design to verify the functionality of your design. Refer to *Simulating the Native Transceiver PHY IP Core* section for more details.

Related Information

- [Simulating the Transceiver Native PHY IP Core](#) on page 2-322
- [Quartus II Handbook - Volume 3: Verification](#)
Information about design simulation and verification.

Make analog parameter settings to I/O pins using the Assignment Editor or updating the Quartus II Settings File

After verifying your design functionality, make pin assignments and PMA analog parameter settings for the transceiver pins.

1. Assign FPGA pins to all the transceiver and reference clock I/O pins. Refer to the *Arria 10 Pin Connection Guidelines* for more details.
2. Set the analog parameters to the transmitter, receiver, and reference clock pins using the **Assignment Editor**.

All the pin assignments and analog parameters set using the **Pin Planner** and the **Assignment Editor** are saved in the <top_level_project_name>.qsf file. QSF stands for Quartus Settings File. You can also directly modify the Quartus Settings file to set PMA analog parameters.

Related Information

- [Analog Parameter Settings](#) on page 8-1
- [Arria 10 Pin Connection Guidelines](#)

Arria 10 Transceiver Protocols and PHY IP Support

Table 2-1: Arria 10 Transceiver Protocols and PHY IP Support

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
PCIe Gen3 x1, x2, x4, x8	Native PHY IP (PIPE) ⁽¹⁴⁾	Standard and Gen3	Gen3 PIPE	PCIe PIPE Gen3 x1 PCIe PIPE Gen3 x8
PCIe Gen2 x1, x2, x4, x8	Native PHY IP (PIPE) ⁽¹⁴⁾	Standard	Gen2 PIPE	PCIe PIPE Gen2 x1 PCIe PIPE Gen2 x8
PCIe Gen1 x1, x2, x4, x8	Native PHY IP (PIPE) ⁽¹⁴⁾	Standard	Gen1 PIPE	User created

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
1000BASE-X Gigabit Ethernet	Native PHY IP	Standard	GbE	GIGE - 1.25 Gbps
1000BASE-X Gigabit Ethernet with 1588	Native PHY IP	Standard	GbE 1588	GIGE - 1.25 Gbps 1588
10GBASE-R	Native PHY IP	Enhanced	10GBASE-R	10GBASE-R
10GBASE-R Low Latency	Native PHY IP	Enhanced	10GBASE-R	10GBASE-R Low Latency
10GBASE-R 1588	Native PHY IP	Enhanced	10GBASE-R 1588	10GBASE-R 1588
10GBASE-R with KR FEC	Native PHY IP	Enhanced	10GBASE-R w/ KR FEC	10GBASE-R w/KR FEC
10GBASE-KR and 1000BASE-X	1G/10GbE and 10GBASE-KR PHY IP ⁽¹⁵⁾	Standard and Enhanced	Not applicable	BackPlane_wo_1588 LineSide (optical) LineSide(optical)_1588
40GBASE-R/100GBASE-R	Native PHY IP	Enhanced	Basic (Enhanced PCS)	Low Latency Enhanced PCS ⁽²⁰⁾ (18)
40GBASE-R with FEC/ 40GBASE-KR4 ⁽¹⁶⁾	Native PHY IP	Enhanced	Basic w/KR FEC	User created
100GBASE-R via CAUI-4/ CPPI-4/BP-4	Native PHY IP	PCS-Direct Enhanced PCS (low latency mode)	PCS Direct / Basic (Enhanced PCS)	Low Latency GT ⁽²⁰⁾

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
100GBASE-R via CAUI	Native PHY IP	Enhanced	Basic (Enhanced PCS)	Low Latency Enhanced PCS ⁽¹⁹⁾
100GBASE-R via CAUI with FEC	Native PHY IP	Enhanced	Basic w/KR FEC	User created
XAUI	XAUI PHY IP	Standard Soft PCS	Not applicable	Not applicable
SPAUI	Native PHY IP	Standard and Enhanced	Basic/Custom (Standard PCS) Basic (Enhanced PCS)	User created
DDR XAUI	Native PHY IP	Standard and Enhanced	Basic/Custom (Standard PCS) Basic (Enhanced PCS)	User created
Interlaken (CEI-6G/11G) ⁽¹⁷⁾	Native PHY IP	Enhanced	Interlaken	Interlaken 10x12.5Gbps Interlaken 6x10.3Gbps Interlaken 1x6.25Gbps
OTU-4 (100G) via OTL4.4/CEI-25G/28G VSR/SR	Native PHY IP	PCS-Direct Enhanced PCS (low latency mode)	PCS Direct / Basic (Enhanced PCS)	Low Latency GT ⁽²⁰⁾

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
OTU-4 (100G) via OTL4.10/OIF SFI-S	Native PHY IP	Enhanced	Basic (Enhanced PCS)	SFI-S 64:64 4x11.3 Gbps
OTU-3 (40G) via OTL3.4/OIF SFI-5.2/SFI-5.1	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
OTU-2 (10G) via SFP+/SFF-8431/CEI-11G	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
OTU-2 (10G) via OIF SFI-5.1s	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
OTU-1 (2.7G)	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
SONET/SDH STS-768/STM-256 (40G) via OIF SFI-5.2/STL256.4	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SONET/SDH STS-768/STM-256 (40G) via OIF SFI-5.1	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SONET/SDH STS-192/STM-64 (10G) via SFP+/SFF-8431/CEI-11G	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SONET/SDH STS-192/STM-64 (10G) via OIF SFI-5.1s/SxI-5/SFI-4.2	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SONET STS-96 (5G) via OIF SFI-5.1s	Native PHY IP	Enhanced	Basic/Custom (Standard PCS)	SONET/SDH OC-96

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
SONET/SDH STS-48/ STM-16 (2.5G) via SFP/ TFI-5.1	Native PHY IP	Standard	Basic/Custom (Standard PCS)	SONET/SDH OC-48
SONET/SDH STS-12/ STM-4 (0.622G) via SFP/ TFI-5.1	Native PHY IP	Standard	Basic/Custom (Standard PCS)	SONET/SDH OC-12
Intel QPI 1.1/2.0	Native PHY IP	PCS-Direct	Not Available	User created
SD-SDI/HD-SDI/3G-SDI	Native PHY IP	Standard	Basic/Custom (Standard PCS)	3G/HD SDI NTSC 3G/HD SDI PAL
Vx1	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
DisplayPort	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
1.25G/ 2.5G 10G GPON/EPON	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
2.5G/1.25G GPON/EPON	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
16G/10G Fibre Channel	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
8G/4G/2G/1G Fibre Channel	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
EDR Infiniband x1, x4, x12	Native PHY IP	PCS-Direct Enhanced (low latency mode)	Basic (Enhanced PCS)	User created
FDR/FDR-10 Infiniband x1, x4, x12	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SDR/DDR/QDR Infiniband x1, x4, x12	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
CPRI 6.0 10.1376 Gbps	Native PHY IP	Enhanced	10GBASE-R 1588	User created
CPRI 4.2/OBSAI RP3 v4.2	Native PHY IP	Standard	CPRI (Auto) / CPRI (Manual)	CPRI 9.8Gbps Auto Mode CPRI 9.8 Gbps Manual Mode
SRIO 2.2/1.3	Native PHY IP	Standard	Basic/Custom with Rate Match(Standard PCS)	Serial Rapid IO 1.25 Gbps
SAS 3.0	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
SATA 3.0/2.0/1.0 and SAS 2.0/1.1/1.0	Native PHY IP	Standard	Basic/Custom (Standard PCS)	SAS Gen2/Gen1.1/Gen1 SATA Gen3/Gen2/Gen1
HiGig/HiGig+/HiGig2/HiGig2+	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

Protocol	Transceiver IP	PCS Support	Transceiver Configuration Rule ⁽¹²⁾	Protocol Preset ⁽¹³⁾
JESD204A / JESD204B	Native PHY IP	Standard and Enhanced	Basic/Custom (Standard PCS) Basic (Enhanced PCS) ⁽²¹⁾	User created
ASI	Native PHY IP	Standard	Basic/Custom (Standard PCS)	User created
SPI-5 (100G) / SPI-5 (50G)	Native PHY IP	Enhanced	Basic (Enhanced PCS)	User created
Custom and other protocols	Native PHY IP	Standard and Enhanced	Basic/Custom (Standard PCS) Basic (Enhanced PCS) Basic/Custom with Rate Match (Standard PCS)	User created

Using the Arria 10 Transceiver Native PHY IP Core

This section describes the use of the Altera-provided Arria 10 Transceiver Native PHY IP core. This IP core provides direct access to Arria 10 transceiver PHY features.

Use the Transceiver Native PHY IP core to configure the transceiver PHY for your protocol implementation. To instantiate the IP, click **Tools > IP Catalog** to select your IP core variation. Use the **Parameter Editor** to specify the IP parameters and configure the PHY IP for your protocol implementation. To quickly configure the PHY IP, select a Preset that matches your protocol configuration as a starting point.

⁽¹²⁾ For more information about Transceiver Configuration Rules, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹³⁾ For more information about Protocol Presets, refer to [Using the Arria 10 Transceiver Native PHY IP Core](#) on page 2-16.

⁽¹⁴⁾ Hard IP for PCI Express is also available as a separate IP core.

⁽¹⁵⁾ The 1G/10GbE and 10GBASE-KR PHY IP core includes the necessary soft IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁶⁾ Needs a user created IP for link training, auto speed negotiation, and sequencer functions.

⁽¹⁷⁾ A soft PCS is required for the multi-lane bonding configuration which is provided in the design example.

⁽¹⁸⁾ To implement 40GBASE-R/100GBASE-R using the Low Latency Enhanced PCS preset, change the number of data channels to four and select appropriate PCS- FPGA Fabric and PCS-PMA width.

⁽¹⁹⁾ To implement 100GBASE-R via CAUI using the Low Latency Enhanced PCS preset, change the number of data channels to 10 and select appropriate PCS-FPGA Fabric and PCS-PMA width.

⁽²⁰⁾ Low Latency GT protocol preset requires some modification to implement OTU-4 (100G) via OTL4.4/CEI-28G-VSR.

⁽²¹⁾ For JESD204B, Enhanced PCS is used when the data rate is above 12.0 Gbps

Presets are PHY IP configuration settings for various protocols that are stored in the IP **Parameter Editor**. Presets are explained in detail in the *Presets* section below.

You can also configure the PHY IP by selecting an appropriate **Transceiver Configuration Rule**. The Transceiver Configuration Rules check the valid combinations of the PCS and PMA blocks in the transceiver PHY layer, and report errors or warnings for any invalid settings.

Use the Transceiver Native PHY IP core to instantiate the following PCS options:

- Standard PCS
- Enhanced PCS
- PCIe Gen3 PCS
- PCS Direct

Based on the Transceiver Configuration Rule that you select, the PHY IP core selects the appropriate PCS. The PHY IP core allows you to select all the PCS blocks if you intend to dynamically reconfigure from one PCS to another. Refer to *General and Datapath Parameters* section for more details on how to enable all PCS blocks for dynamic reconfiguration.

After you configure the PHY IP core in the **Parameter Editor**, click **Generate HDL** to generate the IP instance. The top level file generated with the IP instance includes all the available ports for your configuration. Use these ports to connect the PHY IP core to the PLL IP core, the reset controller IP core, and to other IP cores in your design.

Figure 2-5: Transceiver Native PHY IP Core Ports and Functional Blocks


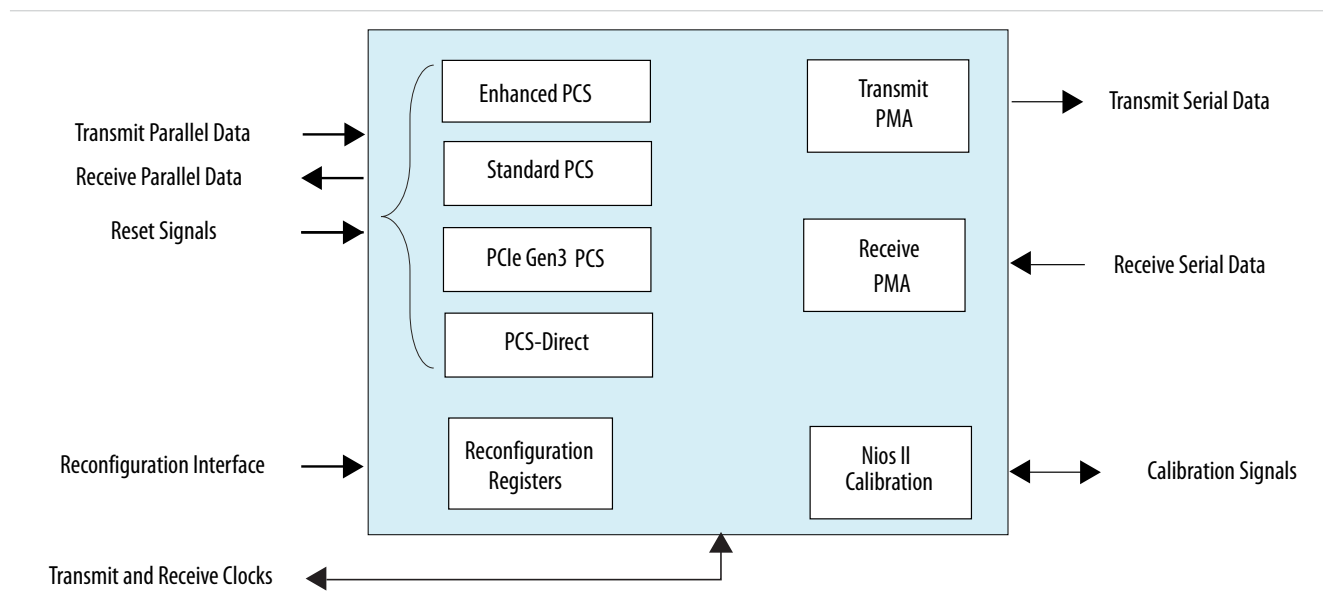


Figure 2-6: Transceiver Native PHY IP Core Parameter Editor

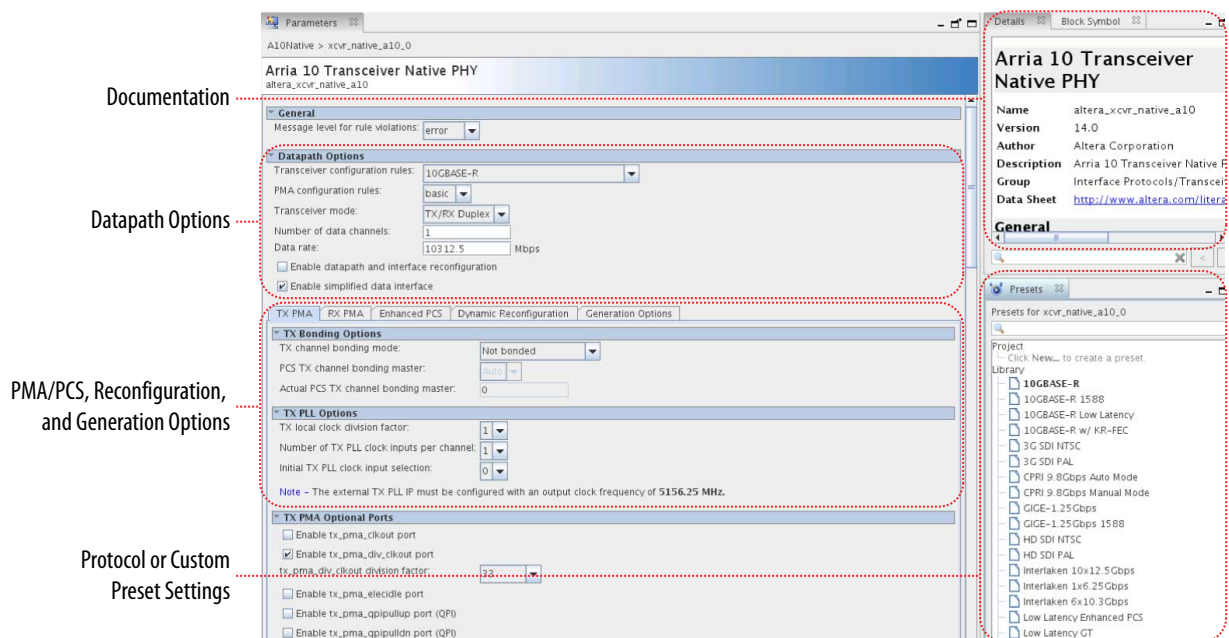

Note: Although the Quartus II software provides legality checks, the supported FPGA fabric to PCS interface widths and the supported data rates are pending characterization.

Related Information

- [Configure the PHY IP Core](#) on page 2-4
- [Interlaken](#) on page 2-76
- [Gigabit Ethernet \(GbE\) and GbE with IEEE 1588v2](#) on page 2-97
- [10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC Variants](#) on page 2-112
- [10GBASE-KR PHY IP Core](#) on page 2-126
- [1-Gigabit/10-Gigabit Ethernet \(GbE\) PHY IP Core](#) on page 2-165
- [PCI Express \(PIPE\)](#) on page 2-231
- [CPRI](#) on page 2-270
- [Using the "Basic \(Enhanced PCS\)" and "Basic with KR FEC" Configurations of Enhanced PCS](#) on page 2-281
- [Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS](#) on page 2-292
- [Design Considerations for Data Rates Above 17.4 Gbps Using Arria 10 GT Channels](#) on page 2-313
- [PMA Parameters](#) on page 2-22
- [Presets](#) on page 2-19
- [General and Datapath Parameters](#) on page 2-19
- [Enhanced PCS Ports](#) on page 2-50
- [Standard PCS Ports](#) on page 2-66
- [PMA Ports](#) on page 2-46

Presets

You can select preset settings for the Transceiver Native PHY IP defined for each protocol. Use presets as a starting point to specify parameters for your specific protocol or application.

To apply a preset to the Transceiver Native PHY IP, double-click on the preset name. When you apply a preset, all relevant options and parameters are set in the current instance of the Transceiver Native PHY IP. For example, selecting the **Interlaken** preset enables all parameters and ports that the Interlaken protocol requires.

Selecting a preset does not prevent you from changing any parameter to meet the requirements of your design. Any changes that you make are validated by the design rules for the **Transceiver configuration rules** you specified, not the selected preset.

General and Datapath Parameters

You can customize your instance of the Transceiver Native PHY IP by specifying parameter values. In the Parameter Editor, the parameters are organized in the following sections for each functional block and feature:

- General and Datapath Options
- TX PMA
- RX PMA
- Enhanced PCS
- Standard PCS
- Dynamic Reconfiguration

Table 2-2: General and Datapath Options

Parameter	Value	Description
Message level for rule violations	error message	Specifies the messaging level for parameter rule violations. Selecting error causes all rule violations to prevent IP generation. Selecting warning displays all rule violations as warnings in the message window and allows IP generation despite the violations.
Transceiver configuration rules	User Selection	Specifies the valid configuration rules for the transceiver. This parameter specifies the configuration rule against which the Parameter Editor checks your PMA and PCS parameter settings for specific protocols. Depending on the transceiver configuration rule selected, the Parameter Editor validates the parameters and options selected by you and generates error messages or warnings for all invalid settings. To determine the transceiver configuration rule to be selected for your protocol, refer to Table 2-1. This parameter is used for rule checking and is not a preset. You need to set all parameters for your protocol implementation.

Parameter	Value	Description
PMA configuration rules	Basic SATA QPI GPON	Specifies the configuration rule for PMA. Select Basic for all other protocol modes except for SATA, GPON, and QPI. SATA can be used only if the Transceiver configuration rule is set to Basic/Custom (Standard PCS). GPON can be used only if the Transceiver configuration rule is set to Basic (Enhanced PCS). QPI can be used only if the Transceiver configuration rule is set to PCS-Direct.
Transceiver mode	TX/RX Duplex TX Simplex RX Simplex	Specifies the operational mode of the transceiver. • TX/RX Duplex : Specifies a single channel that supports both transmit and receive capabilities. • TX Simplex : Specifies a single channel that supports only transmission. • RX Simplex : Specifies a single channel that supports only reception. The default is TX/RX Duplex .
Number of data channels	1 – <n>	Specifies the number of transceiver channels to be implemented. The maximum number of channels available, (<n>), depends on the package you select. The default value is 1 .
Data rate	<i>< valid Transceiver data rate ></i>	Specifies the data rate in megabits per second (Mbps). The default value is 1250 Mbps.
Enable datapath and interface reconfiguration	On/Off	When you turn this option on, you can preconfigure and dynamically switch between the Standard PCS, Enhanced PCS, and PCS direct datapaths. The default value is Off .

Parameter	Value	Description
Enable simplified data interface	On/Off	By default, all 128-bits are ports for the tx_parallel_data and rx_parallel_data buses, regardless of the FPGA fabric width specified. You must understand the mapping of data and control signals within the interface. Refer to <i>Enhanced PCS TX and RX Control Ports</i> section for details about mapping of data and control signals. When you turn on this option, the Transceiver Native PHY IP presents a simplified data and control interface between the FPGA fabric and transceiver. Only the sub-set of the 128-bits that are active for a particular FPGA fabric width are ports. The default value is Off.

Table 2-3: Transceiver Configuration Rule Parameters

Transceiver Configuration Setting	Description
Basic/Custom (Standard PCS)	Enforces a standard set of rules within the Standard PCS. Select these rules to implement custom protocols requiring blocks within the Standard PCS or protocols not covered by the other configuration rules.
Basic/Custom w /Rate Match (Standard PCS)	Enforces a standard set of rules including rules for the Rate Match FIFO within the Standard PCS. Select these rules to implement custom protocols requiring blocks within the Standard PCS or protocols not covered by the other configuration rules.
CPRI (Auto)	Enforces rules required by the CPRI protocol. The receiver word aligner mode is set to Auto . In Auto mode, the word aligner is set to deterministic latency.
CPRI (Manual)	Enforces rules required by the CPRI protocol. The receiver word aligner mode is set to Manual . In Manual mode, logic in the FPGA fabric controls the word aligner.
GbE	Enforces rules that the 1 Gbps Ethernet (1 GbE) protocol requires.
GbE 1588	Enforces rules for the 1 GbE protocol with support for Precision time protocol (PTP) as defined in the <i>IEEE 1588 Standard</i> .
Gen1 PIPE	Enforces rules for a Gen1 PCIe [®] PIPE interface that you can connect to a soft MAC and Data Link Layer.
Gen2 PIPE	Enforces rules for a Gen2 PCIe PIPE interface that you can connect to a soft MAC and Data Link Layer.
Gen3 PIPE	Enforces rules for a Gen3 PCIe PIPE interface that you can connect to a soft MAC and Data Link Layer.

Transceiver Configuration Setting	Description
Basic (Enhanced PCS)	Enforces a standard set of rules within the Enhanced PCS. Select these rules to implement protocols requiring blocks within the Enhanced PCS or protocols not covered by the other configuration rules.
Interlaken	Enforces rules required by the Interlaken protocol.
10GBASE-R	Enforces rules required by the 10GBASE-R protocol.
10GBASE-R 1588	Enforces rules required by the 10GBASE-R protocol with 1588 enabled.
10GBASE-R w/KR FEC	Enforces rules required by the 10GBASE-R protocol with KR FEC block enabled.
40GBASE-R w/KR FEC	Enforces rules required by the 40GBASE-R protocol with the KR FEC block enabled.
Basic w/KR FEC	Enforces a standard set of rules required by the Enhanced PCS when you enable the KR FEC block. Select this rule to implement custom protocols requiring blocks within the Enhanced PCS or protocols not covered by the other configuration rules.
PCS Direct	Enforces rules required by the PCS Direct mode. In this configuration the data flows through the PCS channel, but all the internal PCS blocks are bypassed. If required, the PCS functionality can be implemented in the FPGA fabric.

Related Information

- [Device Transceiver Layout](#) on page 1-3
- [Enhanced PCS TX and RX Control Ports](#) on page 2-59

PMA Parameters

You can specify values for the following types of PMA parameters:

- TX Bonding Options
- TX PLL Options
- TX PMA Optional Ports
- RX CDR Options
- RX PMA Optional Ports

Table 2-4: TX Bonding Options

Parameter	Value	Description
TX channel bonding mode	Not bonded PMA bonding PMA and PCS bonding	Selects the bonding mode to be used for the channels specified. Bonded channels use a single TX PLL to generate a clock that drives multiple channels, reducing channel-to-channel skew. The following options are available: Not bonded : In a non-bonded configuration, only the high speed serial clock is routed from the TX PLL to the transmitter channel. The low speed parallel clock is generated by the local clock generation block (CGB) present in the transceiver channel. For non-bonded configurations, because the channels are not related to each other and the feedback path is local to the PLL, the skew between channels cannot be calculated. PMA bonding : In PMA bonding, the high speed serial clock is routed from the transmitter PLL to transmitter channel. The master CGB generates the high speed and low parallel clocks and the local CGB for each channel is bypassed. Refer to the <i>Channel Bonding</i> section for more details. PMA and PCS bonding : In a PMA and PCS bonded configuration, both the high speed serial and low speed parallel clocks are routed from the TX PLL to the transmitter channel. In this case, the local CGB in each channel is bypassed and the parallel clocks generated by the master CGB are used to clock the network. The master CGB generates both the high and low speed clocks. The master channel generates the PCS control signals and distributes to other channels through a control plane block. The default value is Not bonded. Refer to <i>Channel Bonding</i> section in <i>PLLs and Clock Networks</i> chapter for more details.
PCS TX channel bonding master	Auto, 0 to <number of channels> -1	Specifies the master PCS channel for PCS bonded configurations. Each Transceiver Native PHY IP instance configured with bonding must specify a bonding master. If you select Auto , the Transceiver Native PHY IP core automatically selects a recommended channel. The default value is Auto . Refer to the <i>PLLs and Clock Networks</i> chapter for more information about the TX channel bonding master.

Parameter	Value	Description
Actual PCS TX channel bonding master	0 to <number of channels> -1	This parameter is automatically populated based on your selection for the PCS TX channel bonding master parameter. Indicates the selected master PCS channel for PCS bonded configurations.

Table 2-5: TX PLL Options

Parameter	Value	Description
TX local clock division factor	1, 2, 4, 8	Specifies the value of the divider available in the transceiver channels to divide the TX PLL output clock to generate the correct frequencies for the parallel and serial clocks.
Number of TX PLL clock inputs per channel	1, 2, 3, 4	Specifies the number of TX PLL clock inputs per channel. Use this parameter when you plan to dynamically switch between TX PLL clock sources. Up to four input sources are possible.
Initial TX PLL clock input selection	0- <number of TX PLL clock inputs> - 1	Specifies the initially selected TX PLL clock input. This parameter is necessary when you plan to switch between multiple TX PLL clock inputs.

Table 2-6: TX PMA Optional Ports

Parameter	Value	Description
Enable tx_pma_clkout port	On/Off	Enables the optional tx_pma_clkout output clock. This is the low speed parallel clock from the TX PMA. The source of this clock is the serializer. It is driven by the PCS/PMA interface block.
Enable tx_pma_div_clkout port	On/Off	Enables the optional tx_pma_div_clkout output clock. This clock is generated by the serializer. You can use this to drive core logic, to drive the PCS-to-fabric, or both. If you specify a tx_pma_div_clkout division factor of 1 or 2, this clock output is derived from the PMA parallel clock. If you specify a tx_pma_div_clkout division factor of 33, 40, or 66, this clock is derived from the PMA serial clock. This clock is commonly used when the interface to the TX FIFO runs at a different rate than the PMA parallel clock frequency, such as 66:40 applications.
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66	Specifies the division factor for the tx_pma_div_clkout output clock when this port is enabled.

Parameter	Value	Description
tx_pma_elecidle port	On/Off	Enables the tx_pma_elecidle port. When you assert this port, the transmitter is forced into an electrical idle condition. This port has no effect when the transceiver is configured for PCI Express.
Enable tx_pma_qpipullup port (QPI)	On/Off	Enables the tx_pma_qpipullup control input port. Use this port only for Quick Path Interconnect (QPI) applications.
Enable tx_pma_qpipulldn port (QPI)	On/Off	Enables the tx_pma_qpipulldn control input port. Use this port only for QPI applications.
Enable tx_pma_txdetectrx port (QPI)	On/Off	Enables the tx_pma_txdetectrx control input port. The receiver detect block in the TX PMA detects the presence of a receiver at the other end of the channel. After receiving a tx_pma_txdetectrx request the receiver detect block initiates the detection process. Use this port only in QPI applications.
Enable tx_pma_rxfound port (QPI)	On/Off	Enables the tx_rxfound status output port. The receiver detect block in TX PMA detects the presence of a receiver at the other end by using the tx_pma_txdetectrx input. The tx_pma_rxfound port reports the status of the detection operation. Use this port only in QPI applications.

Table 2-7: RX PMA Parameters

Parameter	Value	Description
Number of CDR reference clocks	1 - 5	Specifies the number of CDR reference clocks. Up to 5 sources are possible. The default value is 1 .
Selected CDR reference clock	0 to <number of CDR reference clocks> -1	Specifies the initial CDR reference clock. The parameter Number of CDR reference clocks determines the available CDR references used. The default value is 0 .
Selected CDR reference clock frequency	< data rate dependent >	Specifies the CDR reference clock frequency. This value depends on the data rate specified.
PPM detector threshold	100 300 500 1000	Specifies the PPM threshold for the CDR. If the PPM threshold value you select here is exceeded, the CDR loses lock. The default value is 1000 .

Parameter	Value	Description
CTLE adaptation mode	Manual Triggered	Specifies the Continuous Time Linear Equalization (CTLE) operation mode. For manual mode, set the CTLE options through the Assignment Editor, or modify the Quartus Settings File (.qsf), or by writing to the configuration registers using the Avalon Memory-Mapped (Avalon-MM) interface. Refer to <i>Continuous Time Linear Equalization</i> section in <i>Arria 10 Transceiver Architecture</i> chapter for more details about CTLE.
DFE adaptation mode	Continuous Triggered Manual Disabled	Specifies the operating mode for the decision feedback equalization (DFE) block in the RX PMA. The default value is Disabled. For manual mode, you can set the DFE options through the Assignment Editor, or by modifying the Quartus Settings File (.QSF), or by writing to the reconfiguration registers using the Avalon-MM interface. Refer to <i>Decision Feedback Equalization</i> section in <i>Arria 10 Transceiver Architecture</i> chapter for more details about DFE.
Number of fixed DFE taps	3 , 7	Specifies the number of fixed DFE taps. Select the number of taps depending on the loss in your transmission channel and the type of equalization required.

Table 2-8: RX PMA Optional Ports

Parameters	Value	Description
Enable rx_pma_clkout port	On/Off	Enables the optional rx_pma_clkout output clock. This port is the recovered parallel clock from the RX clock data recover (CDR).
Enable rx_pma_div_clkout port	On/Off	Enables the optional rx_pma_div_clkout output clock. The deserializer generates this clock. Use this to drive core logic, to drive the RX PCS-to-fabric interface, or both. If you specify a rx_pma_div_clkout division factor of 1 or 2, this clock output is derived from the PMA parallel clock. If you specify a rx_pma_div_clkout division factor of 33, 40, or 66, this clock is derived from the PMA serial clock. This clock is commonly used when the interface to the RX FIFO runs at a different rate than the PMA parallel clock frequency, such as 66:40 applications.

Parameters	Value	Description
rx_pma_div_clkout division factor	Disabled , 1 , 2 , 33 , 40 , 66	Specifies the division factor for the rx_pma_div_clkout output clock when this port is enabled.
Enable rx_pma_div_clkout division factor	On/Off	Specifies the division factor for the rx_pma_div_clkout clock signal. This parameter is disabled when you turn Off the Enable rx_pma_div_clkout port .
Enable rx_pma_clkslip port	On/Off	Enables the optional rx_pma_clkslip control input port. A rising edge on this signal causes the RX serializer to slip the serial data by one clock cycle, or 2 unit intervals (UI).
Enable rx_pma_qpipulldn port (QPI)	On/Off	Enables the rx_pma_qpipulldn control input port. Use this port only for QPI applications.
Enable rx_is_lockedtodata port	On/Off	Enables the optional rx_is_lockedtodata status output port. This signal indicates that the RX CDR is currently in lock to data mode or is attempting to lock to the incoming data stream. This is an asynchronous output signal.
Enable rx_is_lockedtoref port	On/Off	Enables the optional rx_is_lockedtoref status output port. This signal indicates that the RX CDR is currently locked to the CDR reference clock. This is an asynchronous output signal.
Enable rx_set_lockedtodata port and rx_set_lockedtoref ports	On/Off	Enables the optional rx_is_lockedtodata and rx_set_lockedtoref control input ports. You can use these control ports to manually control the lock mode of the RX CDR. These are asynchronous input signals.
Enable rx_serialpbken port	On/Off	Enables the optional rx_serialpbken control input port. When you assert rx_serialpbken, the TX to RX serial loopback path is enabled. This is an asynchronous input signal.
Enable PRBS verifier control and status port	On/Off	Enables the optional rx_prbs_err , rx_prbs_clr , and rx_prbs_done control ports. These ports control and collect status from the internal PRBS verifier.

Related Information

- [PLLs and Clock Networks](#) on page 3-1
- [Channel Bonding](#) on page 3-44
- [Continuous Time Linear Equalization \(CTLE\)](#) on page 5-6
- [Decision Feedback Equalization \(DFE\)](#) on page 5-9
- [Analog Parameter Settings](#) on page 8-1

Enhanced PCS Parameters

This section defines parameters available in the Transceiver Native PHY GUI to customize the individual blocks in the Enhanced PCS.

You can implement the following protocols using the Enhanced PCS:

- Ethernet 10GBASE-R and 10GBASE-KR
- Interlaken
- SFI-S and SFI-5.2
- 12 G-SDI
- IEEE 1588

The following tables describe the parameters available. Based on the **Transceiver Configuration Rule** selected, the Transceiver Native PHY IP core **Parameter Editor** prints error or warning messages if the specified settings violate the protocol standard.

Note: For detailed descriptions of the optional ports that you can enable or disable, refer to the *Enhanced PCS and PMA Ports* section.

Table 2-9: Enhanced PCS Parameters

Parameter	Range	Description
Enhanced PCS / PMA interface width	32 , 40 , 64	Specifies the interface width between the Enhanced PCS and the PMA.
FPGA fabric /Enhanced PCS interface width	32 , 40 , 50 , 64 , 66 , 67	Specifies the interface width between the Enhanced PCS and the FPGA fabric. The 66-bit FPGA fabric to PCS interface width uses 64-bits from the TX and RX parallel data. The block synchronizer determines the block boundary of the 66-bit word with lower 2 bits from the control bus. The 67-bit FPGA fabric to PCS interface width uses the 64-bits from the TX and RX parallel data. The block synchronizer determines the block boundary of the 67-bit word with lower 3 bits from the control bus.
Enable Enhanced PCS low latency mode	On/Off	Enables the low latency path for the Enhanced PCS. When you turn this option on, the individual functional blocks within the Enhanced PCS are bypassed to provide the lowest latency path from the PMA through the Enhanced PCS.
Enable RX/TX FIFO double width mode	On/Off	Enables the double width mode for the RX and TX FIFOs. You can use double width mode to run the FPGA fabric at half the frequency of the PCS.

Table 2-10: Enhanced PCS TX FIFO Parameters

Parameter	Range	Description
TX FIFO Mode	Phase-Compensation Register Interlaken Basic Fast Register	Specifies one of the following modes: • Phase Compensation : The TX FIFO compensates for the clock phase difference between the read clock (tx_clkout) and the write clocks (tx_coreclkln or tx_clkout). TX FIFO write clock frequency and read clock frequency depends on uneven gear ratios (like 64:40, 64:32 etc.), tx_enh_data_valid control signal. For uneven gear ratios, monitor the TX FIFO flags. For the even gear ratios (like 64:64, 40:40 etc.), tie tx_enh_data_valid to 1'b1. • Register : The TX FIFO is bypassed. The tx_parallel_data, tx_control and tx_enh_data_valid are registered at the FIFO output. You must control tx_enh_data_valid based on the gearbox ratio to avoid gearbox underflow or overflow conditions. • Interlaken : The TX FIFO acts as an elastic buffer. In this mode, there are additional signals to control the data flow into the FIFO. Therefore, the FIFO write clock frequency does not have to be the same as the read clock frequency. You can control writes to the FIFO with tx_enh_data_valid. By monitoring the FIFO flags, you can avoid the FIFO full and empty conditions. The Interlaken frame generator controls reads. • Basic : The TX FIFO acts as an elastic buffer to control the input data flow, using tx_enh_data_valid. The gearbox data valid flag controls the FIFO read enable. • Fast Register: The TX FIFO allows a higher maximum frequency (f_{MAX}) between the FPGA fabric and the TX PCS at the expense of higher latency.
TX FIFO partially full threshold	10, 11, 12, 13, 14, 15	Specifies the partially full threshold for the Enhanced PCS TX FIFO. Enter the value at which you want the TX FIFO to flag a partially full status.
TX FIFO partially empty threshold	1, 2, 3, 4, 5	Specifies the partially empty threshold for the Enhanced PCS TX FIFO. Enter the value at which you want TX FIFO to flag a partially empty status.

Parameter	Range	Description
Enable tx_enh_fifo_full port	On / Off	Enables the tx_enh_fifo_full port. This signal indicates when the TX FIFO has reached the specified full threshold. This signal is synchronous to tx_coreclk.
Enable tx_enh_fifo_pfull port	On / Off	Enables the tx_enh_fifo_pfull port. This signal indicates when the TX FIFO has reached the specified partially full threshold. This signal is synchronous to tx_coreclk.
Enable tx_enh_fifo_empty port	On / Off	Enables the tx_enh_fifo_empty port. This signal indicates when the TX FIFO has reached the specified empty threshold. This is an asynchronous signal.
Enable tx_enh_fifo_pempty port	On / Off	Enables the tx_enh_fifo_pempty port. This signal indicates when the TX FIFO has reached the specified partially empty threshold. This is an asynchronous signal.
Enable tx_enh_fifo_cnt port	On / Off	Enables the tx_enh_fifo_cnt port. This signal indicates the current level of the TX FIFO and is synchronous to tx_clkout.

Table 2-11: Enhanced PCS RX FIFO Parameters

Parameter	Range	Description
RX FIFO Mode	Phase-Compensation Register Interlaken 10GBASE-R Basic	Specifies one of the following modes for Enhanced PCS RX FIFO: • Phase Compensation : This mode compensates for the clock phase difference between the read clocks (rx_coreclk_in or rx_clkout) and the write clock (rx_clkout). • Register : The TX FIFO is bypassed. The rx_parallel_data, rx_control, and rx_enh_data_valid are registered at the FIFO output. • Interlaken : Select this mode for the Interlaken protocol. To implement the deskew process, you must implement a FSM that controls the FIFO operation based on FIFO flags. In this mode the FIFO acts as an elastic buffer. • 10GBASE-R : In this mode, data passes through the FIFO after block lock is achieved. OS (Ordered Sets) are deleted and Idles are inserted to compensate for the clock difference between the RX PMA clock and the fabric clock of +/- 100 ppm for a maximum packet length of 64000 bytes. • Basic: In this mode, the RX FIFO acts as an elastic buffer. The gearbox data valid flag controls the FIFO read enable. You can monitor the rx_enh_fifo_pfull and rx_enh_fifo_empty flags to determine whether or not to read from the FIFO.
RX FIFO partially full threshold	0-31	Specifies the partially full threshold for the Enhanced PCS RX FIFO. The default value is 23.
RX FIFO partially empty threshold	0-31	Specifies the partially empty threshold for the Enhanced PCS RX FIFO. The default value is 2.
Enable RX FIFO alignment word deletion (Interlaken)	On / Off	When you turn this option on, all alignment words (sync words), including the first sync word, are removed after frame synchronization is achieved. If you enable this option, you must also enable control word deletion.
Enable RX FIFO control word deletion (Interlaken)	On / Off	When you turn this option on, Interlaken control word removal is enabled. When the Enhanced PCS RX FIFO is configured in Interlaken mode, enabling this option removes all control words after frame synchronization is achieved. Enabling this option requires that you also enable alignment word deletion.
Enable rx_enh_data_valid port	On / Off	Enables the rx_enh_data_valid port. This signal indicates when RX data from RX FIFO is valid. This signal is synchronous to rx_coreclk_in.

Parameter	Range	Description
Enable rx_enh_fifo_full port	On / Off	Enables the rx_enh_fifo_full port. This signal indicates when the RX FIFO has reached the specified full threshold. This is an asynchronous signal.
Enable rx_enh_fifo_pfull port	On / Off	Enables the active high rx_enh_fifo_pfull port. This signal indicates when the RX FIFO has reached the specified partially full threshold. This is an asynchronous signal.
Enable rx_enh_fifo_empty port	On / Off	Enables the active high rx_enh_fifo_empty port. This signal indicates when the RX FIFO has reached the specified empty threshold. This signal is synchronous to rx_coreclk.
Enable rx_enh_fifo_pempty port	On / Off	Enables the rx_enh_fifo_pempty port. This signal indicates when the RX FIFO has reached the specified partially empty threshold. This signal is synchronous to rx_coreclk.
Enable rx_enh_fifo_cnt port	On / Off	Enables the optional rx_enh_fifo_cnt status output port. This signal indicates the current level of the RX FIFO.
Enable rx_enh_fifo_del port (10GBASE-R)	On / Off	Enables the optional rx_enh_del_cnt status output port. This signal indicates when a word has been deleted from the rate match FIFO. This signal is only used for 10GBASE-R transceiver configuration rule. This is an asynchronous signal.
Enable rx_enh_fifo_insert port (10GBASE-R)	On / Off	Enables the rx_enh_fifo_insert port. This signal indicates when a word has been inserted into the rate match FIFO. This signal is only used for 10GBASE-R transceiver configuration rule. This signal is synchronous to rx_coreclk.
Enable rx_enh_fifo_rd_en port (Interlaken)	On / Off	Enables the rx_enh_fifo_rd_en input port. This signal is enabled to read a word from the RX FIFO. It is only used for Interlaken transceiver configuration rule. This signal is synchronous to rx_coreclk.
Enable rx_enh_fifo_align_val port (Interlaken)	On / Off	Enables the rx_enh_fifo_align_val status output port. Only used for Interlaken transceiver configuration rule. This signal is synchronous to rx_clkout.
Enable rx_enh_fifo_align_clr port (Interlaken)	On / Off	Enables the rx_enh_fifo_align_clr input port. Only used for Interlaken. This signal is synchronous to rx_clkout.

Table 2-12: Interlaken Frame Generator Parameters

Parameter	Range	Description
Enable Interlaken frame generator	On / Off	Enables the frame generator block of the Enhanced PCS.

Parameter	Range	Description
Frame generator metaframe length	5-8192	Specifies the metaframe length of the frame generator. This metaframe length includes 4 framing control words created by frame generator.
Enable frame burst	On / Off	Enables frame generator burst. This determines whether the frame generator reads data from the TX FIFO based on the input of port tx_enh_frame_burst_en .
Enable tx_enh_frame port	On / Off	Enables the tx_enh_frame status output port. When the Interlaken frame generator is enabled, this signal indicates the beginning of a new metaframe. This is an asynchronous signal.
Enable tx_enh_frame_diag_status port	On / Off	Enables the tx_enh_frame_diag_status 2-bit input port. When the Interlaken frame generator is enabled, the value of this signal contains the status message from the framing layer diagnostic word. This signal is synchronous to tx_clkout.
Enable tx_enh_frame_burst_en port	On / Off	Enables the tx_enh_frame_burst_en input port. When burst control is enabled for the Interlaken frame generator, this signal is asserted to control the frame generator data reads from the TX FIFO. This signal is synchronous to tx_clkout.

Table 2-13: Interlaken Frame Synchronizer Parameters

Parameter	Range	Description
Enable Interlaken frame synchronizer	On / Off	When you turn this option on, the Enhanced PCS frame synchronizer is enabled.
Frame synchronizer metaframe length	5-8192	Specifies the metaframe length of the frame synchronizer
Enable rx_enh_frame port	On / Off	Enables the rx_enh_frame status output port. When the Interlaken frame synchronizer is enabled, this signal indicates the beginning of a new metaframe. This is an asynchronous signal.
Enable rx_enh_frame_lock port	On / Off	Enables the rx_enh_frame_lock output port. When the Interlaken frame synchronizer is enabled, this signal is asserted to indicate that the frame synchronizer has achieved metaframe delineation. This is an asynchronous output signal.
Enable rx_enh_frame_diag_status port	On / Off	Enables the rx_enh_frame_diag_status port. When the Interlaken frame synchronizer is enabled, this signal contains the value of the framing layer diagnostic word (bits [33:32]). This is a 2 bit per lane output signal. It is latched when a valid diagnostic word is received. This is an asynchronous signal.

Table 2-14: Interlaken CRC32 Generator and Checker Parameters

Parameter	Range	Description
Enable Interlaken TX CRC-32 Generator	On / Off	When you turn this option on, the TX Enhanced PCS datapath enables the CRC32 generator function. CRC32 can be used as a diagnostic tool. The CRC contains the entire metaframe including the diagnostic word.
Enable Interlaken RX CRC-32 generator error insertion	On / Off	When you turn this option on, the error insertion of the interlaken CRC-32 generator is enabled. Error insertion is cycle-accurate. When this feature is enabled, the assertion of tx_control[8] or tx_err_ins signal causes the CRC calculation during that word is incorrectly inverted, and thus, the CRC created for that metaframe is incorrect.
Enable Interlaken RX CRC-32 checker	On / Off	Enables the CRC-32 checker function.
Enable rx_enh_crc32_err port	On / Off	When you turn this option on, the Enhanced PCS enables the rx_enh_crc32_err port. This signal is asserted to indicate that the CRC checker has found an error in the current metaframe. This is an asynchronous signal.

Table 2-15: 10GBASE-R BER Checker Parameters

Parameter	Range	Description
Enable rx_enh_highber port (10GBASE-R)	On / Off	Enables the rx_enh_highber port. For 10GBASE-R transceiver configuration rule, this signal is asserted to indicate a bit error rate higher than 10^{-4} . Per the 10GBASE-R specification, this occurs when there are at least 16 errors within 125 us. This is an asynchronous signal.
Enable rx_enh_highber_clr_cnt port (10GBASE-R)	On / Off	Enables the rx_enh_highber_clr_cnt input port. For the 10GBASE-R transceiver configuration rule, this signal is asserted to clear the internal counter. This counter indicates the number of times the BER state machine has entered the "BER_BAD_SH" state. This is an asynchronous signal.
Enable rx_enh_clr_errblk_count port (10GBASE-R)	On / Off	Enables the rx_enh_clr_errblk_count input port. For the 10GBASE-R transceiver configuration rule, this signal is asserted to clear the internal counter. This counter indicates the number of the times the RX state machine has entered the RX_E state. For protocols with FEC block enabled, this signal is asserted to reset the status counters within the RX FEC block. This is an asynchronous signal.

Table 2-16: 64b/66b Encoder and Decoder Parameters

Parameter	Range	Description
Enable TX 64b/66b encoder	On / Off	When you turn this option on, the Enhanced PCS enables the TX 64b/66b encoder.
Enable RX 64b/66b decoder	On / Off	When you turn this option on, the Enhanced PCS enables the RX 64b/66b decoder.
Enable TX sync header error insertion	On / Off	When you turn this option on, the Enhanced PCS supports cycle-accurate error creation to assist in exercising error condition testing on the receiver. When error insertion is enabled and the error flag is set, the encoding sync header for the current word is generated incorrectly. If the correct sync header is 2'b01 (control type), 2'b00 is encoded. If the correct sync header is 2'b10 (data type), 2'b11 is encoded.

Table 2-17: Scrambler and Descrambler Parameters

Parameter	Range	Description
Enable TX scrambler (10GBASE-R/Interlaken)	On / Off	Enables the scrambler function. This option is available for the Basic (Enhanced PCS) mode, Interlaken, and 10GBASE-R protocols. You can enable the scrambler on Basic (Enhanced PCS) mode when the block synchronizer is enabled and with 66:32, 66:40, or 66:64 gear box ratios.
TX scrambler seed (10GBASE-R/Interlaken)	User-specified 58-bit value	You must provide a non-zero seed for the Interlaken protocol. For a multi-lane Interlaken Transceiver Native PHY IP, the first lane scrambler has this seed, and other lanes' scrambler have this seed increased by 1 per lane. The initial seed for 10GBASE-R is 0x03FFFFFFFFFFFFFFF. This parameter is required for the 10GBASE-R and Interlaken protocols.
Enable RX descrambler (10GBASE-R/Interlaken)	On / Off	Enables the descrambler function. This option is available for Basic (Enhanced PCS) mode, Interlaken, and 10GBASE-R protocols. You can enable the descrambler on Basic (Enhanced PCS) mode when the block synchronizer is enabled and with 66:32, 66:40, or 66:64 gear box ratios.

Table 2-18: Interlaken Disparity Generator and Checker Parameters

Parameter	Range	Description
Enable Interlaken TX disparity generator	On / Off	When you turn this option on, the Enhanced PCS enables the disparity generator. This option is available for the Interlaken protocol.

Parameter	Range	Description
Enable Interlaken RX disparity checker	On / Off	When you turn this option on, the Enhanced PCS enables the disparity checker. This option is available for the Interlaken protocol.

Table 2-19: Block Synchronizer Parameters

Parameter	Range	Description
Enable RX block synchronizer	On / Off	When you turn this option on, the Enhanced PCS enables the RX block synchronizer. This options is available for the Basic (Enhanced PCS) mode, Interlaken, and 10GBASE-R protocols.
Enable rx_enh_blk_lock port	On / Off	Enables the rx_enh_blk_lock port. When the block synchronizer is enabled, this signal is asserted to indicate that the block delineation has been achieved. This is an asynchronous output signal.

Table 2-20: Gearbox Parameters

Parameter	Range	Description
Enable TX data bit slip	On / Off	When you turn this option on, the TX gearbox operates in bit slip mode. The tx_enh_bitslip port controls number of bits by which the TX parallel data slips before going to the PMA.
Enable TX data polarity inversion	On / Off	When you turn this option on, the polarity of TX data is inverted. This allows you to correct incorrect placement and routing on the PCB.
Enable RX data bit slip	On / Off	When you turn this option on, the Enhanced PCS RX block synchronizer operates in bit slip mode. When enabled, the rx_bitslip port is asserted on the rising edge to ensure that RX parallel data from the PMA slips by one bit before passing to the PCS.
Enable RX data polarity inversion	On / Off	When you turn this option on, the polarity of the RX data is inverted. This allows you to correct incorrect placement and routing on the PCB.
Enable tx_enh_bitslip port	On / Off	Enables the tx_enh_bitslip port. When TX bit slip is enabled, this signal controls the number of bits by which the TX parallel data slips before going to the PMA.
Enable rx_bitslip port	On / Off	Enables the rx_bitslip port. When RX bit slip is enabled, the rx_bitslip port is asserted on the rising edge to ensure that RX parallel data from the PMA slips by one bit before passing to the PCS. This port is shared between Standard PCS and Enhanced PCS.

Table 2-21: KR-FEC Parameters

Parameter	Range	Description
Enable RX KR - REC error marking	On/Off	When you turn this option on, the decoder asserts both sync bits (2'b11) when it detects an uncorrectable error. This feature increases the latency through the KR-FEC decoder.
Enable KR-FEC TX error insertion	On/Off	Enables the error insertion feature of the KR-FEC encoder. This feature allows you to insert errors by corrupting data starting a bit 0 of the current word.
KR-FEC TX error insertion spacing	User Input (1 bit to 15 bit)	Specify the spacing of the KR-FEC TX error insertion.
Enable tx_enh_frame port	On/Off	Enables the tx_enh_frame port.
Enable rx_enh_frame port	On/Off	Enables the rx_enh_frame port.
Enable rx_enh_frame_diag_status port	On/Off	Enables the rx_enh_frame_diag_status port.

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18
 - [Using the "Basic \(Enhanced PCS\)" and "Basic with KR FEC" Configurations of Enhanced PCS](#) on page 2-281
 - [Interlaken](#) on page 2-76
 - [10GBASE-R and 10GBASE-R 1588](#)
 - [10GBASE-KR PHY IP Core](#) on page 2-126
 - [Enhanced PCS Ports](#) on page 2-50
- Detailed description of the Enhanced PCS optional ports that you can enable or disable.

Standard PCS Parameters

This section provides descriptions of the parameters that you can specify to customize the Standard PCS.

The Standard PCS provides Transceiver configuration rules for the following supported protocols:

- Basic
- Basic with Rate Match
- CPRI
- GbE
- GbE 1588

For specific information about configuring the Standard PCS for these protocols, refer to the sections of this user guide that describe support for these protocols.

Table 2-22: Standard PCS Parameters

Note: For detailed descriptions of the optional ports that you can enable or disable, refer to the [Standard PCS Ports](#) on page 2-66 .

Parameter	Range	Description
Standard PCS/ PMA interface width	8, 10, 16, 20	Specifies the data interface width between the Standard PCS and the transceiver PMA.
FPGA fabric/ Standard TX PCS interface width	8, 10, 16, 20, 32, 40	Shows the FPGA fabric to TX PCS interface width. This value is determined by the current configuration of individual blocks within the Standard TX PCS datapath.
FPGA fabric/ Standard RX PCS interface width	8, 10, 16, 20, 32, 40	Shows the FPGA fabric to RX PCS interface width. This value is determined by the current configuration of individual blocks within the Standard RX PCS datapath.
Enable Standard PCS low latency mode	On / Off	Enables the low latency path for the Standard PCS. All individual functional blocks within the Standard PCS are bypassed to provide the lowest latency . You cannot turn on this parameter while using the Basic/Custom w/Rate Match (Standard PCS) specified for Transceiver configuration rules .

Table 2-23: TX and RX FIFO Parameters

Parameter	Range	Description
TX FIFO mode	low_latency register_fifo fast_register	Specifies the Standard PCS TX FIFO mode. The following modes are available: low_latency: This mode adds 2-3 cycles of latency to the TX datapath. register_fifo: In this mode the FIFO is replaced by registers to reduce the latency through the PCS. Use this mode for protocols that require deterministic latency, such as CPRI. fast_register: This mode allows a higher maximum frequency (f_{MAX}) between the FPGA fabric and the TX PCS at the expense of higher latency.
RX FIFO mode	low_latency register_fifo	The following modes are available: low_latency : This mode adds 2-3 cycles of latency to the RX datapath. register_fifo : In this mode the FIFO is replaced by registers to reduce the latency through the PCS. Use this mode for protocols that require deterministic latency, such as CPRI. fast_register: This mode allows a higher maximum frequency (f_{MAX}) between the FPGA fabric and the TX PCS at the expense of higher latency.

Parameter	Range	Description
Enable tx_std_pcfifo_full port	On / Off	Enables the tx_std_pcfifo_full port. This signal indicates when the standard TX phase compensation FIFO has reached full threshold. It is synchronous with tx_std_clkout .
Enable tx_std_pcfifo_empty port	On / Off	Enables the tx_std_pcfifo_empty port. This signal indicates when the standard RX phase compensation FIFO has reached the empty threshold. It is synchronous with tx_std_clkout .
Enable rx_std_pcfifo_full port	On / Off	Enables the rx_std_pcfifo_full port. This signal indicates when the standard RX phase compensation FIFO has reached the full threshold. This signal is synchronous with rx_std_clkout .
Enable rx_std_pcfifo_empty port	On / Off	Enables the rx_std_pcfifo_empty port. This signal indicates when the standard RX phase compensation FIFO has reached the empty threshold. This signal is synchronous with rx_std_clkout .

Table 2-24: Byte Serializer and Deserializer Parameters

Parameter	Range	Description
Enable TX byte serializer	Disabled Serialize x2 Serialize x4	Specifies the TX byte serializer mode for the Standard PCS. The transceiver architecture allows the Standard PCS to operate at double or quadruple the data width of the PMA serializer. The byte serializer allows the PCS to run at a lower internal clock frequency to accommodate a wider range of FPGA interface widths. Serialize x4 is only applicable for PCIe protocol implementation .
Enable RX byte deserializer	Disabled , Deserialize x2 Deserialize x4	Specifies the mode for the RX byte deserializer in the Standard PCS. The transceiver architecture allows the Standard PCS to operate at double or quadruple the data width of the PMA deserializer. The byte deserializer allows the PCS to run at a lower internal clock frequency to accommodate a wider range of FPGA interface widths. Serialize x4 is only applicable for PCIe protocol implementation.

Table 2-25: 8B/10B Encoder and Decoder Parameters

Parameter	Range	Description
Enable TX 8B/10B encoder	On / Off	When you turn this option on, the Standard PCS enables the TX 8B/10B encoder.
Enable TX 8B/10B disparity control	On / Off	When you turn this option on, the Standard PCS includes disparity control for the 8B/10B encoder. You can force the disparity of the 8B/10B encoder using the tx_forcedisp control signal.

Parameter	Range	Description
Enable RX 8B/10B decoder	On / Off	When you turn this option on, the Standard PCS includes the 8B/10B decoder.

Table 2-26: Rate Match FIFO Parameters

Parameter	Range	Description
RX rate match FIFO mode	Disabled , Basic 10-bit PMA width , Basic 20-bit PMA width , GbE , PIPE , PIPE 0 ppm	Specifies the operation of the RX rate match FIFO in the Standard PCS.
RX rate match insert/delete +ve pattern (hex)	User-specified 20 bit pattern	Specifies the +ve (positive) disparity value for the RX rate match FIFO as a hexadecimal string.
RX rate match insert/delete -ve pattern (hex)	User-specified 20 bit pattern	Specifies the -ve (negative) disparity value for the RX rate match FIFO as a hexadecimal string.
Enable rx_std_rmfifo_full port	On / Off	Enables the optional rx_std_rmfifo_full port.
Enable rx_std_rmfifo_empty port	On / Off	Enables the rx_std_rmfifo_empty port.
PCI Express Gen3 rate match FIFO mode	Bypass, 0 ppm, 600 ppm	Specifies the PPM tolerance for the PCI Express Gen3 rate match FIFO.

Table 2-27: Word Aligner and Bitflip Parameters

Parameter	Range	Description
Enable TX bitflip	On / Off	When you turn this option on, the PCS includes the bitflip function. The outgoing TX data can be slipped by the number of bits specified by the tx_std_bitflipboundarysel control signal.
Enable tx_std_bitflipboundarysel port	On / Off	Enables the tx_std_bitflipboundarysel .

Parameter	Range	Description
RX word aligner mode	bit slip manual (PLD controlled) synchronous state machine deterministic latency	Specifies the RX word aligner mode for the Standard PCS. The word aligned width depends on the PCS and PMA width, and whether 8B/10B is enabled.
RX word aligner pattern length	7 , 8 , 10 , 16 , 20 , 32 , 40	Specifies the length of the pattern the word aligner uses for alignment.
RX word aligner pattern (hex)	User-specified	Specifies the word alignment pattern in hex.
Number of word alignment patterns to achieve sync	0 - 255	Specifies the number of valid word alignment patterns that must be received before the word aligner achieves synchronization lock. The default is 3.
Number of invalid words to lose sync	0 - 63	Specifies the number of invalid data codes or disparity errors that must be received before the word aligner loses synchronization. The default is 3.
Number of valid data words to decrement error count	0 - 255	Specifies the number of valid data codes that must be received to decrement the error counter. If the word aligner receives enough valid data codes to decrement the error count to 0, the word aligner returns to synchronization lock.
Enable rx_std_wa_patternalign port	On / Off	Enables the rx_std_wa_patternalign port. When the word aligner is configured in manual mode and when this signal is enabled, the word aligner aligns to next incoming word alignment pattern.
Enable rx_std_wa_a1a2size port	On / Off	Enables the rx_std_wa_a1a2size port.
Enable rx_std_bit slipboundarysel port	On / Off	Enables the rx_std_bit slipboundarysel port.
Enable rx_bit slip port	On / Off	Enables the rx_bit slip port. This port is shared between the Standard PCS and Enhanced PCS.

Table 2-28: Bit Reversal and Polarity Inversion

Parameter	Range	Description
Enable TX bit reversal	On / Off	When you turn this option on, the 8B/10B Encoder reverses TX parallel data before transmitting it to the PMA for serialization. The transmitted TX data bit order is reversed to MSB to LSB rather than the normal LSB to MSB. This is a static setting and can only be changed dynamically through dynamic reconfiguration.
Enable TX byte reversal	On / Off	When you turn this option on, the 8B/10B Encoder reverses the byte order before transmitting data. This function allows you to reverse the order of bytes that were erroneously swapped. The PCS can swap the ordering of both 8-bit and 10-bit words. When the PCS to PMA interface width is 16 or 20 bits, the PCS can swap the ordering of the individual 8-bit or 10-bit words. This option is not valid under some Transceiver configuration rules .
Enable TX polarity inversion	On / Off	When you turn this option on, the tx_std_polinv port controls polarity inversion of TX parallel data to the PMA. When you turn on this parameter, you also need to turn on Enable tx_polinv port .
Enable tx_polinv port	On / Off	When you turn this option on, the tx_polinv input control port is enabled. You can use this control port to swap the positive and negative signals of a serial differential link if they were erroneously swapped during board layout.
Enable RX bit reversal	On / Off	When you turn this option on, the word aligner reverses RX parallel data. The received RX data bit order is reversed to MSB to LSB rather than the normal LSB to MSB. This is a static setting and can only be changed dynamically through dynamic reconfiguration. When you enable Enable RX bit reversal , you must also enable Enable rx_std_bitrev_ena port .
Enable rx_std_bitrev_ena port	On / Off	When you turn this option on, asserting the rx_std_bitrev_ena control port causes the RX data order to be reversed from the normal order, LSB to MSB, to the opposite, MSB to LSB.

Parameter	Range	Description
Enable RX byte reversal	On / Off	When you turn this option on, the word aligner reverses the byte order before storing the data in the RX FIFO. This function allows you to reverse the order of bytes that were erroneously swapped. The PCS can swap the ordering of both 8 and 10 bit words. When the PCS / PMA interface width is 16 or 20 bits the PCS can swap the ordering of the individual 8- or 10-bit words. This option is not valid under some Transceiver configuration rules. When you enable Enable RX byte reversal, you must also enable Enable rx_std_bytereve_ena port.
Enable rx_std_bytereve_ena port	On / Off	When you turn this option on, asserting rx_std_bytereve_ena input control port causes swaps the order of the individual 8- or 10-bit words received from the PMA.
Enable RX polarity inversion	On / Off	When this option is on, the rx_std_polinv port controls polarity inversion of RX parallel data. When you turn on this parameter, you also need to enable Enable rx_polinv port .
Enable rx_polinv port	On / Off	When you turn this option on, the rx_polinv input is enabled. You can use this control port to swap the positive and negative signals of a serial differential link if they were erroneously swapped during board layout.
Enable rx_std_signaldetect port	On / Off	When you turn this option on, the optional rx_std_signaldetect output port is enabled. This signal is required for the PCI Express protocol. If enabled, the signal threshold detection circuitry senses whether the signal level present at the RX input buffer is above the signal detect threshold voltage that you specified. You can specify the signal detect threshold using a Quartus II QSF assignments.

Table 2-29: PCIe Ports

Parameter	Range	Description
Enable PCIe dynamic datarate switch ports	On / Off	When you turn this option on, the pipe_rate, pipe_sw, and pipe_sw_done ports are enabled. You should connect these ports to the PLL IP instance in multi-lane PCIe Gen2 and Gen3 configurations. The pipe_sw and pipe_sw_done ports are only available for multi-lane bonded configurations.
Enable PCIe pipe_hclk_in and pipe_hclk_out ports	On / Off	When you turn this option on, enables the pipe_hclk_in and pipe_hclk_out. These ports must be connected to the PLL IP instance for the PCI Express configurations.

Parameter	Range	Description
Enable PCIe Gen3 analog control ports	On / Off	When you turn this option on, enables the pipe_g3_txdeemph and pipe_g3_rxpresenthint ports. You can use these ports for equalization for Gen3 configurations.
Enable PCIe electrical idle control and status ports	On / Off	When you turn this option on, enables the pipe_rx_eidlein-fersel and pipe_rx_elecidle ports. These ports are used for PCI Express configurations.
Enable PCIe pipe_rx_polarity port	On / Off	When you turn this option on, enables the pipe_rx_polarity input control port. You can use this to control channel signal polarity for PCI Express configurations. When the Standard PCS is configured for PCIe, the assertion of this signal causes the RX bit polarity to be inverted. For other Transceiver configuration rules the optional rx_polinv port inverts the polarity of the RX bit stream.

Related Information

[Standard PCS Ports](#) on page 2-66

Dynamic Reconfiguration Parameters

Dynamic reconfiguration allows you to change the behavior of the transceiver channels and PLLs without powering down the device. Each transceiver channel and PLL includes an Avalon-MM slave interface for reconfiguration. This interface provides direct access to the programmable address space of each channel and PLL. Because each channel and PLL includes a dedicated Avalon-MM slave interface, you can dynamically modify channels either concurrently or sequentially. If your system does not require concurrent reconfiguration, you can parameterize the Transceiver Native PHY IP to share a single reconfiguration interface.

You can use dynamic reconfiguration to change many functions and features of the transceiver channels and PLLs. For example, you can change the reference clock input to the TX PLL. You can also change between the Standard and Enhanced datapaths.

Table 2-30: Dynamic Reconfiguration

Parameter	Value	Description
Enable dynamic reconfiguration	On/Off	When you turn this option on, the dynamic reconfiguration interface is enabled.
Share reconfiguration interface	On/Off	When you turn this option on, the Transceiver Native PHY IP presents a single Avalon-MM slave interface for dynamic reconfiguration for all channels. In this configuration, the upper [<i>n</i> :10] address bits of the reconfiguration address bus specify the channel. The channel numbers are binary encoded. Address bits [9:0] provide the register offset address within the reconfiguration space for a channel.

Parameter	Value	Description
Enable Altera Debug Master Endpoint	On/Off	When you turn this option on, the Transceiver Native PHY IP includes an embedded Altera Debug Master Endpoint (ADME) that connects internally to the Avalon-MM slave interface for dynamic reconfiguration. The ADME can access the reconfiguration space of the transceiver. It can perform certain test and debug functions via JTAG using the System Console. This option requires you to enable the Share reconfiguration interface option for configurations using more than one channel.

Table 2-31: Embedded Debug

Parameter	Value	Description
Enable embedded debug	On/Off	Enables the embedded debug logic in the transceiver channel and grants access to capability registers, soft PRBS accumulators, and control and status registers.
Enable capability registers	On/Off	Enables capability registers that provide high level information about the transceiver channel's configuration.
Set user-defined IP identifier	User-defined	Sets a user-defined numeric identifier that can be read from the <code>user_identifier</code> offset when the capability registers are enabled.
Enable control and status registers	On/Off	Enables soft registers to read status signals and write control signals on the PHY interface through the embedded debug.
Enable prbs soft accumulators	On/Off	Enables soft logic for performing PRBS bit and error accumulation when the hard PRBS generator and checker are used.

Table 2-32: Configuration Files

Parameter	Value	Description
Configuration file prefix	<i><prefix></i>	When you turn this option on, it specifies the file prefix to use for generated configuration files. Each variant of the Transceiver Native PHY IP should use a unique prefix for configuration files.
Generate SystemVerilog package file	On/Off	When you turn this option on, the Transceiver Native PHY IP generates a SystemVerilog package file, _reconfig_parameters.sv , containing parameters defined with the attribute values required for reconfiguration.

Parameter	Value	Description
Generate C header file	On/Off	When you turn this option on, the Transceiver Native PHY IP generates a C header file, _reconfig_parameters.h , containing macros defined with the attribute values required for reconfiguration.
Generate MIF (Memory Initialization File)	On/Off	When you turn this option on, the Transceiver Native PHY IP generates a MIF, _reconfig_parameters.mif , containing the attribute values required for reconfiguration in a data format.

Table 2-33: Generation Options

Parameter	Value	Description
Generate parameter documentation file	On/Off	When you turn this option on, generation produces a Comma-Separated Value File (.csv) with descriptions of the Transceiver Native PHY IP parameters.

PMA Ports

This section describes the PMA and calibration ports for the Arria 10 Transceiver Native PHY IP core.

The following tables, the variables represent these parameters:

- <n>—The number of lanes
- <d>—The serialization factor
- <s>—The symbol size
- <p>—The number of PLLs

Table 2-34: TX PMA Ports

Name	Direction	Clock Domain	Description
tx_serial_data[<n>-1:0]	Input	N/A	Serial data output of the TX PMA.
tx_serial_clk0	Input	Clock	Serial clock from the TX PLL. The frequency of this clock depends on the data rate and clock division factor. This clock is for non bonded channels only. For bonded channels use the tx_bonding_clocks clock TX input.
tx_bonding_clocks[<n>-1:0]	Input	Clock	6-bit bus which carries the low speed parallel clock per channel. These clocks are outputs from the master CGB. Use these clocks for bonded channels only.
Optional Ports			

Name	Direction	Clock Domain	Description
tx_serial_clk1 tx_serial_clk2 tx_serial_clk3 tx_serial_clk4	Inputs	Clocks	Serial clocks from the TX PLL. The frequency of these clocks depends on the data rate and clock division factor. These additional ports are enabled when you specify more than one TX PLL, these additional ports are enabled.
tx_pma_clkout	Output	Clock	This is the low speed parallel clock from the TX PMA. It is available when you turn on Enable tx_pma_clkout port in the Transceiver Native PHY IP core Parameter Editor .
tx_pma_div_clkout	Output	Clock	This is a divided version of the recovered parallel clock. It is available when you turn on Enable tx_pma_div_clkout port in the Transceiver Native PHY IP core Parameter Editor . You can divide the parallel clock by 1 or 2.
tx_pma_elecidle[<n>-1:0]	Input	Asynchronous	When asserted this signal forces the transmitter to electrical idle. This port has no effect when you configure the transceiver for the PCI Express protocol.
tx_pma_qpipullup[<n>-1:0]	Input	Asynchronous	This port is available if you turn on Enable tx_pma_qpipullup port (QPI) in the Transceiver Native PHY IP core Parameter Editor . It is only used for Quick Path Interconnect (QPI) applications.
tx_pma_qpipulldn[<n>-1:0]	Input	Asynchronous	This port is available if you turn on Enable tx_pma_qpipulldn port (QPI) in the Transceiver Native PHY IP core Parameter Editor . It is only used for Quick Path Interconnect (QPI) applications.
tx_pma_txdetectrx[<n>-1:0]	Input	Asynchronous	This port is available if you turn on Enable tx_pma_txdetectrx port (QPI) in the Transceiver Native PHY IP core Parameter Editor . When asserted, the receiver detect block in TX PMA detects the presence of a transmitter at the other end of the channel. After receiving tx_pma_txdetectrx request the receiver detect block initiates the detection process. Use this port for Quick Path Interconnect (QPI) applications only.
tx_pma_rxfound[<n>-1:0]	Output	Synchronous to rx_coreclk or rx_clkout based on the configuration.	This port is available if you turn on Enable tx_pma_rxfound port (QPI) in the Transceiver Native PHY IP core Parameter Editor . When asserted, indicates that the receiver detect block in TX PMA has detected a transmitter at the other end of the channel. Use this port for Quick Path Interconnect (QPI) applications only.

Table 2-35: RX PMA Ports

Name	Direction	Clock Domain	Description
rx_serial_data[<n>-1:0]	Input	N/A	Serial data input to the RX PMA.
rx_cdr_refclk0	Input	Clock	Reference clock input to the RX clock data recovery (CDR) circuitry.
Optional Ports			
rx_cdr_refclk1- rx_cdr_refclk4	Input	Clock	Reference clock inputs to the RX clock data recovery (CDR) circuitry.
rx_pma_qpipullup[<n>-1:0]	Input	Asynchronous	This port is only used for Quick Path Interconnect (QPI) applications.
rx_is_lockedtodata[<n>-1:0]	Output	rx_clkout	When asserted, indicates that the CDR PLL is locked to the incoming data, rx_serial_data.
rx_is_lockedtoref[<n>-1:0]	Output	rx_clkout	When asserted, indicates that the CDR PLL is locked to the input reference clock.
rx_set_lockedtodata[<n>-1:0]	Input	Asynchronous	This port provides manual control of the RX CDR circuitry.
rx_set_lockedtoref[<n>-1:0]	Input	Asynchronous	This port provides manual control of the RX CDR circuitry.
rx_serial_lpbken[<n>-1:0]	Input	Asynchronous	When asserted, enables the TX to RX serial loopback path in the transceiver.
rx_prbs_done[<n>-1:0]	Output	rx_coreclk _{in} or rx_clkout	When asserted, indicates the verifier has aligned and captured consecutive PRBS patterns and the first pass through a polynomial is complete. The generator has restarted the polynomial.
rx_prbs_err[<n>-1:0]	Output	rx_coreclk _{in} or rx_clkout	When asserted, indicates an error only after the rx_prbs_done signal has been asserted. This signal pulses for three parallel clock cycles for every error that occurs. Errors can only occur once per word.
rx_prbs_err_clr[<n>-1:0]	Input	rx_coreclk _{in} or rx_clkout	When asserted, clears the PRBS pattern and deasserts the rx_prbs_done signal.
rx_pma_clkout	Output	Clock	This is the recovered parallel clock from the RX CDR circuitry.

Name	Direction	Clock Domain	Description
rx_pma_div_clkout	Output	Clock	This is a divided version the recovered RX parallel clock. For the parallel clock, you can divide rx_pma_div_clkout by 1 or 2. For the serial clock, you can divide by 33, 40, 50, or 66. This clock drives rx_coreclk for different gear box ratios.
rx_pma_clkslip	Input	Clock	A rising edge on this signal causes the RX deserializer to slip the serial data by one clock cycle (2 UI).

Table 2-36: Calibration Status Ports

Name	Direction	Clock Domain	Description
tx_cal_busy[<n>-1:0]	Output	Asynchronous	When asserted, indicates that the initial TX calibration is in progress. For both initial and manual recalibration, this signal will be asserted during calibration and will deassert after calibration is completed. You must hold the channel in reset until calibration completes.
rx_cal_busy[<n>-1:0]	Output	Asynchronous	When asserted, indicates that the initial RX calibration is in progress. For both initial and manual recalibration, this signal will be asserted during calibration and will deassert after calibration is completed.

Table 2-37: Reset Ports


Name	Direction	Clock Domain ⁽²²⁾	Description
tx_analogreset	Input	Asynchronous	Resets the analog TX portion of the transceiver PHY.
tx_digitalreset	Input	Asynchronous	Resets the digital TX portion of the transceiver PHY.
rx_analogreset	Input	Asynchronous	Resets the analog RX portion of the transceiver PHY.
rx_digitalreset	Input	Asynchronous	Resets the digital RX portion of the transceiver PHY.

⁽²²⁾ Although the reset ports are not synchronous to any clock domain, Altera recommends that you synchronize the reset ports with the system clock.

Enhanced PCS Ports

Figure 2-7: Enhanced PCS Interfaces

If you enable both the Enhanced PCS and Standard PCS your top-level HDL file includes all the ports for both datapaths. The labeled inputs and outputs to the PMA and PCS modules represent buses, not individual signals.

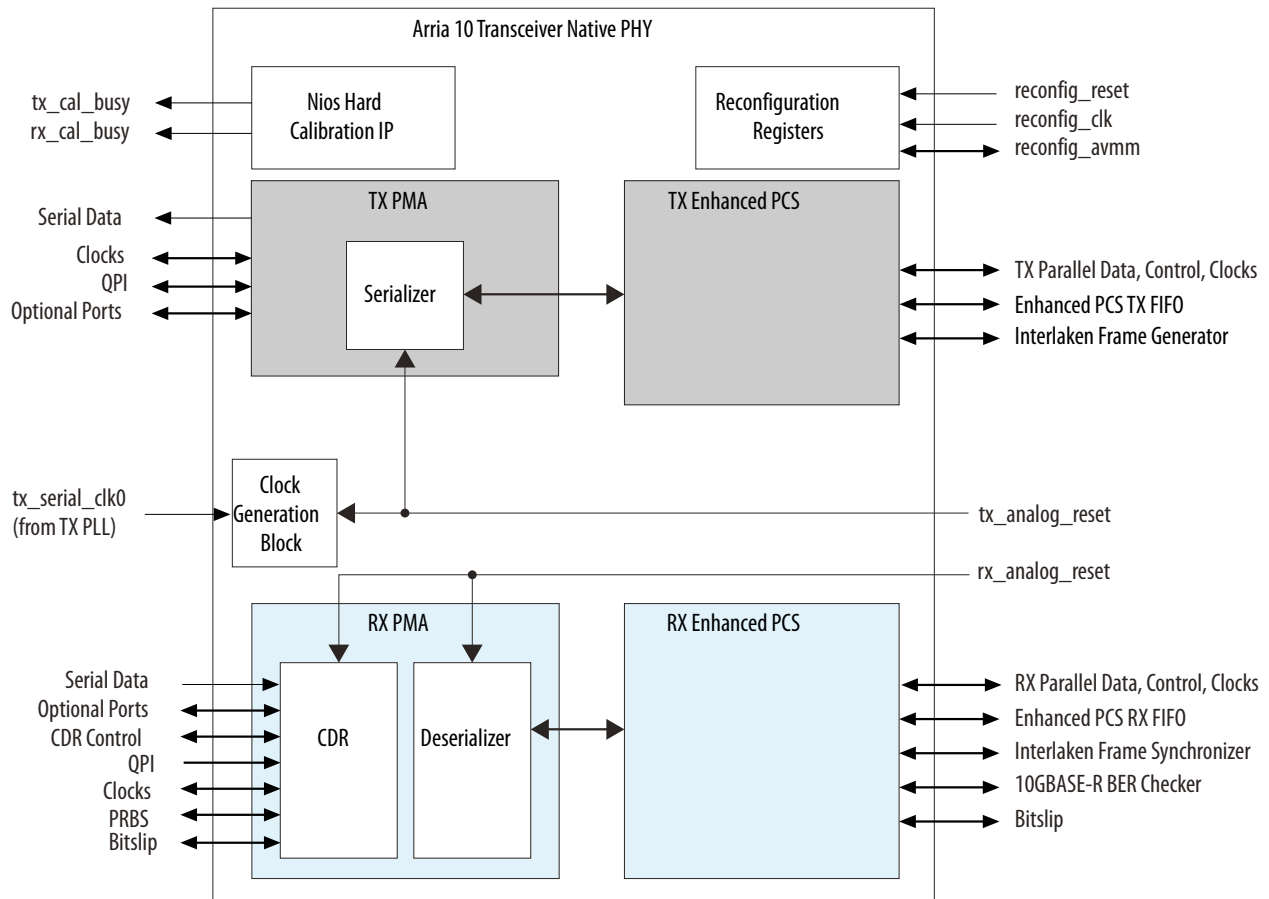

In the following tables, the variables represent these parameters:

- $\langle n \rangle$ —The number of lanes
- $\langle d \rangle$ —The serialization factor
- $\langle s \rangle$ —The symbol size
- $\langle p \rangle$ —The number of PLLs

Table 2-38: Enhanced TX PCS: Parallel Data, Control, and Clocks

Name	Direction	Clock Domain	Description
tx_parallel_data[$\langle n \rangle > 128 - 1 : 0$]	Input	Synchronous to the clock driving the write side of the FIFO (tx_	TX parallel data inputs from the FPGA fabric to the TX PCS. If you select Enable simplified interface in the Transceiver Native PHY IP Parameter Editor, tx_parallel_data includes only the bits required for the configuration you specify.

Name	Direction	Clock Domain	Description
		coreclk _{in} or tx_clk _{out})	You must ground the data pins that are not active. The following bits are active for narrower interfaces: 32-bit FPGA fabric to PCS interface width: tx_parallel_data[31:0]. Ground [127:32]. 40-bit FPGA fabric to PCS interface width: tx_parallel_data[39:0]. Ground [127:40]. 64-bit FPGA fabric to PCS interface width: tx_parallel_data[63:0]. Ground [127:64]. When the FPGA fabric to PCS interface data width is 128 bits (double-width mode), the following bits are active for narrower double-width configurations: 40-bit FPGA fabric to PCS interface width: data[103:64], [39:0]. Ground [127:104], [63:40]. 64-bit FPGA fabric to PCS interface width: data[127:64], [64:0]. You cannot select the Enable simplified interface if you plan to dynamically reconfigure between multiple protocols. Double-width mode is not supported for 32-bit, 50-bit, and 67-bit FPGA fabric to PCS interface widths.
unused_tx_parallel_data	Input	tx_clk _{out}	This signal specifies the unused data when you turn on Enable simplified data interface . Connect all of these bits to 0. If you do not connect the unused data bits to 0, then TX parallel data may not be serialized correctly by the Native PHY IP core.
tx_control[<n>-1:0] or tx_control[<n>-18:0]	Input	Synchronous to the clock driving the write side of the FIFO (tx_coreclk _{in} or tx_clk _{out})	Indicates whether the tx_parallel_data bus is control or data. If you select, Enable simplified interface in the Transceiver Native PHY IP GUI, tx_control is 3 bits. If you do not select Enable simplified interface, tx_control is 18 bits. The following encodings are defined. Refer to <i>Enhanced PCS TX and RX Control Ports</i> section for more details.
unused_tx_control[<n>-15:0]	Input	Synchronous to the clock driving the write side of the FIFO (tx_coreclk _{in} or tx_clk _{out})	Port is enabled when you enable Enable simplified interface . Connect all of these bits to 0.
tx_err_ins	Input	tx_coreclk _{in}	For the Interlaken protocol, you can use this bit to insert sync header and CRC32 errors if you have turned on Enable simplified interface .

Name	Direction	Clock Domain	Description
			When asserted, the sync header for that cycle word is replaced with a corrupted one. A CRC32 error is also inserted if Enable Interlaken TX CRC-32 generator error insertion is turned on. The corrupted sync header is 2'b00 for a control word, and 2'b11 for a data word. For CRC32 error insertion, the word used for CRC calculation for that cycle is incorrectly inverted, causing an incorrect CRC32 in the Diagnostic Word of the Metaframe. Note that a sync header error and a CRC32 error cannot be created for the Framing Control Words because the Frame Control Words are created in the frame generator embedded in TX PCS. Both the sync header error and the CRC32 errors are inserted if the CRC-32 error insertion feature is enabled in the Transceiver Native PHY IP GUI.
tx_coreclkln	Input	Clock	The FPGA fabric clock. Drives the write side of the TX FIFO. For the Interlaken protocol, the frequency of this clock could be from $\text{datarate}/67$ to $\text{datarate}/32$. Using frequency lower than this range can cause the TX FIFO to underflow and result in data corruption.
tx_clkout	Output	Clock	The parallel clock generated by the transceiver TX PMA. This clock times the blocks of the TX Enhanced PCS. The frequency of this clock is equal to datarate divided by PCS/PMA interface width.

Table 2-39: Enhanced RX PCS: Parallel Data, Control, and Clocks

Name	Direction	Clock Domain	Description
rx_parallel_data[<n>128-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclkln or rx_clkout)	RX parallel data from the RX PCS to the FPGA fabric. If you select, Enable simplified interface in the Transceiver Native PHY IP GUI, rx_parallel_data includes only the bits required for the configuration you specify. Otherwise, this interface is 128 bits wide. When FPGA fabric to PCS interface width is 64 bits, the following bits are active for interfaces narrower than 128 bits. You can leave the unused bits floating or not connected. 32-bit FPGA fabric to PCS width: data[31:0]. 40-bit FPGA fabric to PCS width: data[39:0]. 64-bit FPGA fabric to PCS width: data[63:0].

Name	Direction	Clock Domain	Description
			When the FPGA fabric to PCS interface width is 128 bits, the following bits are active: 40-bit FPGA fabric to PCS width: data[103:64], [39:0]. 64-bit FPGA fabric to PCS width: data[127:0].
unused_rx_parallel_data	Output	rx_clkout	This signal specifies the unused data when you turn on Enable simplified data interface . You can leave the unused data outputs floating or not connected.
rx_control[<n><20>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	Indicates whether the rx_parallel_data bus is control or data. Refer to <i>Enhanced PCS TX and RX Control Ports</i> section for more details
unused_rx_control[<n>10-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	These signals only exist when you turn on Enable simplified interface . These outputs can be left floating.
rx_coreclk	Input	Clock	The FPGA fabric clock. Drives the read side of the RX FIFO. For Interlaken protocol, the frequency of this clock could be from datarate/67 to datarate/32. If the frequency is too much higher than the frequency of rx_clkout, the RX FIFO flags might be unable to update in time and cause data corruption.
rx_clkout	Output	Clock	The low speed parallel clock generated by the transceiver RX PMA. This clock times the blocks in the RX Enhanced PCS. The frequency of this clock is equal to data rate divided by PCS/PMA interface width.

Table 2-40: Enhanced PCS TX FIFO

Name	Direction	Clock Domain	Description
tx_enh_data_valid[<n> -1:0]	Input	Synchronous to the clock driving the write side of the FIFO (tx_coreclk_in or tx_clkout)	Assertion of this signal indicates that the TX data is valid. Connect this signal to 1'b1 for 10GBASE-R without 1588. For Enhanced Basic and 10GBASE-R with 1588, you must control this signal based on the gearbox ratio. For Interlaken, you need to control this port based on TX FIFO flags so that the FIFO won't underflow or overflow.
tx_enh_fifo_full[<n>-1:0]	Output	Synchronous to the clock driving the write side of the FIFO (tx_coreclk_in or tx_clkout)	Assertion of this active high signal indicates the TX FIFO is full.
tx_enh_fifo_pfull[<n>-1:0]	Output	Synchronous to the clock driving the write side of the FIFO (tx_coreclk_in or tx_clkout)	This active high signal indicates when the TX FIFO reaches its partially full threshold.
tx_enh_fifo_empty[<n>-1:0]	Output	tx_clkout	When asserted, indicates that the TX FIFO is empty. This signal is pulse stretched for 2 to 3 clock cycles.
tx_enh_fifo_pempty[<n>-1:0]	Output	Asynchronous	This is an active high signal. When asserted, indicates that the TX FIFO has reached its specified partially empty threshold. When you turn this option on, the Enhanced PCS enables the tx_enh_fifo_pempty port, which is asynchronous. This signal is pulse stretched for 2 to 3 clock cycles.
tx_enh_fifo_cnt[<n>-1:0]	Output	Synchronous to the clock driving the write side of the FIFO.(tx_clkout or tx_coreclk_in.)	Indicates the current level of the TX FIFO.

Table 2-41: Enhanced PCS RX FIFO

Name	Direction	Clock Domain	Description
rx_enh_fifo_rd_en[<n>-1:0]	Input	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	For Interlaken only, when this signal is asserted, a word is read from the RX FIFO. You need to control this signal based on RX FIFO flags so that the FIFO won't underflow or overflow.
rx_enh_data_valid[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	When asserted, indicates that rx_parallel_data is valid. For basic mode, the rx_enh_data_valid signal toggles, indicating valid RX data when the RX FIFO is in Phase compensation or Register mode. This option is available when you select the following parameters: - Enhanced PCS Transceiver configuration rules specifies Interlaken - Enhanced PCS Transceiver configuration rules specifies Basic and RX FIFO mode is Phase compensation - Enhanced PCS Transceiver configuration rules specifies Basic and RX FIFO mode is Register
rx_enh_fifo_full[<n>-1:0]	Output	rx_clkout	This is an active high signal. When asserted, indicates that the RX FIFO is full. This signal is pulse stretched for 2 to 3 clock cycles.
rx_enh_fifo_pfull[<n>-1:0]	Output	rx_clkout	This is an active high signal. When asserted, indicates that the RX FIFO has reached its specified partially full threshold. This signal is pulse stretched for 2 to 3 clock cycles. This signal is pulse stretched for 2 to 3 clock cycles.
rx_enh_fifo_empty[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	This is an active high signal. When asserted, indicates that the RX FIFO is empty.
rx_enh_fifo_pempty[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	This is an active high signal. When asserted, indicates that the RX FIFO has reached its specified partially empty threshold.

Name	Direction	Clock Domain	Description
rx_enh_fifo_del[<n>-1:0]	Output	rx_clkout	When asserted, indicates that a word has been deleted from the RX FIFO. This signal is pulse stretched for 2 to 3 clock cycles. This signal is used for the 10GBASE-R protocol.
rx_enh_fifo_insert[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	When asserted, indicates that a word has been inserted into the RX FIFO. This signal is used for the 10GBASE-R protocol.
rx_enh_fifo_cnt[<n>5-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	Indicates the current level of the RX FIFO.
rx_enh_fifo_align_val[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	When asserted, indicates that the word alignment pattern has been found. This signal is only valid for the Interlaken protocol.
rx_enh_fifo_align_clr[<n>-1:0]	Input	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	When asserted, the FIFO resets and begins searching for a new alignment pattern. This signal is only valid for the Interlaken protocol. Assert this signal for at least 4 cycles.

Table 2-42: Interlaken Frame Generator, Synchronizer, and CRC32

Name	Direction	Clock Domain	Description
tx_enh_frame[<n>-1:0]	Output	tx_clkout	Asserted for 2 or 3 parallel clock cycles to indicate the beginning of a new metaframe. This signal is pulse stretched.

Name	Direction	Clock Domain	Description
tx_enh_frame_burst_en[<n>-1:0]	Input	tx_clkout	If Enable frame burst is enabled, this port controls frame generator data reads from the TX FIFO to the frame generator. It is latched once at the beginning of each Metaframe. If the value of tx_enh_frame_burst_en is 0, the frame generator does not read data from the TX FIFO for current Metaframe. Instead, the frame generator inserts SKIP words as the payload of Metaframe. When tx_enh_frame_burst_en is 1, the frame generator reads data from the TX FIFO for the current Metaframe. This port must be held constant for 5 clock cycles before and after the tx_enh_frame pulse.
tx_enh_frame_diag_status[<n> 2-1:0]	Input	tx_clkout	Drives the lane status message contained in the Framing Layer Diagnostic Word (bits[33:32]). This message is inserted into the next Diagnostic Word generated by the Frame Generator Block. This bus must be held constant for 5 clock cycles before and after the tx_enh_frame pulse. The following encodings are defined: • Bit[1]: When 1'b1, indicates the lane is operational. When 1'b0, indicates the lane is not operational. • Bit[0]: When 1'b1, indicates the link is operational. When 1'b0, indicates the link is not operational.
rx_enh_frame[<n>-1:0]	Output	rx_clkout	When asserted, indicates the beginning of a new received Metaframe. This signal is pulse stretched.
rx_enh_frame_lock[<n>-1:0]	Output	rx_clkout	When asserted, indicates the Frame Synchronizer state machine has achieved Metaframe delineation. This signal is pulse stretched.

Name	Direction	Clock Domain	Description
rx_enh_frame_diag_status[2<n>-1:0]	Output	rx_clkout	Drives the lane status message contained in the Framing Layer Diagnostic Word (bits[33:32]). This signal is latched when a valid Diagnostic Word is received in the end of the Metaframe while the frame is locked. The following encodings are defined: - Bit[1]: When 1b'1, indicates the lane is operational. When 0b'0, indicates the lane is not operational. - Bit[0]: When 1b'1, indicates the link is operational. When 0b'0, indicates the link is not operational.
rx_enh_crc32_err[<n>-1:0]	Output	rx_clkout	When asserted, indicates a CRC error in the current Metaframe. Asserted at the end of current Metaframe. This signal is pulse stretched for 2 or 3 cycles.

Table 2-43: 10GBASE-R BER Checker

Name	Direction	Clock Domain	Description
rx_enh_highber[<n>-1:0]	Output	rx_clkout	Active high. When asserted, indicates a bit error rate that is greater than 10^{-4} . For the 10GBASE-R protocol, this BER rate occurs when there are at least 16 errors within 125 μ s. This signal is pulse stretched for 2 to 3 clock cycles.
rx_enh_highber_clr_cnt[<n>-1:0]	Input	rx_clkout	When asserted, clears the internal counter that indicates the number of times the BER state machine has entered the BER_BAD_SH state.
rx_enh_clr_errblk_count[<n>-1:0] (10GBASE-R and FEC)	Input	rx_clkout	For 10GBASE-R, enables the optional rx_enh_clr_errblk_count input port. When asserted the error block counter resets to 0. Assertion of this signal clears the internal counter that counts the number of times the RX state machine has entered the RX_E state. In modes where the FEC block is enabled, the assertion of this signal resets the status counters within the RX FEC block.

Table 2-44: Block Synchronizer

Name	Direction	Clock Domain	Description
rx_enh_blk_lock<n>-1:0]	Output	rx_clkout	Active high. When asserted, indicates that block synchronizer has achieved block delineation. This signal is used for 10GBASE-R and Interlaken. This signal is pulse stretched.

Table 2-45: Bitslip

Name	Direction	Clock Domain	Description
rx_bitslip[<n>-1:0]	Input	rx_clkout	The rx_parallel_data slips 1 bit for every positive edge of the rx_bitslip input. Keep the minimum interval between rx_bitslip pulses to at least 20 cycles. The maximum shift is <pcswidth - 1> bits, so that if the PCS is 64 bits wide, you can shift 0-63 bits.
tx_enh_bitslip[<n>-1:0]	Input	rx_clkout	The value of this signal controls the number of cbit locations to slip the tx_parallel_data before passing to the PMA.

Related Information

- [ATX PLL IP Core](#) on page 3-6
- [CMU PLL IP Core](#) on page 3-24
- [fPLL IP Core](#) on page 3-15
- [Ports and Parameters](#) on page 6-15
- [Transceiver PHY Reset Controller Interfaces](#) on page 4-13

This section describes the top-level signals for the Transceiver PHY Reset Controller IP core.

Enhanced PCS TX and RX Control Ports

The tx_control and rx_control ports indicate if parallel_data bus is control or data. This section describes the tx_control and rx_control bit encodings for different protocol configurations.

Enhanced PCS TX Control Port Bit Encodings

Table 2-46: Bit Encodings for Interlaken with Enable Simplified Interfaced ON

Name	Bit	Functionality	Description
tx_control	[0]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[0] is mutually exclusive with bit[1].
	[1]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[1] is mutually exclusive with bit[0].
	[2]	Inversion control	A logic low indicates that the built-in disparity generator block in the Enhanced PCS maintains the Interlaken running disparity.

Table 2-47: Bit Encodings for Interlaken with Enable Simplified Interfaced OFF

Name	Bit	Functionality	Description
tx_control	[0]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[0] is mutually exclusive with bit[1].
	[1]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[1] is mutually exclusive with bit[0].
	[2]	Inversion control	A logic low indicates that the built-in disparity generator block in the Enhanced PCS maintains the Interlaken running disparity.
	[7:3]	Unused	
	[8]	Insert sync header error or CRC32	You can use this bit to insert sync header error or CRC32 errors. The functionality is similar to tx_err_ins. Refer to tx_err_ins signal description for more details.
	[17:9]	Unused	

Table 2-48: Bit Encodings for 10GBASE-R , 10GBASE-KR with FEC, and Basic KR FEC

Name	Bit	Functionality
tx_control	[0]	XGMII control signal for parallel_data[7:0]
	[1]	XGMII control signal for parallel_data[15:8]
	[2]	XGMII control signal for parallel_data[23:16]
	[3]	XGMII control signal for parallel_data[31:24]
	[4]	XGMII control signal for parallel_data[39:32]
	[5]	XGMII control signal for parallel_data[47:40]
	[6]	XGMII control signal for parallel_data[55:48]
	[7]	XGMII control signal for parallel_data[63:56]
	[8]	Active high status signal that indicates the beginning of a receiver KR FEC frame boundary.
	[9]	Active high status signal that indicates when KR FEC block is achieved.

Table 2-49: Bit Encodings for Basic Single Width Mode

For basic single width mode, the total word length is 66-bit with 64-bit data and 2-bit sync header.

Name	Bit	Functionality	Description
tx_control	[0]	Sync header	A logic high indicates a data word.
	[1]	Sync header	A logic low indicates a control word.
	[17:2]	Unused	

Table 2-50: Bit Encodings for Basic Double Width Mode

For basic double width mode, the total word length is 66-bit with 128-bit data and 4-bit sync header.

Name	Bit	Functionality	Description
tx_control	[0]	Sync header	A logic high indicates a data word.
	[1]	Sync header	A logic high indicates a control word.
	[8:2]	Unused	
	[9]	Sync header	A logic high indicates a data word.
	[10]	Sync header	A logic high indicates a control word.
	[17:11]	Unused	

Table 2-51: Bit Encodings for Basic Mode

In this case, the total word length is 67-bit with 64-bit data and 2-bit sync header.

Name	Bit	Functionality	Description
tx_control	[0]	Sync header	A logic high indicates a data word.
	[1]	Sync header	A logic low indicates a control word.
	[2]	Inversion control	A logic low indicates that built-in disparity generator block in the Enhanced PCS maintains the running disparity.

Enhanced PCS RX Control Port Bit Encodings

Table 2-52: Bit Encodings for Interlaken with Enable Simplified Interface ON

Name	Bit	Functionality	Description
rx_control	[0]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[0] is mutually exclusive with bit[1].
	[1]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[1] is mutually exclusive with bit[0].
	[2]	Inversion control	A logic low indicates that the built-in disparity generator block in the Enhanced PCS maintains the Interlaken running disparity. In the current implementation, this bit is always tied logic low (1'b0).
	[3]	Payload word location	A logic high (1'b1) indicates the payload word location in a metaframe.
	[4]	Synchronization word location	A logic high (1'b1) indicates the synchronization word location in a metaframe.
	[5]	Scrambler state word location	A logic high (1'b1) indicates the scrambler word location in a metaframe.
	[6]	SKIP word location	A logic high (1'b1) indicates the SKIP word location in a metaframe.
	[7]	Diagnostic word location	A logic high (1'b1) indicates the diagnostic word location in a metaframe.
	[8]	Synchronization header error, metaframe error, or CRC32 error status	A logic high (1'b1) indicates synchronization header error, metaframe error, or CRC32 error status.
	[9]	Block lock and frame lock status	A logic high (1'b1) indicates that block lock and frame lock have been achieved.
	[19:10]	Unused	

Table 2-53: Bit Encodings for Interlaken with Enable Simplified Interface OFF

Name	Bit	Functionality	Description
rx_control	[0]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[0] is mutually exclusive with bit[1].
	[1]	Sync header	A logic high indicates a control word and logic low indicates a data word. Bit[1] is mutually exclusive with bit[0].
	[2]	Inversion control	A logic low indicates that the built-in disparity generator block in the Enhanced PCS maintains the Interlaken running disparity. In the current implementation, this bit is always tied logic low (1'b0).
	[7:3]	Unused	
	[8]	Insert sync header error or CRC32 error	You can use this bit to insert sync header error or CRC32 errors. The functionality is similar to tx_err_ins. Refer to tx_err_ins signal description for more details.
	[17:9]	Unused	

Table 2-54: Bit Encodings for 10GBASE-R, 10GBASE-KR with FEC, and Basic KR FEC

Name	Bit	Functionality
rx_control	[0]	XGMII control signal for parallel_data[7:0]
	[1]	XGMII control signal for parallel_data[15:8]
	[2]	XGMII control signal for parallel_data[23:16]
	[3]	XGMII control signal for parallel_data[31:24]
	[4]	XGMII control signal for parallel_data[39:32]
	[5]	XGMII control signal for parallel_data[47:40]
	[6]	XGMII control signal for parallel_data[55:48]
	[7]	XGMII control signal for parallel_data[63:56]
	[8]	Active high status signal that indicates the beginning of a receiver KR FEC frame boundary.
	[9]	Active high status signal that indicates when KR FEC block is achieved.

Table 2-55: Bit Encodings for Basic Single Width Mode

For basic single width mode, the total word length is 66-bit with 64-bit data and 2-bit sync header.

Name	Bit	Functionality	Description
rx_control	[0]	Sync header	A logic high indicates a data word.
	[1]	Sync header	A logic high indicates a control word.
	[7:2]	Unused	
	[8]	Sync header error status	A logic high indicates a data word.
	[9]	Block lock is achieved	A logic high indicates a control word.
	[19:10]	Unused	

Table 2-56: Bit Encodings for Basic Double Width Mode

For basic double width mode, total word length is 66-bit with 128-bit data, and 4-bit sync header.

Name	Bit	Functionality	Description
rx_control	[0]	Sync header	A logic high indicates a data word and logic low indicates a control word.
	[1]	Sync header	A logic high indicates a control word and logic low indicates a data word.
	[7:2]	Unused	
	[8]	Sync header error status	Active-high status signal that indicates a sync header error.
	[9]	Block lock is achieved	Active-high status signal indicating when block lock is achieved.
	[10]	Sync header	A logic high (1'b1) indicates a data word.
	[11]	Sync header	A logic high (1'b1) indicates a control word.
	[17:12]	Unused	
	[18]	Sync header error status	Active-high status signal that indicates a sync header error.
	[19]	Block lock is achieved	Active-high status signal indicating when Block Lock is achieved.


Table 2-57: Bit Encodings for Basic Mode

In this case, the total word length is 67-bit with 64-bit data and 2-bit sync header.

Name	Bit	Functionality	Description
rx_control	[0]	Sync header	A logic high indicates a data word.
	[1]	Sync header	A logic low indicates a control word.
	[2]	Inversion control	A logic low indicates that built-in disparity generator block in the Enhanced PCS maintains the running disparity.

Standard PCS Ports

The following figure illustrates the transceiver channel using the Standard PCS. If you enable both the Standard PCS and Enhanced PCS your top-level HDL file includes all the ports for both datapaths.

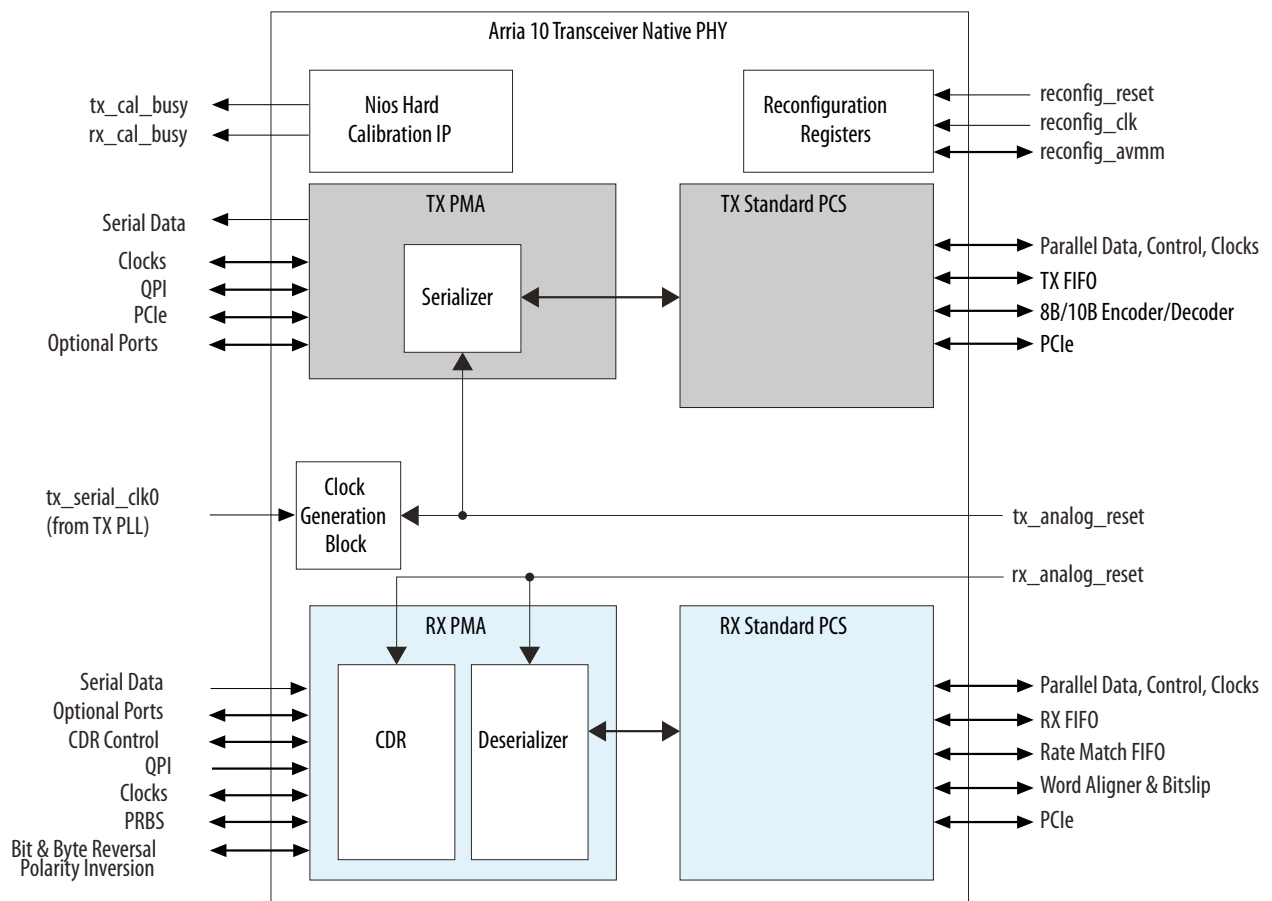

In the following tables, the variables represent these parameters:

- $\langle n \rangle$ —The number of lanes
- $\langle w \rangle$ —The width of the interface
- $\langle d \rangle$ —The serialization factor
- $\langle s \rangle$ —The symbol size
- $\langle p \rangle$ —The number of PLLs

Table 2-58: TX Standard PCS: Data, Control, and Clocks

Name	Direction	Clock Domain	Description
tx_parallel_data[$\langle n \rangle$ -1:0]	Input	tx_clkout	TX parallel data input from the FPGA fabric to the TX PCS. For each 128-bit word, the data input bits correspond to tx_parallel_data[7:0].
unused_tx_parallel_data	Input	tx_clkout	This signal specifies the unused data when you turn on Enable simplified data interface . Connect all these bits to 0. If you do not connect the unused data bits to 0, then TX parallel data may not be serialized correctly by the Native PHY IP core.
tx_dataak[$\langle n \rangle \langle d \rangle / \langle s \rangle$ -1:0]	Input	tx_clkout	When 1, indicates that the 8B/10B encoded word of tx_parallel_data is control. When 0, indicates that the 8B/10B encoded word of tx_parallel_data is data. tx_dataak is a part of tx_parallel_data. For each 128-bit word, tx_dataak corresponds to tx_parallel_data[8].
tx_coreclkkin	Input	Clock	The FPGA fabric clock. This clock drives the write port of the TX FIFO.
tx_clkout	Output	Clock	The low speed parallel clock generated by the Transceiver TX PMA. This clock times tx_parallel_data from the FPGA fabric to the TX PCS.

Table 2-59: RX Standard PCS: Data, Control, Status, and Clocks

Name	Direction	Clock Domain	Description
rx_parallel_data[<n>128-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	RX parallel data from the RX PCS to the FPGA fabric. For each 128-bit word of rx_parallel_data, the data bits correspond to rx_parallel_data[7:0] when 8B/10B decoder is enabled and rx_parallel_data[9:0] when 8B/10B decoder is disabled.
unused_rx_parallel_data	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk or rx_clkout)	This signal specifies the unused data when you turn on Enable simplified data interface . These outputs can be left floating.
rx_clkout	Output	Clock	FPGA fabric transceiver clock. This clock times rx_parallel_data from the RX PCS to the FPGA fabric.
rx_coreclk	Input	Clock	RX parallel clock that drives the read side clock of the RX FIFO.

Table 2-60: TX and RX FIFO

Name	Direction	Clock Domain	Description
tx_std_pcfifo_full[<n>-1:0]	Output	Synchronous to the clock driving the write side of the FIFO (tx_coreclk or tx_clkout)	Indicates when the standard TX FIFO reaches the full threshold.
tx_std_pcfifo_empty[<n>-1:0]	Output	Synchronous to the clock driving the write side of the FIFO (tx_coreclk or tx_clkout)	Indicates when the standard TX FIFO reaches the empty threshold.

Name	Direction	Clock Domain	Description
rx_std_pcfifo_full[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclkin or rx_clkout)	Indicates when the standard RX FIFO reaches the full threshold.
rx_std_pcfifo_empty[<n>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclkin or rx_clkout)	Indicates when the standard TX FIFO reaches the empty threshold.

Table 2-61: Rate Match FIFO

Name	Direction	Clock Domain	Description
rx_std_rmfifo_full[<n>-1:0]	Output	Asynchronous	Rate match FIFO full flag. When asserted the rate match FIFO is full. You must synchronize this signal. This port is only used for GigE mode.
rx_std_rmfifo_empty[<n>-1:0]	Output	Asynchronous	Rate match FIFO empty flag. When asserted, match FIFO is full. You must synchronize this signal. This port is only used for GigE mode.
rx_rmfifostatus[<n>-1:0]	Output	Asynchronous	Indicates FIFO status. The following encodings are defined: • 2'b00: Normal operation • 2'b01: Deletion, rx_std_rmfifo_full = 1 • 2'b10: Insertion, rx_std_rmfifo_empty = 1 • 2'b11: Full. rx_rmfifostatus is a part of rx_parallel_data. rx_rmfifostatus corresponds to rx_parallel_data[14:13].

Table 2-62: 8B/10B Encoder and Decoder

Name	Direction	Clock Domain	Description
tx_forcedisp[<n>(<w>/<s>-1:0]	Input	Asynchronous	This signal allows you to force the disparity of the 8B/10B encoder. When 1'b1, forces the disparity of the output data to the value driven on tx_dispv1. When 1'b0, the current running disparity continues. tx_forcedisp is a part of tx_parallel_data. tx_forcedisp corresponds to tx_parallel_data[9].
tx_dispv1[<n>(<w>/<s>-1:0]	Input	Asynchronous	Specifies the disparity of the data. tx_dispv1 is a part of tx_parallel_data. tx_dispv1 corresponds to tx_parallel_data[10].
rx_datak[<n>(<w>/<s>-1:0]	Input	rx_clkout	When 1, indicates that the 8B/10B decoded word of rx_parallel_data is control. When 0, indicates that the 8B/10B decoded word of rx_parallel_data is data. rx_datak is part of rx_parallel_data. For each 128-bit word, rx_datak corresponds to rx_parallel_data[8].
rx_errdetect[<n>(<w>/<s>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk_in or rx_clkout)	When asserted, indicates a code group violation detected on the received code group. Used along with rx_disperr signal to differentiate between code group violation and disparity errors. the following encodings are defined for rx_errdetect/rx_disperr: • 2'b00: no error • 2'b10: code group violation • 2'b11: disparity error. rx_errdetect is a part of rx_parallel_data. For each 128-bit word, rx_errdetect corresponds to rx_parallel_data[9].

Name	Direction	Clock Domain	Description
rx_disperserr[<n><w>/<s>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk_in or rx_clkout)	When asserted, indicates a disparity error on the received code group. rx_disperserr is a part of rx_parallel_data. For each 128-bit word, rx_disperserr corresponds to rx_parallel_data[11].
rx_runningdisp[<n><w>/<s>-1:0]	Output	Synchronous to the clock driving the read side of the FIFO (rx_coreclk_in or rx_clkout)	When high, indicates that rx_parallel_data was received with negative disparity. When low, indicates that rx_parallel_data was received with positive disparity. rx_runningdisp is a part of rx_parallel_data. For each 128 bit word, rx_runningdisp corresponds to rx_parallel_data[15].
rx_patterndetect[<n><w>/<s>-1:0]	Output	Asynchronous	When asserted, indicates that the programmed word alignment pattern has been detected in the current word boundary. rx_patterndetect is a part of rx_parallel_data. For each 128-bit word, rx_patterndetect corresponds to rx_parallel_data[12].
rx_syncstatus[<n><w>/<s>-1:0]	Output	Asynchronous	When asserted, indicates that the conditions required for synchronization are being met. rx_syncstatus is a part of rx_parallel_data. For each 128-bit word, rx_syncstatus corresponds to rx_parallel_data[10].

Table 2-63: Word Aligner and Bitlip

Name	Direction	Clock Domain	Description
tx_std_bitlipboundarysel[5<n>-1:0]	Input	Asynchronous	Bitlip boundary selection signal. Specifies the number of bits that the TX bit slipper must slip.

Name	Direction	Clock Domain	Description
<code>rx_std_bitslipboundarysel[5<n>-1:0]</code>	Output	Asynchronous	This signal operates when the word aligner is in bitslip word alignment mode. It reports the number of bits that the RX block slipped to achieve deterministic latency.
<code>rx_std_wa_patternalign[<n>-1:0]</code>	Input	Asynchronous	Active when you place the word aligner in manual mode. In manual mode, you align words by asserting <code>rx_std_wa_patternalign</code>. When the PCS-PMA Interface width is 10 bits, <code>rx_std_wa_patternalign</code> is level sensitive. For all the other PCS-PMA Interface widths, <code>rx_std_wa_patternalign</code> is edge sensitive. You can use this port only when the word aligner is configured in manual or deterministic latency mode. When the word aligner is in manual mode, and the PCS-PMA interface width is 10 bits, this is a level sensitive signal. In this case, the word aligner monitors the input data for the word alignment pattern, and updates the word boundary when it finds the alignment pattern. For all other PCS-PMA interface widths, this signal is edge sensitive. This signal is internally synchronized inside the PCS using the PCS parallel clock and should be asserted for at least 2 clock cycles to allow synchronization.
<code>rx_std_wa_alasize[<n>-1:0]</code>	Input	Asynchronous	Used for the SONET protocol. Assert when the A1 and A2 framing bytes must be detected. A1 and A2 are SONET backplane bytes and are only used when the PMA data width is 8 bits.

Name	Direction	Clock Domain	Description
rx_bitslip[<n>-1:0]	Input	Asynchronous	Used when word aligner mode is bitslip mode. When the Word Aligner is in either Manual (PLD controlled), Synchronous State Machine or Deterministic Latency, the rx_bitslip signal is not valid and should be tied to 0. For every rising edge of the rx_std_bitslip signal, the word boundary is shifted by 1 bit. Each bitslip removes the earliest received bit from the received data.

Table 2-64: Bit and Byte Reversal and Polarity Inversion

Name	Direction	Clock Domain	Description
rx_std_bytereve_ena[<n>-1:0]	Input	Asynchronous	This control signal is available when the PMA width is 16 or 20 bits. When asserted, enables byte reversal on the RX interface. Used if the MSB and LSB of the transmitted data are erroneously swapped.
rx_std_bitrev_ena[<n>-1:0]	Input	Asynchronous	When asserted, enables bit reversal on the RX interface. Bit order may be reversed if external transmission circuitry transmits the most significant bit first. When enabled, the receive circuitry receives all words in the reverse order. The bit reversal circuitry operates on the output of the word aligner. Rewires D[7:0] to D[0:7], and so on.
tx_polinv[<n>-1:0]	Input	Asynchronous	When asserted, the TX polarity bit is inverted. Only active when TX bit polarity inversion is enabled.
rx_polinv[<n>-1:0]	Input	Asynchronous	When asserted, the RX polarity bit is inverted. Only active when RX bit polarity inversion is enabled.

Table 2-65: Signal Detection

Name	Direction	Clock Domain	Description
rx_std_signaldetect[<n>-1:0]	Output	Asynchronous	When enabled, the signal threshold detection circuitry senses whether the signal level present at the RX input buffer is above the signal detect threshold voltage that specified. You can specify the signal detect threshold using a Quartus II Settings File (.qsf) assignment. This signal is required for the PCI Express, SATA and SAS protocols.
rx_std_elecidle[<n>-1:0]	Input	Asynchronous	When asserted this signal forces the transmitter to electrical idle. This port has no effect when you configure the transceiver for the PCI Express protocol.

Related Information

- [ATX PLL IP Core](#) on page 3-6
- [CMU PLL IP Core](#) on page 3-24
- [fPLL IP Core](#) on page 3-15
- [Ports and Parameters](#) on page 6-15
- [Transceiver PHY Reset Controller Interfaces](#) on page 4-13


This section describes the top-level signals for the Transceiver PHY Reset Controller IP core.

- [Analog Parameter Settings](#) on page 8-1

IP Core File Locations

When you generate your Transceiver Native PHY IP, the Quartus® II software generates the HDL files that define your instance of the IP. In addition, the Quartus II software generates an example Tcl script to compile and simulate your design in the ModelSim simulator. It also generates simulation scripts for Synopsys VCS, Aldec Active-HDL, Aldec Riviera-Pro, and Cadence Incisive Enterprise.

Figure 2-8: Directory Structure for Generated Files

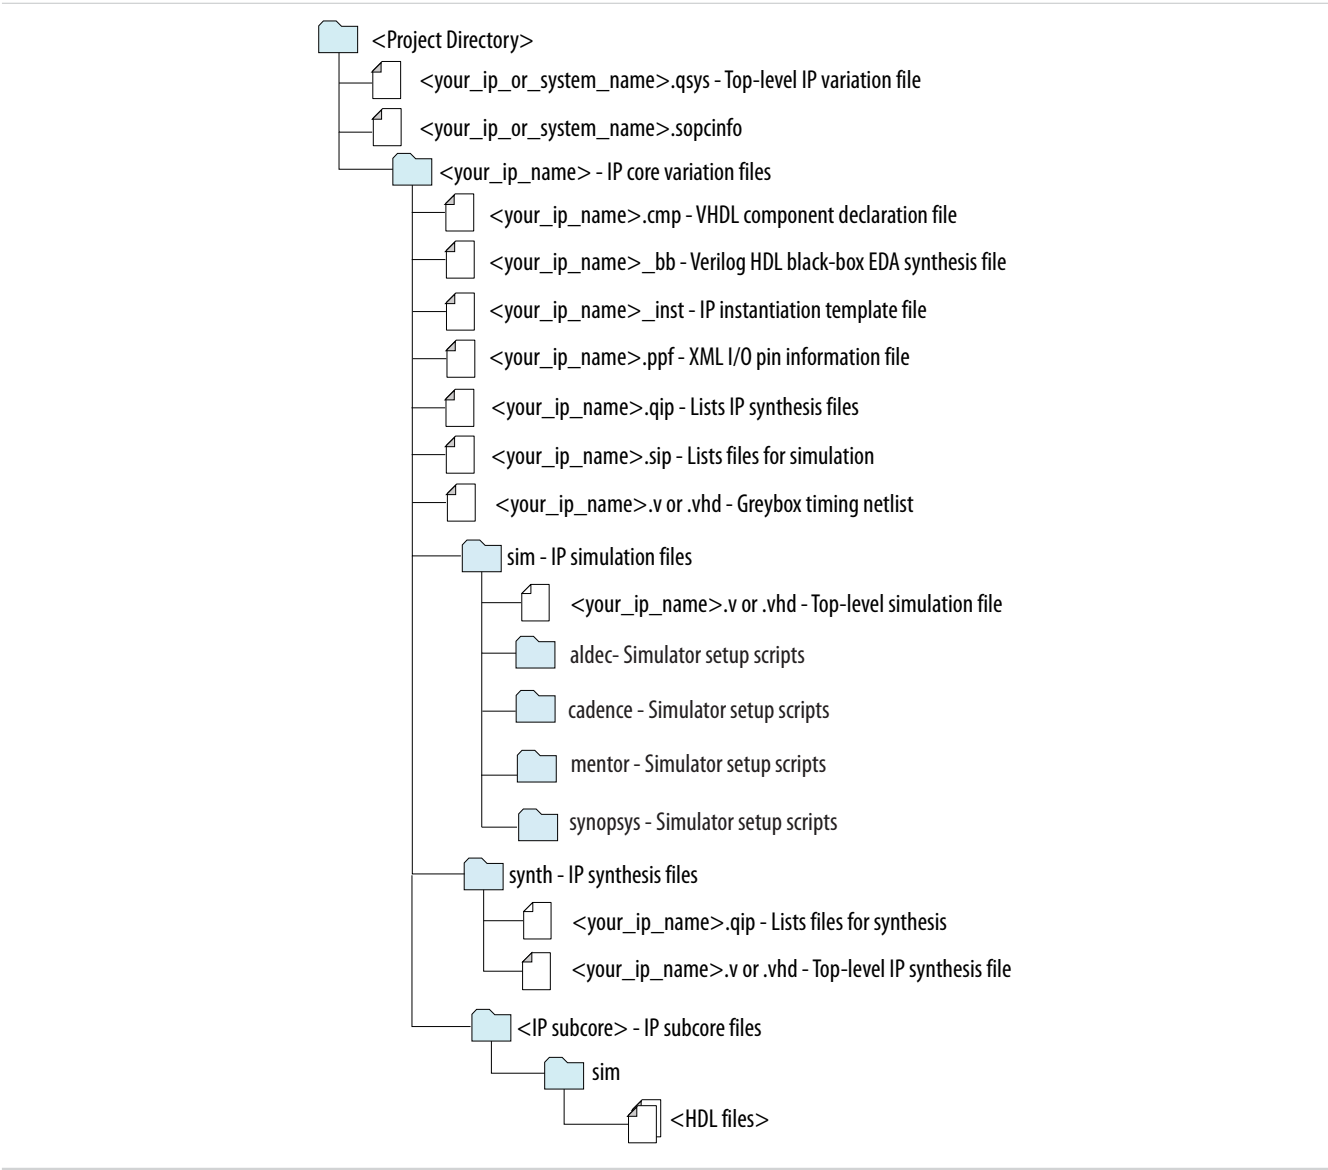

The following table describes the directories and the most important files for the parameterized Transceiver Native PHY IP core and the simulation environment. These files are in clear text.

Table 2-66: Transceiver Native PHY Files and Directories

File Name	Description
<project_dir>	The top-level project directory.
<your_ip_name> .v or .vhd	The top-level design file.
<your_ip_name> .qip	A list of all files necessary for Quartus II compilation.

File Name	Description
<code><your_ip_name>.bsf</code>	A Block Symbol File (.bsf) for your Transceiver Native PHY instance.
<code><project_dir>/<your_ip_name>/</code>	The directory that stores the HDL files that define the Transceiver Native PHY IP.
<code><project_dir>/sim</code>	The simulation directory.
<code><project_dir>/sim/aldec</code>	Simulation files for Riviera-PRO simulation tools.
<code><project_dir>/sim/cadence</code>	Simulation files for Cadence simulation tools.
<code><project_dir>/sim/mentor</code>	Simulation files for Mentor simulation tools.
<code><project_dir>/sim/synopsys</code>	Simulation files for Synopsys simulation tools.
<code><project_dir>/synth</code>	The directory that stores files used for synthesis.

The Verilog and VHDL Transceiver Native PHY IP cores have been tested with the following simulators:

- ModelSim SE
- Synopsys VCS MX
- Cadence NCSim

If you select VHDL for your transceiver PHY, only the wrapper generated by the Quartus II software is in VHDL. All the underlying files are written in Verilog or SystemVerilog. To enable simulation using a VHDL-only ModelSim license, the underlying Verilog and SystemVerilog files for the Transceiver Native PHY IP are encrypted so that they can be used with the top-level VHDL wrapper without using a mixed-language simulator.

For more information about simulating with ModelSim, refer to the *Mentor Graphics ModelSim Support* chapter in volume 3 of the *Quartus II Handbook*.

The Transceiver Native PHY IP cores do not support the NativeLink feature in the Quartus II software.

Related Information

- [Simulating the Transceiver Native PHY IP Core](#) on page 2-322
- [Mentor Graphics ModelSim Support](#)

Interlaken


Interlaken is a scalable, channelized chip-to-chip interconnect protocol.

The key advantages of Interlaken are scalability and low I/O count compared to earlier protocols such as SPI 4.2. Other key features include flow control, low overhead framing, and extensive integrity checking. Interlaken operates on 64-bit data words and 3 control bits, which are striped round-robin across the lanes. The protocol accepts packets on 256 logical channels and is expandable to accommodate up to 65,536 logical channels. Packets are split into small bursts that can optionally be interleaved. The burst semantics include integrity checking and per logical channel flow control.

The Interlaken interface is supported with 1 to 48 lanes running at data rates up to 17.4 Gbps per lane. Interlaken is implemented using the Enhanced PCS. The Enhanced PCS has demonstrated interoperability with Interlaken ASSP vendors and third-party IP suppliers.

Figure 2-9: Transceiver Channel Datapath and Clocking for Interlaken

This assumes the serial data rate is 12.5 Gbps and the PMA width is 40 bits.

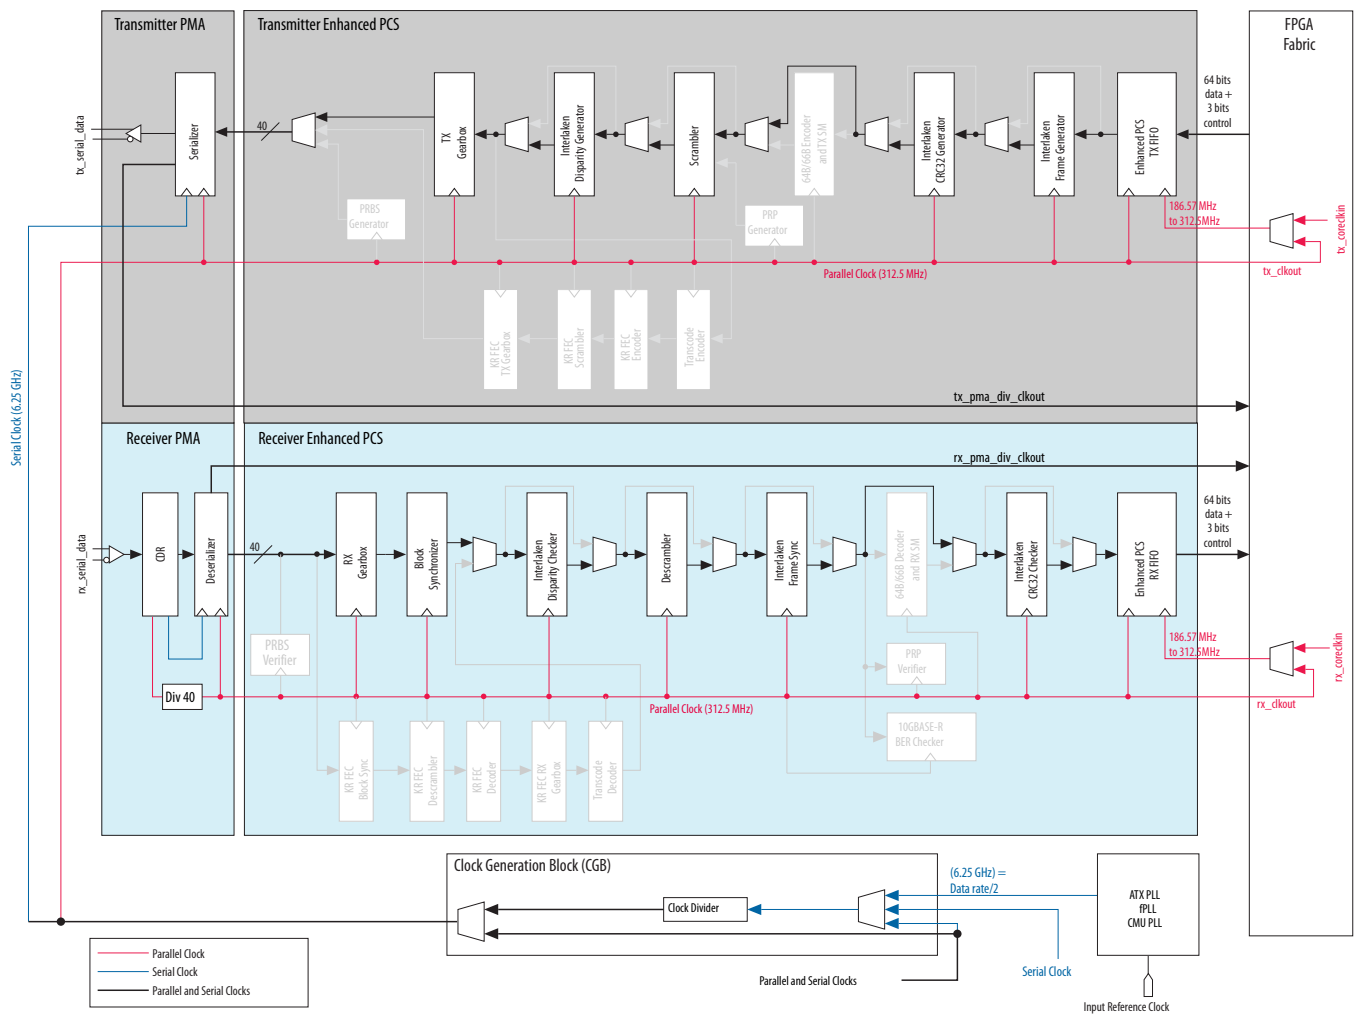


Related Information

- [Interlaken Protocol Definition v1.2](#)
- [Interlaken Look-Aside Protocol Definition, v1.1](#)

Metaframe Format and Framing Layer Control Word

The Enhanced PCS supports programmable metaframe lengths from 5 to 8192 words. However, for stability and performance, Altera recommends you set the frame length to no less than 128 words. In simulation, use a smaller metaframe length to reduce simulation times. The payload of a metaframe could be pure data payload and a Burst/Idle control word from the MAC layer.

Figure 2-10: Framing Layer Metaframe Format

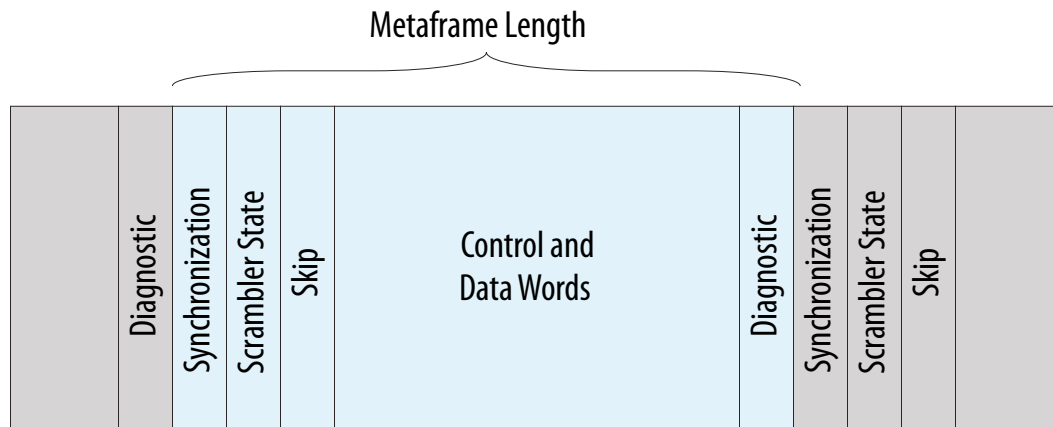

The framing control words include:

- Synchronization (SYNC)—for frame delineation and lane alignment (deskew)
- Scrambler State (SCRM)—to synchronize the scrambler
- Skip (SKIP)—for clock compensation in a repeater
- Diagnostic (DIAG)—provides per-lane error check and optional status message

To form a metaframe, the Enhanced PCS frame generator inserts the framing control words and encapsulates the control and data words read from the TX FIFO as the metaframe payload.

Figure 2-11: Interlaken Synchronization and Scrambler State Words Format

bx10	b011110	h0F678FF678F678F6
bx10	b001010	Scrambler State
66	63	58 57 0

Figure 2-12: Interlaken Skip Word Format

bx10	b000111	h21E	h1E	h1E	h1E	h1E	h1E	h1E
66	63	58 57	48 47	40				0

The DIAG word is comprised of a status field and a CRC-32 field. The 2-bit status is defined by the Interlaken specification as:

- Bit 1 (Bit 33): Lane health
 - 1: Lane is healthy
 - 0: Lane is not healthy
- Bit 0 (Bit 32): Link health
 - 1: Link is healthy
 - 0: Link is not healthy

The tx_enh_frame_diag_status[1:0] input from the FPGA fabric is inserted into the Status field each time a DIAG word is created by the framing generator.

Figure 2-13: Interlaken Diagnostic Word

bx10	b011001	h000000	Status	CRC32
66	63	58 57	34 33 32 31	0

Interlaken Configuration Clocking and Bonding

The Arria 10 Interlaken PHY layer solution is scalable and has flexible data rates. You can implement a single lane link or bond up to 48 lanes together. You can choose a lane data rate up to 17.4 Gbps. You can also choose between different reference clock frequencies, depending on the PLL used to clock the transceiver. Refer to the *Arria 10 Device Datasheet* for the minimum and maximum data rates that Arria 10 transceivers can support at different speed grades.

You can use an ATX PLL or fPLL to provide the clock for the transmit channel. An ATX PLL has better jitter performance compared to an fPLL. You can use the CMU PLL to clock only the non-bonded Interlaken implementation. However, if you use the CMU PLL, you lose one RX transceiver channel.

For the multi-lane Interlaken interface, TX channels are usually bonded together to minimize the transmit skew between all bonded channels. Currently, xN bonding and a PLL feedback compensation bonding scheme are available to support a multi-lane Interlaken implementation. If the system tolerates higher channel-to-channel skew, you can choose to not bond the TX channels.

To implement bonded multi-channel Interlaken, all channels must be placed contiguously. The channels may all be placed in one bank (if not greater than six lanes) or they may span several banks.

Related Information


- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [Arria 10 Device Datasheet](#)

xN Clock Bonding Scenario

The following figure shows a xN bonding example supporting 10 lanes. Each lane is running at 12.5 Gbps. The first six TX channels reside in one transceiver bank and the other four TX channels reside in the adjacent transceiver bank. The ATX PLL provides the serial clock to the master CGB. The CGB then provides parallel and serial clocks to all of the TX channels inside the same bank and other banks through the xN clock network.

Because of xN clock network skew, the maximum achievable data rate decreases when TX channels span several transceiver banks.

Figure 2-14: 10X12.5 Gbps xN Bonding

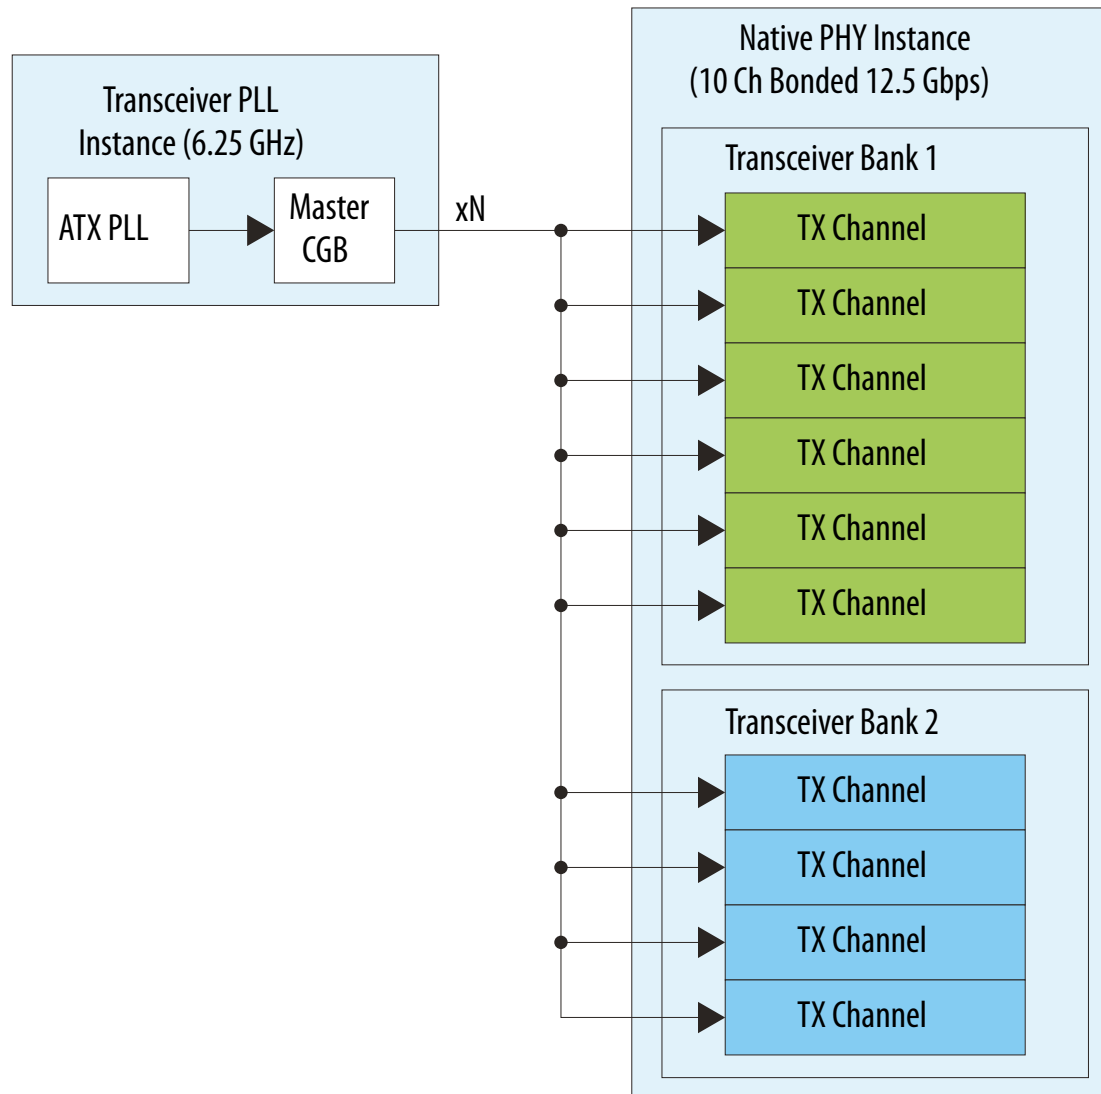**Related Information**

- **Implementing x6/xN Bonding Mode** on page 3-54
For detailed information on xN bonding limitations
- **Using PLLs and Clock Networks** on page 3-49
For more information about implementing PLLs and clocks


PLL Feedback Compensation Clock Bonding Scenario

In the following figure, each lane is running at 12.5 Gbps. The first six TX channels reside in one transceiver bank and the other four TX channels reside in the adjacent transceiver bank. The difference between feedback compensation bonding and xN bonding is that feedback compensation bonding separates the TX channels into multiple bonding groups, each group being driven by a separate x6 clock network. In feedback compensation bonding, the separate x6 clocks are in phase and frequency aligned with each other. One PLL from each transceiver bank drives the clock to master CGB and then drives

these clocks to TX channels that reside in the same bank only. In xN bonding, all channels are driven by the xN clock network. The data rate decrease imposed by xN bonding does not apply to PLL feedback compensation bonding.

The feedback to the PLL for each bonded group is the parallel clock from the master CGB, which has the same frequency as `tx_clkout`. The reference clock for the PLL must match the frequency of this feedback clock. For example, given that the Interlaken interface runs at 12.5 Gbps per lane, and PCS-PMA width is 40 bits, the only available frequency of the reference clock is 312.5 MHz.

Figure 2-15: 10X12.5 Gbps PLL Feedback Compensation Bonding

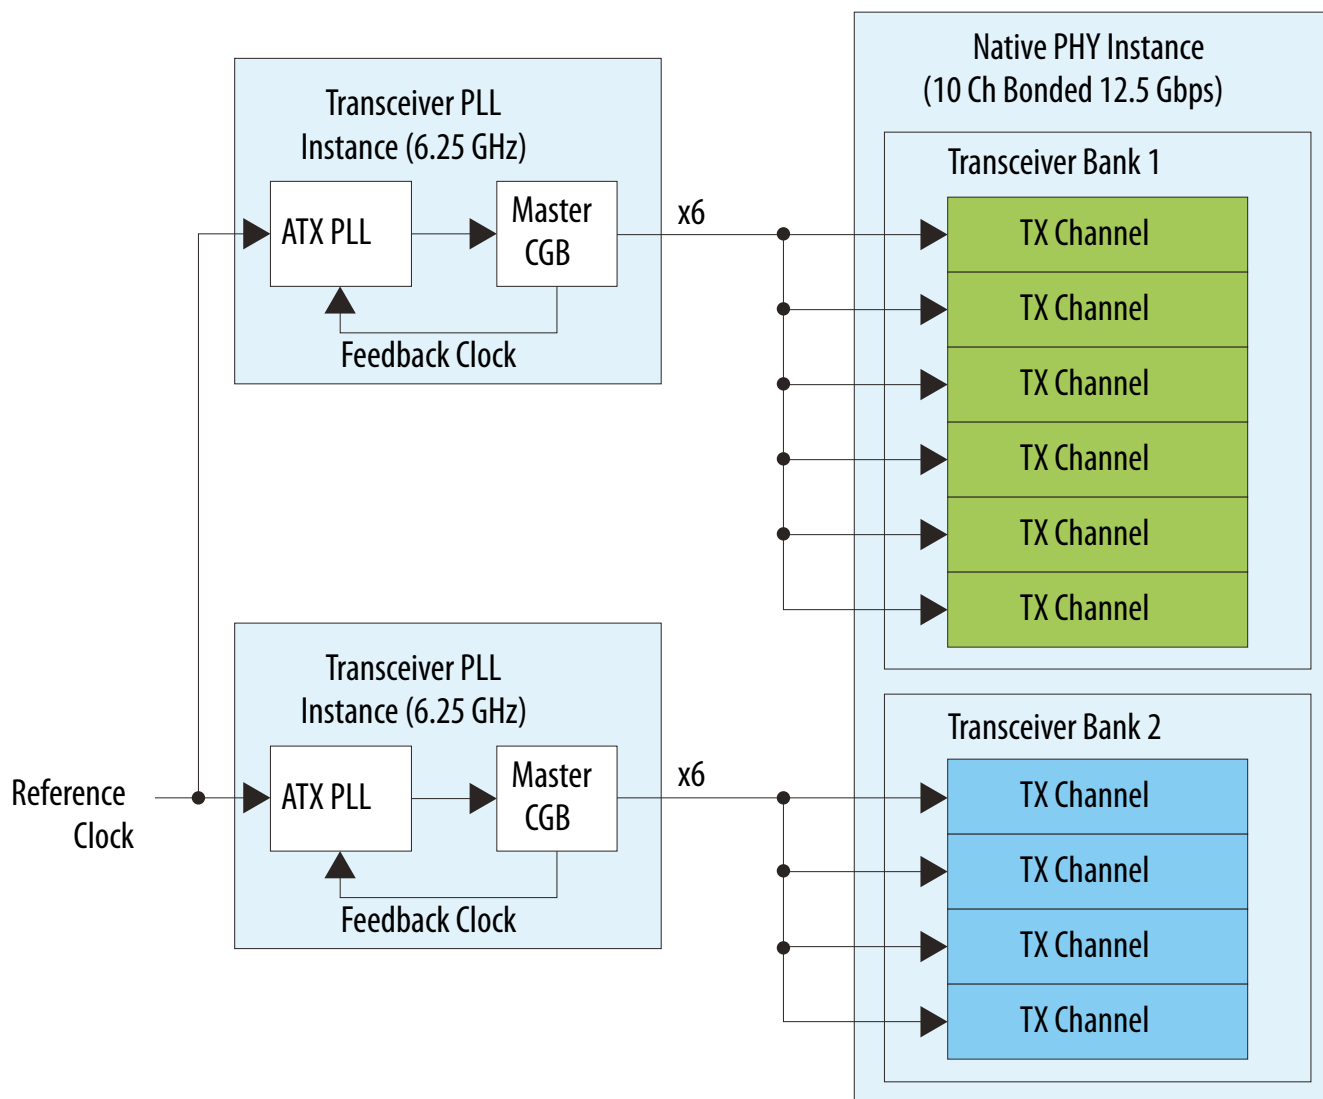

Related Information

Implementing PLL Feedback Compensation Bonding Mode on page 3-55

For other limitations on feedback compensation bonding

TX Multi-Lane Bonding and RX Multi-Lane Deskew Alignment State Machine


The Interlaken configuration sets the enhanced PCS TX and RX FIFOs in Interlaken elastic buffer mode. In this mode of operation, TX and RX FIFO control and status port signals are provided to the FPGA fabric. Connect these signals to the MAC layer as required by the protocol. Based on these FIFO status and control signals, you can implement the multi-lane deskew alignment state machine in the FPGA fabric to control the transceiver RX FIFO block. You must also implement the soft bonding logic to control the transceiver TX FIFO block.

TX FIFO Soft Bonding

The MAC layer logic and TX soft bonding logic control the writing of the Interlaken word to the TX FIFO with `tx_enh_data_valid` (functions as a TX FIFO write enable) by monitoring the TX FIFO flags (`tx_enh_fifo_full`, `tx_enh_fifo_pfull`, `tx_enh_fifo_empty`, `tx_enh_fifo_pempty`, `tx_enh_fifo_cnt`, and so forth). On the TX FIFO read side, a read enable is controlled by the frame generator. If `tx_enh_frame_burst_en` is asserted high, the frame generator reads data from the TX FIFO.


A TX FIFO pre-fill stage must be implemented to perform the TX channel soft bonding. The following figure shows the state of the pre-fill process.

Figure 2-16: TX Soft Bonding Flow

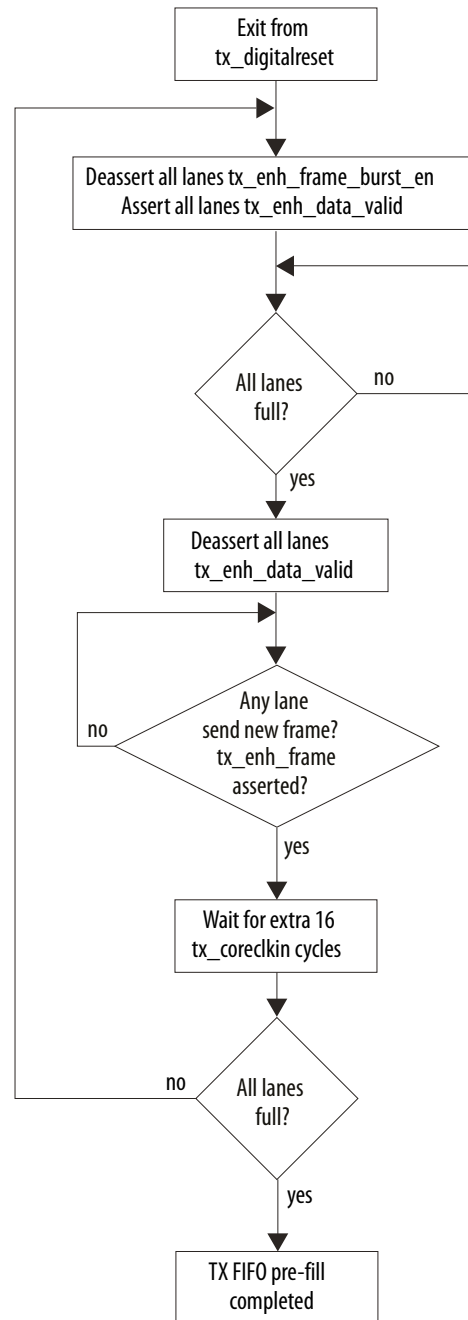

The following figure shows that after deasserting tx_digitalreset, TX soft bonding logic starts filling the TX FIFO until all lanes are full.

Figure 2-17: TX FIFO Pre-fill (6-lane Interface)

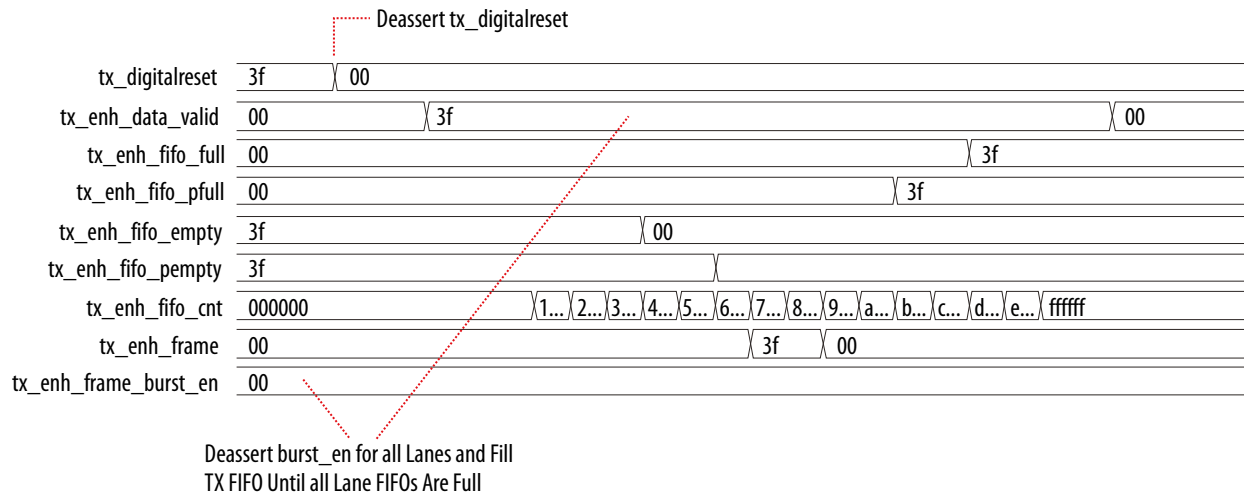


After the TX FIFO pre-fill stage completes, the transmit lanes synchronize and the MAC layer begins to send valid data to the transceiver's TX FIFO. You must never allow the TX FIFO to overflow or underflow. If it does, you must reset the transceiver and repeat the TX FIFO pre-fill stage.

For a single lane Interlaken implementation, TX FIFO soft bonding is not required. You can begin sending an Interlaken word to the TX FIFO after `tx_digitalreset` deasserts.

The following figure shows the MAC layer sending valid data to the Native PHY after the pre-fill stage. `tx_enh_frame_burst_en` is asserted, allowing the frame generator to read data from the TX FIFO. The TX MAC layer can now control `tx_enh_data_valid` and write data to the TX FIFO based on the FIFO status signals.

Figure 2-18: MAC Sending Valid Data (6-lane Interface)

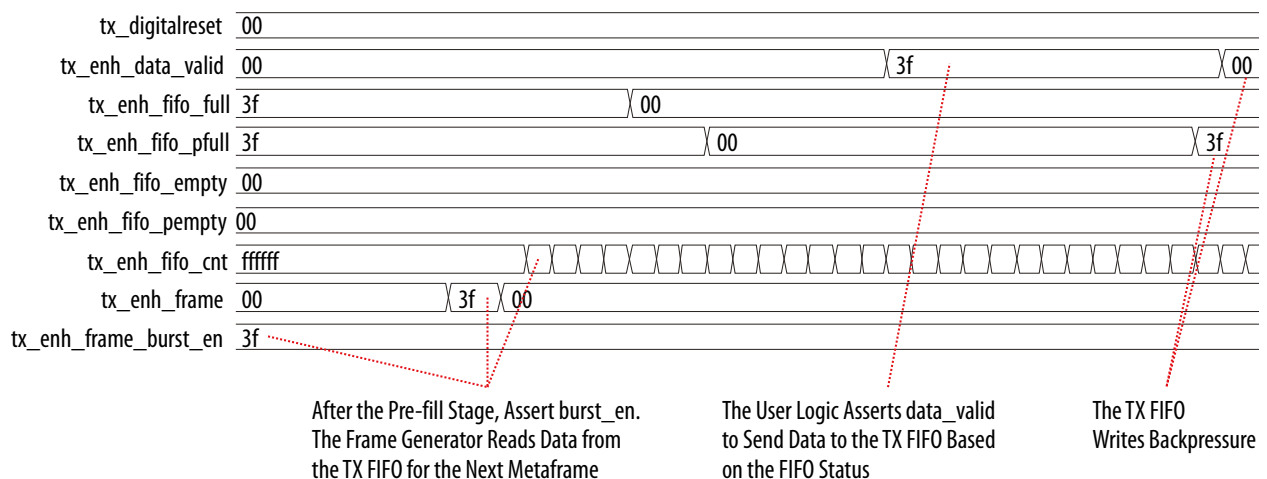


RX Multi-lane FIFO Deskew State Machine

Add deskew logic at the receiver side to eliminate the lane-to-lane skew created at the transmitter of the link partner, PCB, medium, and local receiver PMA.

Implement a multi-lane alignment deskew state machine to control the RX FIFO operation based on available RX FIFO status flags and control signals.


Figure 2-19: State Flow of the RX FIFO Deskew

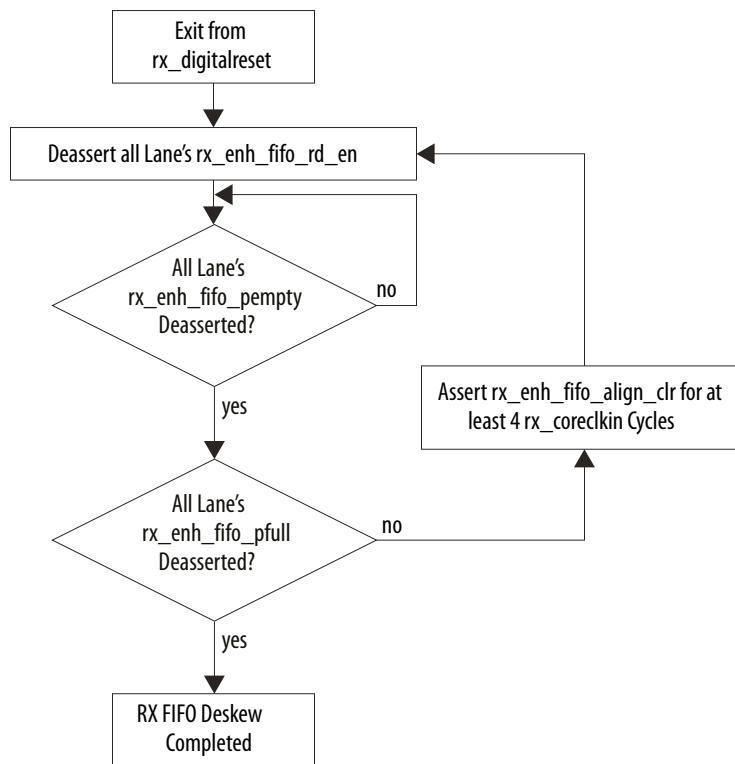

Each lane's `rx_enh_fifo_rd_en` should remain deasserted before the RX FIFO deskew is completed. After frame lock is achieved (indicated by the assertion of `rx_enh_frame_lock`; this signal is not shown in the above state flow), data is written into the RX FIFO after the first alignment word (SYNC word) is found on that channel. Accordingly, the RX FIFO partially empty flag (`rx_enh_fifo_pempty`) of that channel is asserted. The state machine monitors the `rx_enh_fifo_pempty` and `rx_enh_fifo_pfull` signals of all channels. If the `rx_enh_fifo_pempty` signals from all channels deassert before any channels `rx_enh_fifo_pfull` assert, which implies the SYNC word has been found on all lanes of the link, the MAC layer can start reading from all the RX FIFO by asserting `rx_enh_fifo_rd_en` simultaneously. Otherwise, if the `rx_enh_fifo_pfull` signal of any channel asserts high before the `rx_enh_fifo_pempty` signals deassertion on all channels, the state machine needs to flush the RX FIFO by asserting `rx_enh_fifo_align_clr` high for 4 cycles and repeating the soft deskew process.

The following figure shows one RX deskew scenario. In this scenario, all of the RX FIFO partially empty lanes are deasserted while the pfull lanes are still deasserted. This indicates the deskew is successful and the FPGA fabric starts reading data from the RX FIFO.

Figure 2-20: RX FIFO Deskew

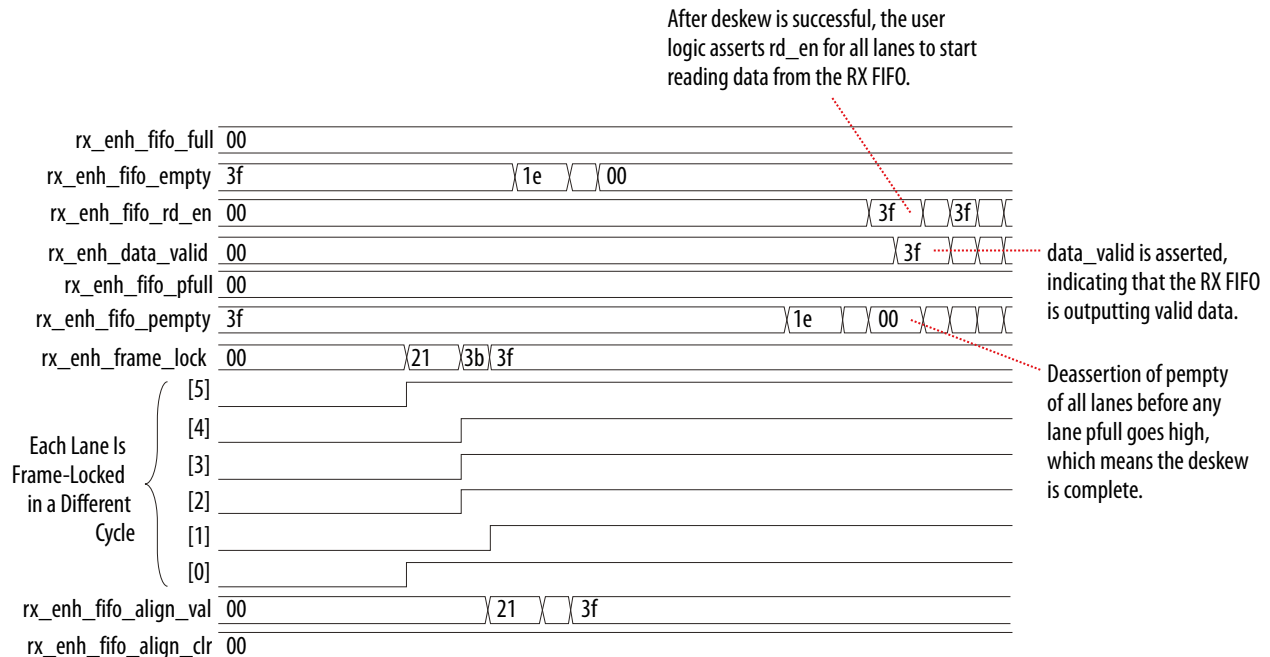


How to Implement Interlaken in Arria 10 Transceivers

Before you begin

You should be familiar with the Interlaken protocol, Enhanced PCS and PMA architecture, PLL architecture, and the reset controller before implementing the Interlaken protocol PHY layer.

1. Instantiate the **Arria 10 Transceiver Native PHY IP** from the IP Catalog. Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for more details.
2. Select **Interlaken** from the **Transceiver configuration rules** list located under **Datapath Options**, depending on which protocol you are implementing.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for Interlaken](#). Or you can use the protocol presets described in [Presets](#). You can then modify the settings to meet your specific requirements.
4. Click **Generate** to generate the Native PHY IP (this is your RTL file).

Figure 2-21: Signals and Ports of Native PHY IP for Interlaken

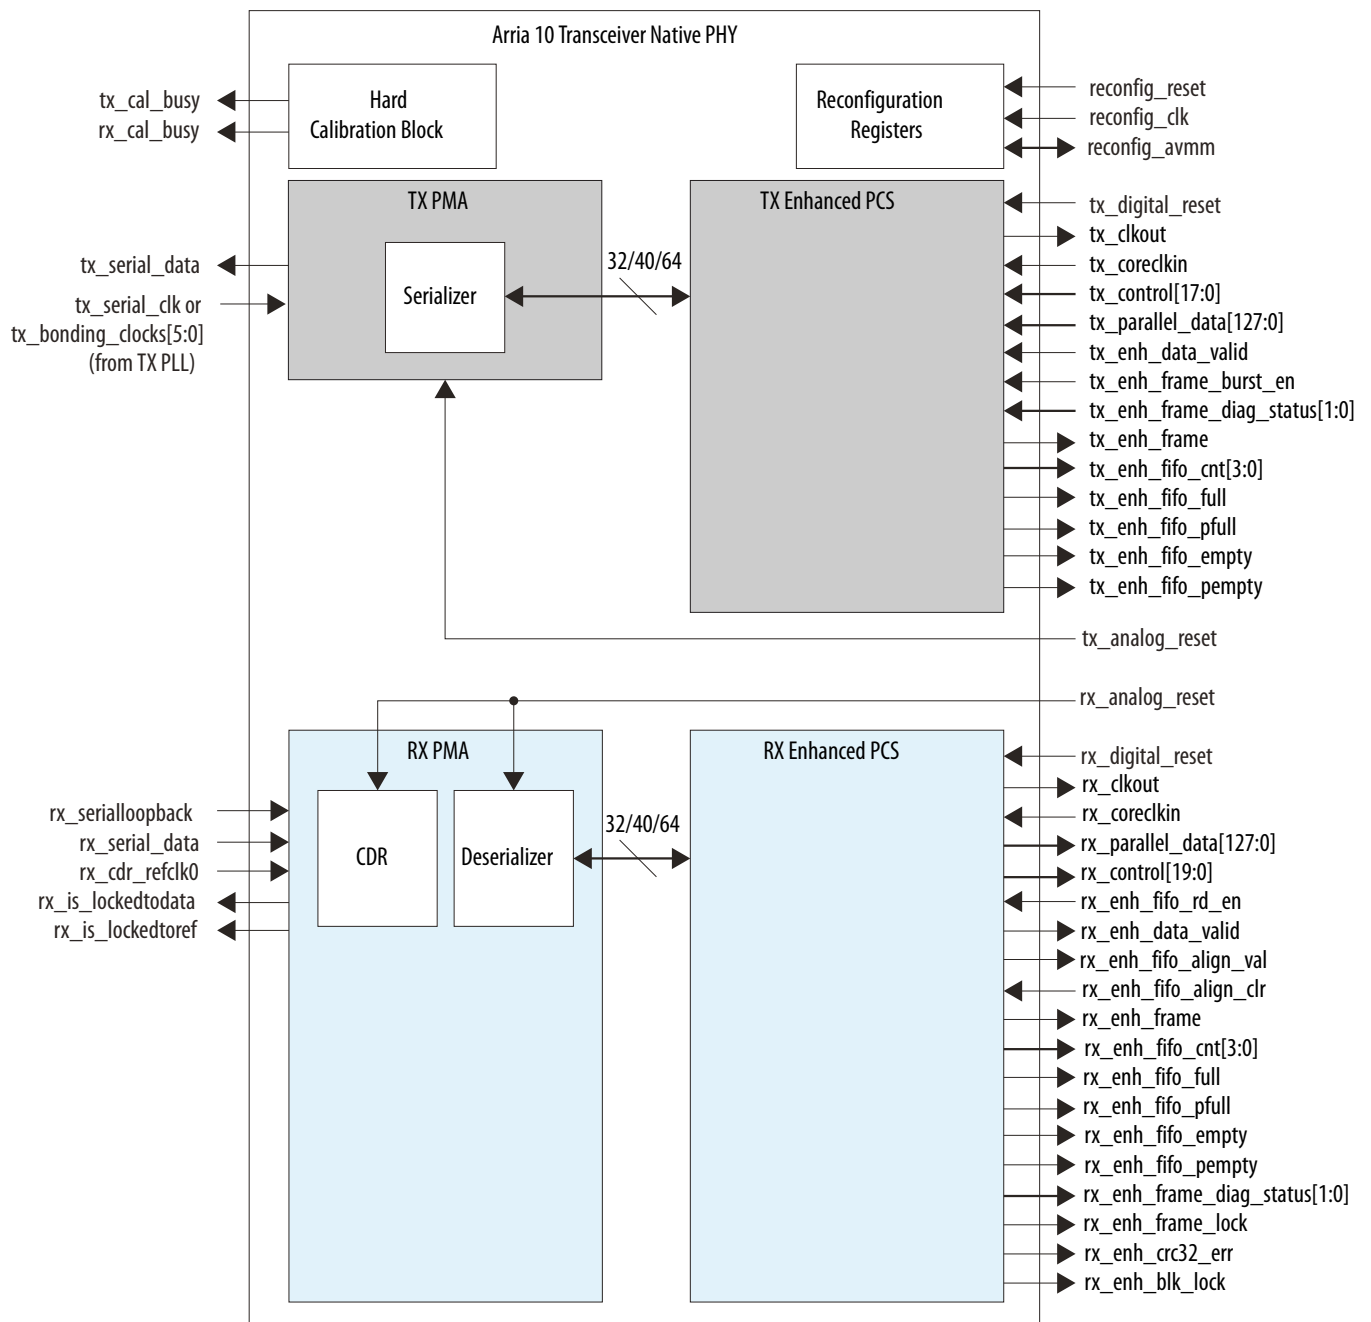


5. Instantiate and configure your PLL.
6. Create a transceiver reset controller. You can use your own reset controller or use the Native PHY Reset Controller IP.
7. Implement a TX soft bonding logic and an RX multi-lane alignment deskew state machine using fabric logic resources for multi-lane Interlaken implementation.
8. Connect the Native PHY IP to the PLL IP and the reset controller.

Figure 2-22: Connection Guidelines for an Interlaken PHY Design

This figure shows the connection of all these blocks in the Interlaken PHY design example available on the Altera Wiki website.

For the blue blocks, Altera provides an IP core. The gray blocks are the TX soft bonding logic and RX deskew logic that are included in the design example. The white blocks are your test logic or MAC layer logic.

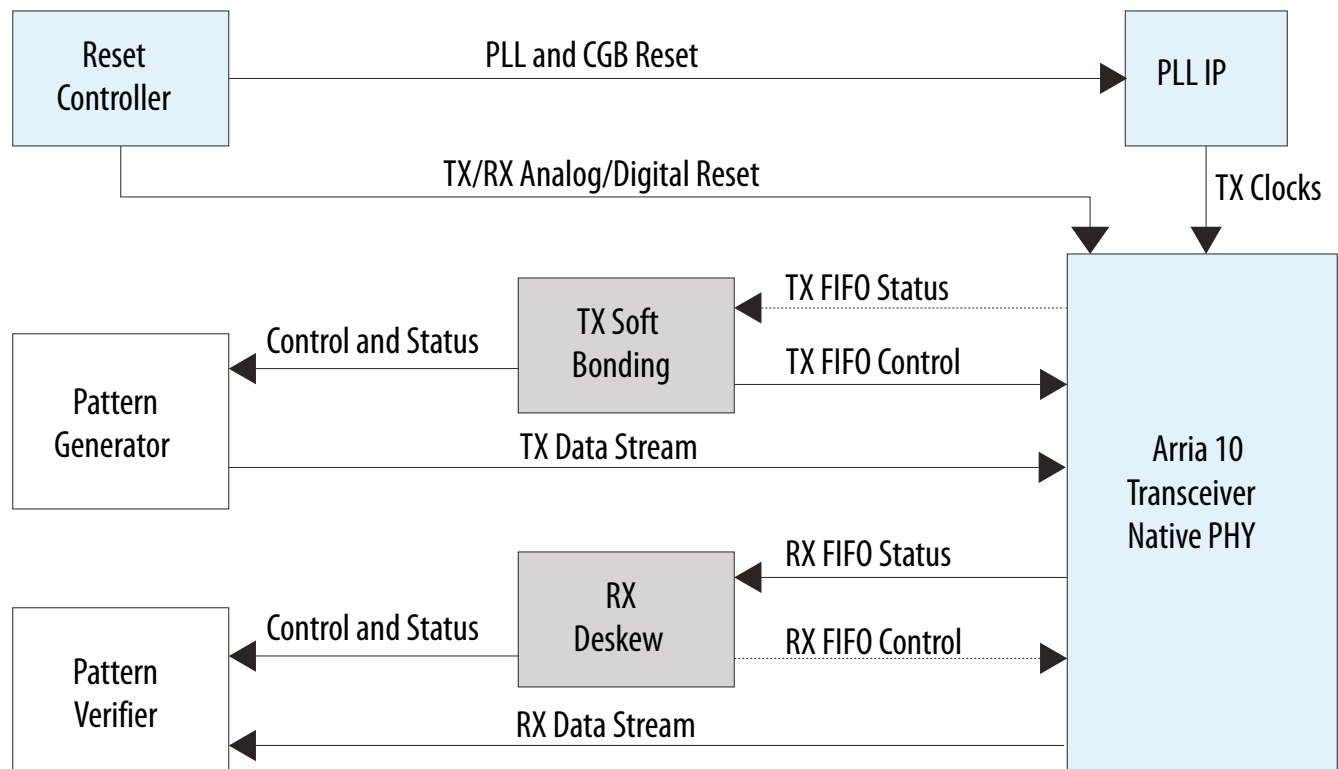

9. Simulate your design to verify its functionality.

Figure 2-23: 24 Lanes Bonded Interlaken Link, TX Direction

To show more details, three different time segments are shown with the same zoom level.


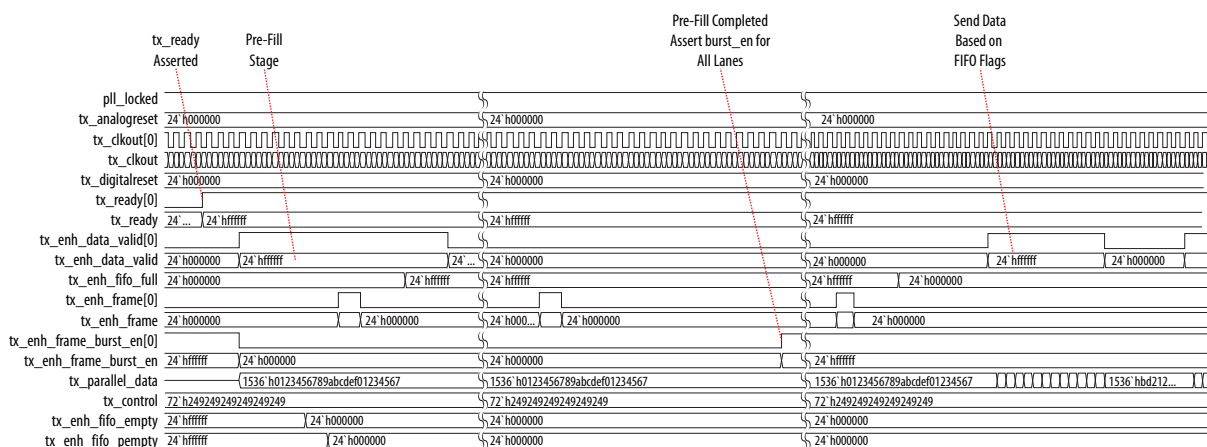


Figure 2-24: 24 Lanes Bonded Interlaken Link, RX Direction

To show more details, three different time segments are shown with different zoom level.

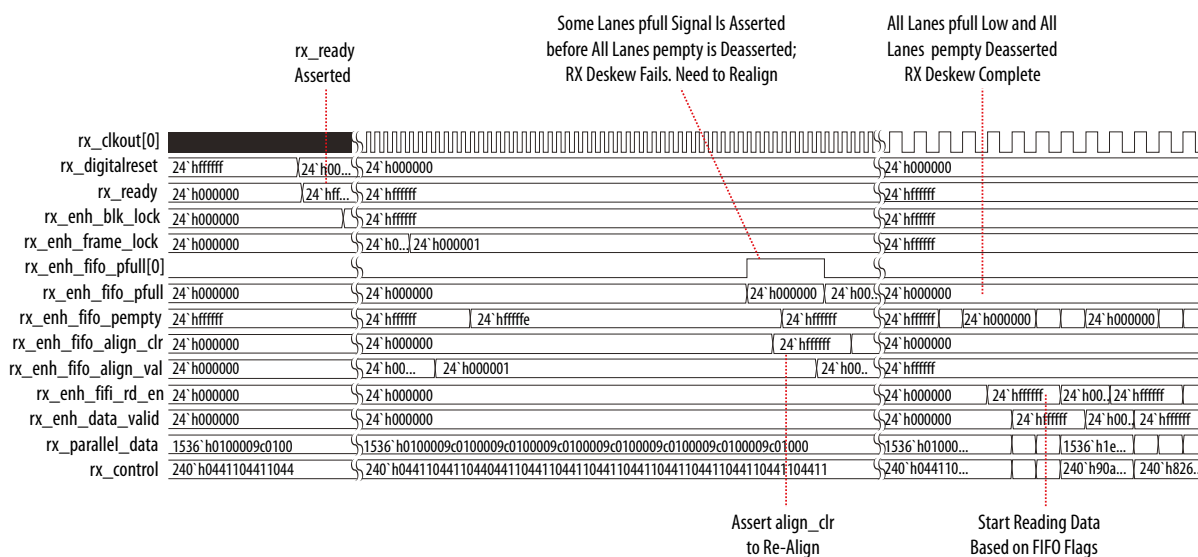

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18
For more information about Enhanced PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Enhanced PCS Ports](#) on page 2-50
For detailed information about the available ports in the Interlaken protocol.

Design Example

Altera provides a PHY layer-only design example to help you integrate an Interlaken PHY into your complete design.

The TX soft bonding logic is included in the design example. Altera recommends that you integrate these two modules into your design.

The *Interlaken Design Example* is available on the Arria 10 Transceiver PHY Design Examples Wiki page.

Note: The design examples on the Wiki page provide useful guidance for developing your own designs, but they are not guaranteed by Altera. Use them with caution.

Related Information

[Interlaken Design Example](#)

Native PHY IP Parameter Settings for Interlaken

Table 2-67: General and Datapath Parameters

Parameter	Value
Message level for rule violations	error warning
Transceiver configuration rules	Interlaken
PMA configuration rules	basic
Transceiver mode	TX / RX Duplex TX Simplex RX Simplex
Number of data channels	1 to 96
Data rate	Up to 17.4 Gbps (Depending on Enhanced PCS to PMA interface width selection)
Enable datapath and interface reconfiguration	On / Off
Enable simplified data interface	On / Off
Provide separate interface for each channel	On / Off

Table 2-68: TX PMA Parameters

Parameter	Value
TX channel bonding mode	Not bonded PMA-only bonding PMA and PCS bonding
PCS TX channel bonding master	If TX channel bonding mode is set to PMA and PCS bonding, then: Auto, 0, 1, 2, 3
Actual PCS TX channel bonding master	If TX channel bonding mode is set to PMA and PCS bonding, then: 0, 1, 2, 3
TX local clock division factor	1, 2, 4, 8

Parameter	Value
Number of TX PLL clock inputs per channel	1, 2, 3, 4
Initial TX PLL clock input selection	0
Enable tx_pma_clkout port	On / Off
Enable tx_pma_div_clkout port	On / Off
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable tx_pma_elecidle port	On / Off
Enable tx_pma_qpipullup port (QPI)	Off
Enable tx_pma_qpipulldn port (QPI)	Off
Enable tx_pma_txdetectrx port (QPI)	Off
Enable tx_pma_rxfound port (QPI)	Off
Enable rx_serialpbken port	On / Off

Table 2-69: RX PMA Parameters

Parameter	Value
Number of CDR reference clocks	1 to 5
Selected CDR reference clock	0 to 4
Selected CDR reference clock frequency	Select legal range defined by the Quartus II software
PPM detector threshold	100, 300, 500, 1000
CTLE adaptation mode	manual, triggered
DFE adaptation mode	continuous, triggered, manual, disabled
Number of fixed dfe taps	3, 7
Enable rx_pma_clkout port	On / Off
Enable rx_pma_div_clkout port	On / Off
rx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable rx_pma_clkslip port	On / Off

Parameter	Value
Enable rx_pma_qpipulldn port (QPI)	Off
Enable rx_is_lockedtodata port	On / Off
Enable rx_is_lockedtoref port	On / Off
Enable rx_set_locktodata and rx_set_locktoref ports	On / Off
Enable rx_serialpbken port	On / Off
Enable PRBS verifier control and status ports	On / Off

Table 2-70: Enhanced PCS Parameters

Parameter	Value
Enhanced PCS / PMA interface width	32, 40, 64
FPGA fabric / Enhanced PCS interface width	67
Enable 'Enhanced PCS' low latency mode	Off
Enable RX/TX FIFO double-width mode	Off
TX FIFO mode	Interlaken
TX FIFO partially full threshold	8 to 15
TX FIFO partially empty threshold	1 to 8
Enable tx_enh_fifo_full port	On / Off
Enable tx_enh_fifo_pfull port	On / Off
Enable tx_enh_fifo_empty port	On / Off
Enable tx_enh_fifo_pempty port	On / Off
RX FIFO mode	Interlaken
RX FIFO partially full threshold	from 10-29 (no less than pempty_threshold+8)
RX FIFO partially empty threshold	2 to 10
Enable RX FIFO alignment word deletion (Interlaken)	On / Off

Parameter	Value
Enable RX FIFO control word deletion (Interlaken)	On / Off
Enable rx_enh_data_valid port	On
Enable rx_enh_fifo_full port	On / Off
Enable rx_enh_fifo_pfull port	On / Off
Enable rx_enh_fifo_empty port	On / Off
Enable rx_enh_fifo_pempty port	On / Off
Enable rx_enh_fifo_del port (10GBASE-R)	Off
Enable rx_enh_fifo_insert port (10GBASE-R)	Off
Enable rx_enh_fifo_rd_en port	On
Enable rx_enh_fifo_align_val port (Interlaken)	On / Off
Enable rx_enh_fifo_align_clr port (Interlaken)	On

Table 2-71: Interlaken Frame Generator Parameters

Parameter	Value
Enable Interlaken frame generator	On
Frame generator metaframe length	5 to 8192
Enable frame generator burst control	On
Enable tx_enh_frame port	On
Enable tx_enh_frame_diag_status port	On
Enable tx_enh_frame_burst_en port	On

Table 2-72: Interlaken Frame Synchronizer Parameters

Parameter	Value
Enable Interlaken frame synchronizer	On
Frame synchronizer metaframe length	5 to 8192

Parameter	Value
Enable rx_enh_frame port	On
Enable rx_enh_frame_lock port	On / Off
Enable rx_enh_frame_diag_status port	On / Off

Table 2-73: Interlaken CRC-32 Generator and Checker Parameters

Parameter	Value
Enable Interlaken TX CRC-32 generator	On
Enable Interlaken TX CRC-32 generator error insertion	On / Off
Enable Interlaken RX CRC-32 checker	On
Enable rx_enh_crc32_err port	On / Off

Table 2-74: 10GBASE-R BER Checker Parameters

Parameter	Value
Enable rx_enh_highber port (10GBASE-R)	Off
Enable rx_enh_highber_clr_cnt port (10GBASE-R)	Off
Enable rx_enh_clr_errblk_count port (10GBASE-R & FEC)	Off

Table 2-75: 64b / 66b Encoder and Decoder Parameters

Parameter	Value
Enable TX 64b/66b encoder	Off
Enable RX 64b/66b decoder	Off
Enable TX sync header error insertion	Off

Table 2-76: Scrambler and Descrambler Parameters

Parameter	Value
Enable TX scrambler (10GBASE-R / Interlaken)	On
TX scrambler seed (10GBASE-R / Interlaken)	0x1 to 0x3FFFFFFFFFFFFFFF
Enable RX descrambler (10GBASE-R / Interlaken)	On

Table 2-77: Interlaken Disparity Generator and Checker Parameters

Parameter	Value
Enable Interlaken TX disparity generator	On
Enable Interlaken RX disparity checker	On
Enable Interlaken TX random disparity bit	On / Off

Table 2-78: Block Sync Parameters

Parameter	Value
Enable RX block synchronizer	On
Enable rx_enh_blk_lock port	On / Off

Table 2-79: Gearbox Parameters

Parameter	Value
Enable TX data bitslip	Off
Enable TX data polarity inversion	On / Off
Enable RX data bitslip	Off
Enable RX data polarity inversion	On / Off
Enable tx_enh_bitslip port	Off
Enable rx_bitslip port	Off

Table 2-80: KR-FEC Parameters

Parameter	Value
Enable RX KR-FEC error marking	Off
Error marking type	N/A
Enable KR-FEC TX error insertion	Off
KR-FEC TX error insertion spacing	N/A
Enable tx_enh_frame port	Off
Enable rx_enh_frame port	Off
Enable rx_enh_frame_diag_status port	Off

Table 2-81: Dynamic Reconfiguration Parameters

Parameter	Value
Enable dynamic reconfiguration	On / Off
Share reconfiguration interface	On / Off
Enable Altera Debug Master Endpoint	On / Off
Enable capability registers	On / Off
Set user-defined IP identifier:	0 to 255
Enable control and status registers	On / Off
Enable prbs soft accumulators	On / Off

Table 2-82: Configuration Files Parameters

Parameter	Value
Configuration file prefix	—
Generate System Verilog package file	On / Off
Generate C header file	On / Off
Generate MIF (Memory Initialization File)	On / Off

Table 2-83: Generation Options Parameters

Parameter	Value
Generate parameter documentation file	On / Off

Ethernet

The Ethernet standard comprises many different PHY standards with variations in signal transmission medium and data rates. The 1G/10GbE and 10GBASE-KR PHY IP Core enables Ethernet connectivity at 1 Gbps and 10 Gbps over backplanes. The 10GBASE-KR PHY IP is also known as the Backplane Ethernet PHY IP. It includes link training and auto negotiation to support the IEEE Backplane Ethernet standard.

Data Rate	Transceiver Configuration Rule/IP
1G	- Gigabit Ethernet - Gigabit Ethernet 1588
10G	10GBASE-R 10GBASE-R 1588 10GBASE-R with KR FEC 10GBASE-KR PHY IP
1G/10G	1G/10G Ethernet PHY IP

Gigabit Ethernet (GbE) and GbE with IEEE 1588v2

IEEE 802.3 defines Gigabit Ethernet as an intermediate (or transition) layer that interfaces various physical media with the media access control (MAC) in a Gigabit Ethernet system. Gigabit Ethernet PHY shields the MAC layer from the specific nature of the underlying medium and is divided into three sub-layers shown in the following figure.

Figure 2-25: GbE PHY Connection to IEEE802.3 MAC and RS


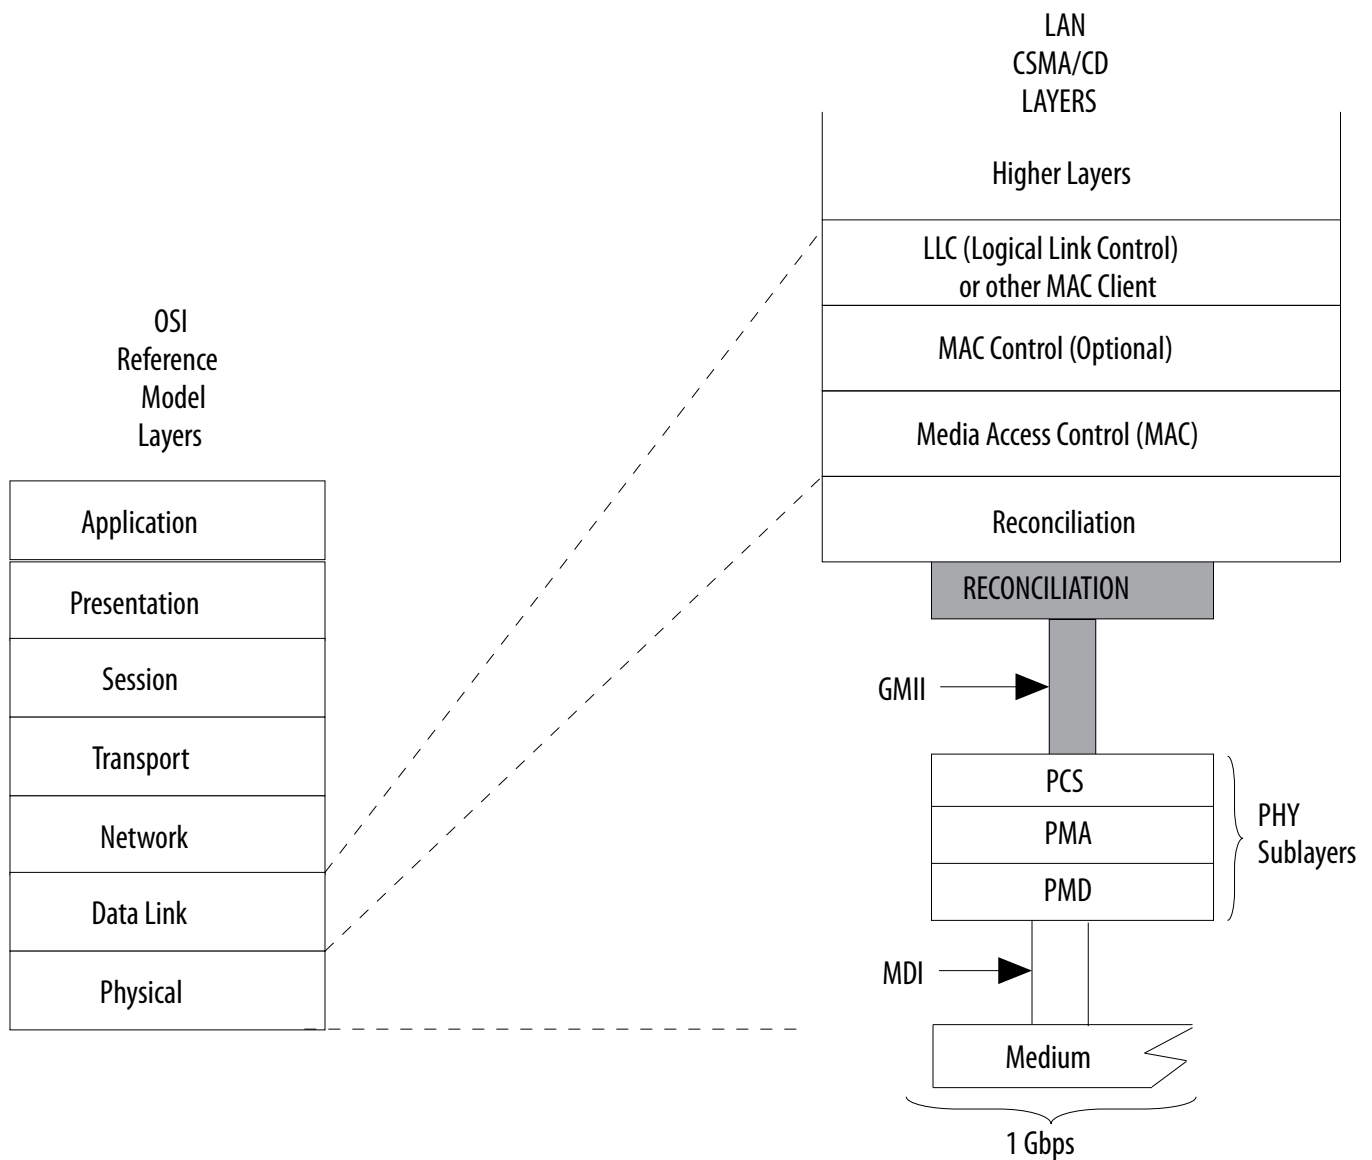


Figure 2-26: Transceiver Channel Datapath and Clocking at 1250 Mbps for GbE, GbE with IEEE 1588v2

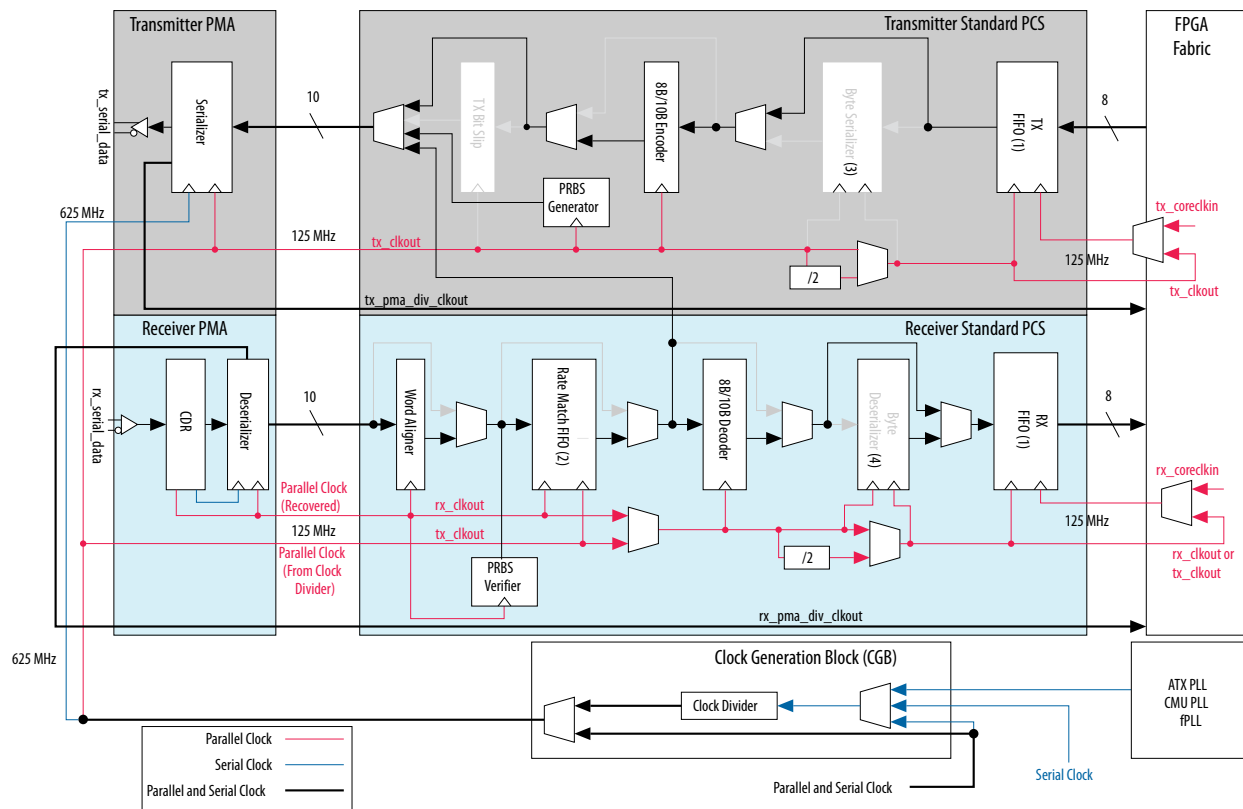

Notes:

1. This block is set in low latency mode for GbE and register_fifo mode for GbE with IEEE 1588v2.
2. The rate match FIFO of the hard PCS is disabled for GbE with IEEE 1588v2 because it is not able to achieve deterministic latency. It is also disabled for Triple-speed Ethernet (TSE) configurations that require an auto-negotiation sequence. The insertion/deletion operation could break the auto-negotiation functionality due to the rate matching of different frequency PPM scenarios. The soft rate match FIFO is constructed in the GbE Serial Gigabit Media Independent Interface (SGMII) IP core.
3. The byte serializer can be enabled or disabled.
4. The byte deserializer can be enabled or disabled.

Note: The transceivers do not have built-in support for other PCS functions; for example, the auto-negotiation state machine, collision-detect, and carrier-sense. If required, you must implement these functions in the FPGA fabric or external circuits.

GbE with IEEE 1588v2

GbE with IEEE 1588v2 provides a standard method to synchronize devices on a network with submicro-second precision. To improve performance, the protocol synchronizes slave clocks to a master clock so that events and time stamps are synchronized in all devices. The protocol enables heterogeneous systems that include clocks of various inherent precision, resolution, and stability to synchronize to a grandmaster clock.

Related Information

Triple-Speed Ethernet MegaCore Function User Guide.

For more information about the IEEE 1588v2 implementation in GbE PHY and MAC, and design examples.

8B/10B Encoding for GbE, GbE with IEEE 1588v2


The 8B/10B encoder clocks 8-bit data and 1-bit control identifiers from the transmitter phase compensation FIFO and generates 10-bit encoded data. The 10-bit encoded data is sent to the PMA.

The IEEE 802.3 specification requires GbE to transmit idle ordered sets (/I/) continuously and repetitively whenever the GMII is idle. This transmission ensures that the receiver maintains bit and word synchronization whenever there is no active data to be transmitted.

For the GbE protocol, the transmitter replaces any /Dx.y/ following a /K28.5/ comma with either a /D5.6/ (/I1/ ordered set) or a /D16.2/ (/I2/ ordered set), depending on the current running disparity. The exception is when the data following the /K28.5/ is /D21.5/ (/C1/ ordered set) or /D2.2/ (/C2/) ordered set. If the running disparity before the /K28.5/ is positive, an /I1/ ordered set is generated. If the running disparity is negative, a /I2/ ordered set is generated. The disparity at the end of a /I1/ is the opposite of that at the beginning of the /I1/. The disparity at the end of a /I2/ is the same as the beginning running disparity immediately preceding transmission of the idle code. This sequence ensures a negative running disparity at the end of an idle ordered set. A /Kx.y/ following a /K28.5/ does not get replaced.

Note: /D14.3/, /D24.0/, and /D15.8/ are replaced by /D5.6/ or /D16.2/ (for I1 and I2 ordered sets). D21.5 (/C1/) is not replaced.

Figure 2-27: Idle Ordered-Set Generation Example

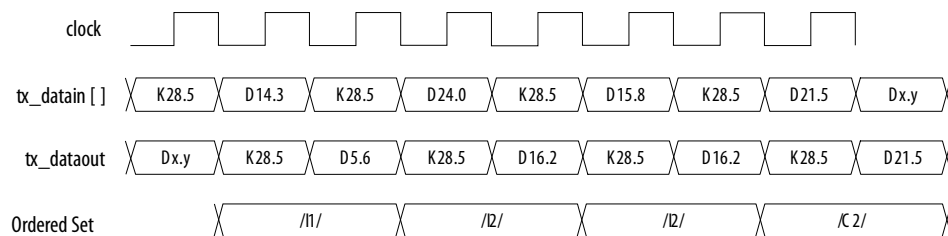

Related Information


8B/10B Encoder on page 5-39

Reset Condition for 8B/10B Encoder in GbE, GbE with IEEE 1588v2

After deassertion of tx_digitalreset, the transmitters automatically transmit at least three /K28.5/ comma code groups before transmitting user data on the tx_parallel_data port. This transmission could affect the synchronization state machine behavior at the receiver.

Depending on when you start transmitting the synchronization sequence, there could be an even or odd number of /Dx.y/ code groups transmitted between the last of the three automatically sent /K28.5/ code groups and the first /K28.5/ code group of the synchronization sequence. If there is an even number of /Dx.y/code groups received between these two /K28.5/ code groups, the first /K28.5/ code group of the synchronization sequence begins at an odd code group boundary. The synchronization state machine treats this as an error condition and goes into the loss of sync state.

Figure 2-28: Reset Condition

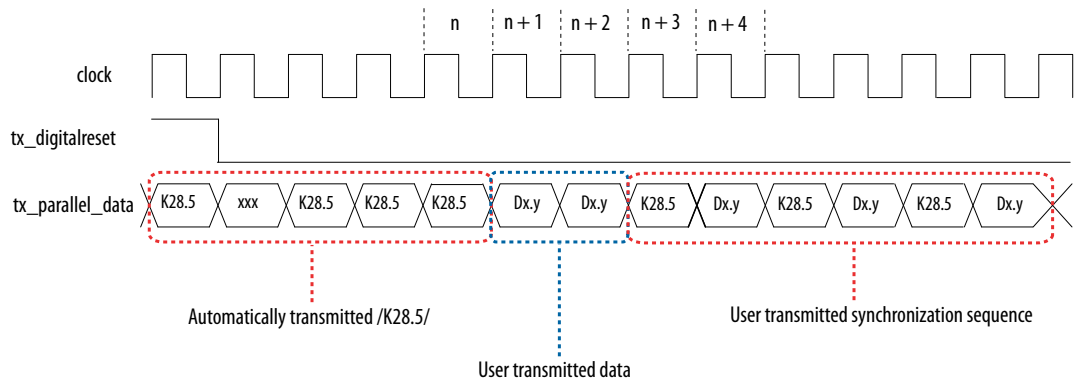

Word Alignment for GbE, GbE with IEEE 1588v2

The word aligner for the GbE and GbE with IEEE 1588v2 protocols is configured in automatic synchronization state machine mode. The Quartus II software automatically configures the synchronization state machine to indicate synchronization when the receiver receives three consecutive synchronization ordered sets. A synchronization ordered set is a /K28.5/ code group followed by an odd number of valid /Dx.y/ code groups. The fastest way for the receiver to achieve synchronization is to receive three continuous {/K28.5/, /Dx.y/} ordered sets.

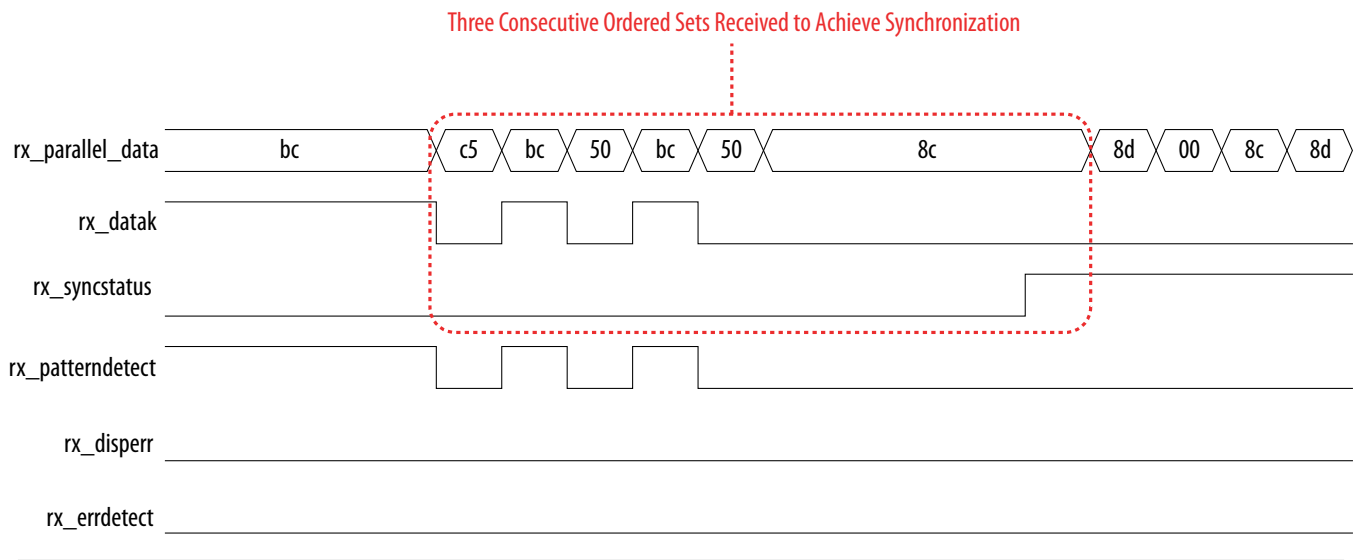
The GbE PHY IP core signals receiver synchronization status on the rx_syncstatus port of each channel. A high on the rx_syncstatus port indicates that the lane is synchronized; a low on the rx_syncstatus port indicates that the lane has fallen out of synchronization. The receiver loses synchronization when it detects three invalid code groups separated by less than three valid code groups or when it is reset.

Table 2-84: Synchronization State Machine Parameter Settings for GbE

Synchronization State Machine Parameter	Setting
Number of word alignment patterns to achieve sync	3
Number of invalid data words to lose sync	3
Number of valid data words to decrement error count	3

The following figure shows rx_syncstatus high when three consecutive ordered sets are sent through tx_parallel_data.


Figure 2-29: rx_syncstatus High

**Related Information**[Word Aligner](#) on page 5-42**8B/10B Decoding for GbE, GbE with IEEE 1588v2**

The 8B/10B decoder takes a 10-bit encoded value as input and produces an 8-bit data value and 1-bit control value as output.

Figure 2-30: Decoding for GbE

Dx.y(0x8d), Dx.y(0xa4), K28.5(0xbc), and Dx.y(0x50) are received at rx_parallel_data. /K28.5/ is set as the word alignment pattern. rx_patterndetect goes high whenever it detects /K28.5/(0xbc). rx_data is high when bc is received, indicating that the decoded word is a control word. Otherwise, rx_data is low. rx_runningdisp is high for 0x8d, indicating that the decoded word has negative disparity and 0xa4 has positive disparity.

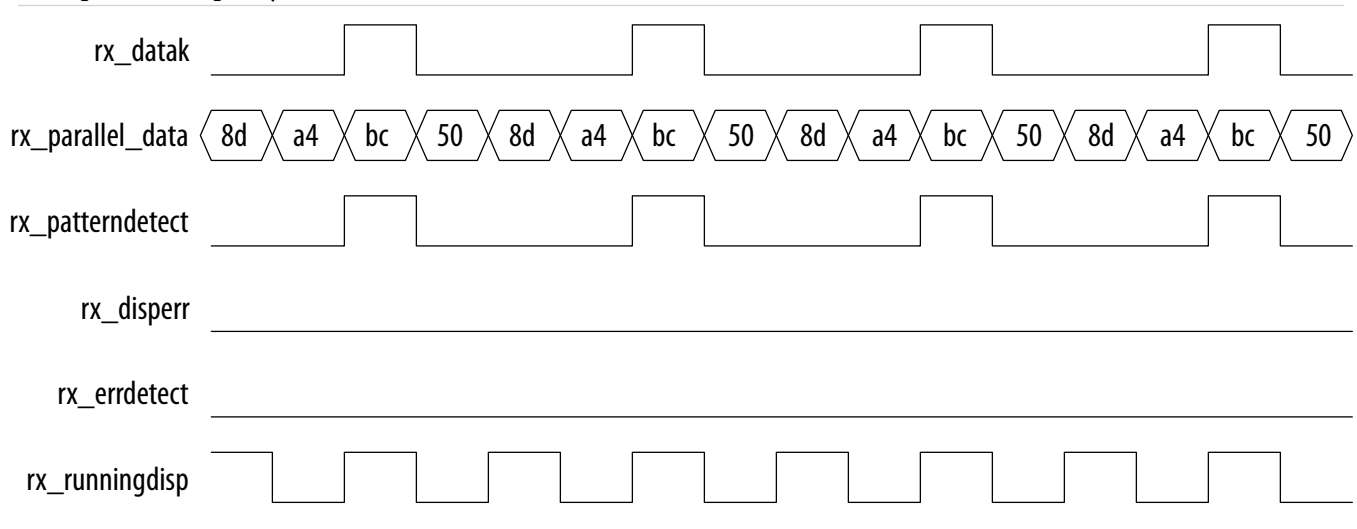

Related Information**8B/10B Decoder** on page 5-50**Rate Match FIFO for GbE**


The rate match FIFO compensates frequency Part-Per-Million (PPM) differences between the upstream transmitter and the local receiver reference clock up to 125 MHz $\pm$ 100 ppm difference.

Note: 200 ppm total is only true if calculated as (125 MHz + 100 ppm) - (125 MHz - 100 ppm) = 200 ppm. By contrast, (125 MHz + 0 ppm) - (125 MHz - 200 ppm) is out of specification.


The GbE protocol requires the transmitter to send idle ordered sets /I1/ (/K28.5/D5.6/) and /I2/ (/K28.5/D16.2/) during inter-packet gaps (IPG) adhering to the rules listed in the IEEE 802.3-2008 specification.

The rate match operation begins after the synchronization state machine in the word aligner indicates synchronization is acquired by driving the rx_syncstatus signal high. The rate matcher deletes or inserts both symbols /K28.5/ and /D16.2/ of the /I2/ ordered sets as a pair in the operation to prevent the rate match FIFO from overflowing or underflowing. The rate match operation can insert or delete as many /I2/ ordered sets as necessary.

The following figure shows a rate match deletion operation example where three symbols must be deleted. Because the rate match FIFO can only delete /I2/ ordered sets, it deletes two /I2/ ordered sets (four symbols deleted).

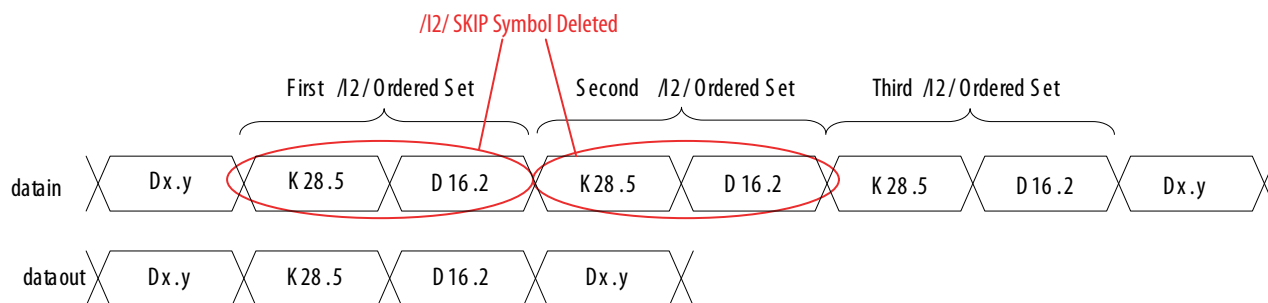Figure 2-31: Rate Match FIFO Deletion


The following figure shows an example of rate match FIFO insertion in the case where one symbol must be inserted. Because the rate match FIFO can only insert /I2/ ordered sets, it inserts one /I2/ ordered set (two symbols inserted).

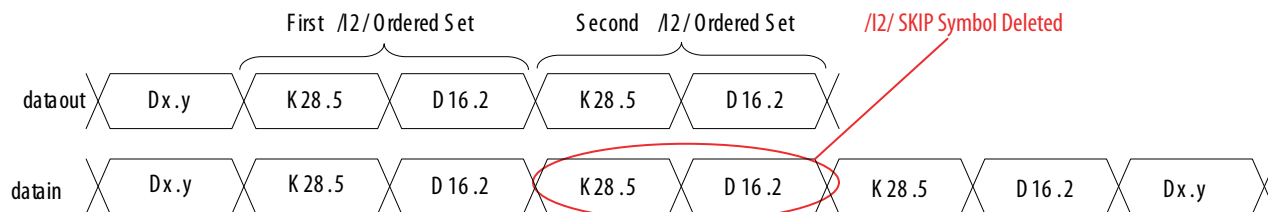Figure 2-32: Rate Match FIFO Insertion

rx_std_rmfifo_full and rx_std_rmfifo_empty are forwarded to the FPGA fabric to indicate rate match FIFO full and empty conditions.


The rate match FIFO does not delete code groups to overcome a FIFO full condition. It asserts the `rx_std_rmfifo_full` flag for at least two recovered clock cycles to indicate rate match FIFO full. The following figure shows the rate match FIFO full condition when the write pointer is faster than the read pointer.

Figure 2-33: Rate Match FIFO Full Condition

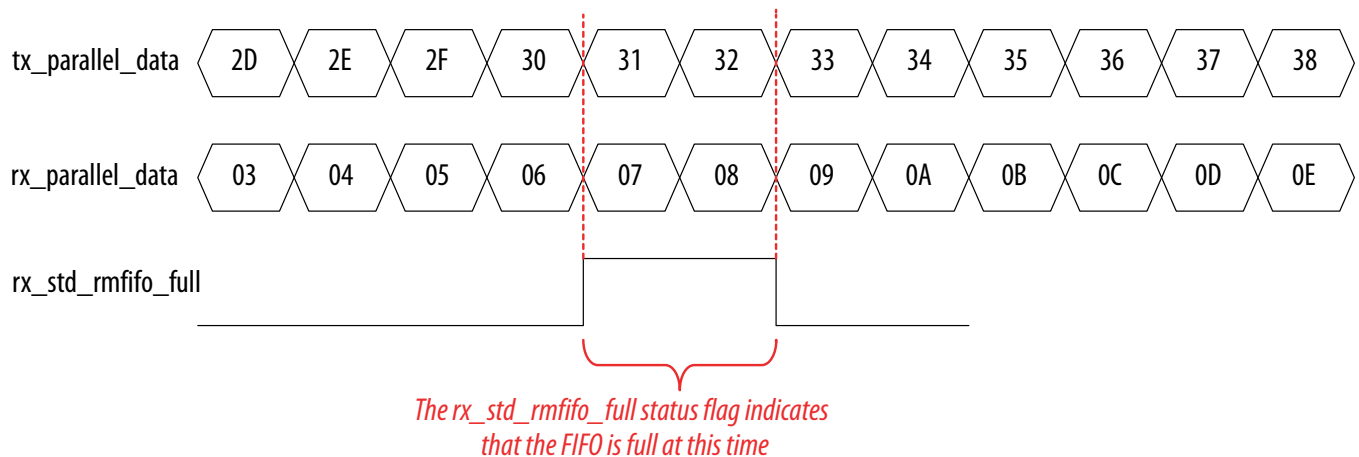

The rate match FIFO does not insert code groups to overcome the FIFO empty condition. It asserts the `rx_std_rmfifo_empty` flag for at least two recovered clock cycles to indicate that the rate match FIFO is empty. The following figure shows the rate match FIFO empty condition when the read pointer is faster than the write pointer.

Figure 2-34: Rate Match FIFO Empty Condition

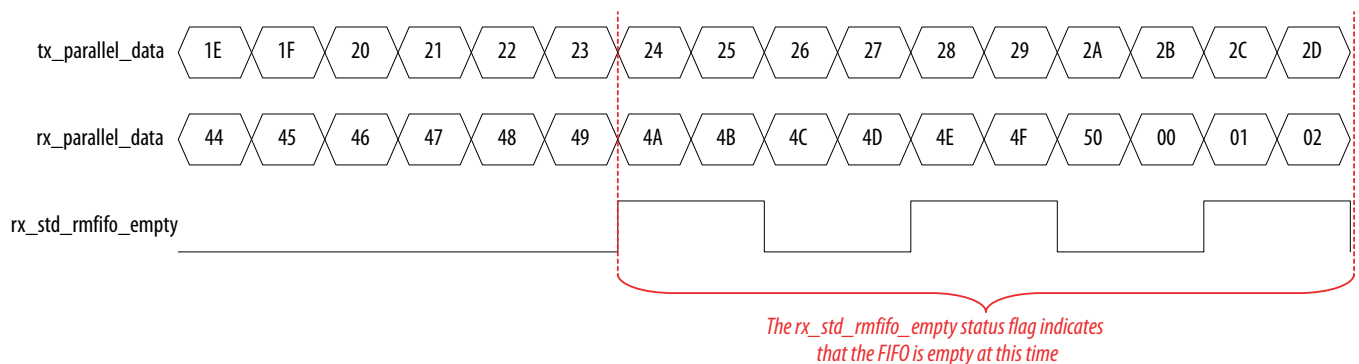

In the case of rate match FIFO full and empty conditions, you must assert the `rx_digitalreset` signal to reset the receiver PCS blocks.

Related Information

[Rate Match FIFO](#) on page 5-49

How to Implement GbE, GbE with IEEE 1588v2 in Arria 10 Transceivers


Before you begin

You should be familiar with the Standard PCS and PMA architecture, PLL architecture, and the reset controller before implementing the GbE protocol.

1. Instantiate the **Arria 10 Transceiver Native PHY IP** from the IP Catalog.
Refer to [Select and Instantiate PHY IP Core](#) on page 2-2.
2. Select **GbE** or **GbE 1588** from the **Transceiver configuration rules** list located under **Datapath Options**, depending on which protocol you are implementing.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for GbE and GbE with IEEE 1588v2](#) on page 2-106 as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the setting to meet your specific requirements.
4. Click **Generate** to generate the Native PHY IP core top-level RTL file.

Figure 2-35: Signals and Ports for Native PHY IP Configured for GbE or GbE with IEEE 1588v2

Generating the IP core creates signals and ports based on your parameter settings.

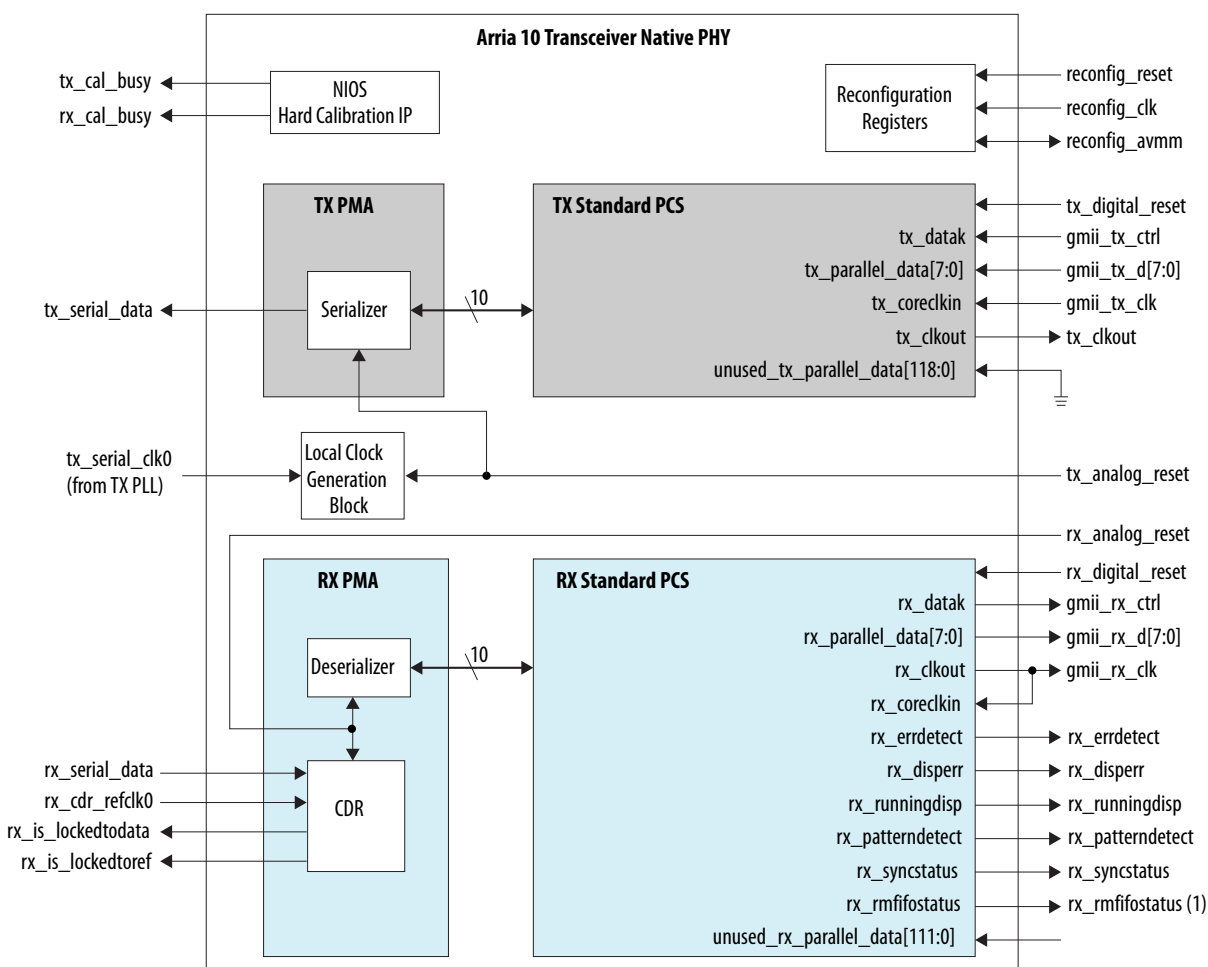

Note:


1. `rx_rmffifostatus` is not available in the GbE with 1588 configuration.

5. Instantiate and configure your PLL.
6. Instantiate a transceiver reset controller.

You can use your own reset controller or use the Native PHY Reset Controller IP core.

7. Connect the Native PHY IP to the PLL IP and the reset controller. Use the information in the figure below to connect the ports.

Figure 2-36: Connection Guidelines for a GbE/GbE with IEEE 1588v2 PHY Design

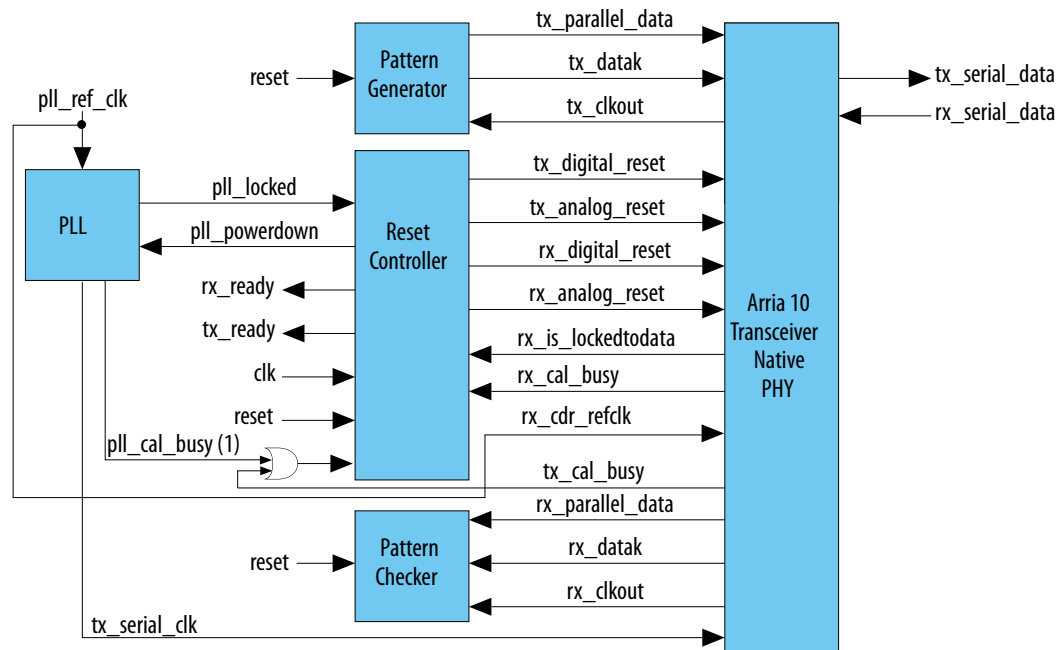

Note:

1. The pll_cal_busy signal is not available when using the CMU PLL.

8. Simulate your design to verify its functionality.

Related Information

- [Arria 10 Standard PCS Architecture](#) on page 5-35
For more information about Standard PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Standard PCS Ports](#) on page 2-66
Port definitions for the Transceiver Native PHY Standard Datapath

Native PHY IP Parameter Settings for GbE and GbE with IEEE 1588v2

Table 2-85: General and Datapath Options

The first two sections of the Native PHY [IP] parameter editor for the Native PHY IP provide a list of general and datapath options to customize the transceiver.

Parameter	Value
Message level for rule violations	error message
Transceiver configuration rules	GbE (for GbE) GbE 1588 (for GbE with IEEE 1588v2)
Transceiver mode	TX/RX Duplex TX Simplex RX Simplex
Number of data channels	1 to 96
Data rate	1250 Mbps
Enable datapath and interface reconfiguration	On Off
Enable simplified data interface	On Off

Table 2-86: TX PMA Parameters

Parameter	Value
TX channel bonding mode	Not bonded
TX local clock division factor	1, 2, 4, 8
Number of TX PLL clock inputs per channel	1, 2, 4, 8
Initial TX PLL clock input selection	0
Enable tx_pma_clkout port	On Off
Enable tx_pma_div_clkout port	On Off
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66

Parameter	Value
Enable tx_pma_elecidle port	On Off
Enable tx_pma_qpipullup port (QPI)	On Off
Enable tx_pma_qpipulldn port (QPI)	On Off
Enable tx_pma_txdetectrx port (QPI)	On Off
Enable tx_pma_rxfound port (QPI)	On Off
Enable rx_serialpbken port	On Off

Table 2-87: RX PMA Parameters

Parameter	Value
Number of CDR reference Clocks	1 to 5
Selected CDR reference clock	0 to 4
Selected CDR reference clock frequency	Select legal range defined by the Quartus II software
PPM detector threshold	100, 300, 500, 1000
CTLE adaptation mode	manual
DFE adaptation mode	disabled
Number of fixed dfe taps	N/A
Enable rx_pma_clkout port	On Off
Enable rx_pma_div_clkout port	On Off
rx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 50, 66

Parameter	Value
Enable rx_pma_clkslip port	On Off
Enable rx_pma_qpipulldn port (QPI)	On Off
Enable rx_is_lockedtodata port	On Off
Enable rx_is_lockedtoref port	On Off
Enable rx_set_locktodata and rx_set_locktoref ports	On Off
Enable rx_serialpbken port	On Off
Enable PRBS verifier control and status ports	On Off

Table 2-88: Standard PCS Parameters

Parameters	Value
Standard PCS / PMA interface width	10
FPGA fabric / Standard TX PCS interface width	10
FPGA fabric / Standard RX PCS interface width	10
TX FIFO mode	low latency (for GbE) register_fifo (for GbE with IEEE 1588v2)
RX FIFO Mode	low latency (for GbE) register_fifo (for GbE with IEEE 1588v2)
Enable Standard PCS low latency mode	Off
Enable tx_std_pcfifo_full port	On Off

Parameters	Value
Enable tx_std_pcfifo_empty port	On Off
Enable rx_std_pcfifo_full	On Off
Enable rx_std_pcfifo_empty port	On Off
TX byte serializer mode	Disabled, Serialize x2
RX byte deserializer mode	Disabled, Deserialize x2
Enable TX 8B/10B encoder	On Off
Enable TX 8B/10B disparity control	On Off
Enable RX 8B/10B decoder	On Off
RX rate match FIFO mode	gige (for GbE) disabled (for GbE with IEEE 1588v2)
RX rate match insert / delete -ve pattern (hex)	0x000ab683 (/K28.5/D16.2/) (for GbE) 0x00000000 (for GbE with IEEE 1588v2)
RX rate match insert / delete +ve pattern (hex)	0x000a257c (/K28.5/D16.2/) (for GbE) 0x00000000 (for GbE with IEEE 1588v2)
Enable rx_std_rmfifo_full port	On Off
Enable rx_std_rmfifo_empty port	On Off
PCI Express Gen3 rate match FIFO mode	Bypass
Enable TX bit slip	Off

Parameters	Value
Enable tx_std_bitslipboundarysel port	On Off
RX word aligner mode	Synchronous state machine
RX word aligner pattern length	7, 10
RX word aligner pattern (hex)	0x0000000000000007c (Comma) (for 7-bit aligner pattern length), 0x0000000000000017c (/K28.5/) (for 10-bit aligner pattern length)
Number of word alignment patterns to achieve sync	3
Number of invalid data words to lose sync	3
Number of valid data words to decrement error count	3
Enable fast sync status reporting for deterministic latency SM	On Off
Enable rx_std_wa_patternalign port	Off
Enable rx_std_wa_a1a2size port	Off
Enable rx_std_bitslipboundarysel port	Off
Enable rx_bitslip port	Off
Enable TX bit reversal	Off
Enable TX byte reversal	Off
Enable TX polarity inversion	On Off
Enable tx_polinv port	On Off
Enable RX bit reversal	Off
Enable rx_std_bitrev_ena port	Off
Enable RX byte reversal	Off
Enable rx_std_bytrev_ena port	Off
Enable RX polarity inversion	On Off

Parameters	Value
Enable rx_polinv port	On
	Off
Enable rx_std_signaldetect port	On
	Off
All options under PCIe Ports	Off

10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC Variants

10GBASE-R PHY is the Ethernet-specific physical layer running at a 10.3125-Gbps data rate as defined in Clause 49 of the IEEE 802.3-2008 specification. Arria 10 transceivers can implement 10GBASE-R variants like 10GBASE-R with IEEE 1588v2, and with forward error correction (FEC).

The 10GBASE-R parallel data interface is the 10 Gigabit Media Independent Interface (XGMII) that interfaces with the Media Access Control (MAC), which has the optional Reconciliation Sub-layer (RS).

The diagram illustrates the 10GBASE-R PHY architecture, showing the mapping of the OSI Reference Model layers to the physical layer components.

OSI Reference Model Layers:

- Application
- Presentation
- Session
- Transport
- Network
- Data Link
- Physical

10GBASE-R PHY Components:


- Higher Layers (above MAC)
- Logical Link Control (LLC) or other MAC Client
- MAC Control (Optional)
- Media Access Control (MAC)
- Reconciliation
- XGMII (10 GB Media Independent Interface)
- 10GBASE-R PCS (Physical Coding Sublayer)
- 10GBASE-R FEC (Optional) (Forward Error Correction)
- PMA (Physical Medium Attachment)
- PMD (Physical Medium Dependent)
- MDI (Medium Dependent Interface)
- Medium

Legend:

- MDI: Medium Dependent Interface
- PCS: Physical Coding Sublayer
- PHY: Physical Layer Device
- PMA: Physical Medium Attachment
- PMD: Physical Medium Dependent
- FEC: Forward Error Correction
- XGMII: 10 GB Media Independent Interface

Downloaded from [Arrow.com](https://www.arrow.com).

Figure 2-38: Transceiver Channel Datapath and Clocking for 10GBASE-R

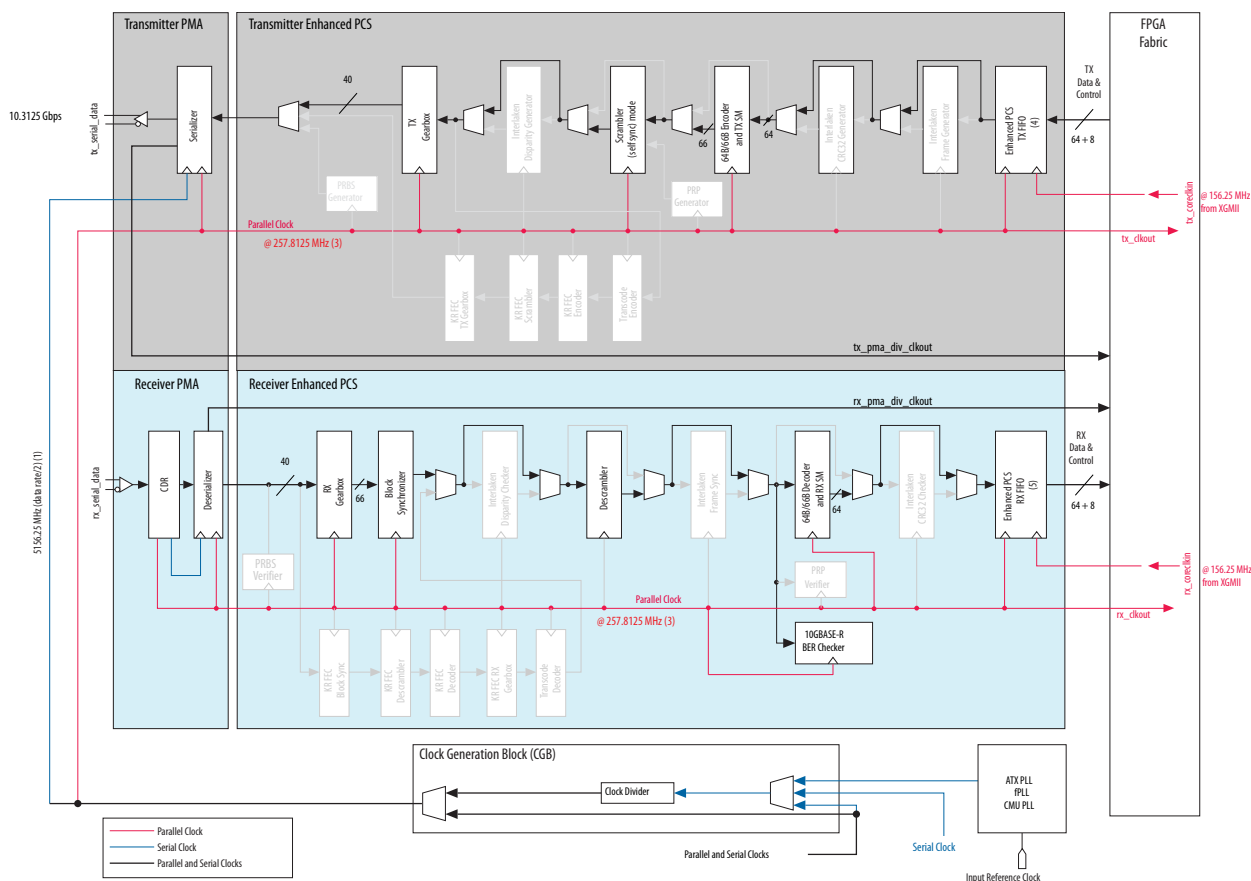

Notes:

- Notes:
1. Value based on the clock division factor chosen.
 2. Value calculated as data rate / FPGA fabric-PCS interface width.
 3. Value calculated as data rate / PCS-PMA interface width.
 4. This block is in Phase Compensation mode for the 10GBASE-R configuration and register mode for the 10GBASE-R with 1588 configuration.
 5. This block is in 10GBASE-R mode for the 10GBASE-R configuration and register mode for the 10GBASE-R with 1588 configuration.

10GBASE-R with IEEE 1588v2

When choosing the 10GBASE-R PHY with IEEE 1588v2 mode preset, the hard TX and RX FIFO are set to register mode. The output clock frequency of tx_clkout and rx_clkout to the FPGA fabric is based on the PCS-PMA interface width. For example, if the PCS-PMA interface is 40-bit, tx_clkout and rx_clkout run at $10.3125 \text{ Gbps}/40\text{-bit} = 257.8125 \text{ MHz}$.


The 10GBASE-R PHY with IEEE 1588v2 creates the soft TX phase compensation FIFO and the RX clock compensation FIFO in the FPGA core so that the effective XGMII data is running at 156.25 MHz interfacing with the MAC layer.

The IEEE 1588 Precision Time Protocol (PTP) is supported by the preset of the Arria 10 transceiver Native PHY that configures 10GBASE-R PHY IP in IEEE-1588v2 mode. PTP is used for precise synchronization of clocks in applications such as:

- distributed systems in telecommunications
- power generation and distribution
- industrial automation
- robotics
- data acquisition
- test
- measurement

The protocol is applicable to systems communicating by local area networks including, but not limited to, Ethernet. The protocol enables heterogeneous systems that include clocks of various inherent precision, resolution, and stability to synchronize to a grandmaster clock.

Figure 2-39: Transceiver Channel Datapath and Clocking for 10GBASE-R with IEEE 1588v2

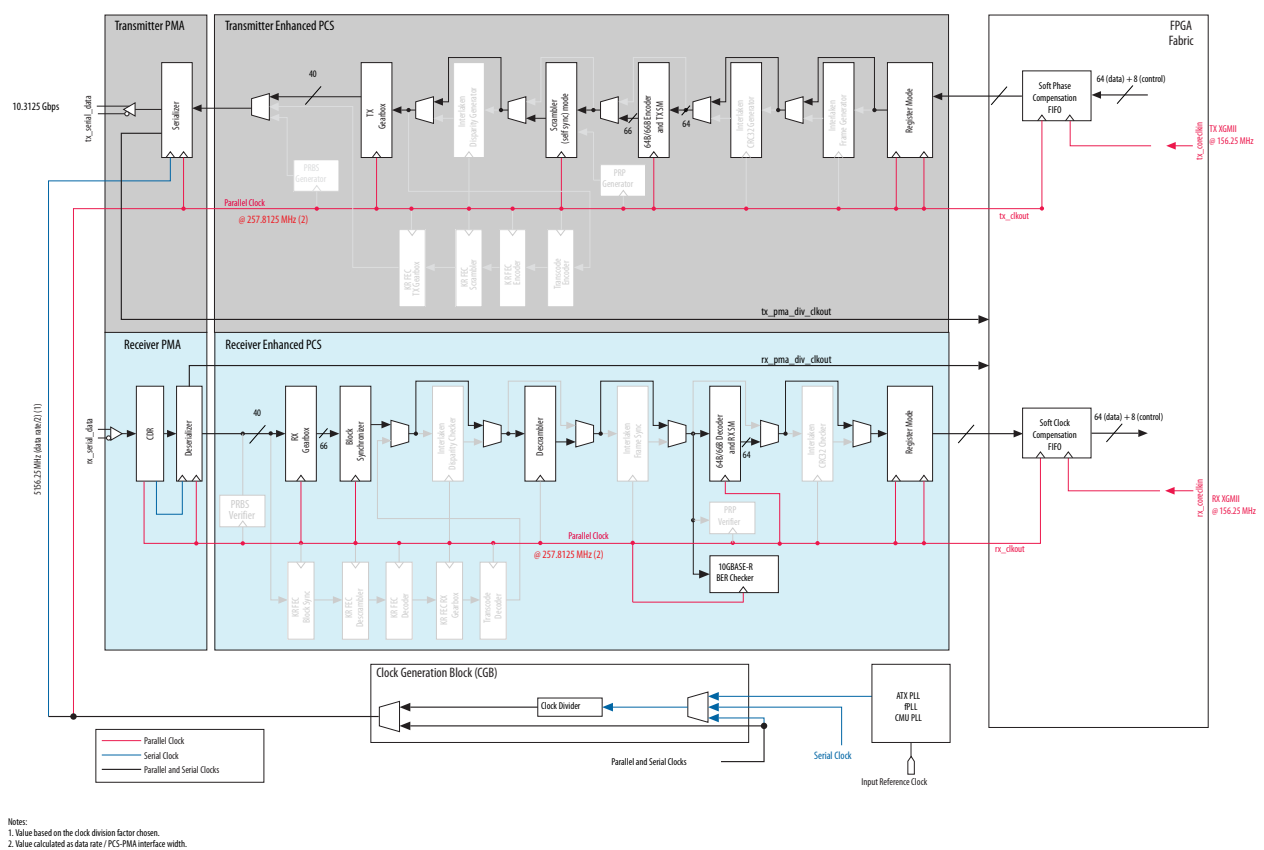

10GBASE-R with FEC

Arria 10 10GBASE-R has the optional FEC variant that also targets the 10GBASE-KR PHY. This provides a coding gain to increase the link budget and BER performance on a broader set of backplane channels as

defined in Clause 69. It provides additional margin to account for variations in manufacturing and environment conditions. The additional TX FEC sublayer:


- receives data from the TX PCS
- transcodes 64b/66b words
- performs encoding/framing
- scrambles and sends the FEC data to the PMA

The RX FEC sublayer:

- receives data from the PMA
- performs descrambling
- achieves FEC framing synchronization
- decodes and corrects data where necessary and possible
- recodes 64b/66b words and sends the data to the PCS

The 10GBASE-R with KR FEC protocol is a KR FEC sublayer placed between the PCS and PMA sublayers of the 10GBASE-R physical layer.


Figure 2-40: Transceiver Channel Datapath and Clocking for 10GBASE-R with KR FEC

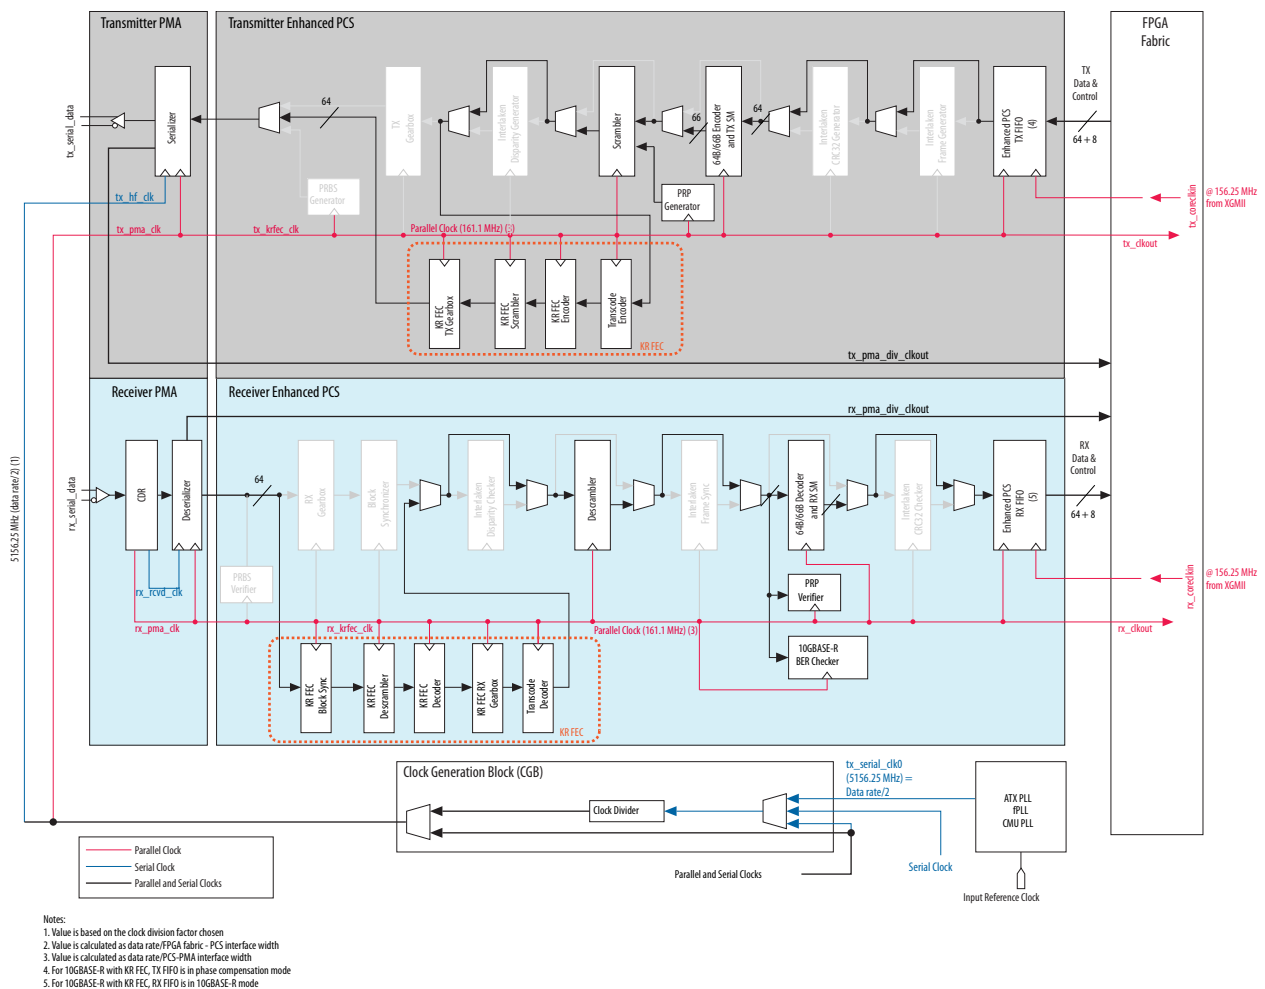

The CMU PLL or the ATX PLLs generate the TX high-speed serial clock.

Figure 2-41: Clock Generation and Distribution for 10GBASE-R with FEC Support


Example using a 64-bit PCS-PMA interface width.

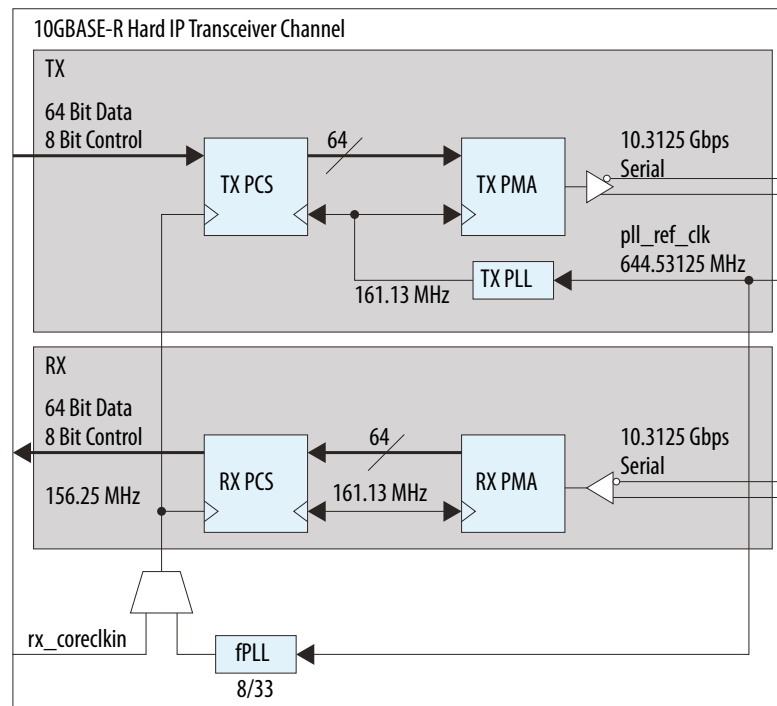

The XGMII Clocking Scheme in 10GBASE-R

The XGMII interface defines the 32-bit data and 4-bit wide control character clocked between the MAC/RS and the PCS at both the positive and negative edge (double data rate – DDR) of the 156.25 MHz interface clock.

The transceivers do not support the XGMII interface to the MAC/RS as defined in the IEEE 802.3-2008 specification. Instead, they support a 64-bit data and 8-bit control single data rate (SDR) interface between the MAC/RS and the PCS.

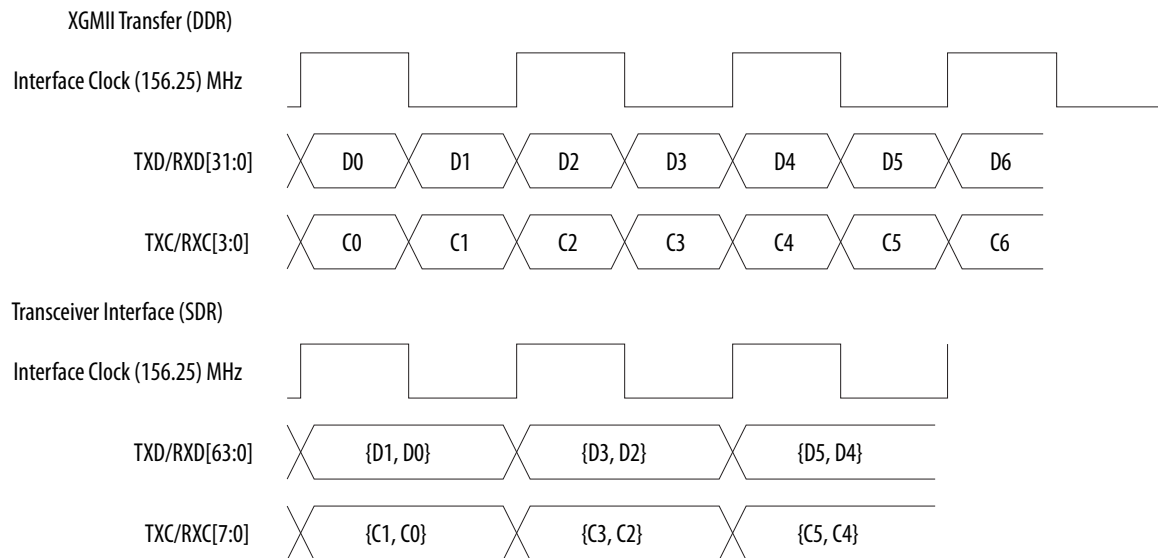Figure 2-42: XGMII Interface (DDR) and Transceiver Interface (SDR) for 10GBASE-R Configurations

Note: Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the 10GBASE-R PCS and the Ethernet MAC/RS.

The dedicated reference clock input to the variants of the 10GBASE-R PHY can be run at either 322.265625 MHz or 644.53125 MHz.

For 10GBASE-R, you must achieve 0 ppm of the frequency between the read clock of TX phase compensation FIFO (PCS data) and the write clock of TX phase compensation FIFO (XGMII data in the FPGA fabric). This can be achieved by using the same reference clock as the transceiver dedicated reference clock input as well as the reference clock input for a core PLL (fPLL, for example) to produce the XGMII clock. The same core PLL can be used to drive the RX XGMII data. This is because the RX clock compensation FIFO is able to handle the frequency PPM difference of ± 100 ppm between RX PCS data driven by the RX recovered clock and RX XGMII data.

Note: 10GBASE-R is the single-channel protocol that runs independently. Therefore Altera recommends that you use the presets for selecting the suitable 10GBASE-R variants directly. If it is being configured through the Native PHY IP, the channel bonding option should be disabled. Enabling the channel bonding for multiple channels could degrade the link performance in terms of TX jitter eye and RX jitter tolerance.

TX FIFO and RX FIFO

In 10GBASE-R configuration, the TX FIFO behaves as a phase compensation FIFO and the RX FIFO behaves as a clock compensation FIFO.

In 10GBASE-R with 1588 configuration, both the TX FIFO and the RX FIFO are used in register mode. The TX phase compensation FIFO and the RX clock compensation FIFO are constructed in the FPGA fabric by the PHY IP automatically.

In 10GBASE-R with KR FEC configuration, the TX FIFO is used in phase compensation mode and the RX FIFO behaves as a clock compensation FIFO.

Related Information

[Arria 10 Enhanced PCS Architecture](#) on page 5-18

For more information about the Enhanced PCS Architecture

How to Implement 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC in Arria 10 Transceivers

Before you begin


You should be familiar with the 10GBASE-R and PMA architecture, PLL architecture, and the reset controller before implementing the 10GBASE-R, 10GBASE-R with IEEE 1588v2, or 10GBASE-R with FEC Transceiver Configuration Rules.

You must design your own MAC and other layers in the FPGA to implement the 10GBASE-R, 10GBASE-R with 1588, or 10GBASE-R with KR FEC Transceiver Configuration Rule using the Native PHY IP.

1. Instantiate the **Arria 10 Transceiver Native PHY IP** from the IP Catalog.
Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for more details.
2. Select **10GBASE-R**, **10GBASE-R 1588**, or **10GBASE-R with KR FEC** from the **Transceiver configuration rule** list located under **Datapath Options**, depending on which protocol you are implementing.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC](#) as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the settings to meet your specific requirements.
4. Click **Generate** to generate the Native PHY IP core RTL file.

Figure 2-43: Signals and Ports of Native PHY IP Core for the 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC

Generating the IP core creates signals and ports based on your parameter settings.

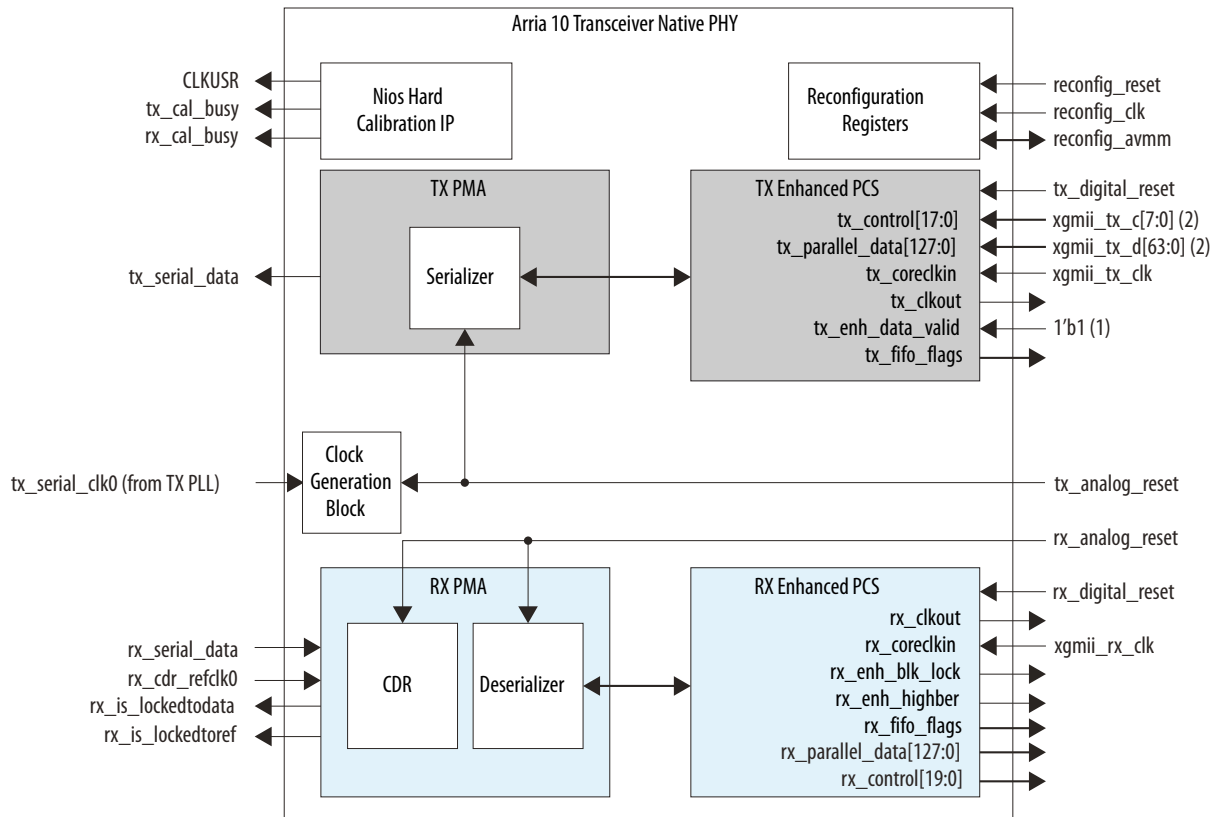**Notes:**

1. For 10GBASE-R with 1588 configurations, this signal is user-controlled.
2. For 10GBASE-R with 1588 configurations, this signal is connected from the output of TX FIFO in the FPGA fabric.

5. Instantiate and configure your PLL.
6. Create a transceiver reset controller. You can use your own reset controller or use the Arria 10 Transceiver Native PHY Reset Controller IP.
7. Connect the Arria 10 Transceiver Native PHY to the PLL IP and the reset controller.

Figure 2-44: Connection Guidelines for a 10GBASE-R or 10GBASE-R with FEC PHY Design


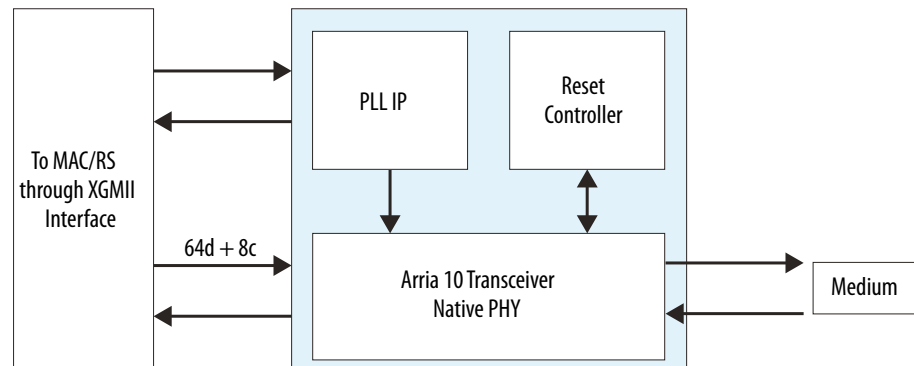


Figure 2-45: Connection Guidelines for a 10GBASE-R with IEEE 1588v2 PHY Design

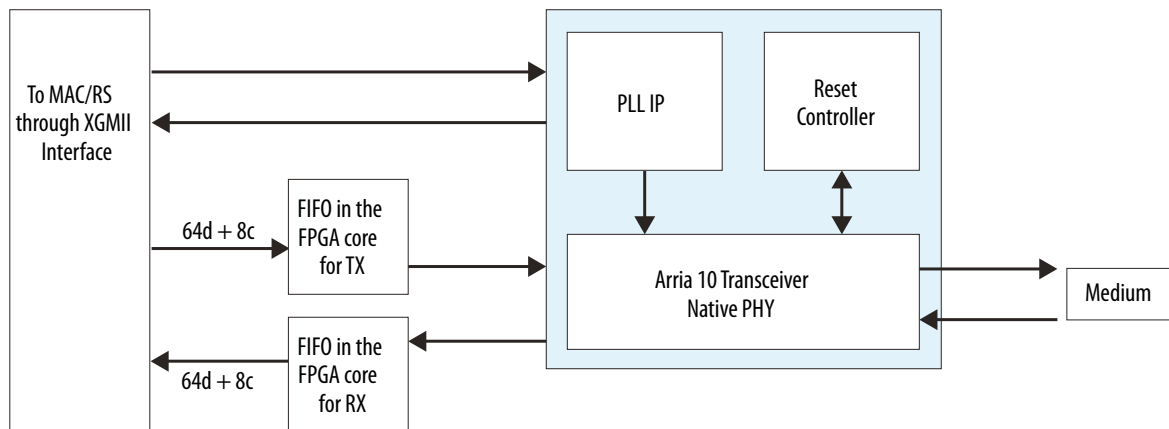

8. Simulate your design to verify its functionality.

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18
For more information about Enhanced PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Enhanced PCS Ports](#) on page 2-50
For detailed information about the available ports in the 10GBASE-R 1588 protocol.

Native PHY IP Parameter Settings for 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC**Table 2-89: General and Datapath Parameters**

The first two sections of the Transceiver Native PHY parameter editor provide a list of general and datapath options to customize the transceiver.

Parameter	Range
Device speed grade	fastest
Message level for rule violations	error, warning
Transceiver Configuration Rule	10GBASE-R 10GBASE-R 1588 10GBASE-R with KR FEC
Transceiver mode	TX / RX Duplex, TX Simplex, RX Simplex
Number of data channels	1 to 96
Data rate	10312.5 Mbps
Enable reconfiguration between Standard and Enhanced PCS	On Off
Enable simplified data interface	Off

Table 2-90: TX PMA Parameters

Parameter	Range
TX channel bonding mode	Not bonded
TX local clock division factor	1, 2, 4, 8
Number of TX PLL clock inputs per channel	1, 2, 3, 4
Initial TX PLL clock input selection	0

Table 2-91: RX PMA Parameters

Parameter	Range
Number of CDR reference clocks	1 to 5
Selected CDR reference clock	0 to 4

Parameter	Range
Selected CDR reference clock frequency	322.265625 MHz and 644.53125 MHz
PPM detector threshold	62.5, 100, 125, 200, 250, 300, 500, 1000
Decision feedback equalization mode	disabled

Table 2-92: Enhanced PCS Parameters

Parameter	Range
Enhanced PCS/PMA interface width	32, 40, 64 Note: 10GBASE-R with KR FEC allows 64 only.
FPGA fabric/Enhanced PCS interface width	66
Enable RX/TX FIFO double-width mode	Off
TX FIFO mode	• Phase Compensation (10GBASE-R and 10GBASE-R with KR FEC) • Register (10GBASE-R with 1588)
TX FIFO partially full threshold	11
TX FIFO partially empty threshold	2
RX FIFO mode	• 10GBASE-R (10GBASE-R and 10GBASE-R with KR FEC) • Register (10GBASE-R with 1588)
RX FIFO partially full threshold	23
RX FIFO partially empty threshold	2

Table 2-93: 64B/66B Encoder and Decoder Parameters

Parameter	Range
Enable TX 64B/66B encoder	On
Enable RX 64B/66B decoder	On
Enable TX sync header error insertion	On Off

Table 2-94: Scrambler and Descrambler Parameters

Parameter	Range
Enable TX scrambler (10GBASE-R / Interlaken)	On
TX scrambler seed (10GBASE-R / Interlaken)	0x03ffffffffffff
Enable RX descrambler (10GBASE-R / Interlaken)	On

Table 2-95: Block Sync Parameters

Parameter	Range
Enable RX block synchronizer	On

Table 2-96: Gearbox Parameters

Parameter	Range
Enable TX data polarity inversion	On Off
Enable RX data polarity inversion	On Off

Table 2-97: Dynamic Reconfiguration Parameters

Parameter	Range
Enable dynamic reconfiguration	On Off
Share reconfiguration interface	On Off
Enable embedded JTAG AVMM master	On Off

Table 2-98: Configuration Files Parameters

Parameter	Range
Configuration file prefix	—

Parameter	Range
Generate System Verilog package file	On Off
Generate C header file	On Off
Generate MIF (Memory Initialization File)	On Off

Table 2-99: Generation Options Parameters

Parameter	Range
Generate parameter documentation file	On Off

Native PHY IP Ports for 10GBASE-R and 10GBASE-R with IEEE 1588v2 Transceiver Configurations

Figure 2-46: High BER

This figure shows the rx_enh_highber status signal going high when there are errors on the rx_parallel_data output.

rx_parallel_data	1122334455667788h	X	1122334455667788h	X	1122334455667788h
rx_control			00h		
tx_parallel_data			1122334455667788h		
tx_control			00h		
rx_enh_highber	0h		X		1h

Figure 2-47: Block Lock Assertion


This figure shows the assertion on rx_enh_blk_lock signal when the Receiver detects the block delineation.

rx_parallel_data	0100009C0100009Ch	X	07070707070707h
rx_control	11h		FFh
tx_parallel_data			07070707070707h
tx_control			FFh
rx_enh_highber	0h	X	1h
rx_ready			
rx_enh_block lock	0h	X	1h


The following figures show Idle insertion and deletion.

Figure 2-48: IDLE Word Insertion


This figure shows the insertion of IDLE words in the receiver data stream.

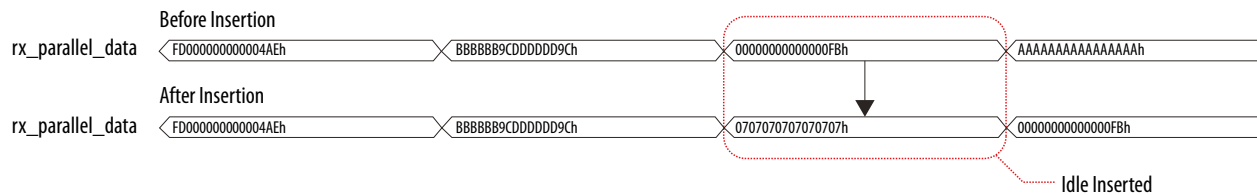**Figure 2-49: IDLE Word Deletion**

This figure shows the deletion of IDLE words from the receiver data stream.

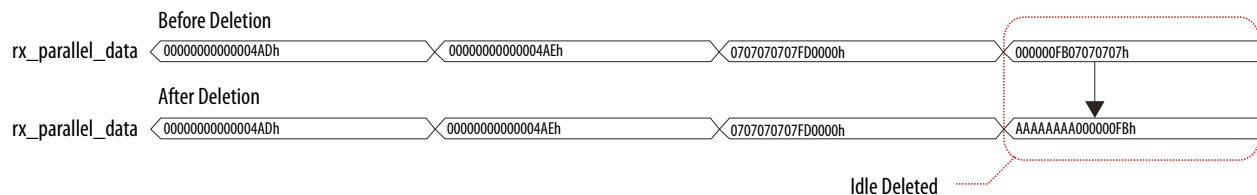**Figure 2-50: OS Word Deletion**

This figure shows the deletion of Ordered set word in the receiver data stream.

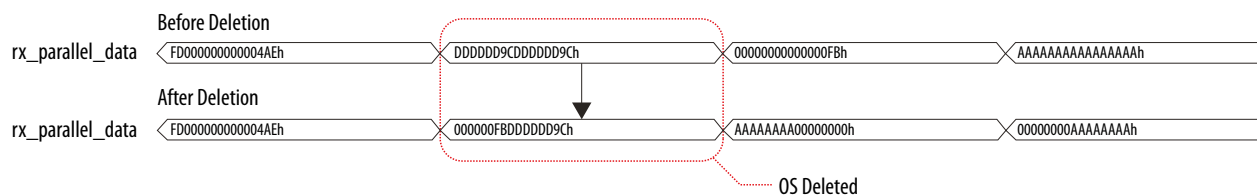

10GBASE-KR PHY IP Core

The 10GBASE-KR Ethernet PHY IP core supports the following features of Ethernet standards:

- Auto negotiation for backplane Ethernet as defined in *Clause 73* of the *IEEE 802.3 2008 Standard*. The 10GBASE-KR Ethernet PHY MegaCore Function can auto negotiate between 1000BASE-X, 1000BASE-KR, and 1000BASE-KRwith FEC.
- 10GBASE-KR Ethernet protocol with link training as defined in *Clause 72* of the *IEEE 802.3 2008 Standard*. In addition to the link-partner TX tuning as defined in *Clause 72*, this PHY also automatically configures the local device RX interface to achieve less than 10^{-12} bit error rate (BER) target.
- Gigabit Media Independent Interface (GMII) to connect PHY with media access control (MAC) as defined in *Clause 35* of the *IEEE 802.3 2008 Standard*
- Forward Error Correction (FEC) as defined in *Clause 74* of the *IEEE 802.3 2008 Standard*

The Backplane Ethernet 10GBASE-KR PHY IP core includes the following new modules to enable operation over a backplane:

- **Link Training (LT)**— The LT mechanism allows the 10GBASE-KR PHY to automatically configure the link-partner TX PMDs for the lowest Bit Error Rate (BER). LT is defined in Clause 72 of IEEE Std 802.3ap-2007.
- **Auto negotiation (AN)**—The 10GBASE-KR PHY IP core can auto-negotiate between 1000BASE-KX (1GbE) and 10GBASE-KR (10GbE) PHY types. The AN function is mandatory for Backplane Ethernet. It is defined in Clause 73 of the IEEE Std 802.3ap-2007.
- **Forward Error Correction (FEC)**—FEC function is an optional feature defined in *Clause 74 of IEEE 802.3ap-2007*. It provides an error detection and correction mechanism.

Related Information

- [IEEE Std 802.3ap-2008 Standard](#)
- [Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems](#)

10GBASE-KR PHY Release Information

Table 2-100: 10GBASE-KR PHY Release Information

Item	Description
Version	14.1
Release Date	December 2014
Ordering Codes	IP-10GBASEKRPHY (IP) IPR-10GBASEKRPHY (Renewal)
Product ID	0106
Vendor ID	6AF7

10GBASE-KR PHY Performance and Resource Utilization

This topic provides performance and resource utilization for the IP.

The following table shows the typical expected resource utilization for selected configurations using the Quartus II software v14.0 for Arria 10 devices. The numbers of ALMs and logic registers are rounded up to the nearest 100.


Table 2-101: 10GBASE-KR PHY Performance and Resource Utilization

Variant	ALMs	ALUTs	Registers	M20K
10GBASE-KR PHY	2400	3750	3100	1
10GBASE-KR PHY with FEC	2400	3750	3100	1

10GBASE-KR Functional Description

The following figure shows the supporting components inside the 10GBASE-KR PHY IP core.

Figure 2-51: 10GBASE-KR PHY IP Core Block Diagram

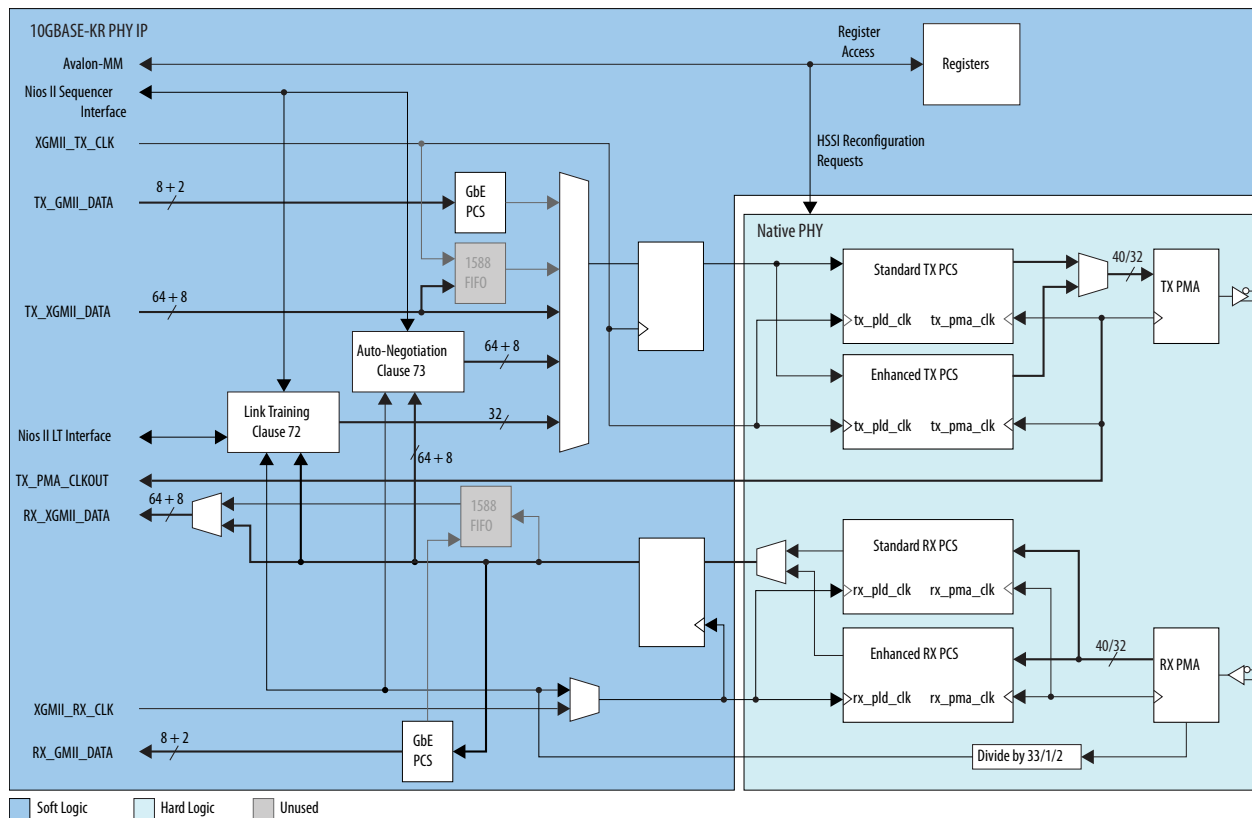

Note: Backplane applications with IEEE 1588 Precision Time Protocol are not supported.

The 10GBASE-KR PHY IP core includes the following components:

Standard and Enhanced PCS Datapaths

The Enhanced PCS and PMA inside the Native PHY are configured to be the 10GBASE-R PHY. Refer to the Standard PCS and Enhanced PCS architecture chapters for more details on how these blocks support 1G, 10G protocols and FEC.

Auto Negotiation, IEEE 802.3 Clause 73

The auto negotiation (AN) is needed to synchronize the start time of the link training on both sides of the link partners. This ensures that the link training can be done effectively within the 500 ms of the specified timeframe as required.

Link Training (LT), IEEE 802.3 Clause 72

Arria 10 devices have soft link training IP that is compliant with the IEEE 802.3 Clause 72 standard training procedure. It includes:


- training frame lock that is different from the regular 64b/66b frame_lock
- training frame generation
- the control channel codec
- Local Device (LD) coefficient update
- Link Partner (LP) coefficient generation

Reconfiguration Block

The Reconfiguration Block performs Avalon-MM writes to the PHY for both PCS and PMA reconfiguration. The Avalon-MM master accepts requests from the PMA or PCS controller. It performs the Read-Modify-Write or Write commands on the Avalon-MM interface. The PCS controller receives rate change requests from the Sequencer and translates them to a series of Read-Modify-Write or Write commands to the PMA and PCS.

Eight compile-time configuration modes are supported. The configuration modes include one set of four with reference clock at 322 MHz and one set of four with reference clock at 644 MHz. Each set of four consists of all combinations of FEC sublayer on/off.

Figure 2-52: Reconfiguration Block Details

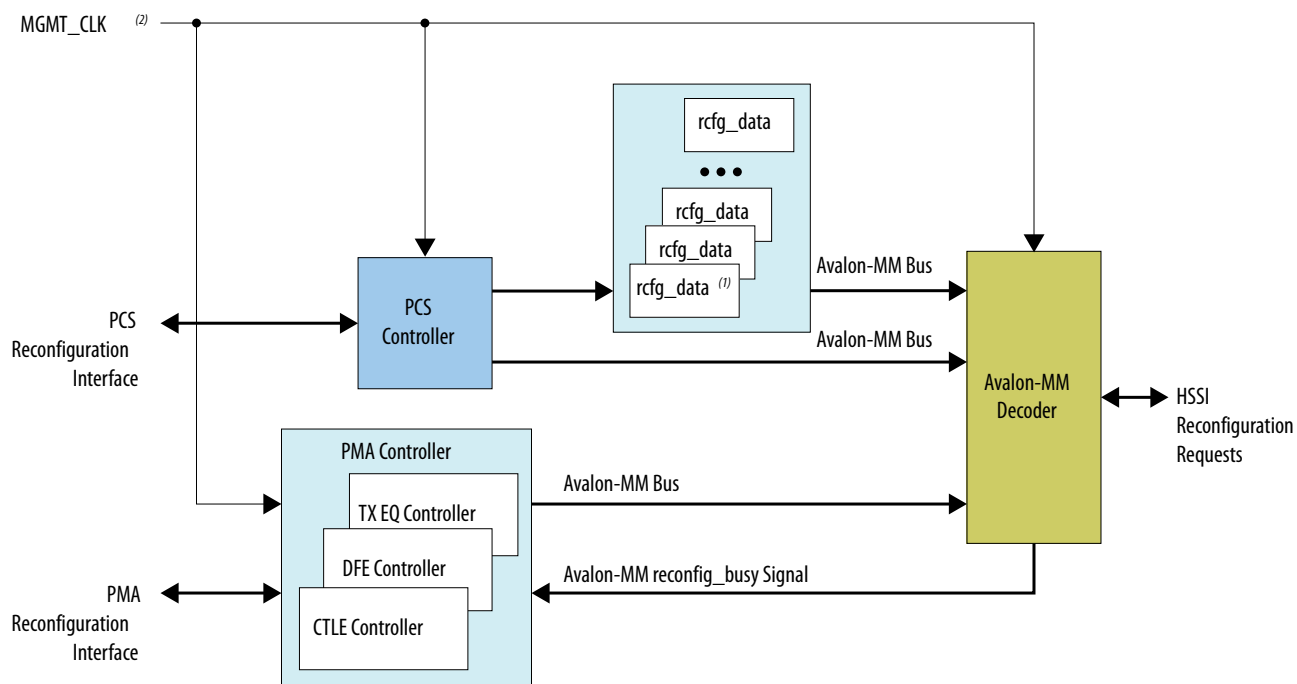

Notes:

1. rcfg = Reconfiguration
2. MGMT_CLK = Management Clock

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18

- [Arria 10 Standard PCS Architecture](#) on page 5-35

Parameterizing the 10GBASE-KR PHY

The Arria 10 1G/10GbE and 10GBASE-KR PHY IP core allows you to select either the **Backplane-KR** or **1Gb/10Gb Ethernet** variant. When you select the **Backplane-KR** variant, the **Link Training (LT)** and **Auto Negotiation (AN)** tabs appear. The **1Gb/10Gb Ethernet** variant (1G/10GbE) does not implement the LT and AN functions.

Complete the following steps to parameterize the 10GBASE-KR PHY IP core in the parameter editor:

1. Instantiate the **Arria 10 1G/10GbE and 10GBASE-KR PHY** from the IP Catalog.
Refer to [Select and Instantiate PHY IP Core](#) on page 2-2.
2. Select **Backplane-KR** from the **IP variant** list located under **Ethernet MegaCore Type**.
3. Use the parameter values in the tables in [10GBASE-R Parameters](#) on page 2-132, [10GBASE-KR Auto-Negotiation and Link Training Parameters](#) on page 2-132, and [10GBASE-KR Optional Parameters](#) on page 2-133 as a starting point. You can then modify the setting to meet your specific requirements.
4. Click **Generate HDL** to generate the **10GBASE-KR PHY** IP core top-level HDL file.

Related Information

- [10GBASE-R Parameters](#) on page 2-132
- [10GBASE-KR Auto-Negotiation and Link Training Parameters](#) on page 2-132
- [10GBASE-KR Link Training Parameters](#)

General Options

The General Options allow you to specify options common to 10GBASE-KR mode.

Table 2-102: General Options Parameters

Parameter Name	Options	Description
Enable internal PCS reconfiguration logic	On Off	This parameter is only an option when SYNTH_SEQ=0. When set to 0, it does not include the reconfiguration module or expose the start_pcs_reconfig or rc_busy ports. When set to 1, it provides a simple interface to initiate reconfiguration between 1G and 10G modes.
Enable IEEE 1588 Precision Time Protocol	On Off	When you turn on this parameter, you enable the IEEE 1588 Precision Time Protocol logic for both 1G and 10G modes.
Enable M20K block ECC protection	On Off	When you turn on this parameter, you enable error correction code (ECC) support on the embedded Nios CPU system. This parameter is only valid for the backplane variant
Enable tx_pma_clkout port	On Off	When you turn on this parameter, the tx_pma_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.

Parameter Name	Options	Description
Enable rx_pma_clkout port	On Off	When you turn on this parameter, the rx_pma_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable tx_divclk port	On Off	When you turn on this parameter, the tx_divclk port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable rx_divclk port	On Off	When you turn on this parameter, the rx_divclk port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable tx_clkout port	On Off	When you turn on this parameter, the tx_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable rx_clkout port	On Off	When you turn on this parameter, the rx_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable Hard PRBS support	On Off	When you turn on this parameter, you enable the Hard PRBS data generation and checking logic in the Native PHY.
Reference clock frequency	644.53125 MHz 322.265625 MHz	Specifies the input reference clock frequency. The default is 322.265625 MHz .
Enable additional control and status pins	On Off	When you turn this option on, the core includes the rx_block_lock and rx_hi_ber ports.
Include FEC sublayer	On Off	When you turn on this parameter, the core includes logic to implement FEC and a soft 10GBASE-R PCS.
Set FEC_ability bit on power up and reset	On Off	When you turn on this parameter, the core sets the Assert KR FEC Ability bit (0xB0[16]) FEC ability bit during power up and reset, causing the core to advertise the FEC ability. This option is required for FEC functionality.
Set FEC_Enable bit on power up and reset	On Off	When you turn on this parameter, the core sets the KR FEC Request bit (0xB0[18]) during power up and reset, causing the core to request the FEC ability during Auto Negotiation. This option is required for FEC functionality.

10GBASE-R Parameters

The 10GBASE-R parameters specify basic features of the 10GBASE-R PCS. The FEC options also allow you to specify the FEC ability.

Table 2-103: 10GBASE-R Parameters

Parameter Name	Options	Description
10GbE Reference clock frequency	644.53125 MHz 322.265625 MHz	Specifies the input reference clock frequency. The default is 322.265625 MHz .
1G Reference clock frequency	125 MHz	Specifies the input reference clock frequency. 125 MHz is the only option.
Enable additional control and status pins	On Off	When you turn on this parameter, the core includes the rx_block_lock and rx_hi_ber ports.

Table 2-104: FEC Options

Parameter Name	Options	Description
Include FEC sublayer	On Off	When you turn on this parameter, the core includes logic to implement FEC and a soft 10GBASE-R PCS.

10GBASE-KR Auto-Negotiation and Link Training Parameters**Table 2-105: Auto Negotiation and Link Training Settings**

Name	Range	Description
AN_PAUSE Pause Ability	0-8	Depends upon MAC. Local device pause capability C2:0 = D12:10 of AN word. C2 = reserved. C1 is the same as ASM_DIR. C0 is the same as PAUSE.
CAPABLE_FEC ENABLE_FEC (request)	0-3	Depends upon FEC. Local device FEC ability F1:0 = D47:46. F0 is Capability. F1 is Requested.

Name	Range	Description
AN_TECH Technology Ability	0-63	Depends upon options. Local Device Tech ability T5:0 = D26:21 Other bits: • T24:6 = 0 • T0 = Gige • T1 = XAUI • T2 = 10G • T3 = 40G • T4 = CR-4 • T5 = 100G
AN_SELECTOR Selector Field	0-31	IEEE selector S4:0 = D4:0 of AN word
Width of the Training Wait Counter	7-8	IEEE 802.3 clause 72.6.10.3.2 wait_timer_done should be between 100 and 300 frames. 7 gives 127 frames. 8 gives 255 frames.

10GBASE-KR Optional Parameters

Table 2-106: Optional Parameters


In the following table, the exact correspondence between numerical values and voltages is pending characterization of the Native PHY.

Name	Value	Description
BERWIDTH Width of the Bit Error Counter	4 - 10	This selection sets the size for the counter of errors expected during each step of the link training. If the number of errors exceeds this count for each step, then an error is returned. The number of errors depends upon the amount of time for each step and the quality of the physical link/media. The default value is 10.
PHY Management clock (MGMT_CLK) frequency in MHz	100 - 125	Needed to determine the value of the Link Fail Inhibit timer in IEEE 802.3 clause 73.10.2. 500 - 510 ms for BASE-R 40 - 50 ms for GbE, XAUI. The default value is 125.
VMAXRULE VOD tap MAX Rule	0 - 31	Specifies the maximum V_{OD} . The default value is 30.
VMINRULE Device VMIN Rule	0 - 31	Specifies the minimum V_{OD} . The default value is 6.
VODMINRULE VOD tap MIN Rule	0 - 31	Specifies the minimum V_{OD} for the first tap. The default value is 14.

Name	Value	Description
VPOSTRULE	0 - 38	Specifies the maximum value that the internal algorithm for pre-emphasis will ever test in determining the optimum post-tap setting. The default value is 25.
VPRETRULE	0 - 31	Specifies the maximum value that the internal algorithm for pre-emphasis will ever test in determining the optimum pre-tap setting. The default value is 16.
PREMAINVAL Preset VOD tap Value	0 - 31	Specifies the Preset V_{OD} value. This value is set by the Preset command of the link training protocol, defined in Clause 72.6.10.2.3.1 of the Link Training protocol. This is the value from which the algorithm starts. The default value is 30.
PREPOSTVAL	0 - 31	Specifies the preset Post-tap value. The default value is 0.
PREPREVAL	0 - 15	Specifies the preset Pre-tap value. The default value is 0.
INITMAINVAL Init VOD tap Value	0 - 31	Specifies the initial V_{OD} value. This value is set by the Initialize command of the link training protocol, defined in Clause 72.6.10.2.3.2 of <i>IEEE Std 802.3ap-2007</i> . The default value is 25.
INITPOSTVAL Init Post tap Value	0 - 38	Specifies the initial Post-tap value. The default value is 22.
INITPREVAL Init Pre tap Value	0 - 15	Specifies the initial Pre-tap value. The default value is 3.

10GBASE-KR PHY Interfaces

Figure 2-53: 10GBASE-KR Top-Level Signals

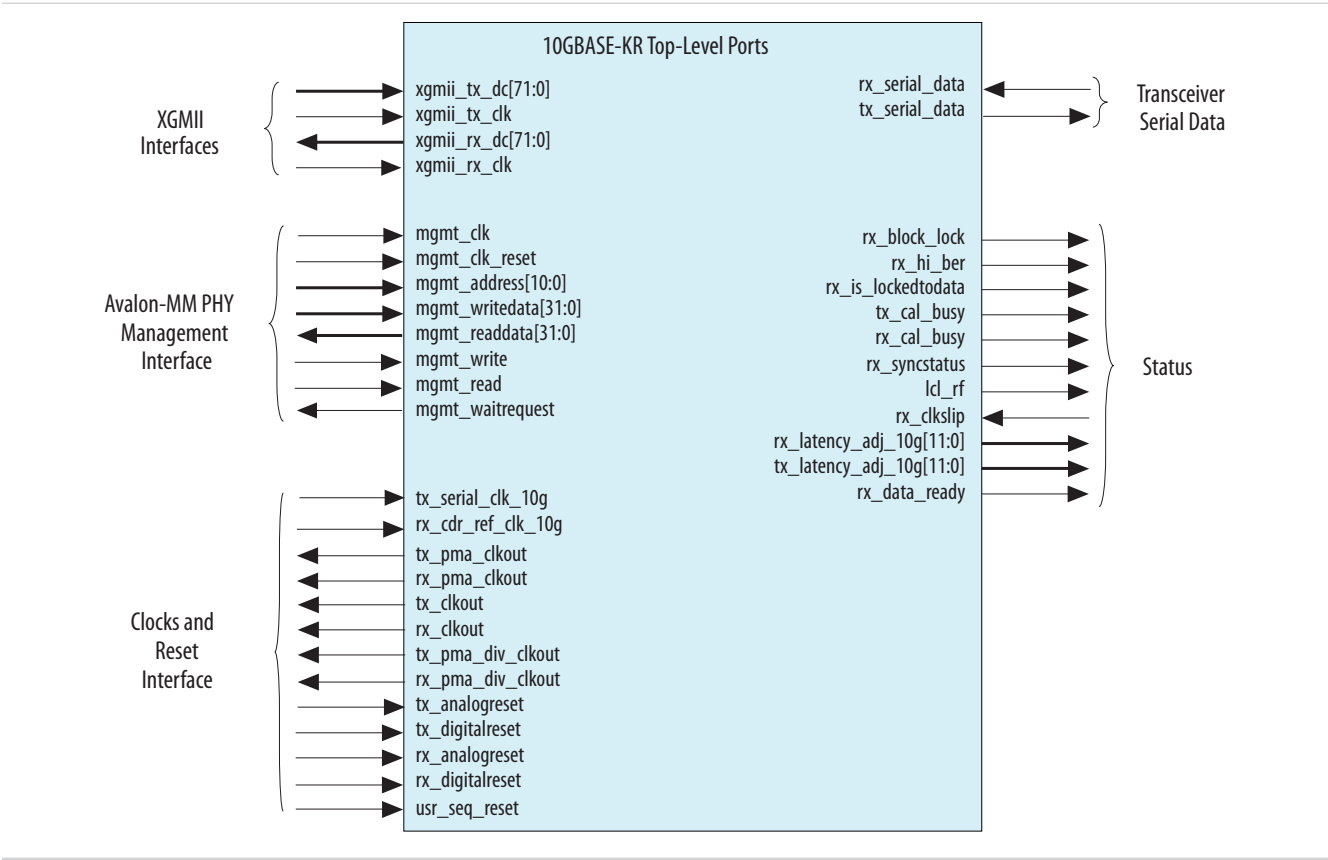

The block diagram shown in the GUI labels the external pins with the interface type and places the interface name inside the box. The interface type and name are used in the `_hw.tcl` file. If you turn on **Show signals**, the **block diagram** displays all top-level signal names.

Related Information
[Component Interface Tcl Reference](#)
For more information about `_hw.tcl` files

Clock and Reset Interfaces

Table 2-107: Clock and Reset Signals

Signal Name	Direction	Description
tx_serial_clk_10g	Input	High speed clock from the 10G PLL to drive 10G PHY TX PMA. The frequency of this clock is 5.15625 GHz.
tx_serial_clk_1g	Input	High speed clock from 1G PLL to drive the 1G PHY TX PMA. This clock is not required if GbE is not used. The frequency of this clock is 625 MHz.

Signal Name	Direction	Description
rx_cdr_ref_clk_10g	Input	10G PHY RX PLL reference clock. This clock frequency can be 644.53125 MHz or 322.2656 MHz.
rx_cdr_ref_clk_1g	Input	1G PHY RX PLL reference clock. The frequency is 125 MHz. This clock is only required if 1G is enabled.
tx_pma_clkout	Output	Clock used to drive the 10G TX PCS and 1G TX PCS parallel data. For example, when the hard PCS is reconfigured to the 10G mode without FEC enabled, the frequency is 257.81 MHz. The frequency is 161.13 MHz for 10G with FEC enabled.
rx_pma_clkout	Output	Clock used to drive the 10G RX PCS and 1G RX PCS parallel data. For example, when the hard PCS is reconfigured to the 10G mode without FEC enabled, the frequency is 257.81 MHz. The frequency is 161.13 MHz for 10G with FEC enabled.
tx_clkout	Output	XGMII/GMII TX clock for the TX parallel data source interface. This clock frequency is 257.81 MHz in 10G mode, and 161.13 MHz with FEC enabled.
rx_clkout	Output	XGMII RX clock for the RX parallel data source interface. This clock frequency is 257.81 in 10G mode, and 161.13 MHz with FEC enabled.
tx_pma_div_clkout	Output	The divided 33 clock from the TX serializer. You can use this clock for the for xgmii_tx_clk or xgmii_rx_clk. The frequency is 156.25 MHz for 10G. The frequencies are the same whether or not you enable FEC.
rx_pma_div_clkout	Output	The divided 33 clock from CDR recovered clock. The frequency is 156.25 MHz for 10G. The frequencies are the same whether or not you enable FEC. This clock is not used for clocking the 10G RX datapath.
tx_analogreset	Input	Resets the analog TX portion of the transceiver PHY.
tx_digitalreset	Input	Resets the digital TX portion of the transceiver PHY.
rx_analogreset	Input	Resets the analog RX portion of the transceiver PHY.
rx_digitalreset	Input	Resets the digital RX portion of the transceiver PHY.
usr_seq_reset	Input	Resets the sequencer. Initiates a PCS reconfiguration, and may restart AN, LT or both if these modes are enabled.

Related Information

- [Input Reference Clock Sources](#) on page 3-27
- [PLLs](#) on page 3-3

Data Interfaces**Table 2-108: XGMII Signals**

The MAC drives the TX XGMII signals to the 10GbE PHY. The 10GbE PHY drives the RX XGMII signals to the MAC.

Signal Name	Direction	Clock Domain	Description
10GbE XGMII Data Interface			
xgmii_tx_dc[71:0]	Input	Synchronous to xgmii_tx_clk	XGMII data and control for 8 lanes. Each lane consists of 8 bits of data and 1 bit of control.
xgmii_tx_clk	Input	Clock signal	Clock for single data rate (SDR) XGMII TX interface to the MAC. It should connect to xgmii_rx_clk. This clock can be connected to the tx_div_clkout; however, Altera recommends that you connect it to a PLL for use with the Triple Speed Ethernet MegaCore function. The frequency is 125 MHz for 1G and 156.25 MHz for 10G. This clock is driven from the MAC. The frequencies are the same whether or not you enable FEC.
xgmii_rx_dc[71:0]	Output	Synchronous to xgmii_rx_clk	RX XGMII data and control for 8 lanes. Each lane consists of 8 bits of data and 1 bit of control.
xgmii_rx_clk	Input	Clock signal	Clock for SDR XGMII RX interface to the MAC. This clock can be connected to the tx_div_clkout; however, Altera recommends that you connect it to a PLL for use with the Triple Speed Ethernet MegaCore function. The frequency is 125 MHz for 1G and 156.25 MHz for 10G. This clock is driven from the MAC. The frequencies are the same whether or not you enable FEC.

XGMII Mapping to Standard SDR XGMII Data**Table 2-109: TX XGMII Mapping to Standard SDR XGMII Interface**

The 72-bit TX XGMII data bus format is different than the standard SDR XGMII interface. This table shows the mapping of this non-standard format to the standard SDR XGMII interface.

Signal Name	SDR XGMII Signal Name	Description
xgmii_tx_dc[7:0]	xgmii_sdr_data[7:0]	Lane 0 data

Signal Name	SDR XGMII Signal Name	Description
xgmii_tx_dc[8]	xgmii_sdr_ctrl[0]	Lane 0 control
xgmii_tx_dc[16:9]	xgmii_sdr_data[15:8]	Lane 1 data
xgmii_tx_dc[17]	xgmii_sdr_ctrl[1]	Lane 1 control
xgmii_tx_dc[25:18]	xgmii_sdr_data[23:16]	Lane 2 data
xgmii_tx_dc[26]	xgmii_sdr_ctrl[2]	Lane 2 control
xgmii_tx_dc[34:27]	xgmii_sdr_data[31:24]	Lane 3 data
xgmii_tx_dc[35]	xgmii_sdr_ctrl[3]	Lane 3 control
xgmii_tx_dc[43:36]	xgmii_sdr_data[39:32]	Lane 4 data
xgmii_tx_dc[44]	xgmii_sdr_ctrl[4]	Lane 4 control
xgmii_tx_dc[52:45]	xgmii_sdr_data[47:40]	Lane 5 data
xgmii_tx_dc[53]	xgmii_sdr_ctrl[5]	Lane 5 control
xgmii_tx_dc[61:54]	xgmii_sdr_data[55:48]	Lane 6 data
xgmii_tx_dc[62]	xgmii_sdr_ctrl[6]	Lane 6 control
xgmii_tx_dc[70:63]	xgmii_sdr_data[63:56]	Lane 7 data
xgmii_tx_dc[71]	xgmii_sdr_ctrl[7]	Lane 7 control

Table 2-110: RX XGMII Mapping to Standard SDR XGMII Interface

The 72-bit RX XGMII data bus format is different from the standard SDR XGMII interface. This table shows the mapping of this non-standard format to the standard SDR XGMII interface.

Signal Name	XGMII Signal Name	Description
xgmii_rx_dc[7:0]	xgmii_sdr_data[7:0]	Lane 0 data
xgmii_rx_dc[8]	xgmii_sdr_ctrl[0]	Lane 0 control
xgmii_rx_dc[16:9]	xgmii_sdr_data[15:8]	Lane 1 data
xgmii_rx_dc[17]	xgmii_sdr_ctrl[1]	Lane 1 control
xgmii_rx_dc[25:18]	xgmii_sdr_data[23:16]	Lane 2 data
xgmii_rx_dc[26]	xgmii_sdr_ctrl[2]	Lane 2 control
xgmii_rx_dc[34:27]	xgmii_sdr_data[31:24]	Lane 3 data
xgmii_rx_dc[35]	xgmii_sdr_ctrl[3]	Lane 3 control
xgmii_rx_dc[43:36]	xgmii_sdr_data[39:32]	Lane 4 data
xgmii_rx_dc[44]	xgmii_sdr_ctrl[4]	Lane 4 control
xgmii_rx_dc[52:45]	xgmii_sdr_data[47:40]	Lane 5 data
xgmii_rx_dc[53]	xgmii_sdr_ctrl[5]	Lane 5 control
xgmii_rx_dc[61:54]	xgmii_sdr_data[55:48]	Lane 6 data
xgmii_rx_dc[62]	xgmii_sdr_ctrl[6]	Lane 6 control

Signal Name	XGMII Signal Name	Description
xgmii_rx_dc[70:63]	xgmii_sdr_data[63:56]	Lane 7 data
xgmii_rx_dc[71]	xgmii_sdr_ctrl[7]	Lane 7 control

Serial Data Interface

Table 2-111: Serial Data Signals

Signal Name	Direction	Description
rx_serial_data	Input	RX serial input data
tx_serial_data	Output	TX serial output data

Control and Status Interfaces

Table 2-112: Control and Status Signals

Signal Name	Direction	Clock Domain	Description
led_link	Output	Synchronous to rx_clkout	When asserted, indicates successful link synchronization.
led_disp_err	Output	Synchronous to rx_clkout	Disparity error signal indicating a 10-bit running disparity error. Asserted for one rx_clkout_1g cycle when a disparity error is detected. A running disparity error indicates that more than the previous and perhaps the current received group had an error.
led_an	Output	Synchronous to rx_clkout	Clause 37 Auto-negotiation status. The PCS function asserts this signal when auto-negotiation completes.
rx_block_lock	Output	Synchronous to rx_clkout	Asserted to indicate that the block synchronizer has established synchronization.
rx_hi_ber	Output	Synchronous to rx_clkout	Asserted by the BER monitor block to indicate a Sync Header high bit error rate greater than 10^{-4} .
rx_is_lockedto data	Output	Asynchronous signal	When asserted, indicates the RX channel is locked to input data.
tx_cal_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that the TX channel is being calibrated.
rx_cal_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that the RX channel is being calibrated.

Signal Name	Direction	Clock Domain	Description
lcl_rf	Input	Synchronous to xgmii_tx_clk	When asserted, indicates a Remote Fault (RF). The MAC sends this fault signal to its link partner. Bit D13 of the Auto Negotiation Advanced Remote Fault register (0xC2) records this error.
rx_clkslip	Input	Asynchronous signal	When asserted, indicates that the deserializer has either skipped one serial bit or paused the serial clock for one cycle to achieve word alignment. As a result, the period of the parallel clock could be extended by 1 unit interval (UI) during the clock slip operation.
rx_data_ready	Output	Synchronous to rx_clkout	When asserted, indicates that the MAC can begin sending data to the PHY.

Dynamic Reconfiguration Interface

You can use the dynamic reconfiguration interface signals to dynamically change between 1G and 10G data rates.

Table 2-113: Dynamic Reconfiguration Interface Signals

Signal Name	Direction	Clock Domain	Description
rc_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that reconfiguration is in progress. Synchronous to the mgmt_clk. This signal is only exposed under the following condition: Turn on Enable internal PCS reconfiguration logic
start_pcs_reconfig	Input	Synchronous to mgmt_clk	When asserted, initiates reconfiguration of the PCS. Sampled with the mgmt_clk. This signal is only exposed under the following condition: Turn on Enable internal PCS reconfiguration logic
mode_1g_10gbar	Input	Synchronous to mgmt_clk	This signal selects either the 1G or 10G tx-parallel-data going to the PCS. It is only used for the 1G/10G application (variant) under the following circumstances: - the Sequencer (auto-rate detect) is not enabled 1G mode is enabled

Avalon-MM Register Interface

The Avalon-MM slave interface signals provide access to all registers.

Table 2-114: Avalon-MM Interface Signals

Signal Name	Direction	Clock Domain	Description
mgmt_clk	Input	Clock	The clock signal that controls the Avalon-MM PHY management, interface. If you plan to use the same clock for the PHY management interface and transceiver reconfiguration, you must restrict the frequency to 100 MHz to meet the specification for the transceiver reconfiguration clock.
mgmt_clk_reset	Input	Reset	Resets the PHY management interface. This signal is active high and level sensitive.
mgmt_addr[10:0]	Input	Synchronous to mgmt_clk	11-bit Avalon-MM address.
mgmt_writedata[31:0]	Input	Synchronous to mgmt_clk	Input data.
mgmt_readdata[31:0]	Output	Synchronous to mgmt_clk	Output data.
mgmt_write	Input	Synchronous to mgmt_clk	Write signal. Active high.
mgmt_read	Input	Synchronous to mgmt_clk	Read signal. Active high.
mgmt_waitrequest	Output	Synchronous to mgmt_clk	When asserted, indicates that the Avalon-MM slave interface is unable to respond to a read or write request. When asserted, control signals to the Avalon-MM slave interface must remain constant.

Related Information**[Avalon Interface Specifications](#)****10GBASE-KR PHY Register Definitions**

The Avalon-MM slave interface signals provide access to the control and status registers.

The following table specifies the control and status registers that you can access over the Avalon-MM PHY management interface. A single address space provides access to all registers.

Note: Unless otherwise indicated, the default value of all registers is 0.

Note: Writing to reserved or undefined register addresses may have undefined side effects.

Table 2-115: 10GBASE-KR Register Definitions

Word Addr	Bit	R/W	Name	Description
0x4B0	0	RW	Reset SEQ	When set to 1, resets the 10GBASE-KR sequencer (auto rate detect logic), initiates a PCS reconfiguration, and may restart Auto-Negotiation, Link Training or both if AN and LT are enabled (10GBASE-KR mode). SEQ Force Mode[2:0] forces these modes. This reset self clears.
	1	RW	Disable AN Timer	Auto-Negotiation disable timer. If disabled (Disable AN Timer = 1), AN may get stuck and require software support to remove the ABILITY_DETECT capability if the link partner does not include this feature. In addition, software may have to take the link out of loopback mode if the link is stuck in the ACKNOWLEDGE_DETECT state. To enable this timer set Disable AN Timer = 0.
	2	RW	Disable LF Timer	When set to 1, disables the Link Fault timer. When set to 0, the Link Fault timer is enabled.
	3	RW	fail_lt_if_ber	When set to 1, the last LT measurement is a non-zero number. Treat this as a failed run. 0 = normal.
	7:4	RW	SEQ Force Mode[3:0]	Forces the sequencer to a specific protocol. Must write the Reset SEQ bit to 1 for the Force to take effect. The following encodings are defined: • 0000: No force • 0001: GigE • 0010: XAUI • 0100: 10GBASE-R • 0101: 10GBASE-KR • 1100: 10GBASE-KR FEC
	8	RW	Enable Arria 10 Calibration	When set to 1, it enables the Arria 10 HSSI reconfiguration calibration as part of the PCS dynamic reconfiguration. 0 skips the calibration when the PCS is reconfigured.
	16	RW	KR FEC enable 171.0	When set to 1, FEC is enabled. When set to 0, FEC is disabled. Resets to the CAPABLE_FEC parameter value.
	17	RW	KR FEC enable err ind 171.1	When set to 1, KR PHY FEC decoding errors are signaled to the PCS. When set to 0, FEC errors are not signaled to the PCS. See <i>Clause 74.8.3 of IEEE 802.3ap-2007</i> for details.
	18	RW	KR FEC request	When set to 1, enables the FEC request. When this bit changes, you must assert the Reset SEQ bit (0x4B0[0]) to renegotiate with the new value. When set to 0, disables the FEC request.

Word Addr	Bit	R/W	Name	Description
0x4B1	0	R	SEQ Link Ready	When asserted, the sequencer is indicating that the link is ready.
	1	R	SEQ AN timeout	When asserted, the sequencer has had an Auto Negotiation timeout. This bit is latched and is reset when the sequencer restarts Auto Negotiation.
	2	R	SEQ LT timeout	When set, indicates that the Sequencer has had a timeout.
	13:8	R	SEQ Reconfig Mode[5:0]	Specifies the Sequencer mode for PCS reconfiguration. The following modes are defined: • Bit 8, mode[0]: AN mode • Bit 9, mode[1]: LT Mode • Bit 10, mode[2]: 10G data mode • Bit 11, mode[3]: Gige data mode • Bit 12, mode[4]: Reserved for XAUI • Bit 13, mode[5]: 10G FEC mode
	16	R	KR FEC ability 170.0	When set to 1, indicates that the 10GBASE-KR PHY supports FEC. Set as parameter SYNTH_FEC. For more information, refer to <i>Clause 45.2.1.84 of IEEE 802.3ap-2007</i> .
	17	R	KR FEC err ind ability 170.0	When set to 1, indicates that the 10GBASE-KR PHY is capable of reporting FEC decoding errors to the PCS. For more information, refer to <i>Clause 74.8.3 of IEEE 802.3ap-2007</i> .
0x4B2	0:10	—	Reserved	—
	11	RW	KR FEC TX Error Insert	Writing a 1 inserts one error pulse into the TX FEC depending on the Transcoder and Burst error settings. This bit self clears.
	31:12	—	Reserved	—
0x4B5 to 0x4BF			Reserved for 40G KR	Intentionally left empty for address compatibility with 40G MAC + PHY KR solutions.

Word Addr	Bit	R/W	Name	Description
0x4C0	0	RW	AN enable	When set to 1, enables Auto Negotiation function. The default value is 1. For additional information, refer to 7.0.12 in Clause 73.8 Management Register Requirements, of <i>IEEE 802.3ap-2007</i> .
	1	RW	AN base pages ctrl	When set to 1, the user base pages are enabled. You can send any arbitrary data via the user base page low/high bits. When set to 0, the user base pages are disabled and the state machine generates the base pages to send.
	2	RW	AN next pages ctrl	When set to 1, the user next pages are enabled. You can send any arbitrary data via the user next page low/high bits. When set to 0, the user next pages are disabled. The state machine generates the null message to send as next pages.
	3	RW	Local device remote fault	When set to 1, the local device signals Remote Faults in the Auto Negotiation pages. When set to 0 a fault has not occurred.
	4	RW	Force TX nonce value	When set to 1, forces the TX nonce value to support some UNH testing modes. When set to 0, this is normal operation.
	5	RW	Override AN Parameters Enable	When set to 1, overrides the AN_TECH, AN_FEC, and AN_PAUSE parameters and uses the bits in 0xC3 instead. You must reset the Sequencer to reconfigure and restart into Auto Negotiation mode. When set to 0, this is normal operation and is used with 0x4B0 bit 0 and 0x4C3 bits[30:16].
0x4C1	0	RW	Reset AN	When set to 1, resets all the 10GBASE-KR Auto Negotiation state machines. This bit is self-clearing.
	4	RW	Restart AN TX SM	When set to 1, restarts the 10GBASE-KR TX state machine. This bit self clears. This bit is active only when the TX state machine is in the Auto Negotiation state. For more information, refer to 7.0.9 in Clause 73.8 Management Register Requirements of <i>IEEE 802.3ap-2007</i> .
	8	RW	AN Next Page	When asserted, new next page info is ready to send. The data is in the XNP TX registers. When 0, the TX interface sends null pages. This bit self clears. Next Page (NP) is encoded in bit D15 of Link Codeword. For more information, refer to Clause 73.6.9 and 7.16.15 of Clause 45.2.7.6 of <i>IEEE 802.3ap-2007</i> .

Word Addr	Bit	R/W	Name	Description
0x4C2	1	RO	AN page received	When set to 1, a page has been received. When 0, a page has not been received. The current value clears when the register is read. For more information, refer to 7.1.6 in Clause 73.8 of <i>IEEE 802.3ap-2007</i> .
	2	RO	AN Complete	When asserted, Auto-Negotiation has completed. When 0, Auto Negotiation is in progress. For more information, refer to 7.1.5 in Clause 73.8 of <i>IEEE 802.3ap-2007</i> .
	3	RO	AN ADV Remote Fault	When set to 1, fault information has been sent to the link partner. When 0, a fault has not occurred. The current value clears when the register is read. Remote Fault (RF) is encoded in bit D13 of the base Link Codeword. For more information, refer to Clause 73.6.7 of and 7.16.13 of <i>IEEE 802.3ap-2007</i> .
	4	RO	AN RX SM Idle	When set to 1, the Auto-Negotiation state machine is in the idle state. Incoming data is not Clause 73 compatible. When 0, the Auto-Negotiation is in progress.
	5	RO	AN Ability	When set to 1, the transceiver PHY is able to perform Auto Negotiation. When set to 0, the transceiver PHY is not able to perform Auto Negotiation. If your variant includes Auto Negotiation, this bit is tied to 1. For more information, refer to 7.1.3 and 7.48.0 of Clause 45 of <i>IEEE 802.3ap-2007</i> .
	6	RO	AN Status	When set to 1, link is up. When 0, the link is down. The current value clears when the register is read. For more information, refer to 7.1.2 of Clause 45 of <i>IEEE 802.3ap-2007</i> .
	7	RO	LP AN Ability	When set to 1, the link partner is able to perform Auto Negotiation. When 0, the link partner is not able to perform Auto-Negotiation. For more information, refer to 7.1.0 of Clause 45 of <i>IEEE 802.3ap-2007</i> .

Word Addr	Bit	R/W	Name	Description
0x4C2	8	RO	FEC negotiated – enable FEC from SEQ	When set to 1, PHY is negotiated to perform FEC. When set to 0, PHY is not negotiated to perform FEC.
	9	RO	Seq AN Failure	When set to 1, a sequencer Auto Negotiation failure has been detected. When set to 0, an Auto Negotiation failure has not been detected.
	17:12	RO	KR AN Link Ready[5:0]	Provides a one-hot encoding of an_receive_idle = true and link status for the supported link as described in Clause 73.10.1. The following encodings are defined: • 6'b000000: 1000BASE-KX • 6'b000001: 10GBASE-KX4 • 6'b000100: 10GBASE-KR • 6'b001000: 40GBASE-KR4 • 6'b010000: 40GBASE-CR4 • 6'b100000: 100GBASE-CR10



Word Addr	Bit	R/W	Name	Description
0x4C3	15:0	RW	User base page low	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation base pages ctrl bit is set. The following bits are defined: [15]: Next page bit [14]: ACK which is controlled by the SM [13]: Remote Fault bit [12:10]: Pause bits [9:5]: Echoed nonce which are set by the state machine [4:0]: Selector Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.
	21:16	RW	Override AN_TECH[5:0]	AN_TECH value with which to override the current value. The following bits are defined: - Bit-16 = AN_TECH[0] = 1000Base-KX - Bit-17 = AN_TECH[1] = XAUI - Bit-18 = AN_TECH[2] = 10Gbase-KR - Bit-19 = AN_TECH[3] = 40G - Bit-20 = AN_TECH[4] = CR-4 - Bit-21 = AN_TECH[5] = 100G You must set 0x4C0 bit-5 for this to take effect .
	25:24	RW	Override AN_FEC[1:0]	AN_FEC value with which to override the current value. The following bits are defined: - Bit-24 = AN_FEC [0] = Capability - Bit-25 = AN_FEC [1] = Request You must set 0x4C0 bit-5 for this to take effect.
	30:28	RW	Override AN_PAUSE[2:0]	AN_PAUSE value with which to override the current value. The following bits are defined: - Bit-28 = AN_PAUSE [0] = Pause Ability - Bit-29 = AN_PAUSE [1] = Asymmetric Direction - Bit-30 = AN_PAUSE [2] = Reserved You must set 0x4C0 bit-5 for this to take effect.
0x4C4	31:0	RW	User base page high	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation base pages ctrl bit is set. The following bits are defined: [29:5]: Correspond to page bit 45:21 which are the technology ability. [4:0]: Correspond to bits 20:16 which are TX nonce bits. Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.

Word Addr	Bit	R/W	Name	Description
0x4C5	15:0	RW	User Next page low	The Auto Negotiation TX state machine uses these bits if the AN Next Page control bit is set. The following bits are defined: • [15]: next page bit • [14]: ACK controlled by the state machine • [13]: Message Page (MP) bit • [12]: ACK2 bit • [11]: Toggle bit For more information, refer to Clause 73.7.7.1 Next Page encodings of <i>IEEE 802.3ap-2007</i>. Bit 49, the PRBS bit, is generated by the Auto-Negotiation TX state machine.
0x4C6	31:0	RW	User Next page high	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation next pages ctrl bit is set. Bits [31:0] correspond to page bits [47:16]. Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.
0x4C7	15:0	RO	LP base page low	The AN RX state machine received these bits from the link partner. The following bits are defined: • [15] Next page bit • [14] ACK which is controlled by the state machine • [13] RF bit • [12:10] Pause bits • [9:5] Echoed Nonce which are set by the state machine • [4:0] Selector
0x4C8	31:0	RO	LP base page high	The AN RX state machine received these bits from the link partner. The following bits are defined: • [31:30]: Reserved • [29:5]: Correspond to page bits [45:21] which are the technology ability • [4:0]: Correspond to bits [20:16] which are TX Nonce bits

Word Addr	Bit	R/W	Name	Description
0x4C9	15:0	RO	LP Next page low	The AN RX state machine receives these bits from the link partner. The following bits are defined: • [15]: Next page bit • [14]: ACK which is controlled by the state machine • [13]: MP bit • [12] ACK2 bit • [11] Toggle bit For more information, refer to Clause 73.7.7.1 Next Page encodings of IEEE 802.3ap-2007.
0x4CA	31:0	RO	LP Next page high	The AN RX state machine receives these bits from the link partner. Bits [31:0] correspond to page bits [47:16]
0x4CB	24:0	RO	AN LP ADV Tech_A[24:0]	Received technology ability field bits of Clause 73 Auto Negotiation. The 10GBASE-KR PHY supports A0 and A2. The following protocols are defined: • A0 1000BASE-KX • A1 10GBASE-KX4 • A2 10GBASE-KR • A3 40GBASE-KR4 • A4 40GBASE-CR4 • A5 100GBASE-CR10 • A24:6 are reserved For more information, refer to Clause 73.6.4 and AN LP base page ability registers (7.19-7.21) of Clause 45 of IEEE 802.3ap-2007.
	26:25	RO	AN LP ADV FEC_F[1:0]	Received FEC ability bits FEC (F0:F1) is encoded in bits D46:D47 of the base Link Codeword. F0 is FEC ability. F1 is FEC requested. See Clause 73.6.5 of IEEE 802.3ap-2007 for details.
	27	RO	AN LP ADV Remote Fault	Received Remote Fault (RF) ability bits. RF is encoded in bit D13 of the base link codeword in Clause 73 AN. For more information, refer to Clause 73.6.7 of IEEE 802.3ap-2007.
	30:28	RO	AN LP ADV Pause Ability_C[2:0]	Received pause ability bits. Pause (C0:C1) is encoded in bits D11:D10 of the base link codeword in Clause 73 AN as follows: • C0 is the same as PAUSE as defined in Annex 28B • C1 is the same as ASM_DIR as defined in Annex 28B • C2 is reserved

Word Addr	Bit	R/W	Name	Description
0x4D0	0	RW	Link Training enable	When 1, enables the 10GBASE-KR start-up protocol. When 0, disables the 10GBASE-KR start-up protocol. The default value is 1. For more information, refer to Clause 72.6.10.3.1 and 10GBASE-KR PMD control register bit (1.150.1) of <i>IEEE 802.3ap-2007</i> .
	1	RW	dis_max_wait_tmr	When set to 1, disables the LT max_wait_timer . Used for characterization mode when setting much longer BER timer values.
	2	RW	quick_mode	When set to 1, only the init and preset values are used to calculate the best BER.
	3	RW	pass_one	When set to 1, the BER algorithm considers more than the first local minimum when searching for the lowest BER. The default value is 1.
	7:4	RW	main_step_cnt [3:0]	Specifies the number of equalization steps for each main tap update. There are about 20 settings for the internal algorithm to test. The valid range is 1-15. The default value is 4'b0001.
	11:8	RW	prpo_step_cnt [3:0]	Specifies the number of equalization steps for each pre- and post-tap update. From 16-31 steps are possible. The default value is 4'b0001.

Word Addr	Bit	R/W	Name	Description
0x4D0	14:12	RW	equal_cnt [2:0]	Adds hysteresis to the error count to avoid local minimums. The following values are defined: • 000 = 0 • 001 = 1 • 010 = 2 • 011 = 3 • 100 = 4 • 101 = 8 • 110 = 16 • 111 = reserved The default value is 010.
	15	RW	disable Initialize PMA on max_wait_timeout	When set to 1, PMA values (VOD, Pre-tap, Post-tap) are not initialized upon entry into the Training_Failure state. This happens when max_wait_timer_done, which sets training_failure = true (reg 0xD2 bit 3). Used for UNH testing. When set to 0, PMA values are initialized upon entry into Training_Failure state. Refer to Figure 72-5 of <i>IEEE 802.3ap-2007</i> for more details.
	16	RW	Override LP Coef enable	When set to 1, overrides the link partner's equalization coefficients; software changes the update commands sent to the link partner TX equalizer coefficients. When set to 0, uses the Link Training logic to determine the link partner coefficients. Used with 0x4D1 bit-4 and 0x4D4 bits[7:0].
	17	RW	Override Local RX Coef enable	When set to 1, overrides the local device equalization coefficients generation protocol. When set, the software changes the local TX equalizer coefficients. When set to 0, uses the update command received from the link partner to determine local device coefficients. Used with 0x4D1 bit-8 and 0x4D4 bits[23:16]. The default value is 0.

Word Addr	Bit	R/W	Name	Description
0x4D0	19:18	RW	ctle depth	When using CTLE fine-grained tuning, determines where to set final value in case of a tie. The following values are defined: • 00 = at lower tie • 01 = 25% to upper tie • 10 = 50% between lower and upper • 11 = at upper tie
	22:20	RW	rx_ctle_mode default = 001	Defines at what point to enable the RX CTLE in the adaptation algorithm. The following values are defined: • 000 = never, the RX CTLE isn't enabled or adjusted. • 001 = only if cannot gain lt_frame_lock. Four steps 4, 8, 12, and 15 tested. • 010 = always to allow lt_frame_lock. Four steps 4, 8, 12, and 15 tested. • 011 = always with fine-grained tuning of value. • 100 = One-time only if can't gain lt_frame_lock. • 101 = One-time always at the beginning of the LT. • 110 = continuous • 111 = reserved The default value is 001.
	26:24	RW	rx_dfe_mode	Defines when to enable the RX DFE in the adaptation algorithm. The following values are defined: • 000 = never, the RX DFE is not enabled or adjusted. • 001 = only if cannot gain lt_frame_lock at beginning/end of the LT process. • 010 = Always trigger DFE at the beginning/end of LT process. • 011 = Always trigger DFE at beginning/end of the tap adjustment. • 100 = Trigger DFE at each new VOD, Post, Pre tap value. • 101 = continuous • 110 – 111 = reserved The default value is 001.

Word Addr	Bit	R/W	Name	Description
0x4D0	27	RW	fixed_mode	Fixed TX EQ mode. Modifies the adaptation algorithm to settle on the max pre-tap and max VOD independent of the ber_count. It settles on the max_post_step for the Post-Tap value. This bit has priority over the max_mode bit.
	28	RW	max_mode	Max TX EQ mode. Modifies the adaptation algorithm to settle on the max pre-tap and max VOD if you have ber_max for all values. It settles on the max_post_step for the Post-Tap value.
	31:29	RW	max_post_step[2:0]	The number of EQ steps for the Post-Tap when in max_mode. You may receive frame_lock_error (reg 0xD2 bit-5) if you reduce Post-tap in min when you have ber_max.
0x4D1	0	RW	Restart Link training	When set to 1, resets the 10GBASE-KR start-up protocol. When set to 0, continues normal operation. This bit self clears. For more information, refer to the state variable mr_restart_training as defined in Clause 72.6.10.3.1 and 10GBASE-KR PMD control register bit (1.150.0) <i>IEEE 802.3ap-2007</i> .
	4	RW	Updated TX Coef new	When set to 1, there are new link partner coefficients available to send. The LT logic starts sending the new values set in 0x4D4 bits[7:0] to the remote device. When set to 0, continues normal operation. This bit self clears. Must enable this override in 0x4D0 bit16.
	8	RW	Updated RX coef new	When set to 1, new local device coefficients are available. The LT logic changes the local TX equalizer coefficients as specified in 0x4D4 bits[23:16]. When set to 0, continues normal operation. This bit self clears. Must enable the override in 0x4D0 bit17.

Word Addr	Bit	R/W	Name	Description
0x4D2	0	RO	Link Trained - Receiver status	When set to 1, the receiver is trained and is ready to receive data. When set to 0, receiver training is in progress. For more information, refer to the state variable rx_trained as defined in Clause 72.6.10.3.1 of <i>IEEE 802.3ap-2007</i> .
	1	RO	Link Training Frame lock	When set to 1, the training frame delineation has been detected. When set to 0, the training frame delineation has not been detected. For more information, refer to the state variable frame_lock as defined in Clause 72.6.10.3.1 of <i>IEEE 802.3ap-2007</i> .
	2	RO	Link Training Start-up protocol status	When set to 1, the start-up protocol is in progress. When set to 0, start-up protocol has completed. For more information, refer to the state training as defined in Clause 72.6.10.3.1 of <i>IEEE 802.3ap-2007</i> .
	3	RO	Link Training failure	When set to 1, a training failure has been detected. When set to 0, a training failure has not been detected. For more information, refer to the state variable training_failure as defined in Clause 72.6.10.3.1 of <i>IEEE 802.3ap-2007</i> .
	4	RO	Link Training Error	When set to 1, excessive errors occurred during Link Training. When set to 0, the BER is acceptable.
	5	RO	Link Training Frame lock Error	When set to 1, indicates a frame lock was lost during Link Training. If the tap settings specified by the fields of 0x4D5 are the same as the initial parameter value, the frame lock error was unrecoverable.
	6	RO	RXEQ Frame Lock Loss	Frame lock not detected at some point during RXEQ, possibly triggering conditional RXEQ mode.
	7	RO	CTLE Fine-grained Tuning Error	Could not determine the best CTLE due to maximum BER limit at each step in the Fine-grained Tuning mode.

Word Addr	Bit	R/W	Name	Description
0x4D3	9:0	RW	ber_time_frames	Specifies the number of training frames to examine for bit errors on the link for each step of the equalization settings. Used only when <i>ber_time_k_frames</i> is 0. The following values are defined: • A value of 2 is about 10^3 bytes • A value of 20 is about 10^4 bytes • A value of 200 is about 10^5 bytes The default value for simulation is 2'b11. The default value for hardware is 0.
	19:10	RW	ber_time_k_frames	Specifies the number of thousands of training frames to examine for bit errors on the link for each step of the equalization settings. Set <i>ber_time_m_frames</i> = 0 for time/bits to match the following values: • A value of 3 is about 10^7 bits = about 1.3 ms • A value of 25 is about 10^8 bits = about 11ms • A value of 250 is about 10^9 bits = about 11 0ms The default value for simulation is 0. The default value for hardware is 0x415.
	29:20	RW	ber_time_m_frames	Specifies the number of millions of training frames to examine for bit errors on the link for each step of the equalization settings. Set <i>ber_time_k_frames</i> = 4'd1000 = 0x43E8 for time/bits to match the following values: • A value of 3 is about 10^{10} bits = about 1.3 seconds • A value of 25 is about 10^{11} bits = about 11 seconds • A value of 250 is about 10^{12} bits = about 110 seconds

Word Addr	Bit	R/W	Name	Description
0x4D4	5:0	RO or RW	LD coefficient update[5:0]	Reflects the contents of the first 16-bit word of the training frame sent from the local device control channel. Normally, the bits in this register are read-only; however, when you override training by setting the <code>Override Coef enable</code> control bit, these bits become writeable. The following fields are defined: [5:4]: Coefficient (+1) update 2'b11: Reserved 2'b01: Increment 2'b10: Decrement 2'b00: Hold [3:2]: Coefficient (0) update (same encoding as [5:4]) [1:0]: Coefficient (-1) update (same encoding as [5:4]) For more information, refer to 10G BASE-KR LD coefficient update register bits (1.154.5:0) in Clause 45.2.1.80.3 of <i>IEEE 802.3ap-2007</i>.
	6	RO or RW	LD Initialize Coefficients	When set to 1, requests the link partner coefficients be set to configure the TX equalizer to its INITIALIZE state. When set to 0, continues normal operation. For more information, refer to 10G BASE-KR LD coefficient update register bits (1.154.12) in Clause 45.2.1.80.3 and Clause 72.6.10.2.3.2 of <i>IEEE 802.3ap-2007</i>.
	7	RO or RW	LD Preset Coefficients	When set to 1, requests the link partner coefficients be set to a state where equalization is turned off. When set to 0 the link operates normally. For more information, refer to 10G BASE-KR LD coefficient update register bit (1.154.13) in Clause 45.2.1.80.3 and Clause 72.6.10.2.3.2 of <i>IEEE 802.3ap-2007</i>.

Word Addr	Bit	R/W	Name	Description
0x4D4	13:8	RO	LD coefficient status[5:0]	Status report register for the contents of the second, 16-bit word of the training frame most recently sent from the local device control channel. The following fields are defined: [5:4]: Coefficient (post-tap) 2'b11: Maximum 2'b01: Minimum 2'b10: Updated 2'b00: Not updated [3:2]: Coefficient (0) (same encoding as [5:4]) [1:0]: Coefficient (pre-tap) (same encoding as [5:4]) For more information, refer to 10G BASE-KR LD status report register bit (1.155.5:0) in Clause 45.2.1.81 of <i>IEEE 802.3ap-2007</i>.
	14	RO	Link Training ready - LD Receiver ready	When set to 1, the local device receiver has determined that training is complete and is prepared to receive data. When set to 0, the local device receiver is requesting that training continue. Values for the receiver ready bit are defined in Clause 72.6.10.2.4.4. For more information, refer to 10G BASE-KR LD status report register bit (1.155.15) in Clause 45.2.1.81 of <i>IEEE 802.3ap-2007</i>.

Word Addr	Bit	R/W	Name	Description
0x4D4	21:16	RO or RW	LP coefficient update[5:0]	Reflects the contents of the first 16-bit word of the training frame most recently received from the control channel. Normally the bits in this register are read only; however, when training is disabled by setting low the KR Training enable control bit, these bits become writeable. The following fields are defined: [5:4]: Coefficient (+1) update 2'b11: Reserved 2'b01: Increment 2'b10: Decrement 2'b00: Hold [3:2]: Coefficient (0) update (same encoding as [5:4]) [1:0]: Coefficient (-1) update (same encoding as [5:4]) For more information, refer to 10G BASE-KR LP coefficient update register bits (1.152.5:0) in Clause 45.2.1.78.3 of <i>IEEE 802.3ap-2007</i>.
	22	RO or RW	LP Initialize Coefficients	When set to 1, the local device transmit equalizer coefficients are set to the INITIALIZE state. When set to 0, normal operation continues. The function and values of the initialize bit are defined in Clause 72.6.10.2.3.2. For more information, refer to 10G BASE-KR LP coefficient update register bits (1.152.12) in Clause 45.2.1.78.3 of <i>IEEE 802.3ap-2007</i>.
	23	RO or RW	LP Preset Coefficients	When set to 1, The local device TX coefficients are set to a state where equalization is turned off. Preset coefficients are used. When set to 0, the local device operates normally. The function and values of the preset bit is defined in 72.6.10.2.3.1. The function and values of the initialize bit are defined in Clause 72.6.10.2.3.2. For more information, refer to 10G BASE-KR LP coefficient update register bits (1.152.13) in Clause 45.2.1.78.3 of <i>IEEE 802.3ap-2007</i>.

Word Addr	Bit	R/W	Name	Description
0x4D4	29:24	RO	LP coefficient status[5:0]	Status report register reflects the contents of the second, 16-bit word of the training frame most recently received from the control channel: The following fields are defined: [5:4]: Coefficient (+1) 2'b11: Maximum 2'b01: Minimum 2'b10: Updated 2'b00: Not updated [3:2]: Coefficient (0) (same encoding as [5:4]) - n [1:0]: Coefficient (-1) (same encoding as [5:4]) For more information, refer to 10G BASE-KR LP status report register bits (1.153.5:0) in Clause 45.2.1.79 of <i>IEEE 802.3ap-2007</i>.
	30	RO	LP Receiver ready	When set to 1, the link partner receiver has determined that training is complete and is prepared to receive data. When set to 0, the link partner receiver is requesting that training continue. Values for the receiver ready bit are defined in Clause 72.6.10.2.4.4. For more information, refer to 10G BASE-KR LP status report register bits (1.153.15) in Clause 45.2.1.79 of <i>IEEE 802.3ap-2007</i>.
0x4D5	4:0	R	LT V _{OD} setting	Stores the most recent TX V _{OD} setting trained by the link partner's RX based on the LT coefficient update logic driven by Clause 72. It reflects Link Partner commands to fine-tune the TX preemphasis taps.
	13:8	R	LT Post-tap setting	Stores the most recent TX post-tap setting trained by the link partner's RX based on the LT coefficient update logic driven by Clause 72. It reflects Link Partner commands to fine-tune the TX pre-emphasis taps.
	20:16	R	LT Pre-tap setting	Store the most recent TX pre-tap setting trained by the link partner's RX based on the LT coefficient update logic driven by Clause 72. It reflects Link Partner commands to fine-tune the TX pre-emphasis taps.

Word Addr	Bit	R/W	Name	Description
0x4D5	27:24	R	RXEQ CTLE Setting	Most recent ct le_rc setting sent to the reconfig bundle during RX equalization.
	29:28	R	RXEQ CTLE Mode	Most recent ct le_mode setting sent to the reconfig bundle during RX equalization.
	31:30	R	RXEQ DFE Mode	Most recent dfe_mode setting sent to the reconfig bundle during RX equalization.

Word Addr	Bit	R/W	Name	Description
0x4D6	4:0	RW	LT VODMAX ovrđ	Override value for the VMAXRULE parameter. When enabled, this value substitutes for the VMAXRULE to allow channel-by-channel override of the device settings. This only effects the local device TX output for the channel specified. This value must be greater than the INITMAINVAL parameter for proper operation. Note this will also override the PREMAINVAL parameter value.
	5	RW	LT VODMAX ovrđ Enable	When set to 1, enables the override value for the VMAXRULE parameter stored in the LT VODMAX ovrđ register field.
	12:8	RW	LT VODMin ovrđ	Override value for the VODMINRULE parameter. When enabled, this value substitutes for the VMINRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value to be substituted must be less than the INITMAINVAL parameter and greater than the VMINRULE parameter for proper operation.
	13	RW	LT VODMin ovrđ Enable	When set to 1, enables the override value for the VODMINRULE parameter stored in the LT VODMin ovrđ register field.
	21:16	RW	LT VPOST ovrđ	Override value for the VPOSTRULE parameter. When enabled, this value substitutes for the VPOSTRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value to be substituted must be greater than the INITPOSTVAL parameter for proper operation.
	22	RW	LT VPOST ovrđ Enable	When set to 1, enables the override value for the VPOSTRULE parameter stored in the LT VPOST ovrđ register field.
	28:24	RW	LT VPre ovrđ	Override value for the VPRETRULE parameter. When enabled, this value substitutes for the VPOSTRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value to be substituted must be greater than the INITPREVAL parameter for proper operation.
	29	RW	LT VPre ovrđ Enable	When set to 1, enables the override value for the VPRETRULE parameter stored in the LT VPre ovrđ register field.

Word Addr	Bit	R/W	Name	Description
0x4D6 to 0x4FF			Reserved for 40G KR	Left empty for address compatibility with 40G MAC+PHY KR solution.

Hard Transceiver PHY Registers

Table 2-116: Hard Transceiver PHY Registers

Addr	Bit	Access	Name	Description
0x000-0x3FF	[9:0]	RW	Access to HSSI registers	All registers in the PCS and PMA that you can dynamically reconfigure are in this address space. Refer to reconfiguration chapter for further information.

Enhanced PCS Registers

These registers provide Enhanced PCS status information.

Table 2-117: PCS Registers

Addr	Bit	Access	Name	Description
0x480	31:0	RW	Indirect_addr	Because the PHY implements a single channel, this register must remain at the default value of 0 to specify logical channel 0.
0x481	2	RW	RCLR_ERRBLK_CNT	Error Block Counter clear register. When set to 1, clears the RCLR_ERRBLK_CNT register. When set to 0, normal operation continues.
	3	RW	RCLR_BER_COUNT	BER Counter clear register. When set to 1, clears the RCLR_BER_COUNT register. When set to 0, normal operation continues.
0x482	1	RO	HI_BER	High BER status. When set to 1, the PCS is reporting a high BER. When set to 0, the PCS is not reporting a high BER.
	2	RO	BLOCK_LOCK	Block lock status. When set to 1, the PCS is locked to received blocks. When set to 0, the PCS is not locked to received blocks.
	3	RO	TX_FIFO_FULL	When set to 1, the TX_FIFO is full.
	4	RO	RX_FIFO_FULL	When set to 1, the RX_FIFO is full.
	7	RO	Rx_DATA_READY	When set to 1, indicates the PHY is ready to receive data.

PMA Registers

The PMA registers allow you to reset the PMA, customize the TX and RX serial data interface, and provide status information.

Table 2-118: PMA Registers

Address	Bit	R/W	Name	Description
0x444	1	RW	reset_tx_digital	Writing a 1 causes the internal TX digital reset signal to be asserted. You must write a 0 to clear the reset condition.
	2	RW	reset_rx_analog	Writing a 1 causes the internal RX analog reset signal to be asserted. You must write a 0 to clear the reset condition.
	3	RW	reset_rx_digital	Writing a 1 causes the internal RX digital reset signal to be asserted. You must write a 0 to clear the reset condition.
0x461	0	RW	phy_serial_loopback	Writing a 1 puts the channel in serial loopback mode.
0x464	0	RW	pma_rx_set_locktodata	When set, programs the RX CDR PLL to lock to the incoming data.
0x465	0	RW	pma_rx_set_locktoref	When set, programs the RX clock data recovery (CDR) PLL to lock to the reference clock.
0x466	0	RO	pma_rx_is_lockedtodata	When asserted, indicates that the RX CDR PLL is locked to the RX data, and that the RX CDR has changed from LTR to LTD mode.
0x467	0	RO	pma_rx_is_lockedtoref	When asserted, indicates that the RX CDR PLL is locked to the reference clock.

Creating a 10GBASE-KR Design

Follow these steps to create a 10GBASE-KR design.

1. Generate the 10GBASE-KR PHY with the required parameterization.
The 10GBASE-KR PHY IP core includes a reconfiguration block. The reconfiguration block provides the Avalon-MM interface to access the PHY registers.
2. Instantiate a reset controller. You can generate an Altera Transceiver Reset Controller IP core from the IP Catalog. You must connect the Transceiver Reset Controller IP core and 10GBASE-KR PHY IP core power and reset signals.
3. Instantiate one TX PLL for the 1G data rate and one TX PLL for the 10G data rate. Connect the high speed serial clock and PLL lock signals between 10GBASE-KR PHY and TX PLLs. For the 1G data rate you can use either fPLL, or ATX, or CMU PLL. For the 10G data rate you can use ATX PLL or CMU PLL.
4. Generate a fractional PLL to create the 156.25 MHz XGMII clock from the 10G reference clock.
5. Use the tx_pma_divclk from the 10GBASE-KR PHY or generate a fPLL to create the 156.25 MHz XGMII clock from the 10G reference clock.

Unlike in the 10GBASE-KR PHY IP core for Stratix V devices, no Memory Initialization Files (.mif) are required for the 10GBASE-KR design in Arria 10 devices.


6. Complete the design by creating a top level module to connect all the IP (10GBASE-KR PHY IP core, PLL IP core, and Reset Controller) blocks.

Related Information

- [fPLL](#) on page 3-13
- [CMU PLL](#) on page 3-21
- [ATX PLL](#) on page 3-3
- [Using the Altera Transceiver PHY Reset Controller](#) on page 4-9
- [10GBASE-KR Functional Description](#) on page 2-127

Design Example

Figure 2-54: PHY-Only Design Example with Two Backplane Ethernet and Two Line-Side (1G/10G) Ethernet Channels

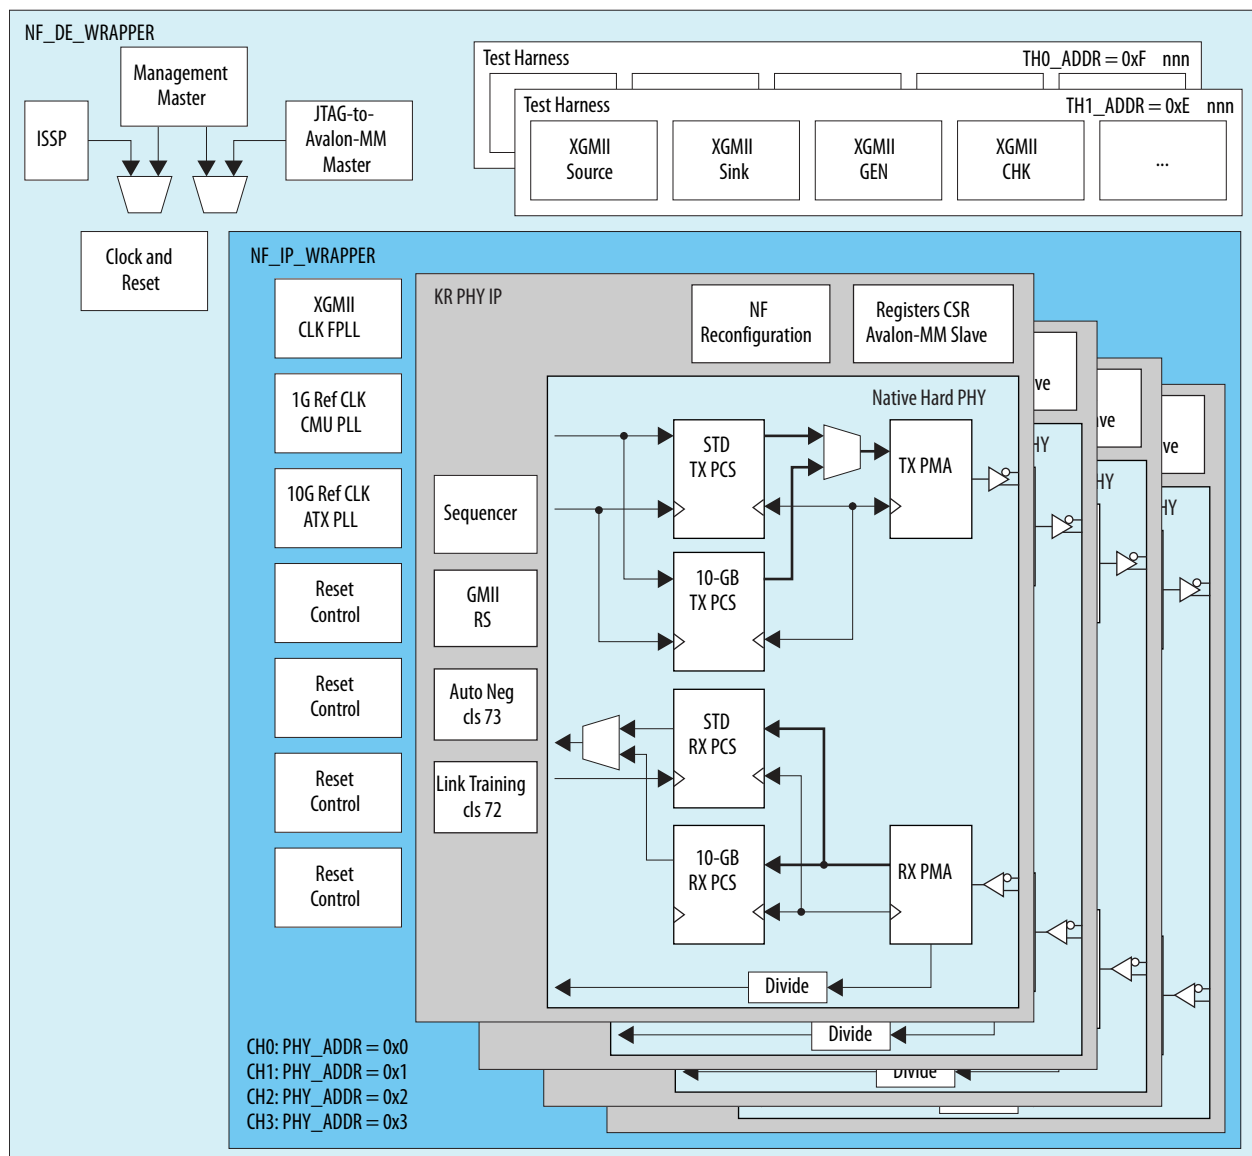

Related Information

- [Arria 10 Transceiver PHY Design Examples](#)
- [10-Gigabit Ethernet MAC MegaCore Function User Guide](#)
For more information about the MAC + PHY design example.

Simulation Support

The 1G/10GbE and 10GBASE-KR PHY IP core supports the following Altera-supported simulators for this Quartus II software release:

- ModelSim Verilog
- ModelSim VHDL
- VCS Verilog
- VCS VHDL

Arria 10 devices also support NCSIM Verilog and NCSIM VHDL simulation. When you generate a 1G/10GbE or 10GBASE-KR PHY IP core, the Quartus II software optionally generates an IP functional simulation model.

1-Gigabit/10-Gigabit Ethernet (GbE) PHY IP Core

Ethernet standard comprises many different PHY standards with variations in signal transmission medium and data rates. The 1G/10Gbps Ethernet PHY IP core targets the reconfigurable 10-Mbps/100-Mbps/1-Gbps/10-Gbps data rates with one core dynamically. This Ethernet PHY interfaces to 1G/10GbE dual speed SFP+ pluggable modules, 10MB–10GbE 10GBASE-T, and 10MB/100MB/1000MB 1000BASE-T copper external PHY devices to drive CAT-6/7 shielded twisted pair cables, and chip-to-chip interfaces.


The 1G/10 Gbps Ethernet PHY (1G/10GbE) MegaCore[®] function allows you to support the following features of Ethernet standards:

- 1 GbE protocol as defined in *Clause 36 of the IEEE 802.3-2008 Standard*
- GMII to connect the PHY with a media access control (MAC) as defined in *Clause 35 of the IEEE 802.3-2008 Standard*
- Gigabit Ethernet Auto-negotiation as defined in *Clause 37 of the IEEE 802.3-2008 Standard*
- 10GBASE-R Ethernet protocol as defined in *Clause 49 of the IEEE 802.3-2008 Standard*
- Single data rate (64 data bits and 8 control bits) XGMII to provide simple and inexpensive interconnection between the MAC and the PHY as defined in *Clause 46 of the IEEE 802.3-2008 Standard*
- SGMII 10-Mbps/100-Mbps/1-Gbps data rate where 10-Mbps/100-Mbps MII to connect physical media with the MAC as defined in *Clause 22 of the IEEE 802.3-2008 Standard*
- Forward Error correction(FEC) as defined in *Clause 74 of the IEEE 802.3-2008 Standard*
- Precision time protocol (PTP) as defined in the *IEEE 1588 Standard*

The 1G/10Gbps Ethernet PHY IP Core allows you to implement the 1GbE protocol using the Standard PCS and to implement the 10GbE protocol using Enhanced PCS and PMA. You can switch dynamically between the 1G and 10G data rates using dynamic reconfiguration to reprogram the core. Or, you can use the speed detection option to automatically switch data rates based on received data.

Figure 2-55: Top Level Modules of the 1G/10GbE PHY MegaCore Function

The Enhanced PCS receives and transmits XGMII data. The Standard PCS receives and transmits GMII data.

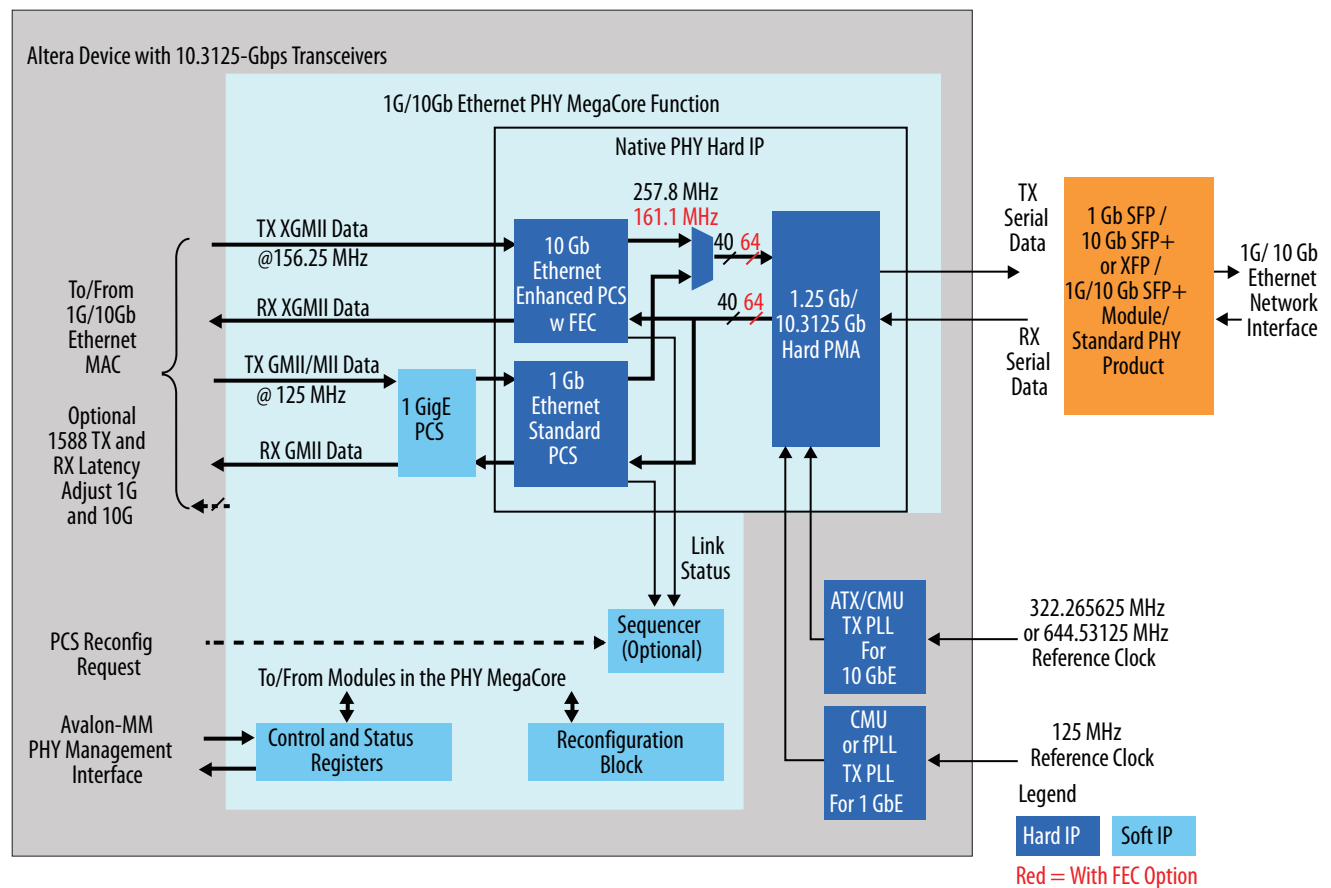

An Avalon-MM slave interface provides access to the 1G/10GbE PHY IP Core registers. These registers control many of the functions of the other blocks. Many of these bits are defined in *Clause 45 of IEEE 802.3ap-2008 Standard*.

Related Information

- [IEEE Std 802.3ap-2008 Standard](#)
- [Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems](#)

1G/10GbE PHY Release Information

This topic provides information about this release of the 1G/10GbE PHY IP Core.

Table 2-119: 1G/10GbE Release Information

Item	Description
Version	14.1

Item	Description
Release Date	December 2014
Ordering Codes	IP-1G10GBASER (primary) IPR-1G10GBASER (renewal code)
Product ID	0106
Vendor ID	6AF7

1G/10GbE PHY Performance and Resource Utilization

This topic provides performance and resource utilization for the 1G/10GbE PHY IP core in Arria 10 devices.


The following table shows the typical expected resource utilization for selected configurations using the Quartus II software Arria 10 Edition v13.1. The numbers of ALMs and logic registers are rounded up to the nearest 100.

Table 2-120: 1GbE/10GbE PHY Performance and Resource Utilization

Variant	ALMs	ALUTs	Registers	M20K
1G/10GbE PHY with IEEE 1588 v2	2650	3950	5100	6
1G/10GbE PHY	1500	2350	2850	2
1G/10GbE PHY with FEC	1500	2350	2850	2

1G/10GbE PHY Functional Description

Figure 2-56: 1G/10GbE PHY Block Diagram

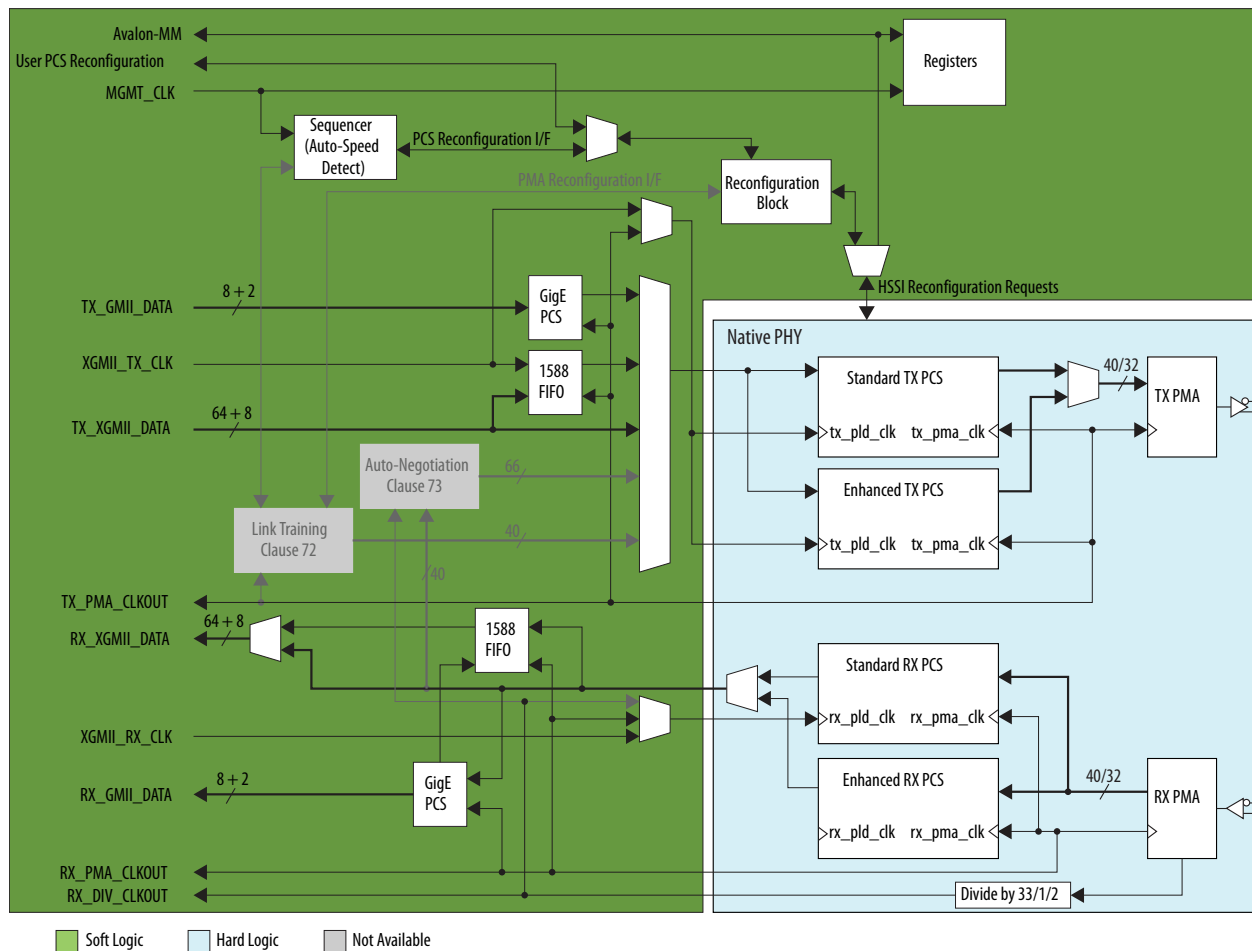

Standard and Enhanced PCS Datapaths

The Standard PCS and PMA inside the Native PHY are configured as the Gigabit Ethernet PHY. The Enhanced PCS and PMA inside the Native PHY are configured as the 10GBASE-R PHY. Refer to the Standard PCS and Enhanced PCS architecture chapters for more details.

Sequencer

The Sequencer controls the start-up sequence of the PHY IP, including reset and power-on. It selects which PCS (1G or 10G) and PMA interface is active. The Sequencer interfaces to the reconfiguration block to request a reconfigurations to change from one data rate to the other data rate.

GigE PCS

The GigE PCS includes the GMII interface and *Clause 37* auto negotiation and SGMII functionality.

Soft Enhanced PCS FIFO for IEEE 1588v2

In IEEE 1588v2 mode, the enhanced PCS FIFOs for both TX and RX are constructed in soft IP to include the latency information via the latency adjustment ports. For more information about the required latency


information in the MAC as part of the Precision Time Protocol implementation, refer to the *10-Gbps Ethernet MAC MegaCore Function User Guide*.

Reconfiguration Block

The reconfiguration logic performs the Avalon-MM writes to the PHY for both PCS and PMA reconfiguration. The following figure shows reconfiguration blocks details. The Avalon-MM master accepts requests from the PMA or PCS controller. It performs the Read-Modify-Write or Write commands using the Avalon-MM interface. The PCS controller receives data rate change requests from the Sequencer and translates them to a series of Read-Modify-Write or Write commands to the PMA and PCS.

Figure 2-57: Reconfiguration Block Details

The 1G/10GbE PHY has the flexibility of being configured into multiple modes, for example with or without IEEE 1588v2, and with or without FEC in the enhanced PCS datapath.

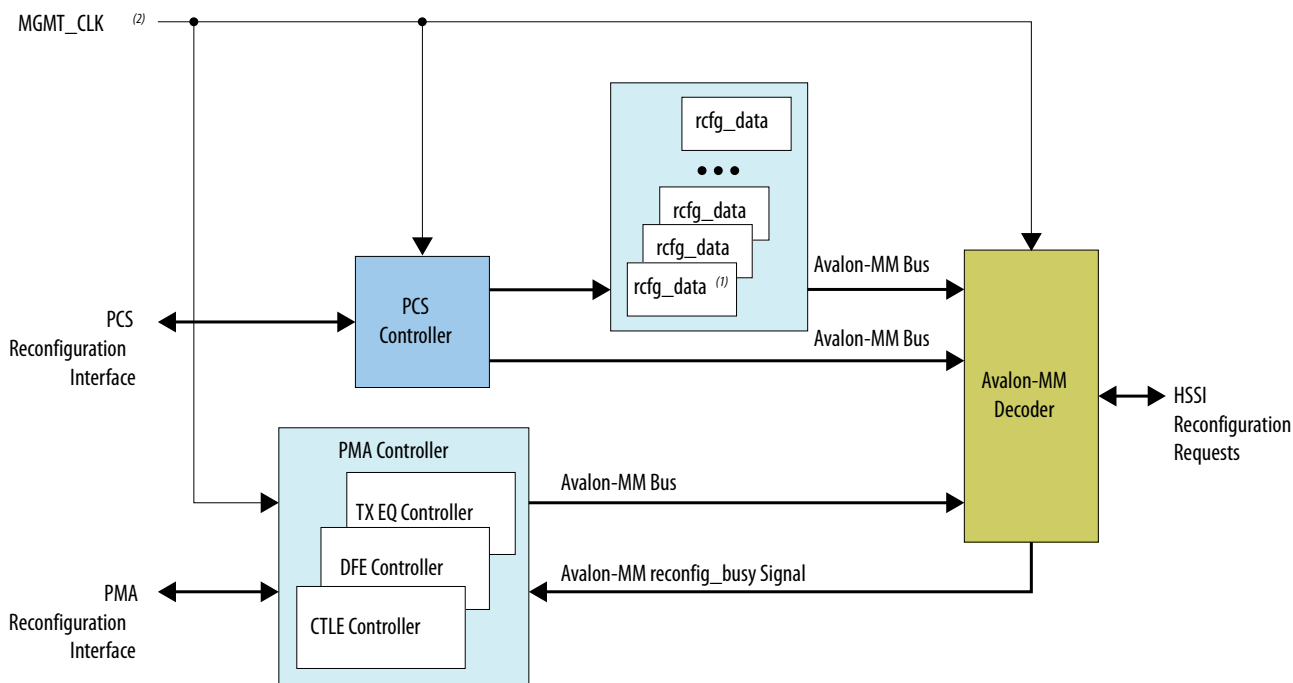

Notes:

1. rcfg = Reconfiguration

2. MGMT_CLK = Management Clock

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18
- [Arria 10 Standard PCS Architecture](#) on page 5-35
- [Arria 10 PMA Architecture](#) on page 5-1
- [10-Gbps Ethernet MAC MegaCore Function User Guide](#).

For more information about latency in the MAC as part of the Precision Time Protocol implementation.


Clock and Reset Interfaces

You can use a fPLL or a CMU PLL to generate the clock for the TX PMA for either the 1G or 10G data rate. For the 1G data rate, the frequency of the TX and RX clocks is 125 MHz, which is 1/8 of the MAC

data rate. For the 10G data rate, the frequency of TX and RX clocks is 156.25 MHz, 1/64 of the MAC data rate. You can generate the 156.25 MHz clock directly by using a fPLL, or you can divide the clock from TX PLL by 33. The 1G/10GbE PHY does not support bonded clocks.

The following figure provides an overview of the clocking for this core.

Figure 2-58: Clocks for Standard and 10G PCS and TX PLLs

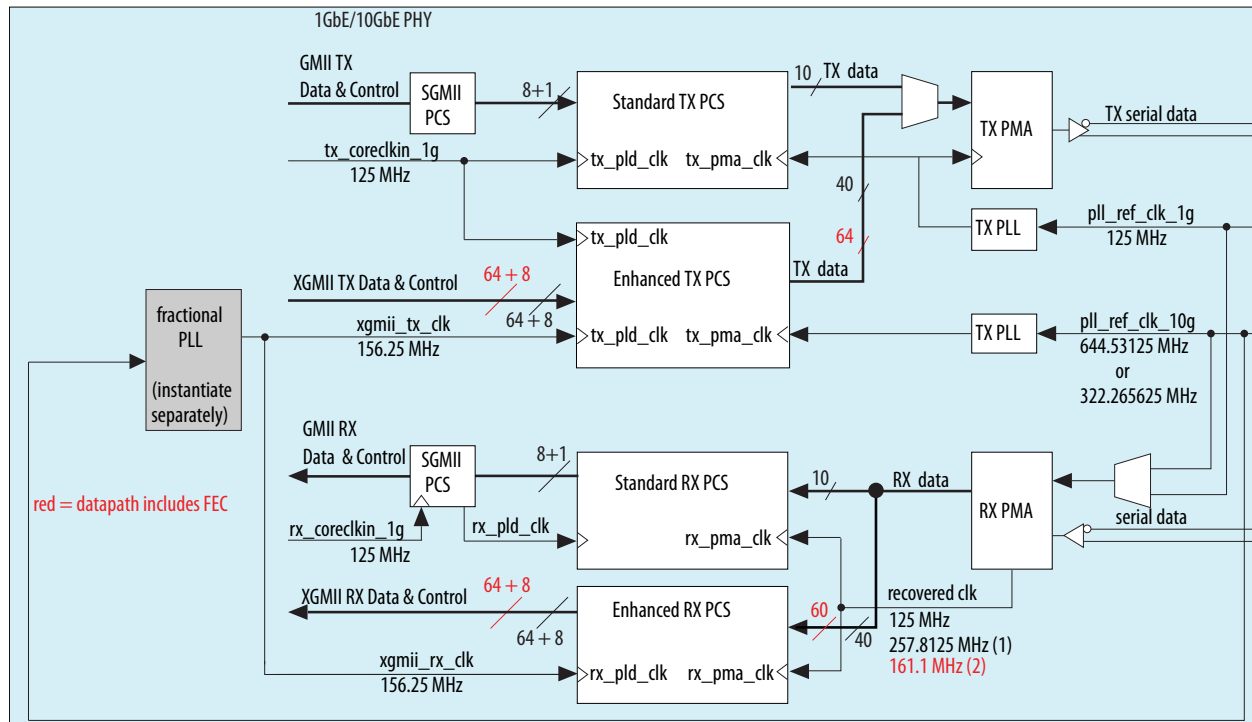

Notes:

1. 257.8125 MHz is for 10GbE.
2. 161.1 MHz is the FEC clock for 10GbE.

The following table describes the clock and reset signals.

Table 2-121: Clock and Reset Signals

Signal Name	Direction	Description
tx_serial_clk_10g	Input	High speed clock from the 10G PLL to drive 10G PHY TX PMA. The frequency of this clock is 5.15625 GHz.
tx_serial_clk_1g	Input	The clock from the external 1G PLL to drive the TX high speed serial interface (HSSI) circuits. Connected to the tx_serial_clk[1] input of the native PHY.
rx_cdr_ref_clk_10g	Input	10G PHY RX PLL reference clock . This clock frequency can be 644.53125 MHz or 322.2656 MHz.

Signal Name	Direction	Description
rx_cdr_refclk_1g	Input	The RX 1G PLL reference clock to drive the RX HSSI circuits. Connected to the rx_cdr_refclk[1] input of the native PHY.
mgmt_clk	Input	Avalon-MM clock and control system clock. Its frequency range is 100 MHz to 125 MHz.
mgmt_clk_reset	Input	When asserted, it resets the whole PHY.
xgmii_tx_clk	Input	The clock for the XGMII TX interface with the MAC. Altera recommends connecting it directly to a PLL for use with TSE. This drives tx_coreclk of the native PHY. Its frequency is 156.25 or 312.5 MHz.
xgmii_rx_clk	Input	The clock for the XGMII RX interface with the MAC. Altera recommends connecting it directly to a PLL for use with TSE. This drives rx_coreclk of the native PHY. Its frequency is 156.25 or 312.5 MHz.
tx_clkout	Output	Transmit parallel clock. It is sourced from out_pld_pcs_tx_clk_out on the HSSI. This could be used to provide the XGMII clocks or the GMII clocks, though if the PHY is reconfigured, the frequency will change. Its frequency is 125, 156.25, 161, 258, or 312.5 MHz.
rx_clkout	Output	Receive parallel clock. It is sourced from out_pld_pcs_rx_clk_out on the HSSI. If the PHY is reconfigured, the frequency will change. Its frequency is 125, 156.25, 161, 258, or 312.5 MHz.
tx_pma_clkout	Output	Transmit PMA clock. This is the clock for the 1588 mode TX FIFO and the 1G TX and RX PCS parallel data interface. Note: Use tx_div_clkout or xgmii_tx_clk for 10G TX datapath clocking. This clock is provided for the 1G mode GMII/MII data and SyncE mode where the clock can be used as a reference to lock an external clock source. Its frequency is 125, 161, or 258 MHz.
rx_pma_clkout	Output	Receive PMA clock. This is the clock for the 1588 mode RX FIFO and the 1G RX FIFO. Note: Use tx_div_clkout or xgmii_rx_clk for 10G RX datapath clocking. This clock is provided for the SyncE mode where the clock can be used as a reference to lock an external clock source. Its frequency is 125, 161, or 258 MHz.

Signal Name	Direction	Description
tx_div_clk	Output	This is the transmit div33 clock, which is sourced from the Native PHY tx_pma_div_clkout. It could be connected to the xgmii_tx_clk and xgmii_rx_clk clock inputs to drive the MAC interface, though if the PHY is reconfigured to 1G mode, the frequency will change. Its frequency is 125, 156.25, or 312.5 MHz.
rx_div_clk	Output	This is the receive div33 clock, which is recovered from the received data. It drives the Auto Negotiation (AN) and Link Training (LT) logic and is sourced from the Native PHY rx_pma_div_clkout port. Note: Use tx_clkout or xgmii_rx_clk for 10G TX datapath clocking. If the PHY is reconfigured to 1G mode, the frequency will change. Its frequency is 125, 156.25, or 312.5 MHz.
calc_clk_1g	Input	This is the clock for the GIGE PCS 1588 mode.
tx_analogreset	Input	Resets the analog TX portion of the transceiver PHY.
tx_digitalreset	Input	Resets the digital TX portion of the transceiver PHY.
rx_analogreset	Input	Resets the analog RX portion of the transceiver PHY.
rx_digitalreset	Input	Resets the digital RX portion of the transceiver PHY.
usr_seq_reset	Input	Resets the sequencer. Initiates a PCS reconfiguration, and may restart AN, LT or both if these modes are enabled.
rx_data_ready	Output	When asserted, indicates that you can start to send the 10G data.

Related Information

- [Input Reference Clock Sources](#) on page 3-27
- [PLLs](#) on page 3-3

Parameterizing the 1G/10GbE PHY

The Arria 10 1G/10GbE and 10GBASE-KR PHY IP core allows you to select either the **Backplane-KR** or **1Gb/10Gb Ethernet** variant. The **1Gb/10Gb Ethernet** variant (1G/10GbE) does not implement the link training and auto-negotiation functions.

Complete the following steps to parameterize the 1Gb/10Gb Ethernet PHY IP core in the parameter editor:

1. Instantiate the **Arria 10 1G/10GbE and 10GBASE-KR PHY** from the IP Catalog.

Refer to [Select and Instantiate PHY IP Core](#) on page 2-2.

2. Select **1Gb/10Gb Ethernet** from the **IP variant** list located under **Ethernet MegaCore Type**.
3. Use the parameter values in the tables in [10GBASE-R Parameters](#) on page 2-132, [10M/100M/1Gb Ethernet Parameters](#) on page 2-175, [Speed Detection Parameters](#) on page 2-176, and [PHY Analog Parameters](#) on page 2-176 as a starting point. Or, you can select the **BackPlane_wo_1588** option in the **Presets** tab on the right side of the IP Parameter Editor. You can then modify the setting to meet your specific requirements.
4. Click **Generate HDL** to generate the **1Gb/10Gb Ethernet** IP core top-level HDL file.

Related Information

- [General Options](#) on page 2-130
- [10GBASE-R Parameters](#) on page 2-132
- [10M/100M/1Gb Ethernet Parameters](#) on page 2-175
- [Speed Detection Parameters](#) on page 2-176
- [PHY Analog Parameters](#) on page 2-176

General Options

The General Options allow you to specify options common to 10GBASE-KR mode.

Table 2-122: General Options Parameters

Parameter Name	Options	Description
Enable internal PCS reconfiguration logic	On Off	This parameter is only an option when SYNTH_SEQ=0. When set to 0, it does not include the reconfiguration module or expose the start_pcs_reconfig or rc_busy ports. When set to 1, it provides a simple interface to initiate reconfiguration between 1G and 10G modes.
Enable IEEE 1588 Precision Time Protocol	On Off	When you turn on this parameter, you enable the IEEE 1588 Precision Time Protocol logic for both 1G and 10G modes.
Enable M20K block ECC protection	On Off	When you turn on this parameter, you enable error correction code (ECC) support on the embedded Nios CPU system. This parameter is only valid for the backplane variant
Enable tx_pma_clkout port	On Off	When you turn on this parameter, the tx_pma_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable rx_pma_clkout port	On Off	When you turn on this parameter, the rx_pma_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.

Parameter Name	Options	Description
Enable tx_divclk port	On Off	When you turn on this parameter, the tx_divclk port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable rx_divclk port	On Off	When you turn on this parameter, the rx_divclk port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable tx_clkout port	On Off	When you turn on this parameter, the tx_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable rx_clkout port	On Off	When you turn on this parameter, the rx_clkout port is enabled. Refer to the clock and reset signals section for more information about this port.
Enable Hard PRBS support	On Off	When you turn on this parameter, you enable the Hard PRBS data generation and checking logic in the Native PHY.
Reference clock frequency	644.53125 MHz 322.265625 MHz	Specifies the input reference clock frequency. The default is 322.265625 MHz .
Enable additional control and status pins	On Off	When you turn this option on, the core includes the rx_block_lock and rx_hi_ber ports.
Include FEC sublayer	On Off	When you turn on this parameter, the core includes logic to implement FEC and a soft 10GBASE-R PCS.
Set FEC_ability bit on power up and reset	On Off	When you turn on this parameter, the core sets the Assert KR FEC Ability bit (0xB0[16]) FEC ability bit during power up and reset, causing the core to advertise the FEC ability. This option is required for FEC functionality.
Set FEC_Enable bit on power up and reset	On Off	When you turn on this parameter, the core sets the KR FEC Request bit (0xB0[18]) during power up and reset, causing the core to request the FEC ability during Auto Negotiation. This option is required for FEC functionality.

10GBASE-R Parameters

The 10GBASE-R parameters specify basic features of the 10GBASE-R PCS. The FEC options also allow you to specify the FEC ability.

Table 2-123: 10GBASE-R Parameters

Parameter Name	Options	Description
10GbE Reference clock frequency	644.53125 MHz 322.265625 MHz	Specifies the input reference clock frequency. The default is 322.265625 MHz.
1G Reference clock frequency	125 MHz	Specifies the input reference clock frequency. 125 MHz is the only option.
Enable additional control and status pins	On Off	When you turn on this parameter, the core includes the rx_block_lock and rx_hi_ber ports.

Table 2-124: FEC Options

Parameter Name	Options	Description
Include FEC sublayer	On Off	When you turn on this parameter, the core includes logic to implement FEC and a soft 10GBASE-R PCS.

10M/100M/1Gb Ethernet Parameters

The 10M/100M/1GbE parameters allow you to specify options for the MII interface and the 1GbE data rate.

Table 2-125: 10M/100M/1Gb Ethernet

Parameter Name	Options	Description
Enable 1Gb Ethernet protocol	On Off	When you turn this option on, the core includes the GMII interface and related logic.
Enable 10M/100Mb Ethernet functionality	On Off	When you turn this option on, the core includes the MII PCS. It also supports 4-speed mode to implement a 10M/100M interface to the MAC for the GbE line rate.
PHY ID (32 bits)	32-bit value	An optional 32-bit value that serves as a unique identifier for a particular type of PCS. The identifier includes the following components: • Bits 3-24 of the Organizationally Unique Identifier (OUI) assigned by the IEEE • 6-bit model number • 4-bit revision number If unused, do not change the default value which is 0x00000000.

Parameter Name	Options	Description
PHY Core version (16 bits)	16-bit value	This is an optional 16-bit value identifies the PHY core version.

Speed Detection Parameters

Selecting the speed detection option gives the PHY the ability to detect to link partners that support 1G/10GbE but have disabled Auto-Negotiation. During Auto-Negotiation, if AN cannot detect Differential Manchester Encoding (DME) pages from a link partner, the Sequencer reconfigures to 1GE and 10GE modes (Speed/Parallel detection) until it detects a valid 1G or 10GbE pattern.

Table 2-126: Speed Detection


Parameter Name	Options	Description
Enable automatic speed detection	On Off	When you turn this option On , the core includes the Sequencer block that sends reconfiguration requests to detect 1G or 10GbE when the Auto Negotiation block is not able detect AN data.
Avalon-MM clock frequency	100-125 MHz	Specifies the clock frequency for phy_mgmt_clk.
Link fail inhibit time for 10Gb Ethernet	504 ms	Specifies the time before link_status is set to FAIL or OK. A link fails if the link_fail_inhibit_time has expired before link_status is set to OK. The legal range is 500-510 ms. For more information, refer to "Clause 73 Auto Negotiation for Backplane Ethernet" in IEEE Std 802.3ap-2007.
Link fail inhibit time for 1Gb Ethernet	40-50 ms	Specifies the time before link_status is set to FAIL or OK. A link fails if the link_fail_inhibit_time has expired before link_status is set to OK. The legal range is 40-50 ms.

PHY Analog Parameters

You can specify analog parameters using the Quartus II Assignment Editor, the Pin Planner, or the Quartus II Settings File (.qsf).

1G/10GbE PHY Interfaces

Figure 2-59: 1G/10GbE PHY Top-Level Signals

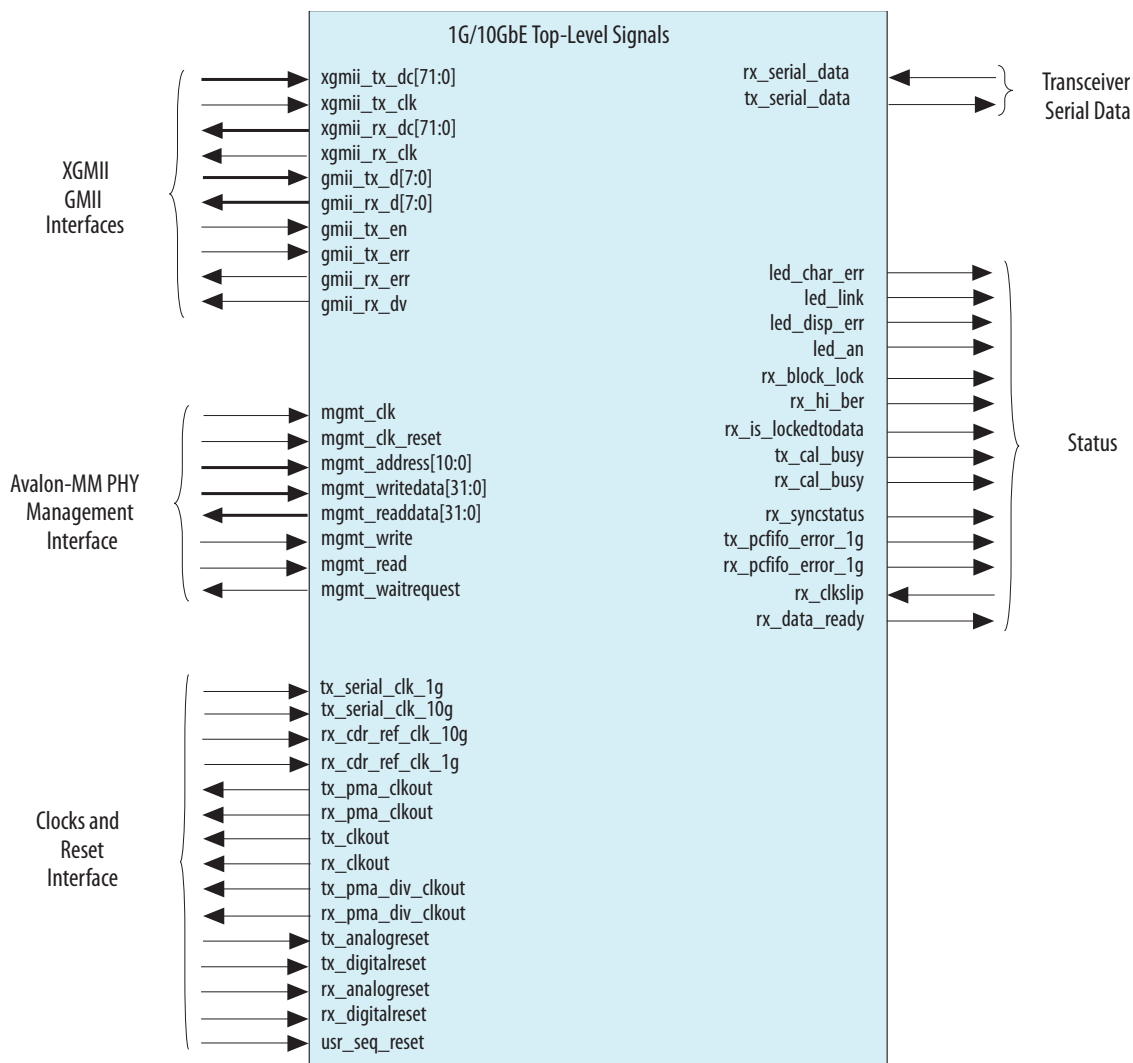

The block diagram shown in the parameter editor labels the external pins with the interface type and places the interface name inside the box. The interface type and name are provided in the `_hw.tcl` file. If you turn on **Show signals**, the **block diagram** displays all top-level signal names. For more information about `_hw.tcl` files, refer to the *Component Interface Tcl Reference* chapter in volume 1 of the *Quartus II Handbook*.

Note: Altera is deprecating some of the signals shown in this figure. The descriptions of these signals identifies them as not functional.

Related Information

Component Interface Tcl Reference

Clock and Reset Interfaces

Table 2-127: Clock and Reset Signals

Signal Name	Direction	Description
tx_serial_clk_10g	Input	High speed clock from the 10G PLL to drive 10G PHY TX PMA. The frequency of this clock is 5.15625 GHz.
tx_serial_clk_1g	Input	High speed clock from 1G PLL to drive the 1G PHY TX PMA. This clock is not required if GbE is not used. The frequency of this clock is 625 MHz.
rx_cdr_ref_clk_10g	Input	10G PHY RX PLL reference clock. This clock frequency can be 644.53125 MHz or 322.2656 MHz.
rx_cdr_ref_clk_1g	Input	1G PHY RX PLL reference clock. The frequency is 125 MHz. This clock is only required if 1G is enabled.
tx_pma_clkout	Output	Clock used to drive the 10G TX PCS and 1G TX PCS parallel data. For example, when the hard PCS is reconfigured to the 10G mode without FEC enabled, the frequency is 257.81 MHz. The frequency is 161.13 MHz for 10G with FEC enabled.
rx_pma_clkout	Output	Clock used to drive the 10G RX PCS and 1G RX PCS parallel data. For example, when the hard PCS is reconfigured to the 10G mode without FEC enabled, the frequency is 257.81 MHz. The frequency is 161.13 MHz for 10G with FEC enabled.
tx_clkout	Output	XGMII/GMII TX clock for the TX parallel data source interface. This clock frequency is 257.81 MHz in 10G mode, and 161.13 MHz with FEC enabled.
rx_clkout	Output	XGMII RX clock for the RX parallel data source interface. This clock frequency is 257.81 in 10G mode, and 161.13 MHz with FEC enabled.
tx_pma_div_clkout	Output	The divided 33 clock from the TX serializer. You can use this clock for the for xgmii_tx_clk or xgmii_rx_clk. The frequency is 156.25 MHz for 10G. The frequencies are the same whether or not you enable FEC.
rx_pma_div_clkout	Output	The divided 33 clock from CDR recovered clock. The frequency is 156.25 MHz for 10G. The frequencies are the same whether or not you enable FEC. This clock is not used for clocking the 10G RX datapath.
tx_analogreset	Input	Resets the analog TX portion of the transceiver PHY.
tx_digitalreset	Input	Resets the digital TX portion of the transceiver PHY.

Signal Name	Direction	Description
rx_analogreset	Input	Resets the analog RX portion of the transceiver PHY.
rx_digitalreset	Input	Resets the digital RX portion of the transceiver PHY.
usr_seq_reset	Input	Resets the sequencer. Initiates a PCS reconfiguration, and may restart AN, LT or both if these modes are enabled.

Related Information

- [Input Reference Clock Sources](#) on page 3-27
- [PLLs](#) on page 3-3

Data Interfaces**Table 2-128: XGMII Signals**

The MAC drives the TX XGMII signals to the 10GbE PHY. The 10GbE PHY drives the RX XGMII signals to the MAC.

Signal Name	Direction	Clock Domain	Description
10GbE XGMII Data Interface			
xgmii_tx_dc[71:0]	Input	Synchronous to xgmii_tx_clk	XGMII data and control for 8 lanes. Each lane consists of 8 bits of data and 1 bit of control.
xgmii_tx_clk	Input	Clock signal	Clock for single data rate (SDR) XGMII TX interface to the MAC. It should connect to xgmii_rx_clk. This clock can be connected to the tx_div_clkout; however, Altera recommends that you connect it to a PLL for use with the Triple Speed Ethernet MegaCore function. The frequency is 125 MHz for 1G and 156.25 MHz for 10G. This clock is driven from the MAC. The frequencies are the same whether or not you enable FEC.
xgmii_rx_dc[71:0]	Output	Synchronous to xgmii_rx_clk	RX XGMII data and control for 8 lanes. Each lane consists of 8 bits of data and 1 bit of control.

Signal Name	Direction	Clock Domain	Description
xgmii_rx_clk	Input	Clock signal	Clock for SDR XGMII RX interface to the MAC. This clock can be connected to the tx_div_clkout ; however, Altera recommends that you connect it to a PLL for use with the Triple Speed Ethernet MegaCore function. The frequency is 125 MHz for 1G and 156.25 MHz for 10G. This clock is driven from the MAC. The frequencies are the same whether or not you enable FEC.

XGMII Mapping to Standard SDR XGMII Data

Table 2-129: TX XGMII Mapping to Standard SDR XGMII Interface

The 72-bit TX XGMII data bus format is different than the standard SDR XGMII interface. This table shows the mapping of this non-standard format to the standard SDR XGMII interface.

Signal Name	SDR XGMII Signal Name	Description
xgmii_tx_dc[7:0]	xgmii_sdr_data[7:0]	Lane 0 data
xgmii_tx_dc[8]	xgmii_sdr_ctrl[0]	Lane 0 control
xgmii_tx_dc[16:9]	xgmii_sdr_data[15:8]	Lane 1 data
xgmii_tx_dc[17]	xgmii_sdr_ctrl[1]	Lane 1 control
xgmii_tx_dc[25:18]	xgmii_sdr_data[23:16]	Lane 2 data
xgmii_tx_dc[26]	xgmii_sdr_ctrl[2]	Lane 2 control
xgmii_tx_dc[34:27]	xgmii_sdr_data[31:24]	Lane 3 data
xgmii_tx_dc[35]	xgmii_sdr_ctrl[3]	Lane 3 control
xgmii_tx_dc[43:36]	xgmii_sdr_data[39:32]	Lane 4 data
xgmii_tx_dc[44]	xgmii_sdr_ctrl[4]	Lane 4 control
xgmii_tx_dc[52:45]	xgmii_sdr_data[47:40]	Lane 5 data
xgmii_tx_dc[53]	xgmii_sdr_ctrl[5]	Lane 5 control
xgmii_tx_dc[61:54]	xgmii_sdr_data[55:48]	Lane 6 data
xgmii_tx_dc[62]	xgmii_sdr_ctrl[6]	Lane 6 control
xgmii_tx_dc[70:63]	xgmii_sdr_data[63:56]	Lane 7 data
xgmii_tx_dc[71]	xgmii_sdr_ctrl[7]	Lane 7 control

Table 2-130: RX XGMII Mapping to Standard SDR XGMII Interface

The 72-bit RX XGMII data bus format is different from the standard SDR XGMII interface. This table shows the mapping of this non-standard format to the standard SDR XGMII interface.

Signal Name	XGMII Signal Name	Description
xgmii_rx_dc[7:0]	xgmii_sdr_data[7:0]	Lane 0 data

Signal Name	XGMII Signal Name	Description
xgmii_rx_dc[8]	xgmii_sdr_ctrl[0]	Lane 0 control
xgmii_rx_dc[16:9]	xgmii_sdr_data[15:8]	Lane 1 data
xgmii_rx_dc[17]	xgmii_sdr_ctrl[1]	Lane 1 control
xgmii_rx_dc[25:18]	xgmii_sdr_data[23:16]	Lane 2 data
xgmii_rx_dc[26]	xgmii_sdr_ctrl[2]	Lane 2 control
xgmii_rx_dc[34:27]	xgmii_sdr_data[31:24]	Lane 3 data
xgmii_rx_dc[35]	xgmii_sdr_ctrl[3]	Lane 3 control
xgmii_rx_dc[43:36]	xgmii_sdr_data[39:32]	Lane 4 data
xgmii_rx_dc[44]	xgmii_sdr_ctrl[4]	Lane 4 control
xgmii_rx_dc[52:45]	xgmii_sdr_data[47:40]	Lane 5 data
xgmii_rx_dc[53]	xgmii_sdr_ctrl[5]	Lane 5 control
xgmii_rx_dc[61:54]	xgmii_sdr_data[55:48]	Lane 6 data
xgmii_rx_dc[62]	xgmii_sdr_ctrl[6]	Lane 6 control
xgmii_rx_dc[70:63]	xgmii_sdr_data[63:56]	Lane 7 data
xgmii_rx_dc[71]	xgmii_sdr_ctrl[7]	Lane 7 control

GMII Interface

The GMII interface signals drive data to and from the PHY.

Table 2-131: GMII Interface Ports

Signal Name	Direction	Description
gmii_tx_d[7:0]	Input	Data to be encoded and sent to the link partner. This signal is clocked with tx_pma_clkout.
gmii_tx_en	Input	The GMII TX control signal.
gmii_tx_err	Input	The GMII TX error signal.
gmii_rx_d[7:0]	Output	Data to be encoded and sent to the link partner. This signal is clocked with tx_pma_clkout.
gmii_rx_dv	Output	The GMII RX control signal.
gmii_rx_err	Output	The GMII RX error signal.
led_char_err	Output	10-bit character error. Asserted for one rx_clkout_1g cycle when an erroneous 10-bit character is detected.
led_link	Output	When asserted, this signal indicates successful link synchronization.

Signal Name	Direction	Description
led_disp_err	Output	When asserted, this signal indicates a 10-bit running disparity error. Asserted for one rx_clkout_1g cycle when a disparity error is detected. A running disparity error indicates that errors were detected on more received groups than the previous and possibly current groups.
led_an	Output	This signal indicates the auto-negotiation status. The PCS function asserts this signal when an autonegotiation completes.

Serial Data Interface

Table 2-132: Serial Data Signals

Signal Name	Direction	Description
rx_serial_data	Input	RX serial input data
tx_serial_data	Output	TX serial output data

Control and Status Interfaces

Table 2-133: Control and Status Signals

Signal Name	Direction	Clock Domain	Description
led_link	Output	Synchronous to rx_clkout	When asserted, indicates successful link synchronization.
led_disp_err	Output	Synchronous to rx_clkout	Disparity error signal indicating a 10-bit running disparity error. Asserted for one rx_clkout_1g cycle when a disparity error is detected. A running disparity error indicates that more than the previous and perhaps the current received group had an error.
led_an	Output	Synchronous to rx_clkout	Clause 37 Auto-negotiation status. The PCS function asserts this signal when auto-negotiation completes.
rx_block_lock	Output	Synchronous to rx_clkout	Asserted to indicate that the block synchronizer has established synchronization.
rx_hi_ber	Output	Synchronous to rx_clkout	Asserted by the BER monitor block to indicate a Sync Header high bit error rate greater than 10^{-4} .
rx_is_lockedto data	Output	Asynchronous signal	When asserted, indicates the RX channel is locked to input data.

Signal Name	Direction	Clock Domain	Description
tx_cal_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that the TX channel is being calibrated.
rx_cal_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that the RX channel is being calibrated.
lcl_rf	Input	Synchronous to xgmii_tx_clk	When asserted, indicates a Remote Fault (RF). The MAC sends this fault signal to its link partner. Bit D13 of the Auto Negotiation Advanced Remote Fault register (0xC2) records this error.
rx_clkslip	Input	Asynchronous signal	When asserted, indicates that the deserializer has either skipped one serial bit or paused the serial clock for one cycle to achieve word alignment. As a result, the period of the parallel clock could be extended by 1 unit interval (UI) during the clock slip operation.
rx_data_ready	Output	Synchronous to rx_clkout	When asserted, indicates that the MAC can begin sending data to the PHY.

Dynamic Reconfiguration Interface

You can use the dynamic reconfiguration interface signals to dynamically change between 1G and 10G data rates.

Table 2-134: Dynamic Reconfiguration Interface Signals

Signal Name	Direction	Clock Domain	Description
rc_busy	Output	Synchronous to mgmt_clk	When asserted, indicates that reconfiguration is in progress. Synchronous to the mgmt_clk. This signal is only exposed under the following condition: Turn on Enable internal PCS reconfiguration logic
start_pcs_reconfig	Input	Synchronous to mgmt_clk	When asserted, initiates reconfiguration of the PCS. Sampled with the mgmt_clk. This signal is only exposed under the following condition: Turn on Enable internal PCS reconfiguration logic
mode_1g_10gbar	Input	Synchronous to mgmt_clk	This signal selects either the 1G or 10G tx-parallel-data going to the PCS. It is only used for the 1G/10G application (variant) under the following circumstances: - the Sequencer (auto-rate detect) is not enabled 1G mode is enabled

Avalon-MM Register Interface

The Avalon-MM slave interface signals provide access to all registers.

Table 2-135: Avalon-MM Interface Signals

Signal Name	Direction	Clock Domain	Description
mgmt_clk	Input	Clock	The clock signal that controls the Avalon-MM PHY management, interface. If you plan to use the same clock for the PHY management interface and transceiver reconfiguration, you must restrict the frequency to 100 MHz to meet the specification for the transceiver reconfiguration clock.
mgmt_clk_reset	Input	Reset	Resets the PHY management interface. This signal is active high and level sensitive.
mgmt_addr[10:0]	Input	Synchronous to mgmt_clk	11-bit Avalon-MM address.
mgmt_writedata[31:0]	Input	Synchronous to mgmt_clk	Input data.
mgmt_readdata[31:0]	Output	Synchronous to mgmt_clk	Output data.
mgmt_write	Input	Synchronous to mgmt_clk	Write signal. Active high.
mgmt_read	Input	Synchronous to mgmt_clk	Read signal. Active high.
mgmt_waitrequest	Output	Synchronous to mgmt_clk	When asserted, indicates that the Avalon-MM slave interface is unable to respond to a read or write request. When asserted, control signals to the Avalon-MM slave interface must remain constant.

Related Information

[Avalon Interface Specifications](#)

Register Definitions

The Avalon-MM master interface signals provide access to the control and status registers.

The following table specifies the control and status registers that you can access over the Avalon-MM interface. A single address space provides access to all registers.

Note: Unless otherwise indicated, the default value of all registers is 0.

Note: Do not write to any register that is not specified.

Table 2-136: 1G/10GbE Register Definitions

Word Addr	Bit	R/W	Name	Description
0x4B0	0	RW	Reset SEQ	When set to 1, resets the 10GBASE-KR sequencer (auto rate detect logic), initiates a PCS reconfiguration, and may restart Auto-Negotiation, Link Training or both if AN and LT are enabled (10GBASE-KR mode). SEQ Force Mode[2:0] forces these modes. This reset self clears.
	1	RW	Disable AN Timer	Auto-Negotiation disable timer. If disabled (Disable AN Timer = 1), AN may get stuck and require software support to remove the ABILITY_DETECT capability if the link partner does not include this feature. In addition, software may have to take the link out of loopback mode if the link is stuck in the ACKNOWLEDGE_DETECT state. To enable this timer set Disable AN Timer = 0.
	2	RW	Disable LF Timer	When set to 1, disables the Link Fault timer. When set to 0, the Link Fault timer is enabled.
	3	RW	fail_lt_if_ber	When set to 1, the last LT measurement is a non-zero number. Treat this as a failed run. 0 = normal.
	7:4	RW	SEQ Force Mode[2:0]	Forces the sequencer to a specific protocol. Must write the Reset SEQ bit to 1 for the Force to take effect. The following encodings are defined: • 0000: No force • 0001: GbE • 0010: XAUI • 0100: 10GBASE-R • 0101: 10GBASE-KR • 1100: 10GBASE-KR FEC
	8	RW	Enable Arria 10 Calibration	When set to 1, it enables the Arria 10 HSSI reconfiguration calibration as part of the PCS dynamic reconfiguration. 0 skips the calibration when the PCS is reconfigured.
	16	RW	KR FEC enable 171.0	When set to 1, FEC is enabled. When set to 0, FEC is disabled. Resets to the CAPABLE_FEC parameter value.
	17	RW	KR FEC enable err ind 171.1	When set to 1, KR PHY FEC decoding errors are signaled to the PCS. When set to 0, FEC errors are not signaled to the PCS. See <i>Clause 74.8.3 of IEEE 802.3ap-2007</i> for details.
	18	RW	KR FEC request	When set to 1, enables the FEC request. When this bit changes, you must assert the Reset SEQ bit (0x4B0[0]) to renegotiate with the new value. When set to 0, disables the FEC request.

Word Addr	Bit	R/W	Name	Description
0x4B1	0	R	SEQ Link Ready	When asserted, the sequencer is indicating that the link is ready.
	1	R	SEQ AN timeout	When asserted, the sequencer has had an Auto Negotiation timeout. This bit is latched and is reset when the sequencer restarts Auto Negotiation.
	2	R	SEQ LT timeout	When set, indicates that the Sequencer has had a timeout.
	13:8	R	SEQ Reconfig Mode[5:0]	Specifies the Sequencer mode for PCS reconfiguration. The following modes are defined: • Bit 8, mode[0]: AN mode • Bit 9, mode[1]: LT Mode • Bit 10, mode[2]: 10G data mode • Bit 11, mode[3]: GbE data mode • Bit 12, mode[4]: Reserved for XAUI • Bit13, mode[5]: 10G FEC mode
	16	R	KR FEC ability 170.0	When set to 1, indicates that the 10GBASE-KR PHY supports FEC. Set as parameter SYNTH_FEC. For more information, refer to <i>Clause 45.2.1.84 of IEEE 802.3ap-2007</i> .
	17	R	KR FEC err ind ability 170.0	When set to 1, indicates that the 10GBASE-KR PHY is capable of reporting FEC decoding errors to the PCS. For more information, refer to <i>Clause 74.8.3 of IEEE 802.3ap-2007</i> .
0x4B2	0:10	RW	Reserved	—
	11	RWS C	KR FEC TX Error Insert	Writing a 1 inserts one error pulse into the TX FEC depending on the Transcoder and Burst error settings.
	31:15	RWS C	Reserved	—
0x4B5 to 0x4BF			Reserved for 40G KR	Intentionally left empty for address compatibility with 40G MAC + PHY KR solutions.

Word Addr	Bit	R/W	Name	Description
0x4C0	0	RW	AN enable	When set to 1, enables Auto Negotiation function. The default value is 1. For additional information, refer to bit 7.0.12 in Clause 73.8 Management Register Requirements, of <i>IEEE 802.3ap-2007</i> .
	1	RW	AN base pages ctrl	When set to 1, the user base pages are enabled. You can send any arbitrary data via the user base page low/high bits. When set to 0, the user base pages are disabled and the state machine generates the base pages to send.
	2	RW	AN next pages ctrl	When set to 1, the user next pages are enabled. You can send any arbitrary data via the user next page low/high bits. When set to 0, the user next pages are disabled. The state machine generates the null message to send as next pages.
	3	RW	Local device remote fault	When set to 1, the local device signals Remote Faults in the Auto Negotiation pages. When set to 0 a fault has not occurred.
	4	RW	Force TX nonce value	When set to 1, forces the TX nonce value to support some UNH testing modes. When set to 0, this is normal operation.
	5	RW	Override AN Parameters Enable	When set to 1, overrides the AN_TECH, AN_FEC, and AN_PAUSE parameters and uses the bits in 0xC3 instead. You must reset the Sequencer to reconfigure and restart into Auto Negotiation mode. When set to 0, this is normal operation and is used with 0xB0 bit 0 and 0xC3 bits[30:16].
0x4C1	0	RW	Reset AN	When set to 1, resets all the 10GBASE-KR Auto Negotiation state machines. This bit is self-clearing.
	4	RW	Restart AN TX SM	When set to 1, restarts the 10GBASE-KR TX state machine. This bit self clears. This bit is active only when the TX state machine is in the Auto Negotiation state. For more information, refer to bit 7.0.9 in Clause 73.8 Management Register Requirements of <i>IEEE 802.3ap-2007</i> .
	8	RW	AN Next Page	When asserted, new next page info is ready to send. The data is in the XNP TX registers. When 0, the TX interface sends null pages. This bit self clears. Next Page (NP) is encoded in bit D15 of Link Codeword. For more information, refer to Clause 73.6.9 and bit 7.16.15 of Clause 45.2.7.6 of <i>IEEE 802.3ap-2007</i> .

Word Addr	Bit	R/W	Name	Description
0x4C2	1	RO	AN page received	When set to 1, a page has been received. When 0, a page has not been received. The current value clears when the register is read. For more information, refer to bit 7.1.6 in Clause 73.8 of <i>IEEE 802.3ap-2007</i> .
	2	RO	AN Complete	When asserted, Auto-Negotiation has completed. When 0, Auto Negotiation is in progress. For more information, refer to bit 7.1.5 in Clause 73.8 of <i>IEEE 802.3ap-2007</i> .
	3	RO	AN ADV Remote Fault	When set to 1, fault information has been sent to the link partner. When 0, a fault has not occurred. The current value clears when the register is read. Remote Fault (RF) is encoded in bit D13 of the base Link Codeword. For more information, refer to Clause 73.6.7 of and bit 7.16.13 of <i>IEEE 802.3ap-2007</i> .
	4	RO	AN RX SM Idle	When set to 1, the Auto-Negotiation state machine is in the idle state. Incoming data is not Clause 73 compatible. When 0, the Auto-Negotiation is in progress.
	5	RO	AN Ability	When set to 1, the transceiver PHY is able to perform Auto Negotiation. When set to 0, the transceiver PHY is not able to perform Auto Negotiation. If your variant includes Auto Negotiation, this bit is tied to 1. For more information, refer to bits 7.1.3 and 7.48.0 of Clause 45 of <i>IEEE 802.3ap-2007</i> .
	6	RO	AN Status	When set to 1, link is up. When 0, the link is down. The current value clears when the register is read. For more information, refer to bit 7.1.2 of Clause 45 of <i>IEEE 802.3ap-2007</i> .
	7	RO	LP AN Ability	When set to 1, the link partner is able to perform Auto Negotiation. When 0, the link partner is not able to perform Auto-Negotiation. For more information, refer to bit 7.1.0 of Clause 45 of <i>IEEE 802.3ap-2007</i> .
	8	RO	FEC negotiated – enable FEC from SEQ	When set to 1, PHY is negotiated to perform FEC. When set to 0, PHY is not negotiated to perform FEC.

Word Addr	Bit	R/W	Name	Description
0x4C2	9	RO	Seq AN Failure	When set to 1, a sequencer Auto Negotiation failure has been detected. When set to 0, an Auto Negotiation failure has not been detected.
	17:12	RO	KR AN Link Ready[5:0]	Provides a one-hot encoding of an_receive_idle = true and link status for the supported link as described in Clause 73.10.1. The following encodings are defined: • 6'b000000: 1000BASE-KX • 6'b000001: 10GBASE-KX4 • 6'b000100: 10GBASE-KR • 6'b001000: 40GBASE-KR4 • 6'b010000: 40GBASE-CR4 • 6'b100000: 100GBASE-CR10
0x4C3	15:0	RW	User base page low	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation base pages ctrl bit is set. The following bits are defined: • [15]: Next page bit • [14]: ACK which is controlled by the SM • [13]: Remote Fault bit • [12:10]: Pause bits • [9:5]: Echoed nonce which are set by the state machine • [4:0]: Selector Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.
	21:16	RW	Override AN_TECH[5:0]	AN_TECH value to override. The following bits are defined: • Bit-16 = AN_TECH[0] = 1000Base-KX • Bit-18 = AN_TECH[2] = 10Gbase-KR You must set 0xC0 bit-5 for this to take effect .
	25:24	RW	Override AN_FEC[1:0]	AN_FEC value to override. The following bits are defined: • Bit-24 = AN_FEC [0] = Capability • Bit-25 = AN_FEC [1] = Request You must set 0xC0 bit-5 for this to take effect.
	30:28	RW	Override AN_PAUSE[2:0]	AN_PAUSE value to override. The following bits are defined: • Bit-28 = AN_PAUSE [0] = Pause Ability • Bit-29 = AN_PAUSE [1] = Asymmetric Direction • Bit-30 = AN_PAUSE [2] = Reserved You must set 0xC0 bit-5 for this to take effect.

Word Addr	Bit	R/W	Name	Description
0x4C4	31:0	RW	User base page high	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation base pages ctrl bit is set. The following bits are defined: • [29:5]: Correspond to page bit 45:21 which are the technology ability. • [4:0]: Correspond to bits 20:16 which are TX nonce bits. Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.
0x4C5	15:0	RW	User Next page low	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation next pages ctrl bit is set. The following bits are defined: • [15]: next page bit • [14]: ACK controlled by the state machine • [13]: Message Page (MP) bit • [12]: ACK2 bit • [11]: Toggle bit For more information, refer to Clause 73.7.7.1 Next Page encodings of <i>IEEE 802.3ap-2007</i>. Bit 49, the PRBS bit, is generated by the Auto-Negotiation TX state machine.
0x4C6	31:0	RW	User Next page high	The Auto Negotiation TX state machine uses these bits if the Auto Negotiation next pages ctrl bit is set. Bits [31:0] correspond to page bits [47:16]. Bit 49, the PRBS bit, is generated by the Auto Negotiation TX state machine.
0x4C7	15:0	RO	LP base page low	The AN RX state machine received these bits from the link partner. The following bits are defined: • [15] Next page bit • [14] ACK which is controlled by the state machine • [13] RF bit • [12:10] Pause bits • [9:5] Echoed Nonce which are set by the state machine • [4:0] Selector
0x4C8	31:0	RO	LP base page high	The AN RX state machine received these bits from the link partner. The following bits are defined: • [31:30]: Reserved • [29:5]: Correspond to page bits [45:21] which are the technology ability • [4:0]: Correspond to bits [20:16] which are TX Nonce bits

Word Addr	Bit	R/W	Name	Description
0x4C9	15:0	RO	LP Next page low	The AN RX state machine receives these bits from the link partner. The following bits are defined: • [15]: Next page bit • [14]: ACK which is controlled by the state machine • [13]: MP bit • [12] ACK2 bit • [11] Toggle bit For more information, refer to Clause 73.7.7.1 Next Page encodings of IEEE 802.3ap-2007.
0x4CA	31:0	RO	LP Next page high	The AN RX state machine receives these bits from the link partner. Bits [31:0] correspond to page bits [47:16]
0x4CB	24:0	RO	AN LP ADV Tech_A[24:0]	Received technology ability field bits of Clause 73 Auto Negotiation. The 10GBASE-KR PHY supports A0 and A2. The following protocols are defined: • A0 1000BASE-KX • A1 10GBASE-KX4 • A2 10GBASE-KR • A3 40GBASE-KR4 • A4 40GBASE-CR4 • A5 100GBASE-CR10 • A24:6 are reserved For more information, refer to Clause 73.6.4 and AN LP base page ability registers (7.19-7.21) of Clause 45 of <i>IEEE 802.3ap-2007</i>.
	26:25	RO	AN LP ADV FEC_F[1:0]	Received FEC ability bits FEC (F0:F1) is encoded in bits D46:D47 of the base Link Codeword. F0 is FEC ability. F1 is FEC requested. See Clause 73.6.5 of <i>IEEE 802.3ap-2007</i> for details.
	27	RO	AN LP ADV Remote Fault	Received Remote Fault (RF) ability bits. RF is encoded in bit D13 of the base link codeword in Clause 73 AN. For more information, refer to Clause 73.6.7 and bits AN LP base page ability register AN LP base page ability registers (7.19-7.21) of Clause 45 of <i>IEEE 802.3ap-2007</i>.
	30:28	RO	AN LP ADV Pause Ability_C[2:0]	Received pause ability bits. Pause (C0:C1) is encoded in bits D11:D10 of the base link codeword in Clause 73 AN as follows: • C0 is the same as PAUSE as defined in Annex 28B • C1 is the same as ASM_DIR as defined in Annex 28B • C2 is reserved For more information, refer to bits AN LP base page ability registers (7.19-7.21) of Clause 45 of <i>IEEE 802.3ap-2007</i>.

Word Addr	Bit	R/W	Name	Description
0x4D0	0	RW	Link Training enable	When 1, enables the 10GBASE-KR start-up protocol. When 0, disables the 10GBASE-KR start-up protocol. The default value is 1. For more information, refer to Clause 72.6.10.3.1 and 10GBASE-KR PMD control register bit (1.150.1) of <i>IEEE 802.3ap-2007</i> .
	1	RW	dis_max_wait_tmr	When set to 1, disables the LT max_wait_timer . Used for characterization mode when setting much longer BER timer values.
	2	RW	quick_mode	When set to 1, only the init and preset values are used to calculate the best BER.
	3	RW	pass_one	When set to 1, the BER algorithm considers more than the first local minimum when searching for the lowest BER. The default value is 1.
	7:4	RW	main_step_cnt [3:0]	Specifies the number of equalization steps for each main tap update. There are about 20 settings for the internal algorithm to test. The valid range is 1-15. The default value is 4'b0010.
	11:8	RW	prpo_step_cnt [3:0]	Specifies the number of equalization steps for each pre- and post-tap update. From 16-31 steps are possible. The default value is 4'b0001.

Word Addr	Bit	R/W	Name	Description
0x4D0	14:12	RW	equal_cnt [2:0]	Adds hysteresis to the error count to avoid local minimums. The following values are defined: • 000 = 0 • 001 = 1 • 010 = 2 • 011 = 3 • 100 = 4 • 101 = 8 • 110 = 16 • 111 = reserved The default value is 010.
	15	RW	disable Initialize PMA on max_wait_timeout	When set to 1, PMA values (VOD, Pre-tap, Post-tap) are not initialized upon entry into the Training_Failure state. This happens when max_wait_timer_done, which sets training_failure = true (reg 0xD2 bit 3). Used for UNH testing. When set to 0, PMA values are initialized upon entry into Training_Failure state. Refer to Figure 72-5 of <i>IEEE 802.3ap-2007</i> for more details.
	16	RW	Override LP Coef enable	When set to 1, overrides the link partner's equalization coefficients; software changes the update commands sent to the link partner TX equalizer coefficients. When set to 0, uses the Link Training logic to determine the link partner coefficients. Used with 0x4D1 bit-4 and 0x4D4 bits[7:0].
	17	RW	Override Local RX Coef enable	When set to 1, overrides the local device equalization coefficients generation protocol. When set, the software changes the local TX equalizer coefficients. When set to 0, uses the update command received from the link partner to determine local device coefficients. Used with 0x4D1 bit-8 and 0x4D4 bits[23:16]. The default value is 1.

Word Addr	Bit	R/W	Name	Description
0x4D0	19:18	RW	cite depth	When using CTLE fine-grained tuning, determines where to set final value in case of a tie. The following values are defined: • 00 = at lower tie • 01 = 25% to upper tie • 10 = 50% between lower and upper • 11 = at upper tie
	22:20	RW	rx_ctle_mode default = 001	Defines at what point to enable the RX CTLE in the adaptation algorithm. The following values are defined: • 000 = never, the RX CTLE isn't enabled or adjusted. • 001 = only if cannot gain lt_frame_lock. Four steps 4, 8, 12, and 15 tested. • 010 = always to allow lt_frame_lock. Four steps 4, 8, 12, and 15 tested. • 011 = always with fine-grained tuning of value. • 100 = One-time only if can't gain lt_frame_lock. • 101 = One-time always at the beginning of the LT. • 110 = continuous • 111 = reserved The default value is 001.
	26:24	RW	rx_dfe_mode	Defines when to enable the RX DFE in the adaptation algorithm. The following values are defined: • 000 = never, the RX DFE is not enabled or adjusted. • 001 = only if cannot gain lt_frame_lock at beginning/end of the LT process. • 010 = Always trigger DFE at the beginning/end of LT process. • 011 = Always trigger DFE at beginning/end of the tap adjustment. • 100 = Trigger DFE at each new VOD, Post, Pre tap value. • 101 = continuous • 110 – 111 = reserved The default value is 001.

Word Addr	Bit	R/W	Name	Description
0x4D0	27	RW	fixed_mode	Fixed TX EQ mode. Modifies the adaptation algorithm to settle on the max pre-tap and max VOD independent of the ber_count. It settles on the max_post_step for the Post-Tap value. This bit has priority over the max_mode bit.
	28	RW	max_mode	Max TX EQ mode. Modifies the adaptation algorithm to settle on the max pre-tap and max VOD if you have ber_max for all values. It settles on the max_post_step for the Post-Tap value.
	31:29	RW	max_post_step[2:0]	The number of EQ steps for the Post-Tap when in max_mode. You may receive frame_lock_error (reg 0xD2 bit-5) if you reduce Post-tap in min when you have ber_max.
0x4D1	0	RW	Restart Link training	When set to 1, resets the 10GBASE-KR start-up protocol. When set to 0, continues normal operation. This bit self clears. For more information, refer to the state variable mr_restart_training as defined in Clause 72.6.10.3.1 and 10GBASE-KR PMD control register bit (1.150.0) <i>IEEE 802.3ap-2007</i> .
	4	RW	Updated TX Coef new	When sent to 1, there are new link partner coefficients available to send. The LT logic starts sending the new values set in 0x4D4 bits[7:0] to the remote device. When set to 0, continues normal operation. This bit self clears. Must enable this override in 0x4D0 bit16.
	8	RW	Updated RX coef new	When set to 1, new local device coefficients are available. The LT logic changes the local TX equalizer coefficients as specified in 0x4D4 bits[23:16]. When set to 0, continues normal operation. This bit self clears. Must enable the override in 0x4D0 bit17.

Word Addr	Bit	R/W	Name	Description
0x4D2	0	RO	Link Trained - Receiver status	When set to 1, the receiver is trained and is ready to receive data. When set to 0, receiver training is in progress. For more information, refer to the state variable rx_trained as defined in Clause 72.6.10.3.1 and bit 10GBASE-KR PMD control register bit 10GBASE_KR PMD status register bit (1.151.0) of <i>IEEE 802.3ap-2007</i> .
	1	RO	Link Training Frame lock	When set to 1, the training frame delineation has been detected. When set to 0, the training frame delineation has not been detected. For more information, refer to the state variable frame_lock as defined in Clause 72.6.10.3.1 and 10GBASE_KR PMD status register bit 10GBASE_KR PMD status register bit (1.151.1) of <i>IEEE 802.3ap-2007</i> .
	2	RO	Link Training Start-up protocol status	When set to 1, the start-up protocol is in progress. When set to 0, start-up protocol has completed. For more information, refer to the state training as defined in Clause 72.6.10.3.1 and 10GBASE_KR PMD status register bit (1.151.2) of <i>IEEE 802.3ap-2007</i> .
	3	RO	Link Training failure	When set to 1, a training failure has been detected. When set to 0, a training failure has not been detected. For more information, refer to the state variable training_failure as defined in Clause 72.6.10.3.1 and bit 10GBASE_KR PMD status register bit (1.151.3) of <i>IEEE 802.3ap-2007</i> .
	4	RO	Link Training Error	When set to 1, excessive errors occurred during Link Training. When set to 0, the BER is acceptable.
	5	RO	Link Training Frame lock Error	When set to 1, indicates a frame lock was lost during Link Training. If the tap settings specified by the fields of 0x4D5 are the same as the initial parameter value, the frame lock error was unrecoverable.
	6	RO	RXEQ Frame Lock Loss	Frame lock not detected at some point during RXEQ, possibly triggering conditional RXEQ mode.
	7	RO	CTLE Fine-grained Tuning Error	Could not determine the best CTLE due to maximum BER limit at each step in the Fine-grained Tuning mode.

Word Addr	Bit	R/W	Name	Description
0x4D3	9:0	RW	ber_time_frames	Specifies the number of training frames to examine for bit errors on the link for each step of the equalization settings. Used only when <i>ber_time_k_frames</i> is 0. The following values are defined: • A value of 2 is about 10^3 bytes • A value of 20 is about 10^4 bytes • A value of 200 is about 10^5 bytes The default value for simulation is 2'b11. The default value for hardware is 0.
	19:10	RW	ber_time_k_frames	Specifies the number of thousands of training frames to examine for bit errors on the link for each step of the equalization settings. Set <i>ber_time_m_frames</i> = 0 for time/bits to match the following values: • A value of 3 is about 10^7 bits = about 1.3 ms • A value of 25 is about 10^8 bits = about 11ms • A value of 250 is about 10^9 bits = about 11 0ms The default value for simulation is 0. The default value for hardware is 0x415.
	29:20	RW	ber_time_m_frames	Specifies the number of millions of training frames to examine for bit errors on the link for each step of the equalization settings. Set <i>ber_time_k_frames</i> = 4'd1000 = 0x43E8 for time/bits to match the following values: • A value of 3 is about 10^{10} bits = about 1.3 seconds • A value of 25 is about 10^{11} bits = about 11 seconds • A value of 250 is about 10^{12} bits = about 110 seconds

Word Addr	Bit	R/W	Name	Description
0x4D4	5:0	RO or RW	LD coefficient update[5:0]	Reflects the contents of the first 16-bit word of the training frame sent from the local device control channel. Normally, the bits in this register are read-only; however, when you override training by setting the <code>Override Coef enable</code> control bit, these bits become writeable. The following fields are defined: [5:4]: Coefficient (+1) update 2'b11: Reserved 2'b01: Increment 2'b10: Decrement 2'b00: Hold [3:2]: Coefficient (0) update (same encoding as [5:4]) [1:0]: Coefficient (-1) update (same encoding as [5:4]) For more information, refer to bit 10G BASE-KR LD coefficient update register bits (1.154.5:0) in Clause 45.2.1.80.3 of <i>IEEE 802.3ap-2007</i>.
	6	RO or RW	LD Initialize Coefficients	When set to 1, requests the link partner coefficients be set to configure the TX equalizer to its INITIALIZE state. When set to 0, continues normal operation. For more information, refer to 10G BASE-KR LD coefficient update register bits (1.154.12) in Clause 45.2.1.80.3 and Clause 72.6.10.2.3.2 of <i>IEEE 802.3ap-2007</i>.
	7	RO or RW	LD Preset Coefficients	When set to 1, requests the link partner coefficients be set to a state where equalization is turned off. When set to 0 the link operates normally. For more information, refer to bit 10G BASE-KR LD coefficient update register bit (1.154.13) in Clause 45.2.1.80.3 and Clause 72.6.10.2.3.2 of <i>IEEE 802.3ap-2007</i>.
	13:8	RO	LD coefficient status[5:0]	Status report register for the contents of the second, 16-bit word of the training frame most recently sent from the local device control channel. The following fields are defined: [5:4]: Coefficient (post-tap) 2'b11: Maximum 2'b01: Minimum 2'b10: Updated 2'b00: Not updated [3:2]: Coefficient (0) (same encoding as [5:4]) [1:0]: Coefficient (pre-tap) (same encoding as [5:4]) For more information, refer to bit 10G BASE-KR LD status report register bit (1.155.5:0) in Clause 45.2.1.81 of <i>IEEE 802.3ap-2007</i>.

Word Addr	Bit	R/W	Name	Description
0x4D4	14	RO	Link Training ready - LD Receiver ready	When set to 1, the local device receiver has determined that training is complete and is prepared to receive data. When set to 0, the local device receiver is requesting that training continue. Values for the receiver ready bit are defined in Clause 72.6.10.2.4.4. For more information refer to For more information, refer to bit 10G BASE-KR LD status report register bit (1.155.15) in Clause 45.2.1.81 of <i>IEEE 802.3ap-2007</i> .
	21:16	RO or RW	LP coefficient update[5:0]	Reflects the contents of the first 16-bit word of the training frame most recently received from the control channel. Normally the bits in this register are read only; however, when training is disabled by setting low the KR Training enable control bit, these bits become writeable. The following fields are defined: • [5:4]: Coefficient (+1) update • 2'b11: Reserved • 2'b01: Increment • 2'b10: Decrement • 2'b00: Hold • [3:2]: Coefficient (0) update (same encoding as [5:4]) • [1:0]: Coefficient (-1) update (same encoding as [5:4]) For more information, refer to bit 10G BASE-KR LP coefficient update register bits (1.152.5:0) in Clause 45.2.1.78.3 of <i>IEEE 802.3ap-2007</i>.
	22	RO or RW	LP Initialize Coefficients	When set to 1, the local device transmit equalizer coefficients are set to the INITIALIZE state. When set to 0, normal operation continues. The function and values of the initialize bit are defined in Clause 72.6.10.2.3.2. For more information, refer to bit 10G BASE-KR LP coefficient update register bits (1.152.12) in Clause 45.2.1.78.3 of <i>IEEE 802.3ap-2007</i> .

Word Addr	Bit	R/W	Name	Description
0x4D4	23	RO or RW	LP Preset Coefficients	When set to 1, The local device TX coefficients are set to a state where equalization is turned off. Preset coefficients are used. When set to 0, the local device operates normally. The function and values of the preset bit is defined in 72.6.10.2.3.1. The function and values of the initialize bit are defined in Clause 72.6.10.2.3.2. For more information, refer to bit 10G BASE-KR LP coefficient update register bits (1.152.13) in Clause 45.2.1.78.3 of IEEE 802.3ap-2007.
	29:24	RO	LP coefficient status[5:0]	Status report register reflects the contents of the second, 16-bit word of the training frame most recently received from the control channel. The following fields are defined: [5:4]: Coefficient (+1) 2'b11: Maximum 2'b01: Minimum 2'b10: Updated 2'b00: Not updated [3:2]: Coefficient (0) (same encoding as [5:4]) - n [1:0]: Coefficient (-1) (same encoding as [5:4]) For more information, refer to bit 10G BASE-KR LP status report register bits (1.153.5:0) in Clause 45.2.1.79 of IEEE 802.3ap-2007.
	30	RO	LP Receiver ready	When set to 1, the link partner receiver has determined that training is complete and is prepared to receive data. When set to 0, the link partner receiver is requesting that training continue. Values for the receiver ready bit are defined in Clause 72.6.10.2.4.4. For more information, refer to bit 10G BASE-KR LP status report register bits (1.153.15) in Clause 45.2.1.79 of IEEE 802.3ap-2007.
0x4D5	4:0	R	LT V _{OD} setting	Stores the most recent V _{OD} setting that LT specified. It reflects Link Partner commands to fine-tune the V _{OD} .
	13:8	R	LT Post-tap setting	Stores the most recent post-tap setting that LT specified. It reflects Link Partner commands to fine-tune the TX pre-emphasis taps.
	20:16	R	LT Pre-tap setting	Stores the most recent pre-tap setting that LT specified. It reflects Link Partner commands to fine-tune the TX pre-emphasis taps.

Word Addr	Bit	R/W	Name	Description
0xD5	27:24	R	RXEQ CTLE Setting	Most recent ct le_rc setting sent to the reconfig bundle during RX equalization.
	29:28	R	RXEQ CTLE Mode	Most recent ct le_mode setting sent to the reconfig bundle during RX equalization.
	31:30	R	RXEQ DFE Mode	Most recent dfe_mode setting sent to the reconfig bundle during RX equalization.

Word Addr	Bit	R/W	Name	Description
0x4D6	4:0	RW	LT VODMAX ovrd	Override value for the VMAXRULE parameter. When enabled, this value substitutes for the VMAXRULE to allow channel-by-channel override of the device settings. This only effects the local device TX output for the channel specified. This value must be greater than the INITMAINVAL parameter for proper operation. Note this will also override the PREMAINVAL parameter value.
	5	RW	LT VODMAX ovrd Enable	When set to 1, enables the override value for the VMAXRULE parameter stored in the LT VODMAX ovrd register field.
	12:8	RW	LT VODMin ovrd	Override value for the VODMINRULE parameter. When enabled, this value substitutes for the VMINRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value to be substituted must be less than the INITMAINVAL parameter and greater than the VMINRULE parameter for proper operation.
	13	RW	LT VODMin ovrd Enable	When set to 1, enables the override value for the VODMINRULE parameter stored in the LT VODMin ovrd register field.
	21:16	RW	LT VPOST ovrd	Override value for the VPOSTRULE parameter. When enabled, this value substitutes for the VPOSTRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value to be substituted must be greater than the INITPOSTVAL parameter for proper operation.
	22	RW	LT VPOST ovrd Enable	When set to 1, enables the override value for the VPOSTRULE parameter stored in the LT VPOST ovrd register field.
	28:24	RW	LT VPre ovrd	Override value for the VPRERULE parameter. When enabled, this value substitutes for the VPOSTRULE to allow channel-by-channel override of the device settings. This override only effects the local device TX output for this channel. The value greater than the INITPREVAL parameter for proper operation.
	29	RW	LT VPre ovrd Enable	When set to 1, enables the override value for the VPRERULE parameter stored in the LT VPre ovrd register field.
0x4D6 to 0x4FF			Reserved for 40G KR	Left empty for address compatibility with 40G MAC +PHY KR solution.

Related Information[Reconfiguration Interface and Dynamic Reconfiguration](#) on page 6-1**Hard Transceiver PHY Registers****Table 2-137: Hard Transceiver PHY Registers**

Addr	Bit	Access	Name	Description
0x000-0x3FF	[9:0]	RW	Access to HSSI registers	All registers in the PCS and PMA that you can dynamically reconfigure are in this address space. Refer to reconfiguration chapter for further information.

Enhanced PCS Registers

These registers provide Enhanced PCS status information.

Table 2-138: PCS Registers

Addr	Bit	Access	Name	Description
0x480	31:0	RW	Indirect_addr	Because the PHY implements a single channel, this register must remain at the default value of 0 to specify logical channel 0.
0x481	2	RW	RCLR_ERRBLK_CNT	Error Block Counter clear register. When set to 1, clears the RCLR_ERRBLK_CNT register. When set to 0, normal operation continues.
	3	RW	RCLR_BER_COUNT	BER Counter clear register. When set to 1, clears the RCLR_BER_COUNT register. When set to 0, normal operation continues.
0x482	1	RO	HI_BER	High BER status. When set to 1, the PCS is reporting a high BER. When set to 0, the PCS is not reporting a high BER.
	2	RO	BLOCK_LOCK	Block lock status. When set to 1, the PCS is locked to received blocks. When set to 0, the PCS is not locked to received blocks.
	3	RO	TX_FIFO_FULL	When set to 1, the TX_FIFO is full.
	4	RO	RX_FIFO_FULL	When set to 1, the RX_FIFO is full.
	7	RO	Rx_DATA_READY	When set to 1, indicates the PHY is ready to receive data.

Arria 10 GMII PCS Registers

This topic describes the GMII PCS registers.

Addr	Bit	R/W	Name	Description
0x490	9	RW	RESTART_AUTO_ NEGOTIATION	Set this bit to 1 to restart the Clause 37 Auto Negotiation sequence. For normal operation, set this bit to 0 which is the default value. This bit is self-clearing.
	12	RW	AUTO_NEGOTIATION_ ENABLE	Set this bit to 1 to enable Clause 37 Auto Negotiation. The default value is 1.
	15	RW	Reset	Set this bit to 1 to generate a synchronous reset pulse which resets all the PCS state machines, comma detection function, and the 8B/10B encoder and decoder. For normal operation, set this bit to 0. This bit self clears.
0x491	2	R	LINK_STATUS	A value of 1 indicates that a valid link is operating. A value of 0 indicates an invalid link. If link synchronization is lost, this bit is 0.
	3	R	AUTO_NEGOTIATION_ ABILITY	A value of 1 indicates that the PCS function supports Clause 37 Auto Negotiation.
	5	R	AUTO_NEGOTIATION_ COMPLETE	A value of 1 indicates the following status: • The Auto Negotiation process is complete. • The Auto Negotiation control registers are valid.

Addr	Bit	R/W	Name	Description
0x494 (1000BA SE-X mode)	5	RW	FD	Full-duplex mode enable for the local device. Set to 1 for full-duplex support.
	6	RW	HD	Half-duplex mode enable for the local device. Set to 1 for half-duplex support. This bit should always be set to 0 for the KR PHY IP.
	8:7	RW	PS2, PS1	Pause support for local device. The following encodings are defined for PS1/PS2: - PS1=0 / PS2=0: Pause is not supported - PS1=0 / PS2=1: Asymmetric pause toward link partner - PS1=1 / PS2=0: Symmetric pause - PS1=1 / PS2=1: Pause is supported on TX and RX
	13:12	RW	RF2, RF1	Remote fault condition for local device. The following encodings are defined for RF1/RF2: - RF1=0 / RF2=0: No error, link is valid (reset condition) - RF1=0 / RF2=1: Offline - RF1=1 / RF2=0: Failure condition - RF1=1 / RF2=1: Auto-negotiation error
	14	RO	ACK	Acknowledge for local device. A value of 1 indicates that the device has received three consecutive matching ability values from its link partner.
	15	RW	NP	Next page. In the device ability register, this bit is always set to 0.

Addr	Bit	R/W	Name	Description
0x495 (1000BA SE-X mode)	5	R	FD	Full-duplex mode enable for the link partner. This bit should always be 1 because only full duplex is supported.
	6	R	HD	Half-duplex mode enable for the link partner. A value of 1 indicates support for half duplex. This bit should always be 0 because half-duplex mode is not supported.
	8:7	R	PS2, PS1	Specifies pause support for link partner. The following encodings are defined for PS1/PS2: • PS1=0 / PS2=0: Pause is not supported • PS1=0 / PS2=1: Asymmetric pause toward link partner • PS1=1 / PS2=0: Symmetric pause • PS1=1 / PS2=1: Pause is supported on TX and RX
	13:12	R	RF2, RF1	Remote fault condition for link partner. The following encodings are defined for RF1/RF2: • RF1=0 / RF2=0: No error, link is valid (reset condition) • RF1=0 / RF2=1: Offline • RF1=1 / RF2=0: Failure condition • RF1=1 / RF2=1: Auto-negotiation error
	14	R	ACK	Acknowledge for link partner. A value of 1 indicates that the device has received three consecutive matching ability values from its link partner.
	15	R	NP	Next page. In link partner register. When set to 0, the link partner has a Next Page to send. When set to 1, the link partner does not send a Next Page. Next Page is not supported in Auto Negotiation.

Addr	Bit	R/W	Name	Description
0x494 (SGMII mode)	11:10	RW	Speed[1:0]	Local device speed: 00: copper interface speed is 10 Mbps 01: copper interface speed is 100 Mbps 10: copper interface speed is 1 Gigabit 11: reserved
	12	RW	COPPER_DUPLEX_STATUS	Local device capability 1: copper interface is capable of full-duplex operation 0: copper interface is capable of half-duplex operation Note: 1G speed does not support half-duplex operation.
	14	RO	ACK	Local device acknowledge. Value as specified in IEEE 802.3z standard.
	15	RW	COPPER_LINK_STATUS	Local device status 1: copper interface link is up 0: copper interface link is down
0x495 (SGMII mode)	11:10	RW	Speed[1:0]	Link partner speed: 00: copper interface speed is 10 Mbps 01: copper interface speed is 100 Mbps 10: copper interface speed is 1Gigabit 11: reserved
	12	RW	COPPER_DUPLEX_STATUS	Link partner capability: 1: copper interface is capable of full-duplex operation 0: copper interface is capable of half-duplex operation Note: 1G speed does not support half-duplex operation.
	14	RO	ACK	Link partner acknowledge. Value as specified in IEEE 802.3z standard.
	15	RW	COPPER_LINK_STATUS	Link partner status: 1: copper interface link is up 0: copper interface link is down

Addr	Bit	R/W	Name	Description
0x496	0	R	LINK_PARTNER_AUTO_NEGOTIATION_ABLE	Set set to 1, indicates that the link partner supports auto negotiation. The default value is 0.
	1	R	PAGE_RECEIVE	A value of 1 indicates that a new page has been received with new partner ability available in the register partner ability. The default value is 0 when the system management agent performs a read access.
0x4A2	15:0	RW	Link timer[15:0]	Low-order 16 bits of the 21-bit auto-negotiation link timer. Each timer step corresponds to 8ns (assuming a 125 MHz clock). The total timer corresponds to 16 ms. The reset value sets the timer to 10 ms for hardware mode and 10 us for simulation mode.
0x4A3	4:0	RW	Link timer[20:16]	High-order 5 bits of the 21-bit auto-negotiation link timer.
0x4A4	0	RW	SGMII_ENA	Determines the PCS function operating mode. Setting this bit to 1b'1 enables SGMII mode. Setting this bit to 1b'0 enables 1000BASE-X gigabit mode.
	1	RW	USE_SGMII_AN	In SGMII mode, setting this bit to 1b'1 causes the PCS to be configured with the link partner abilities advertised during auto-negotiation. If this bit is set to 1b'0, the PCS function should be configured with the SGMII_SPEED and SGMII_DUPLEX bits.
	3:2	RW	SGMII_SPEED	SGMII speed. When the PCS operates in SGMII mode (SGMII_ENA = 1) and is not programmed for automatic configuration (USE_SGMII_AN = 0), the following encodings specify the speed : 2'b00: 10 Mbps 2'b01: 100 Mbps 2'b10: Gigabit 2'b11: Reserved These bits are not used when SGMII_ENA = 0 or USE_SGMII_AN = 1.
	4	RW	SGMII_half-duplex	When set to 1, enables half-duplex mode for 10/100 Mbps speed. This bit is ignored when SGMII_ENA = 0 or USE_SGMII_AN = 1. These bits are only valid when you enable the SGMII mode only and not the clause-37 auto-negotiation mode.

1G Data Mode

Addr	Bit	R/W	Name	Description
0x4A8	0	RW	tx_invpolarity	When set, the TX interface inverts the polarity of the TX data to the 8B/10B encoder.
	1	RW	rx_invpolarity	When set, the RX channels inverts the polarity of the received data to the 8B/10B decoder.
	2	RW	rx_bitreversal_enable	When set, enables bit reversal on the RX interface to the word aligner.
	3	RW	rx_bytereversal_enable	When set, enables byte reversal on the RX interface to the byte deserializer.
	4	RW	force_electrical_idle	When set, forces the TX outputs to electrical idle.
0x4A9	0	R	rx_syncstatus	When set, the word aligner is synchronized.
	1	R	rx_patterndetect	GbE word aligner detected comma.
	2	R	rx_rlv	Run length violation.
	3	R	rx_rmfifoinserted	Rate match FIFO inserted code group.
	4	R	rx_rmfiodeleted	Rate match FIFO deleted code group.
	5	R	rx_disperr	RX 8B10B disparity error.
	6	R	rx_errdetect	RX 8B10B error detected.

PMA Registers

The PMA registers allow you to reset the PMA, customize the TX and RX serial data interface, and provide status information.

Table 2-139: PMA Registers

Address	Bit	R/W	Name	Description
0x444	1	RW	reset_tx_digital	Writing a 1 causes the internal TX digital reset signal to be asserted. You must write a 0 to clear the reset condition.
	2	RW	reset_rx_analog	Writing a 1 causes the internal RX analog reset signal to be asserted. You must write a 0 to clear the reset condition.
	3	RW	reset_rx_digital	Writing a 1 causes the internal RX digital reset signal to be asserted. You must write a 0 to clear the reset condition.
0x461	0	RW	phy_serial_loopback	Writing a 1 puts the channel in serial loopback mode.
0x464	0	RW	pma_rx_set_locktodata	When set, programs the RX CDR PLL to lock to the incoming data.
0x465	0	RW	pma_rx_set_locktoref	When set, programs the RX clock data recovery (CDR) PLL to lock to the reference clock.

Address	Bit	R/W	Name	Description
0x466	0	RO	pma_rx_is_lockedtodata	When asserted, indicates that the RX CDR PLL is locked to the RX data, and that the RX CDR has changed from LTR to LTD mode.
0x467	0	RO	pma_rx_is_lockedtoref	When asserted, indicates that the RX CDR PLL is locked to the reference clock.

Speed Change Summary

Speed Change	Speed Change Method	Detailed Information
1GbE and 10GBASE-R	Interface Signals	- Refer to <i>Dynamic Reconfiguration Interface</i>. Figure 2-60
SGMII (10M, 100M and 1GbE)	Avalon-MM bus	Table 2-117
1GbE, 10GBASE-R, and 10GBASE-R with FEC	Avalon-MM bus	Table 2-136

Note: You can configure the static speed while generating the IP core using the IP Parameter Editor.

Related Information

[Dynamic Reconfiguration Interface](#) on page 2-140

Creating a 1G/10GbE Design

Follow these steps to create a 1G/10GbE design using the 1G/10GbE PHY IP.

1. Generate the 1G/10GbE PHY with the required parameterization.
The 1G/10GbE PHY IP Core includes reconfiguration logic. This logic provides the Avalon-MM interface that you can use to read and write to PHY registers. All read and write operations must adhere to the Avalon specification.
2. Instantiate a reset controller using the Transceiver Reset Controller Megafunction in the IP Catalog. Connect the power and reset signals between the 1G/10GbE PHY and the reset controller.
3. Instantiate one TX PLL for the 1G data rate and one TX PLL for the 10G data rate. Connect the high speed serial clock and PLL lock signals between 1G/10GbE PHY and TX PLLs. You can use any combination of fPLLs, ATX, or CMU PLLs.
4. Use the tx_pma_divclk from 1G/10GbE PHY or generate a fPLL to create the 156.25 MHz XGMII clock from the 10G reference clock.
No Memory Initialization Files (.mif) are required for the 1G/10GbE design in Arria 10 devices.
5. Complete the design by creating a top level module to connect all the IP (1G/10GbE PHY IP, PLL IP and Reset Controller) blocks.

Related Information

- [fPLL](#) on page 3-13
- [CMU PLL](#) on page 3-21
- [ATX PLL](#) on page 3-3
- [Using the Altera Transceiver PHY Reset Controller](#) on page 4-9

- [1G/10GbE PHY Functional Description](#) on page 2-167

Design Guidelines

Consider the following guidelines while designing with 1G/10GbE PHY.

Using the 1G/10GbE PHY without the Sequencer


The sequencer brings up channel-based initial datapath and performs parallel detection. To use the 1G/10GbE PHY without the sequencer, turn off the **Enable automatic speed detection** parameter.

Turning off the sequencer results in the following additional ports:

- rc_busy
- start_pcs_reconfig
- mode_1g_10gbar

These ports perform manual reconfiguration. The following figure shows how these ports are used for 1G and 10G configuration.

Figure 2-60: Timing for Reconfiguration without the Sequencer

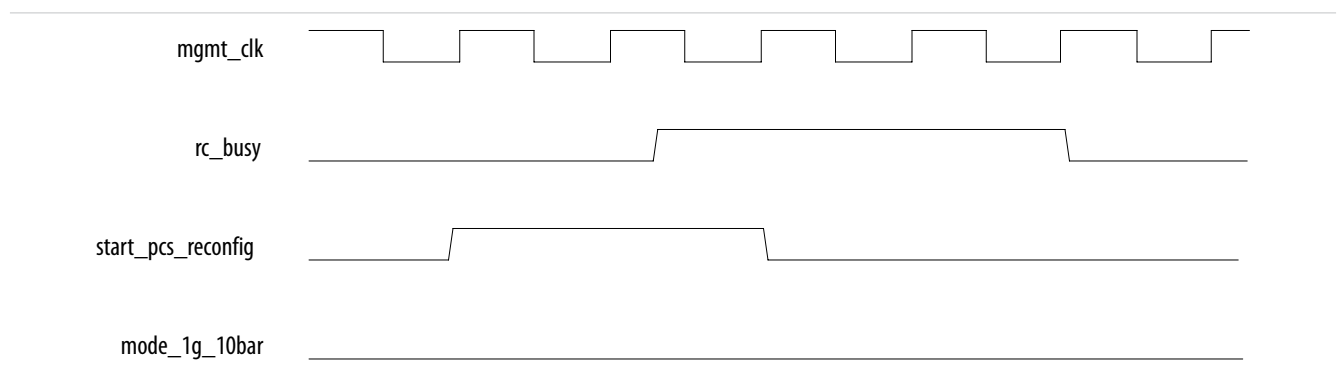

Channel Placement Guidelines

The channels of multi-channel 1G/10G designs do not need to be placed contiguously. However, channels instantiated in different transceiver banks require PLLs in the same bank.


Design Example

Altera provides a design example to assist you in integrating your Ethernet PHY IP into your complete design.

The MAC and PHY design example instantiates the 1G/10GbE PHY IP along with the 1G/10G Ethernet MAC and supporting logic. It is part of the Quartus II 14.0 installation and is located in the `<quartus2_install_dir>/ip` subdirectory. For more information about this example design, refer to the [10-Gbps Ethernet MAC MegaCore Function User Guide](#).

A design example that instantiates the 1G/10G PHY and its supporting logic is available on the Altera wiki. The following figure shows the block diagram of the 1G/10GbE PHY-only design example. The default configuration includes two channels for backplane Ethernet and two channels for line-side(1G/10G) applications.

Figure 2-61: 1G/10GbE PHY Only Design Example

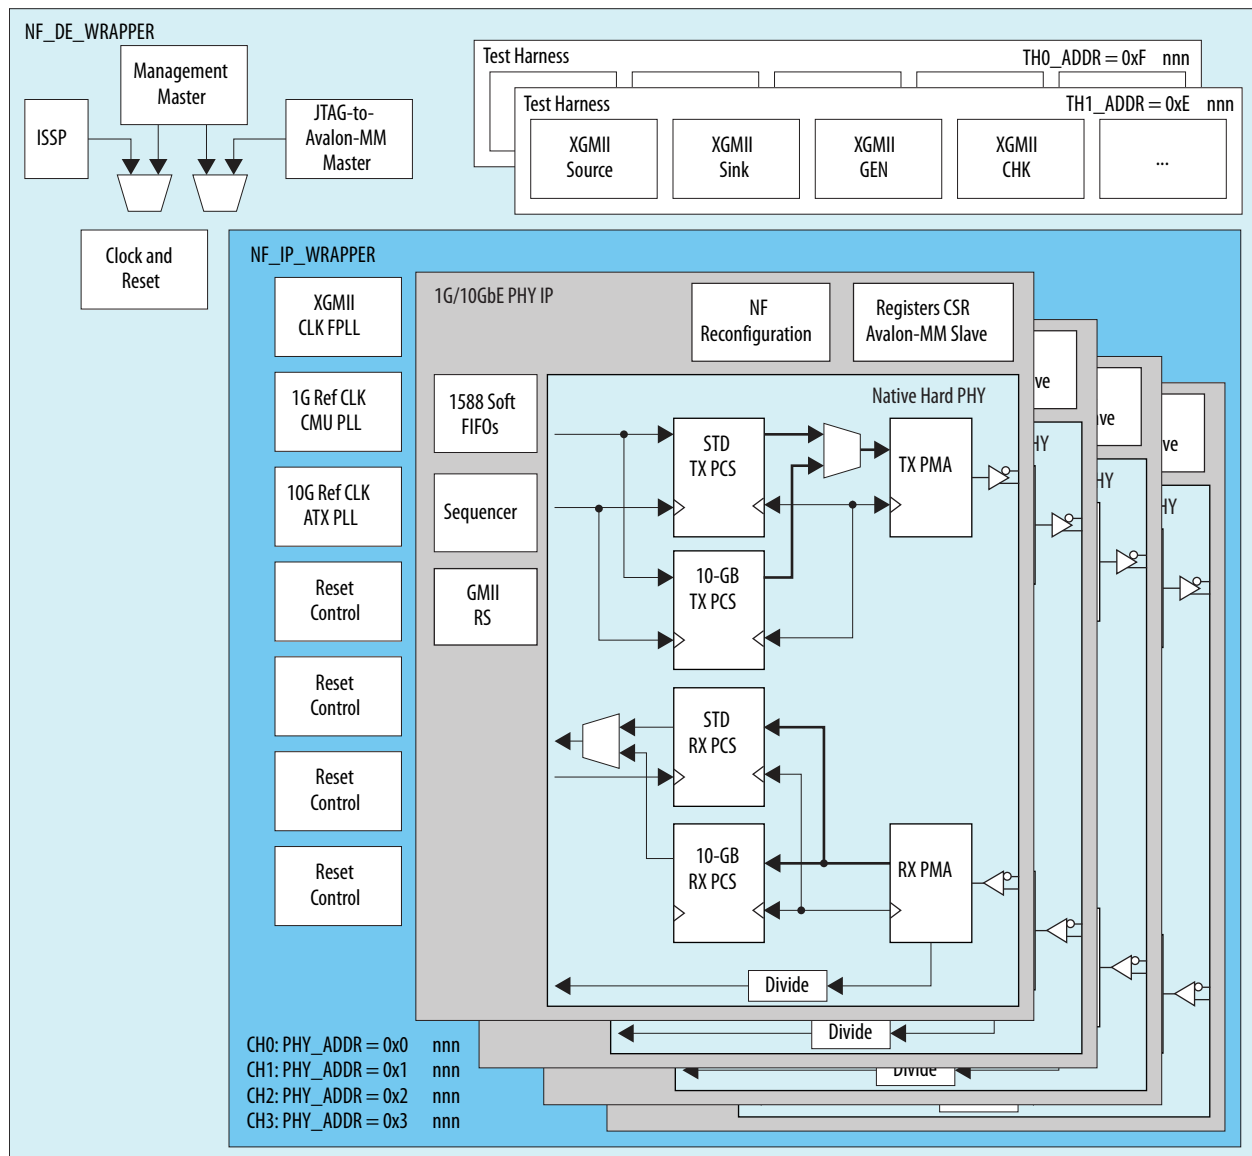

Related Information

Arria 10 Transceiver PHY Design Examples

Simulation Support

The 1G/10GbE and 10GBASE-KR PHY IP core supports the following Altera-supported simulators for this Quartus II software release:

- ModelSim Verilog
- ModelSim VHDL
- VCS Verilog
- VCS VHDL

Arria 10 devices also support NCSIM Verilog and NCSIM VHDL simulation. When you generate a 1G/10GbE or 10GBASE-KR PHY IP core, the Quartus II software optionally generates an IP functional simulation model.

TimeQuest Timing Constraints

To pass timing analysis, you must decouple the clocks in different time domains. The necessary Synopsys Design Constraints File (.sdc) timing constraints for the are included in the top-level wrapper file.


XAUI PHY IP Core

In a XAUI configuration, the transceiver channel data path is configured using a soft PCS. The XAUI configuration provides the transceiver channel datapath, clocking, and channel placement guidelines. You can implement a XAUI link using the IP Catalog. Under **Ethernet** in the Interfaces menu, select the XAUI PHY IP core. The XAUI PHY IP core implements the XAUI PCS in soft logic.

XAUI is a specific physical layer implementation of the 10 Gigabit Ethernet link defined in the IEEE 802.3ae-2008 specification. The XAUI PHY uses the XGMII interface to connect to the IEEE802.3 MAC and Reconciliation Sublayer (RS). The IEEE 802.3ae-2008 specification requires the XAUI PHY link to support:

- A 10 Gbps data rate at the XGMII interface
- Four lanes each at 3.125 Gbps at the PMD interface


Figure 2-62: XAUI and XGMII Layers

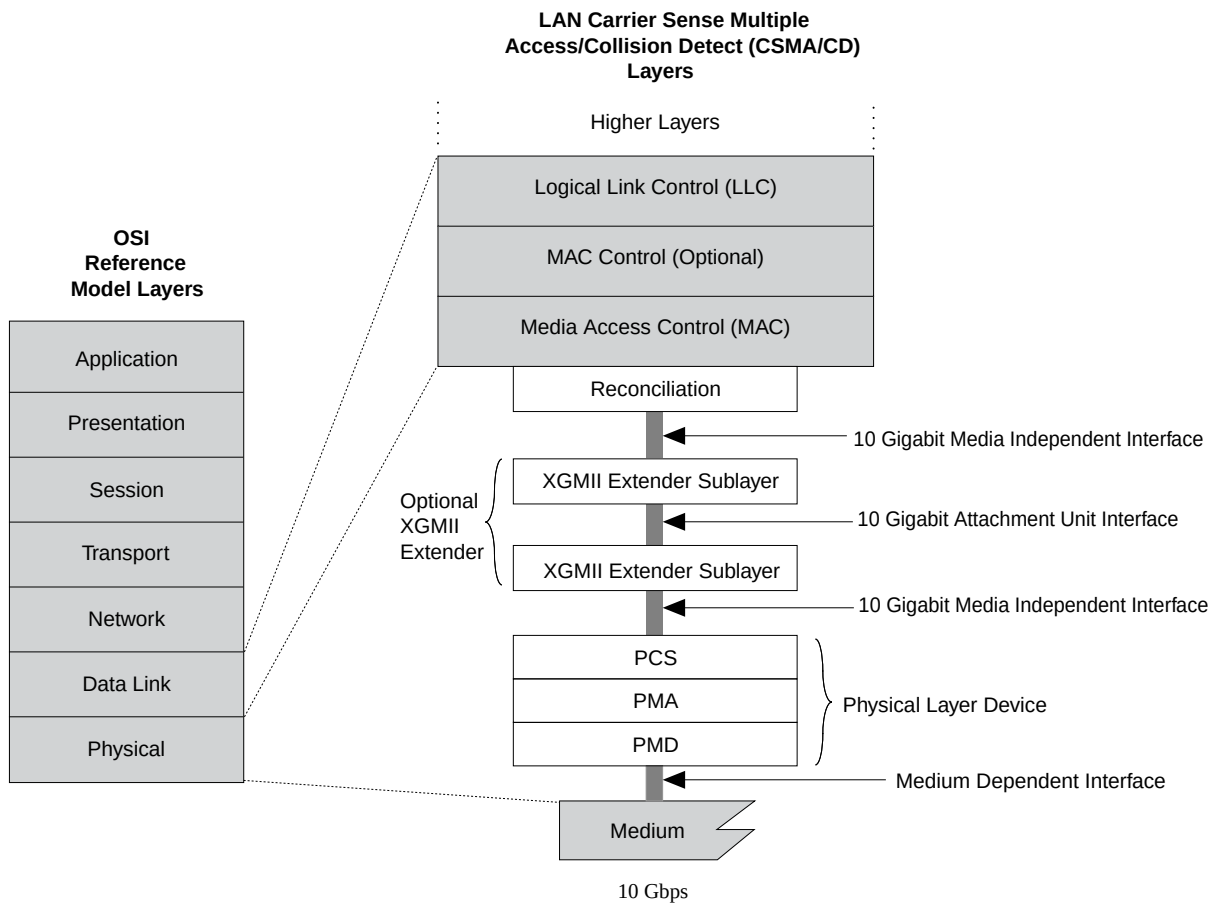

Altera's XAUI PHY IP core implements the IEEE 802.3 Clause 48 specification to extend the operational distance of the XGMII interface and reduce the number of interface signals.

XAUI extends the physical separation possible between the 10 Gbps Ethernet MAC function and the Ethernet standard PHY component to one meter. The XAUI PHY IP core accepts 72-bit data (single data rate–SDR XGMII) from the application layer at 156.25 Mbps. The serial interface runs at 4×3.125 Gbps.

Figure 2-63: XAUI PHY IP Core

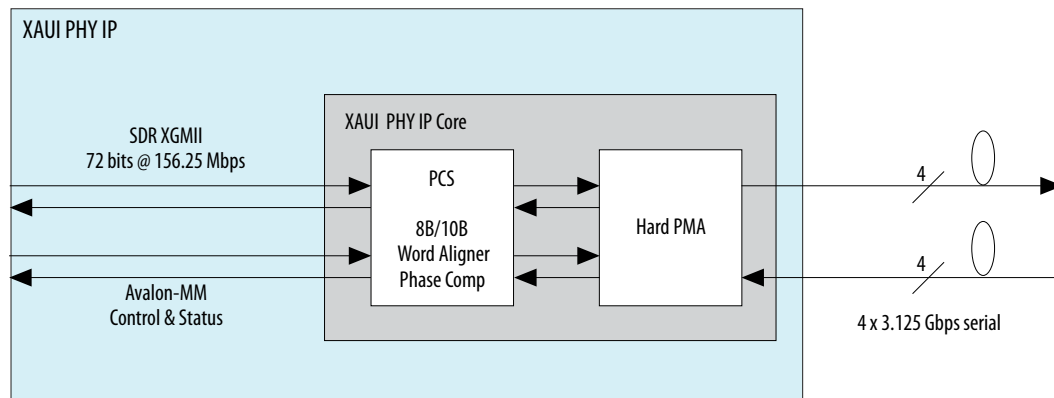

Altera's third-party IP partner for Dual Data Rate XAUI (DDR XAUI or DXAUI) and Reduced XAUI (RXAUI) support is MorethanIP (MTIP).

Related Information


- [IEEE 802.3 Clause 48](#)
- [MorethanIP](#)

Transceiver Datapath in a XAUI Configuration

The XAUI PHY IP core is partially implemented in soft logic inside the FPGA core. You must ensure that your channel placement is compatible with the soft PCS implementation.

Figure 2-64: Transceiver Channel Datapath for XAUI Configuration

The XAUI configuration uses both the soft PCS and the Standard PCS as shown in the following figure.

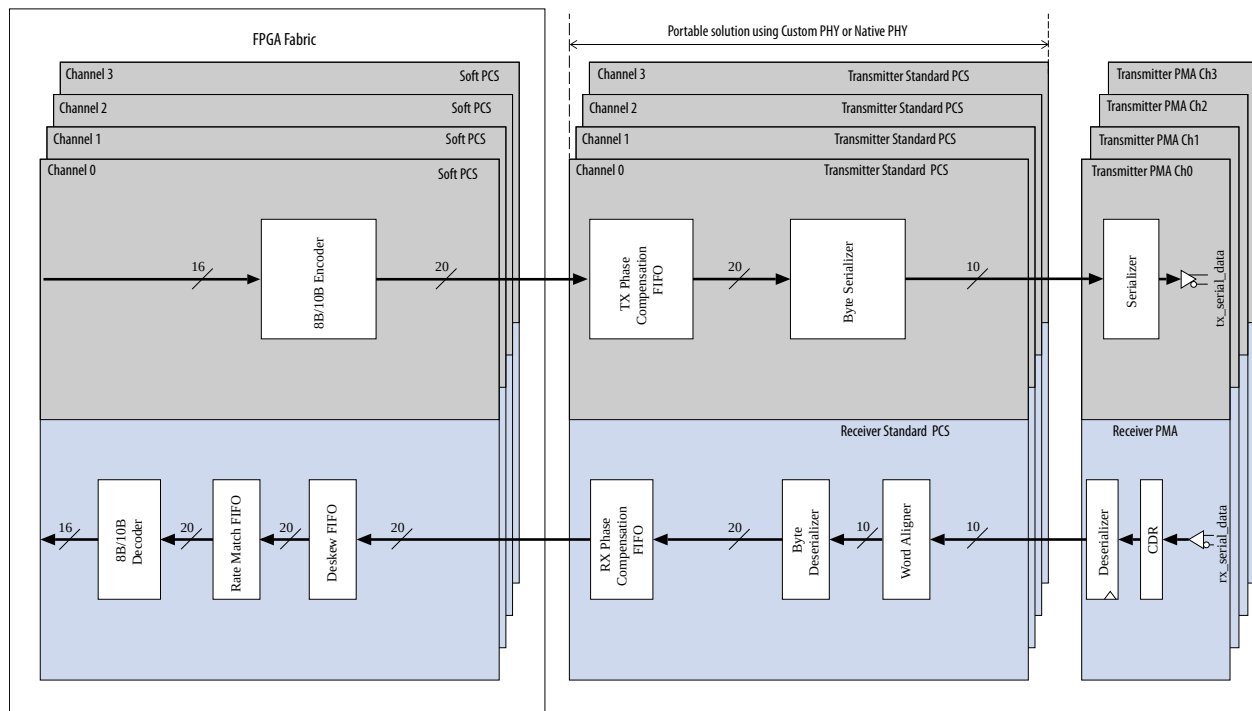


XAUI Supported Features

64-Bit SDR Interface to the MAC/RS

Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the XAUI PCS and the Ethernet MAC/RS. Each of the four XAUI lanes must transfer 8-bit data and a 1-bit control code at both the positive and negative edge (DDR) of the 156.25 MHz interface clock.

Arria 10 transceivers and soft PCS solution in a XAUI configuration do not support the XGMII interface to the MAC/RS as defined in the IEEE 802.3-2008 specification. Instead, they transfer 16-bit data and the 2-bit control code on each of the four XAUI lanes. The transfer occurs only at the positive edge (SDR) of the 156.25 MHz interface clock.

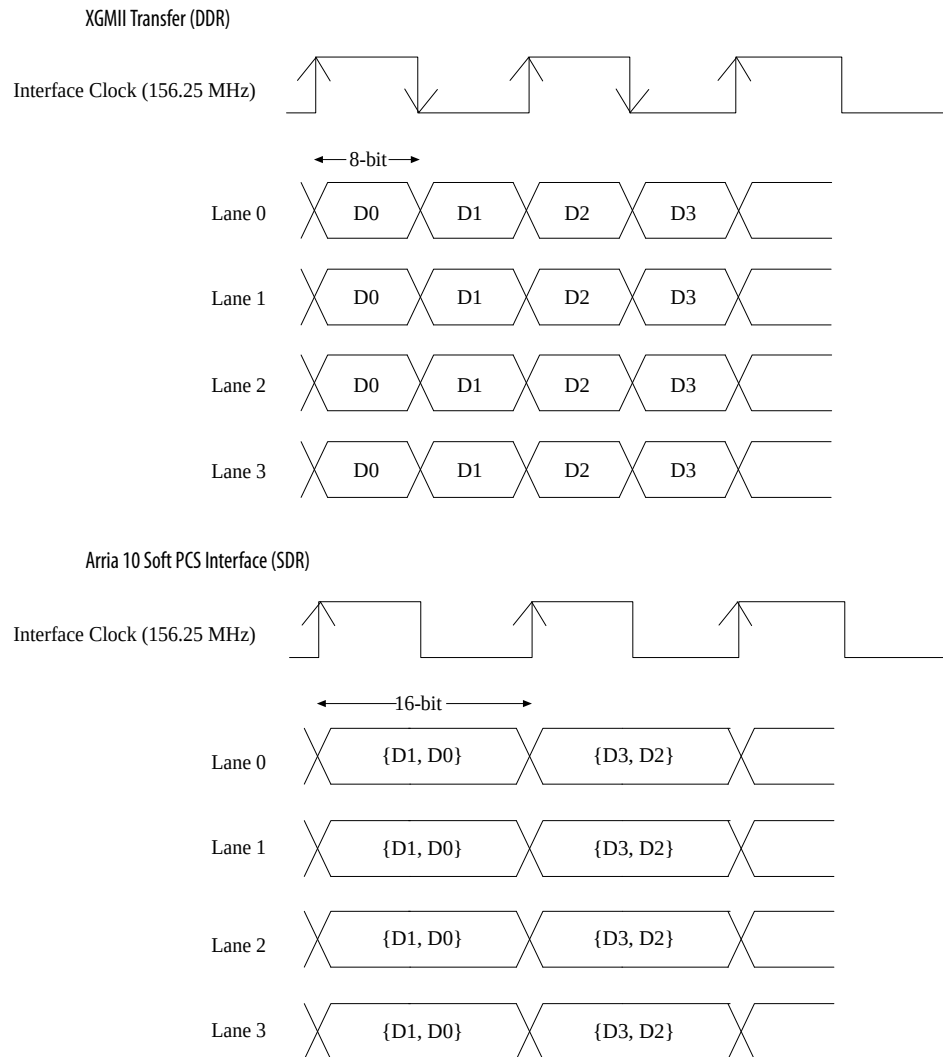Figure 2-65: Implementation of the XGMII Specification in Arria 10 Devices Configuration

8B/10B Encoding/Decoding

Each of the four lanes in a XAUI configuration supports an independent 8B/10B encoder/decoder as specified in Clause 48 of the IEEE802.3-2008 specification. 8B/10B encoding limits the maximum number of consecutive 1s and 0s in the serial data stream to five. This limit ensures DC balance as well as enough transitions for the receiver CDR to maintain a lock to the incoming data.

The XAUI PHY IP core provides status signals to indicate both running disparity and the 8B/10B code group error.

Transmitter and Receiver State Machines

In a XAUI configuration, the Arria 10 soft PCS implements the transmitter and receiver state diagrams shown in Figure 48-6 and Figure 48-9 of the IEEE802.3-2008 specification.

The transmitter state diagram performs the following functions in conformance with the 10GBASE-X PCS:

- Encoding the XGMII data to PCS code groups
- Converting Idle ||I|| ordered sets into Sync ||K||, Align ||A||, and Skip ||R|| ordered sets

The receiver state diagram performs the following functions in conformance with the 10GBASE-X PCS:

- Decoding the PCS code groups to XGMII data
- Converting Sync ||K||, Align ||A||, and Skip ||R|| ordered sets into Idle ||I|| ordered sets

Synchronization

The word aligner block in the receiver PCS of each of the four XAUI lanes implements the receiver synchronization state diagram shown in Figure 48-7 of the IEEE802.3-2008 specification.

The XAUI PHY IP core provides a status signal per lane to indicate if the word aligner is synchronized to a valid word boundary.

Deskew

The lane aligner block in the receiver PCS implements the receiver deskew state diagram shown in Figure 48-8 of the IEEE 802.3-2008 specification.

The lane aligner starts the deskew process only after the word aligner block in each of the four XAUI lanes indicates successful synchronization to a valid word boundary.

The XAUI PHY IP core provides a status signal to indicate successful lane deskew in the receiver PCS.

Clock Compensation

The rate match FIFO in the receiver PCS datapath compensates up to ± 100 ppm difference between the remote transmitter and the local receiver. It compensates by inserting and deleting Skip ||R|| columns, depending on the ppm difference.

The clock compensation operation begins after:

- The word aligner in all four XAUI lanes indicates successful synchronization to a valid word boundary.
- The lane aligner indicates a successful lane deskew.

The rate match FIFO provides status signals to indicate the insertion and deletion of the Skip ||R|| column for clock rate compensation.

XAUI PHY Release Information

This section provides information about this release of the XAUI PHY IP core.

Table 2-140: XAUI Release Information

Item	Description
Version	14.1
Release Date	December 2014

Item	Description
Ordering Codes ⁽²³⁾	P-XAUIPCS (primary)–Soft PCS IPR-XAUIPCS (renewal)–Soft PCS
Product ID	00D7
Vendor ID	6AF7

XAUI PHY Device Family Support

This section describes device family support for the IP core.

IP cores provide either final or preliminary support for target Altera device families. These terms have the following definitions:

- Final support—Verified with final timing models for this device.
- Preliminary support—Verified with preliminary timing models for this device.

Table 2-141: Device Family Support

Device Family	Support
XAUI	
Arria 10	Preliminary


⁽²³⁾ No ordering codes or license files are required for the hard PCS and PMA PHY in Arria 10 devices.

Transceiver Clocking and Channel Placement Guidelines in XAUI Configuration

Transceiver Clocking

Figure 2-66: Transceiver Clocking for XAUI Configuration Without Phase Compensation FIFO Enabled

The external ATX PLL generates the transmitter serial and parallel clocks for the four XAUI channels. You must instantiate the PLL and connect it to XAUI. The x6 clock line carries the transmitter serial and parallel clocks to the PMA and PCS of each of the four channels.

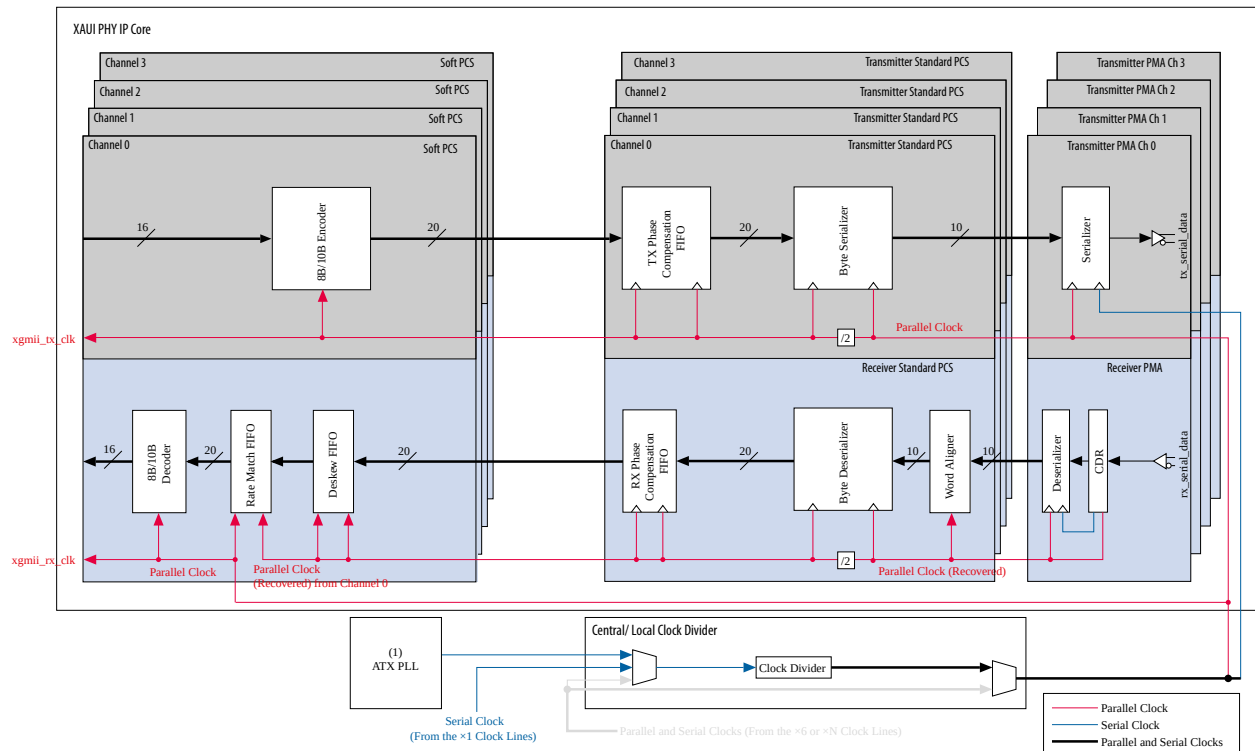

Note:

1. Use the ATX PLL as the transmit PLL for XAUI support in Arria 10 devices.

Note: When configuring ATX PLL, the PMA width setting must be set to 20-bit per transceiver channel. This ensures that the serial clock is running at 3.125 Gbps while the input reference clock is 156.25 MHz.

1. For **Which device family will you be using?**, select **Arria 10**.
2. Click **Installed IP > Library > Interface Protocols > Ethernet > XAUI PHY**.
3. Use the tabs on the IP Catalog to select the options required for the protocol.
4. Refer to the following topics to learn more about the parameters:
 - a. General Parameters
 - b. Analog Parameters
 - c. Advanced Options Parameters
5. Click **Finish** to generate your customized XAUI PHY IP core.

XAUI PHY General Parameters

This section describes the settings available on the **General Options** tab.

Table 2-143: General Options

Name	Value	Description
Device family	Arria 10	The target device family.
XAUI interface type	Soft XAUI	Implements the PCS in soft logic and the PMA in hard logic. Includes four channels.
Enable Sync-E support	On / Off	Shows separate reference clocks for CDR PLL and TX PLL.
Number of XAUI interfaces	1	Specifies the number of XAUI interfaces. Only 1 is available in the current release.

XAUI PHY Advanced Options Parameters

This section describes the settings available on the **Advanced Options** tab.

Table 2-144: Advanced Options


Name	Value	Description
Include control and status ports	On / Off	If you turn this option on, the top-level IP core includes the status signals and digital resets shown in XAUI Top-Level Signals—Soft PCS and PMA and XAUI Top-Level Signals—Hard IP PCS and PMA. If you turn this option off, you can access control and status information using the Avalon-MM interface to the control and status registers. The default setting is off.
Enable dynamic reconfiguration	On / Off	When you turn this option on, you can connect the dynamic reconfiguration ports to an external reconfiguration module.
Enable rx_recovered_clk pin	On / Off	When you turn this option on, the RX recovered clock signal is an output signal.

Name	Value	Description
Enable phase compensation FIFO	On / Off	Enables phase compensation FIFO to allow different clocks on the xgmii interface.

XAUI PHY Ports

The following figure illustrates the top-level signals of the XAUI PHY IP core for the soft IP implementation.

Figure 2-68: XAUI Top-Level Signals—Soft PCS and PMA

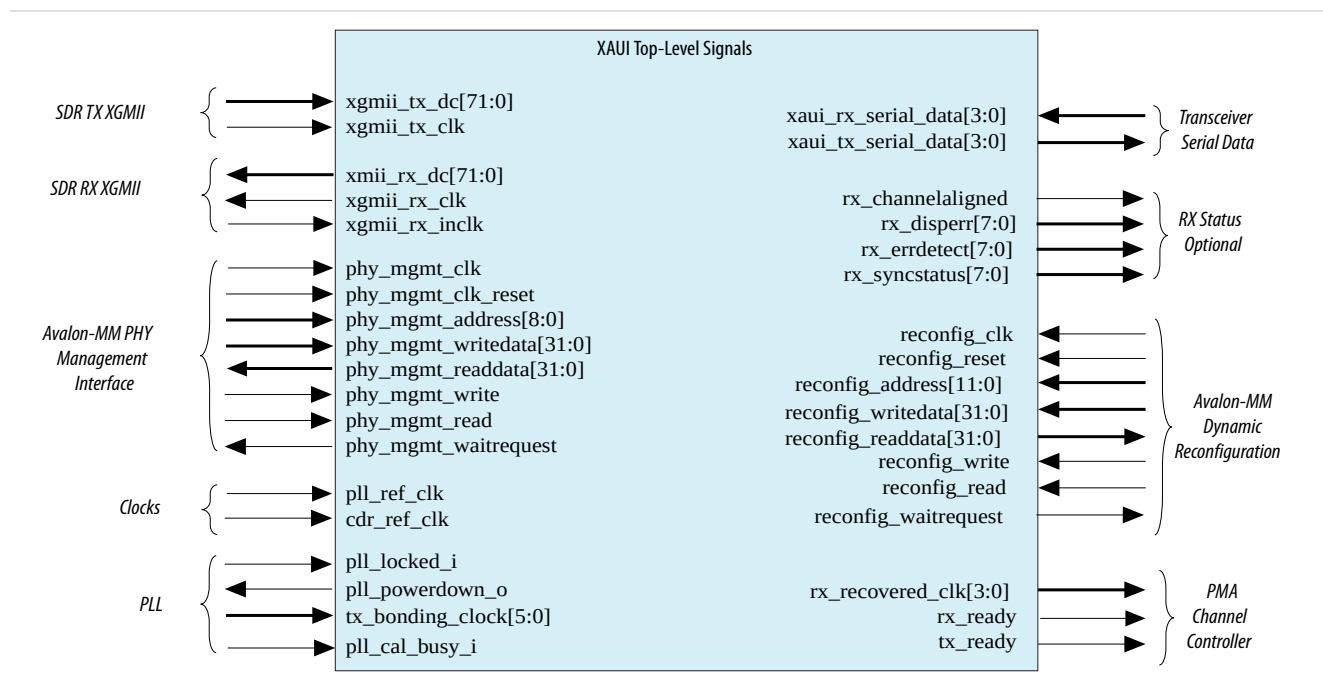


XAUI PHY Interfaces

The XAUI PCS interface to the FPGA fabric uses a SDR XGMII interface. This interface implements a simple version of the Avalon-ST protocol. The interface does not include ready or valid signals. Consequently, the sources always drive data and the sinks must always be ready to receive data.

For more information about the Avalon-ST protocol, including timing diagrams, refer to the *Avalon Interface Specifications*.

Depending on the parameters you choose, the application interface runs at either 156.25 Mbps or 312.5 Mbps. At either frequency, data is only driven on the rising edge of clock. To meet the bandwidth requirements, the datapath is eight bytes wide with eight control bits, instead of the standard four bytes of data and four bits of control. The XAUI PHY IP core treats the datapath as two, 32-bit data buses and includes logic to interleave them, starting with the low-order bytes.

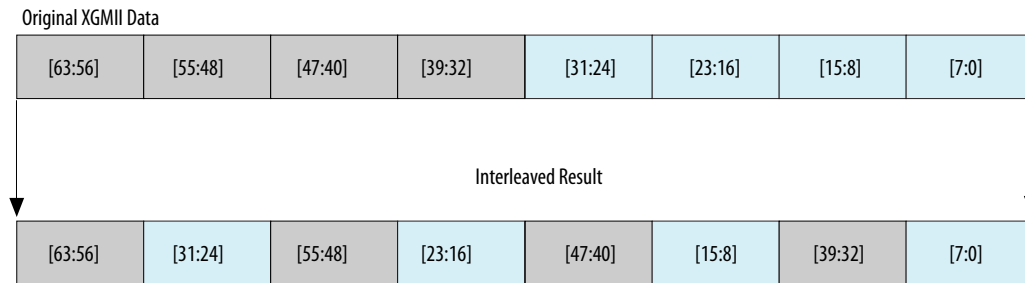Figure 2-69: Interleaved SDR XGMII Data Mapping**Related Information****Avalon Interface Specifications****SDR XGMII TX Interface**

This section describes the signals in the SDR TX XGMII interface.

Table 2-145: SDR TX XGMII Interface

Signal Name	Direction	Description
xgmii_tx_dc[71:0]	Input	Contains 4 lanes of data and control for XGMII. Each lane consists of 16 bits of data and 2 bits of control. - Lane 0—[7:0]/[8], [43:36]/[44] - Lane 1—[16:9]/[17], [52:45]/[53] - Lane 2—[25:18]/[26], [61:54]/[62] - Lane 3—[34:27]/[35], [70:63]/[71]
xgmii_tx_clk	Input	The XGMII SDR TX clock which runs at 156.25 MHz.

SDR XGMII RX Interface

This section describes the signals in the SDR RX XGMII interface.

Table 2-146: SDR RX XGMII Interface

Signal Name	Direction	Description
xgmii_rx_dc[71:0]	Output	Contains 4 lanes of data and control for XGMII. Each lane consists of 16 bits of data and 2 bits of control. - Lane 0—[7:0]/[8], [43:36]/[44] - Lane 1—[16:9]/[17], [52:45]/[53] - Lane 2—[25:18]/[26], [61:54]/[62] - Lane 3—[34:27]/[35], [70:63]/[71]
xgmii_rx_clk	Output	The XGMII SDR RX clock which runs at 156.25 MHz.

Signal Name	Direction	Description
xgmii_rx_inclk	Input	The XGMII SDR RX input clock which runs at 156.25 MHz. This port is only available when Enable phase comensation FIFO is selected.

Transceiver Serial Data Interface

This section describes the signals in the XAUI transceiver serial data interface.

The XAUI transceiver serial data interface has four lanes of serial data for both the TX and RX interfaces. This interface runs at 3.125 Gbps. There is no separate clock signal because it is encoded in the data.

Table 2-147: Serial Data Interface

Signal Name	Direction	Description
xau_rx_serial_data[3:0]	Input	Serial input data.
xau_tx_serial_data[3:0]	Output	Serial output data.

XAUI PHY Clocks, Reset, and Powerdown Interfaces

This section describes the clocks, reset, and powerdown interfaces.

Figure 2-70: Clock Inputs and Outputs for IP Core with Soft PCS

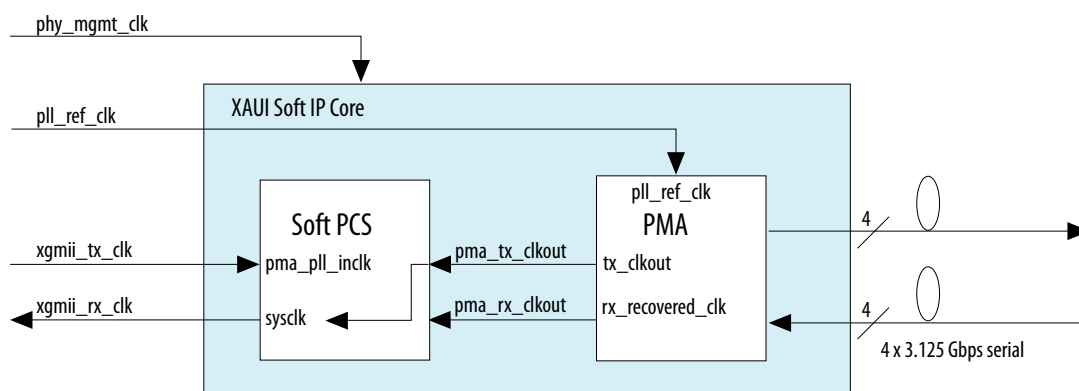


Table 2-148: Clock and Reset Signals

Signal Name	Direction	Description
pll_ref_clk	Input	This is a 156.25 MHz reference clock that is used by the CDR logic.

XAUI PHY PMA Channel Controller Interface

Table 2-149: PMA Channel Controller Signals

Signal Name	Direction	Description
rx_recovered_clk[3:0]	Output	This is the RX clock, which is recovered from the received data stream.
rx_ready	Output	Indicates PMA RX has exited the reset state and the transceiver can receive data.
tx_ready	Output	Indicates PMA TX has exited the reset state and the transceiver can transmit data.
pll_cal_busy_i	Input	Indicates the PLL calibration status.

XAUI PHY Optional PMA Control and Status Interface

Use the Avalon-MM PHY Management interface to read the state of the optional PMA control and status signals available in the XAUI PHY IP core registers. In some cases you may need to know the instantaneous value of a signal to ensure correct functioning of the XAUI PHY. In such cases, you can include the required signal in the top-level module of your XAUI PHY IP core.

Table 2-150: Optional Control and Status Signals—Soft IP Implementation

Signal Name	Direction	Description
rx_channelaligned	Output	When asserted, indicates that all 4 RX channels are aligned.
rx_disperr[7:0]	Output	Received 10-bit code or data group has a disparity error. It is paired with rx_errdetect which is also asserted when a disparity error occurs. The rx_disperr signal is 2 bits wide per channel for a total of 8 bits per XAUI link.
rx_errdetect[7:0]	Output	When asserted, indicates an 8B/10B code group violation. It is asserted if the received 10-bit code group has a code violation or disparity error. Use rx_errdetect with the rx_disperr signal to differentiate between a code violation error, a disparity error, or both. The rx_errdetect signal is 2 bits wide per channel for a total of 8 bits per XAUI link.
rx_syncstatus[7:0]	Output	Synchronization indication. RX synchronization is indicated on the rx_syncstatus port of each channel. The rx_syncstatus signal is 2 bits per channel for a total of 8 bits per hard XAUI link. The rx_syncstatus signal is 1 bit per channel for a total of 4 bits per soft XAUI link.

XAUI PHY Register Interface and Register Descriptions

The Avalon-MM PHY management interface provides access to the XAUI PHY IP core PCS, PMA, and transceiver reconfiguration registers.

Table 2-151: Signals in the Avalon-MM PHY Management Interface

Signal Name	Direction	Description
phy_mgmt_clk	Input	Avalon-MM clock input.
phy_mgmt_clk_reset	Input	Global reset signal that resets the entire XAUI PHY. This signal is active high and level sensitive.
phy_mgmt_addr[8:0]	Input	9-bit Avalon-MM address.
phy_mgmt_writedata[31:0]	Input	32-bit input data.
phy_mgmt_readdata[31:0]	Output	32-bit output data.
phy_mgmt_write	Input	Write signal. Asserted high.
phy_mgmt_read	Input	Read signal. Asserted high.
phy_mgmt_waitrequest	Output	When asserted, indicates that the Avalon-MM slave interface is unable to respond to a read or write request. When asserted, control signals to the Avalon-MM slave interface must remain constant.

For more information about the Avalon-MM interface, including timing diagrams, refer to the *Avalon Interface Specification*.

The following table specifies the registers that you can access using the Avalon-MM PHY management interface using word addresses and a 32-bit embedded processor. A single address space provides access to all registers.

Note: Writing to reserved or undefined register addresses may have undefined side effects.

Table 2-152: XAUI PHY IP Core Registers

Word Addr	Bits	R/W	Register Name	Description
Reset Control Registers—Automatic Reset Controller				
0x041	[31:0]	RW	reset_ch_bitmask	Bit mask for reset registers at addresses 0x042 and 0x044. The default value is all 1s. You can reset channel <n> when bit<n> = 1.

Word Addr	Bits	R/W	Register Name	Description
0x042	[1:0]	W	reset_control(write)	Writing a 1 to bit 0 initiates a TX digital reset using the reset controller module. The reset affects channels enabled in the reset_ch_bitmask. Writing a 1 to bit 1 initiates a RX digital reset of channels enabled in the reset_ch_bitmask. This bit self-clears.
		R	reset_status(read)	Reading bit 0 returns the status of the reset controller TX ready bit. Reading bit 1 returns the status of the reset controller RX ready bit. This bit self-clears.

Reset Controls –Manual Mode

0x044	[31:4,0]	RW	Reserved	It is safe to write 0s to reserved bits.
	[1]	RW	reset_tx_digital	Writing a 1 causes the internal TX digital reset signal to be asserted, resetting all channels enabled in reset_ch_bitmask. You must write a 0 to clear the reset condition.
	[2]	RW	reset_rx_analog	Writing a 1 causes the internal RX analog reset signal to be asserted, resetting the RX analog logic of all channels enabled in reset_ch_bitmask. You must write a 0 to clear the reset condition.
	[3]	RW	reset_rx_digital	Writing a 1 causes the RX digital reset signal to be asserted, resetting the RX digital channels enabled in reset_ch_bitmask. You must write a 0 to clear the reset condition.

PMA Control and Status Registers

0x061	[31:0]	RW	phy_serial_loopback	Writing a 1 to channel <n> puts channel <n> in serial loopback mode. For information about pre- or post-CDR serial loopback modes, refer to Loopback Modes.
0x064	[31:0]	RW	pma_rx_set_locktodata	When set, programs the RX CDR PLL to lock to the incoming data. Bit <n> corresponds to channel <n>.
0x065	[31:0]	RW	pma_rx_set_locktoref	When set, programs the RX CDR PLL to lock to the reference clock. Bit <n> corresponds to channel <n>.

Word Addr	Bits	R/W	Register Name	Description
0x066	[31:0]	RO	pma_rx_is_lockedtodata	When asserted, indicates that the RX CDR PLL is locked to the RX data, and that the RX CDR has changed from LTR to LTD mode. Bit <n> corresponds to channel <n>.
0x067	[31:0]	RO	pma_rx_is_lockedtoref	When asserted, indicates that the RX CDR PLL is locked to the reference clock. Bit <n> corresponds to channel <n>.
XAUI PCS				
0x084	[31:16]	N/A	Reserved	N/A
			Reserved	N/A
	[7:0]	R	syncstatus[7:0]	Records the synchronization status of the corresponding bit. The RX sync status register has 1 bit per channel for a total of 4 bits per soft XAUI link; soft XAUI uses bits 0–3. Reading the value of the syncstatus register clears the bits. From block: Word aligner
0x085	[31:16]	N/A	Reserved	N/A
	[15:8]		errdetect[7:0]	When set, indicates that a received 10-bit code group has an 8B/10B code violation or disparity error. Use errdetect with disperr to differentiate between a code violation error, a disparity error, or both. There are 2 bits per RX channel for a total of 8 bits per XAUI link. Reading the value of the errdetect register clears the bits. From block: 8B/10B decoder
	[7:0]	R	disperr[7:0]	Indicates that the received 10-bit code or data group has a disparity error. When set, the corresponding errdetect bits are also set. There are 2 bits per RX channel for a total of 8 bits per XAUI link. Reading the value of the errdetect register clears the bits. From block: 8B/10B decoder
0x08a	[0]	RW	simulation_flag	Setting this bit to 1 shortens the duration of reset and loss timer when simulating. Altera recommends that you keep this bit set during simulation.

Related Information

[Avalon Interface Specifications](#)**XAUI PHY TimeQuest SDC Constraint**

The following Synopsis Design Constraints (SDC) constraint is required to close the timing properly. You must add the SDC constraint in your (.sdc) file for the application design.

```
set_max_skew -from [get_registers *altera_xcvr_reset_control*tx_digitalreset*r_reset]
-to [get_pins -compatibility_mode *twentynm_xcvr_native_inst\|*inst_twentynm_pcs\|
*twentynm_hssi_?x_pld_pcs_interface*\pld_*_tx_pld_rst_n] 3.2n
```

Acronyms

This table defines some commonly used Ethernet acronyms.

Table 2-153: Ethernet Acronyms

Acronym	Definition
AN	Auto-Negotiation in Ethernet as described in Clause 73 of IEEE 802.3ap-2007.
BER	Bit Error Rate.
DME	Differential Manchester Encoding.
FEC	Forward error correction.
GMII	Gigabit Media Independent Interface.
KR	Short hand notation for Backplane Ethernet with 64b/66b encoding.
LD	Local Device.
LT	Link training in backplane Ethernet Clause 72 for 10GBASE-KR and 40GBASE-KR4.
LP	Link partner, to which the LD is connected.
MAC	Media Access Control.
MII	Media independent interface.
OSI	Open System Interconnection.
PCS	Physical Coding Sublayer.
PHY	Physical Layer in OSI 7-layer architecture, also in Altera device scope is: PCS + PMA.
PMA	Physical Medium Attachment.
PMD	Physical Medium Dependent.
SGMII	Serial Gigabit Media Independent Interface.
WAN	Wide Area Network.
XAUI	10 Gigabit Attachment Unit Interface.

PCI Express (PIPE)

You can use Arria 10 transceivers to implement a complete PCI Express solution for Gen1, Gen2, and Gen3, at data rates of 2.5, 5.0, and 8 Gbps, respectively.

You can configure the transceivers for PCIe functionality using one of the following methods:

- **Arria 10 Hard IP for PCIe**

This is a complete PCIe solution that includes the Transaction, Data Link, and PHY/MAC layers. The Hard IP solution contains dedicated hard logic, which connects to the transceiver PHY interface.

Note: For more information, refer to the *Arria 10 Avalon-ST Interface for PCIe Solutions User Guide*.

- **Native PHY IP Core in PIPE Gen1/Gen2/Gen3 Transceiver Configuration Rules**

You can use the Native PHY to configure the transceiver in PCIe mode, giving access to the PIPE interface (commonly called PIPE mode in transceivers). This mode enables you to connect the transceiver to a third-party MAC to create a complete PCIe solution.

- **Implementation and Configuration Details for Native PHY IP Core Using PIPE Transceiver Configuration Rules**

The PIPE specification (version 3.0) provides implementation details for a PCIe-compliant physical layer. The Native PHY IP Core for PIPE Gen1, Gen2, and Gen3 supports x1, x2, x4, or x8 operation for a total aggregate bandwidth ranging from 2 to 64 Gbps. In a x1 configuration, the PCS and PMA blocks of each channel are clocked and reset independently. The x2, x4, and x8 configurations support channel bonding for two-lane, four-lane, and eight-lane links. In these bonded channel configurations, the PCS and PMA blocks of all bonded channels share common clock and reset signals.

Gen1 and Gen2 modes use 8B/10B encoding, which has a 20% overhead to overall link bandwidth. Gen3 modes use 128b/130b encoding, which has an overhead of less than 2%. Gen1 and Gen2 modes use the Standard PCS, and Gen3 mode uses the Gen3 PCS for its operation.

Table 2-154: Transceiver Solutions

Support	Arria 10 Hard IP for PCI Express	Native PHY IP Core for PCI Express (PIPE)
Gen1, Gen2, and Gen3 data rates	Yes	Yes
MAC, data link, and transaction layer	Yes	User implementation in FPGA core
Transceiver interface	Hard IP through PIPE 3.0 based interface	• PIPE 2.0 for Gen1 and Gen2 • PIPE 3.0 based for Gen3 with Gen1/Gen2 support

Related Information

[Intel PHY Interface for the PCI Express \(PIPE\) Architecture PCI Express](#)

[Arria 10 Hard IP for PCI Express User Guide for the Avalon Streaming Interface](#)

Transceiver Channel Datapath for PIPE

Figure 2-71: Transceiver Channel Datapath for PIPE Gen1/Gen2 Configurations


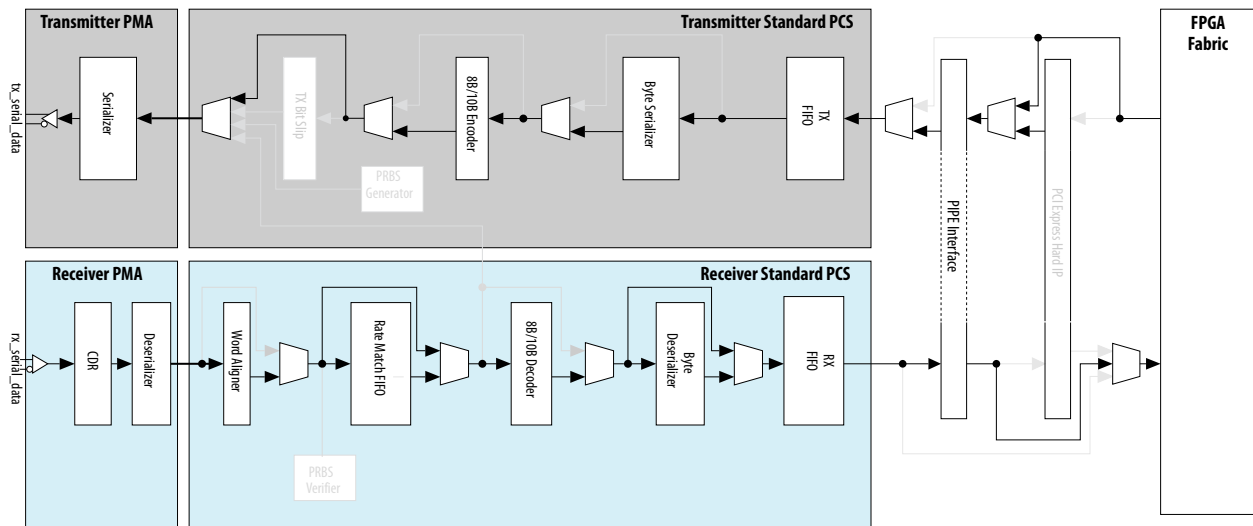


Figure 2-72: Transceiver Channel Datapath for PIPE Gen1/Gen2/Gen3 Configurations

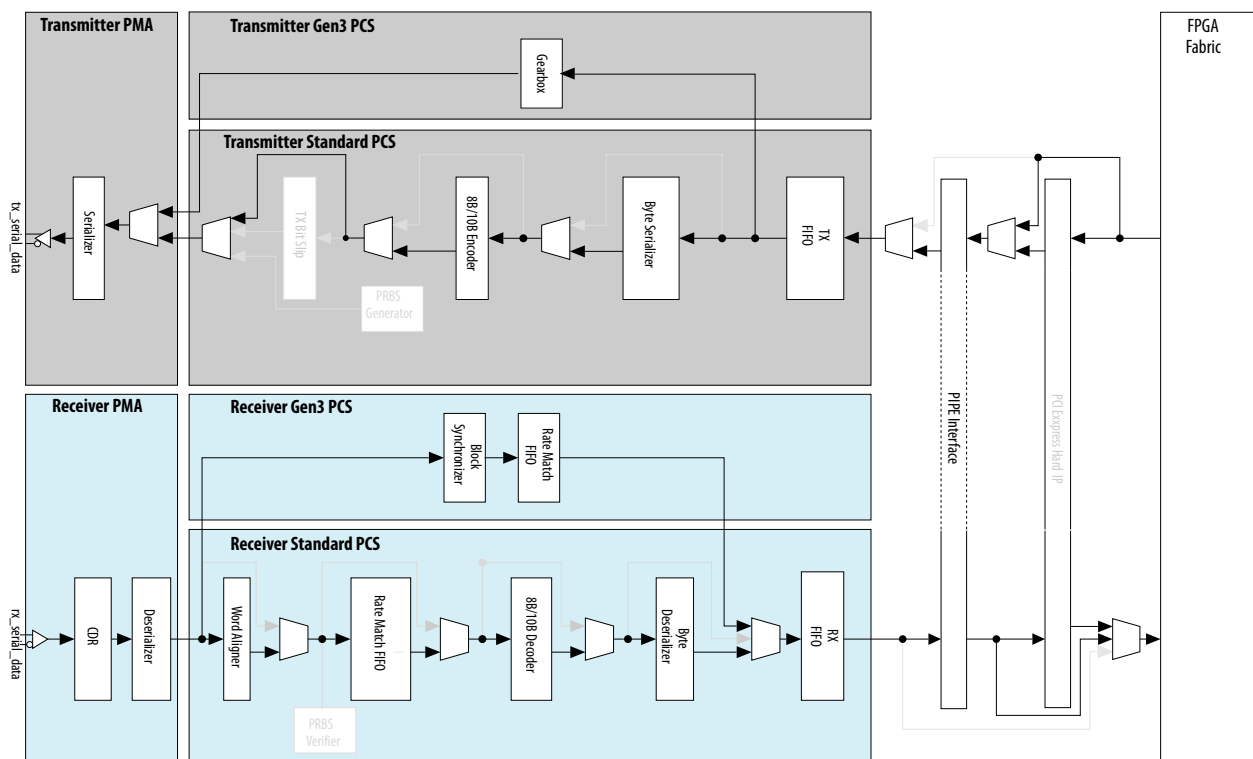

Supported PIPE Features

PIPE Gen1, Gen2, and Gen3 configurations support different features.

Table 2-155: Supported Features for PIPE Configurations

Protocol Feature	Gen1 (2.5 Gbps)	Gen2 (5 Gbps)	Gen3 (8 Gbps)
x1, x2, x4, x8 link configurations	Yes	Yes	Yes
PCIe-compliant synchronization state machine	Yes	Yes	Yes
±300 ppm (total 600 ppm) clock rate compensation	Yes	Yes	Yes
Transmitter driver electrical idle	Yes	Yes	Yes
Receiver Detection	Yes	Yes	Yes
8B/10B encoding/decoding disparity control	Yes	Yes	No
128b/130b encoding/decoding	No	No	Yes (supported through the Gearbox)
Scrambling/Descrambling	No	No	Yes (implemented in FPGA fabric)
Power state management	Yes	Yes	Yes
Receiver PIPE status encoding pipe_rxstatus[2:0]	Yes	Yes	Yes
Dynamic switching between 2.5 Gbps and 5 Gbps signaling rate	No	Yes	No
Dynamic switching between 2.5 Gbps, 5 Gbps, and 8 Gbps signaling rate	No	No	Yes
Dynamic transmitter margining for differential output voltage control	No	Yes	Yes
Dynamic transmitter buffer de-emphasis of –3.5 dB and –6 dB	No	Yes	Yes
Dynamic Gen3 transceiver pre-emphasis, de-emphasis, and equalization	No	No	Yes
PCS PMA interface width (bits)	10	10	32
Receiver Electrical Idle Inference (EII)	Implement in FPGA fabric	Implement in FPGA fabric	Implement in FPGA fabric

Related Information**PCIe Gen3 PCS Architecture**

For more information about PIPE Gen3.

Intel PHY Interface for the PCI Express (PIPE) Architecture PCI Express 2.0**Intel PHY Interface for the PCI Express (PIPE) Architecture PCI Express 3.0****Gen1/Gen2 Features**

In a PIPE configuration, each channel has a PIPE interface block that transfers data, control, and status signals between the PHY-MAC layer and the transceiver channel PCS and PMA blocks. The PIPE

configuration is based on the PIPE 2.0 specification. If you use a PIPE configuration, you must implement the PHY-MAC layer using soft IP in the FPGA fabric.

Dynamic Switching Between Gen1 (2.5 Gbps) and Gen2 (5 Gbps)

In a PIPE configuration, Native PHY IP Core provides an input signal (`pipe_rate [1:0]`) that is functionally equivalent to the RATE signal specified in the PCIe specification. A change in value from 2'b00 to 2'b01 on this input signal (`pipe_rate [1:0]`) initiates a data rate switch from Gen1 to Gen2. A change in value from 2'b01 to 2'b00 on the input signal initiates a data rate switch from Gen2 to Gen1.

Transmitter Electrical Idle Generation

The PIPE interface block in Arria 10 devices puts the transmitter buffer in an electrical idle state when the electrical idle input signal is asserted. During electrical idle, the transmitter buffer differential and common mode output voltage levels are compliant with the PCIe Base Specification 2.0 for both PCIe Gen1 and Gen2 data rates.

The PCIe specification requires the transmitter driver to be in electrical idle in certain power states.

Note: For more information about input signal levels required in different power states, refer to *Power State Management* in the next section.

Power State Management

Table 2-156: Power States Defined in the PCIe Specification

To minimize power consumption, the physical layer device must support the following power states.

Power States	Description
P0	Normal operating state during which packet data is transferred on the PCIe link.
P0s, P1, and P2	The PHY-MAC layer directs the physical layer to transition into these low-power states.

The PIPE interface in Arria 10 transceivers provides an input port for each transceiver channel configured in a PIPE configuration.

The PCIe specification requires the physical layer device to implement power-saving measures when the P0 power state transitions to the low power states. Arria 10 transceivers do not implement these power-saving measures except for putting the transmitter buffer in electrical idle mode in the lower power states.

8B/10B Encoder Usage for Compliance Pattern Transmission Support

The PCIe transmitter transmits a compliance pattern when the Link Training and Status State Machine (LTSSM) enters the Polling.Compliance substate. The Polling.Compliance substate assesses if the transmitter is electrically compliant with the PCIe voltage and timing specifications.

Receiver Status

The PCIe specification requires the PHY to encode the receiver status on a 3-bit status signal `pipe_rx_status[2:0]`. This status signal is used by the PHY-MAC layer for its operation. The PIPE interface block receives status signals from the transceiver channel PCS and PMA blocks, and encodes the status on the `pipe_rx_status[2:0]` signal to the FPGA fabric. The encoding of the status signals on the `pipe_rx_status[2:0]` signal conforms to the PCIe specification.

Receiver Detection

The PIPE interface block in Arria 10 transceivers provides an input signal `pipe_tx_detectrx_loopback` for the receiver detect operation. The PCIe protocol requires this signal to be high during the Detect state of the LTSSM. When the `pipe_tx_detectrx_loopback` signal is asserted in the P1 power state, the PIPE interface block sends a command signal to the transmitter driver in that channel to initiate a receiver detect sequence. In the P1 power state, the transmitter buffer must always be in the electrical idle state. After receiving this command signal, the receiver detect circuitry creates a step voltage at the output of the transmitter buffer. The time constant of the step voltage on the trace increases if an active receiver that complies with the PCIe input impedance requirements is present at the far end. The receiver detect circuitry monitors this time constant to determine if a receiver is present.

Note: For the receiver detect circuitry to function reliably, the transceiver on-chip termination must be used. Also, the AC-coupling capacitor on the serial link and the receiver termination values used in your system must be compliant with the PCIe Base Specification 2.0.

The PIPE core provides a 1-bit PHY status signal `pipe_phy_status` and a 3-bit receiver status signal `pipe_rx_status[2:0]` to indicate whether a receiver is detected, as per the PIPE 2.0 specifications.

Gen1 and Gen2 Clock Compensation

In compliance with the PIPE specification, Arria 10 receiver channels have a rate match FIFO to compensate for small clock frequency differences up to ± 300 ppm between the upstream transmitter and the local receiver clocks.

Consider the following guidelines for PIPE clock compensation:


- Insert or delete one SKP symbol in an SKP ordered set.
- Minimum limit is imposed on the number of SKP symbols in SKP ordered set after deletion. An ordered set may have an empty COM case after deletion.
- Maximum limit is imposed on the number of the SKP symbols in the SKP ordered set after insertion. An ordered set may have more than five symbols after insertion.
- For INSERT/DELETE cases: The flag status appears on the COM symbol of the SKP ordered set where insertion or deletion occurs.
- For FULL/EMPTY cases: The flag status appears where the character is inserted or deleted.

Note: When the PIPE interface is on, it translates the value of the flag to the appropriate `pipe_rx_status` signal.


- The PIPE mode also has a “0 ppm” configuration option that you can use in synchronous systems. The Rate Match FIFO Block is not expected to do any clock compensation in this configuration, but latency will be minimized.

Figure 2-73: Rate Match Deletion

This figure shows an example of rate match deletion in the case where two /K28.0/ SKP symbols must be deleted. Only one /K28.0/ SKP symbol is deleted per SKP ordered set received.

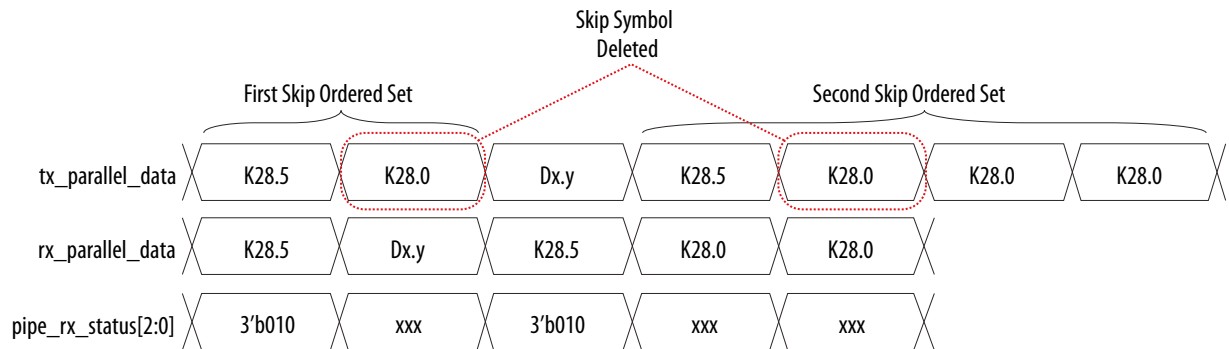**Figure 2-74: Rate Match Insertion**

The figure below shows an example of rate match insertion in the case where two SKP symbols must be inserted. Only one /K28.0/ SKP symbol is inserted per SKP ordered set received.

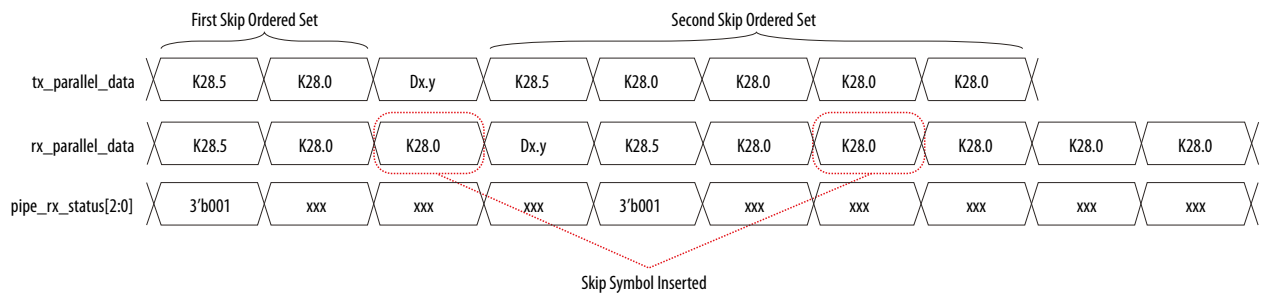**Figure 2-75: Rate Match FIFO Full**

The rate match FIFO in PIPE mode automatically deletes the data byte that causes the FIFO to go full and drives $\text{pipe\_rx\_status}[2:0] = 3'b101$ synchronous to the subsequent data byte. The figure below shows the rate match FIFO full condition in PIPE mode. The rate match FIFO becomes full after receiving data byte D4.

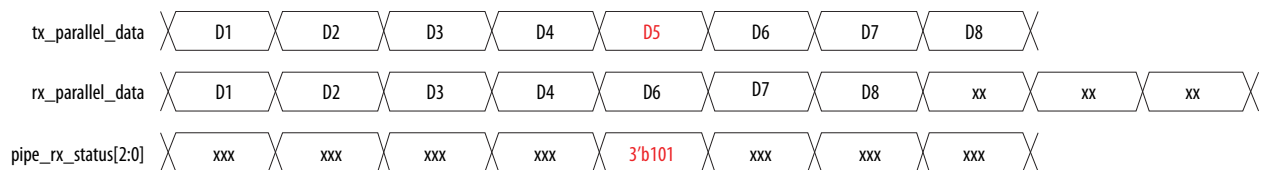
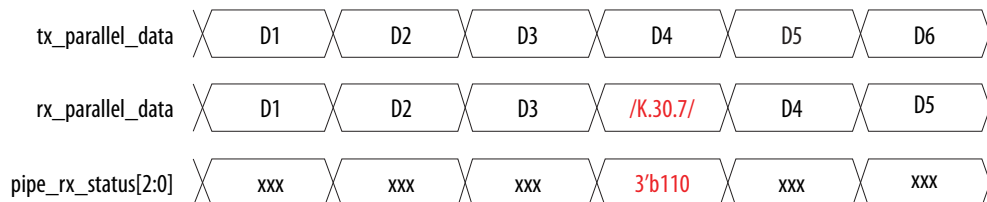


Figure 2-76: Rate Match FIFO Empty

The rate match FIFO automatically inserts /K30.7/ (9'h1FE) after the data byte that causes the FIFO to become empty and drives pipe_rx_status[2:0] = 3'b110 synchronous to the inserted /K30.7/ (9'h1FE). The figure below shows rate match FIFO empty condition in PIPE mode. The rate match FIFO becomes empty after reading out data byte D3.


**PIPE 0 ppm**

The PIPE mode also has a "0 ppm" configuration option that can be used in synchronous systems. The Rate Match FIFO Block is not expected to do any clock compensation in this configuration, but latency will be minimized.

PCIe Reverse Parallel Loopback

PCIe reverse parallel loopback is only available in a PCIe functional configuration for Gen1, Gen2, and Gen3 data rates. The received serial data passes through the receiver CDR, deserializer, word aligner, and rate matching FIFO buffer. The data is then looped back to the transmitter serializer and transmitted out through the transmitter buffer. The received data is also available to the FPGA fabric through the rx_parallel_data port. This loopback mode is based on PCIe specification 2.0. Arria 10 devices provide an input signal (pipe_tx_detectrx_loopback) to enable this loopback mode.

Note: This is the only loopback option supported in PIPE configurations.

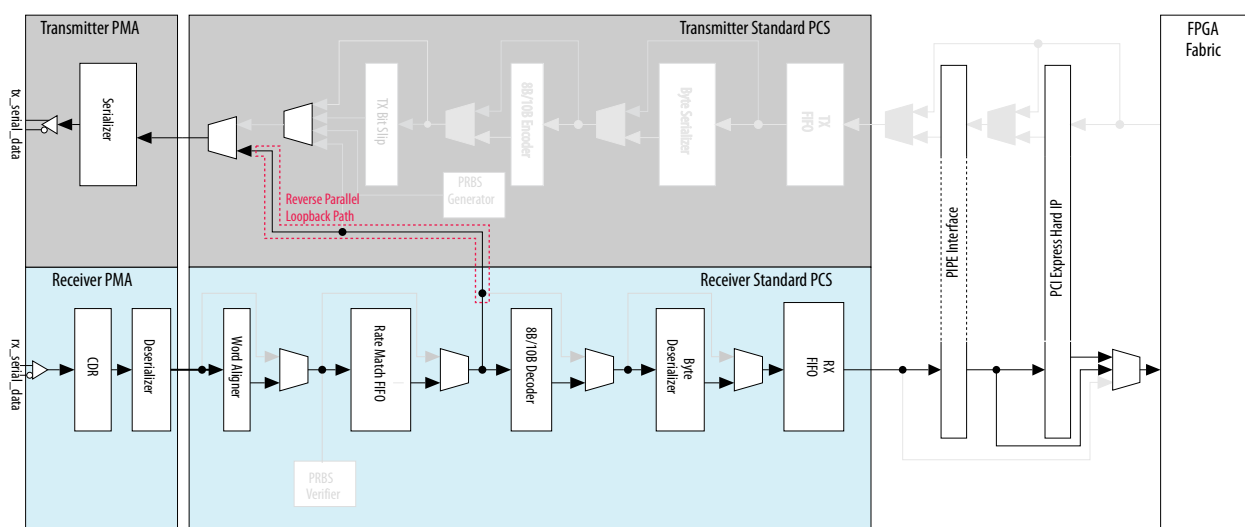Figure 2-77: PCIe Reverse Parallel Loopback Mode Datapath**Related Information**

[Arria 10 Standard PCS Architecture](#) on page 5-35

Intel PHY Interface for the PCI Express (PIPE) Architecture PCI Express 2.0

Gen3 Features

The following subsections describes the Arria 10 transceiver block support for PIPE Gen3 features.

The PCS supports the PIPE 3.0 base specification. The 32-bit wide PIPE 3.0-based interface controls PHY functions such as transmission of electrical idle, receiver detection, and speed negotiation and control.

Auto-Speed Negotiation

PIPE Gen3 mode enables ASN between Gen1 (2.5 Gbps), Gen2 (5.0 Gbps), and Gen3 (8.0 Gbps) signaling data rates. The signaling rate switch is accomplished through frequency scaling and configuration of the PMA and PCS blocks using a fixed 32-bit wide PIPE 3.0-based interface.

The PMA switches clocks between Gen1, Gen2, and Gen3 data rates. For a non bonded x1 channel, an ASN module facilitates speed negotiation in that channel. For bonded x2, x4, and x8 channels, the ASN module selects the master channel to control the rate switch. The master channel distributes the speed change request to the other PMA and PCS channels.

The PCIe Gen3 speed negotiation process is initiated when Hard IP or the FPGA fabric requests a rate change. The ASN then places the PCS in reset, and dynamically shuts down the clock paths to disengage the current active state PCS (either Standard PCS or Gen3 PCS). If a switch to or from Gen3 is requested, the ASN automatically selects the correct PCS clock paths and datapath selection in the multiplexers. The ASN block then sends a request to the PMA block to switch the data rate, and waits for a rate change done signal for confirmation. When the PMA completes the rate change and sends confirmation to the ASN block, the ASN enables the clock paths to engage the new PCS block and releases the PCS reset. Assertion of the `pipe_phy_status` signal by the ASN block indicates the successful completion of this process.

Note: In Native PHY IP PIPE Core configuration, you must set `pipe_rate[1:0]` to initiate the transceiver datarate switch sequence.

Rate Switch

This section provides an overview of auto rate change between PIPE Gen1 (2.5 Gbps), Gen2 (5.0 Gbps), and Gen3 (8.0 Gbps) modes.

The switches between Gen1, Gen2, and Gen3 rates involve reconfiguration of PMA and PCS settings. The PMA needs to relock and provide a TX PLL clock, and its CDR will also lock at a new incoming data rate. The PIPE interface clock rate is also adjusted to match the data throughput. In Arria 10 devices, there is only one common ASN block located in the PMA PCS interface that handles all PIPE speed changes.


Table 2-157: PIPE Gen3 32 bit PCS Clock Rates

PCIe Gen3 Capability Mode Enabled	Gen1	Gen2	Gen3
Lane data rate	2.5 Gbps	5 Gbps	8 Gbps
PCS clock frequency	250 MHz	500 MHz	250 MHz
FPGA Core IP clock frequency	62.5 MHz	125 MHz	250 MHz
PIPE interface width	32-bit	32-bit	32-bit

PCIe Gen3 Capability Mode Enabled	Gen1	Gen2	Gen3
pipe_rate [1:0]	2'b00	2'b01	2'b1x

Figure 2-78: Rate Switch Change


The block-level diagram below shows a high level connectivity between ASN and Standard PCS and Gen3 PCS.

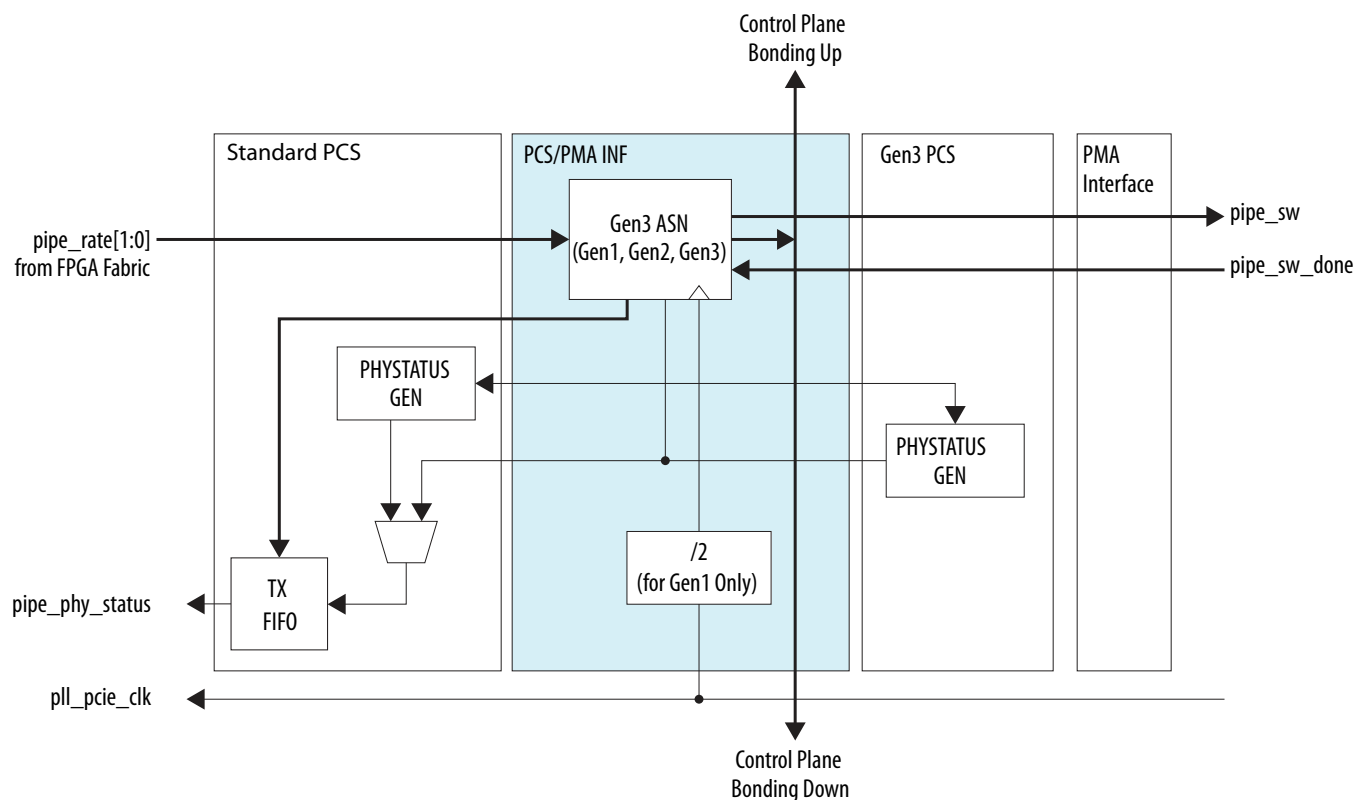

The sequence of speed change between Gen1, Gen2, and Gen3 occurs as follows:

1. The PHY-MAC layer implemented in FPGA Fabric requests a rate change through `pipe_rate[1:0]`.
2. The ASN block waits for the TX FIFO to flush out data. Then the ASN block asserts the PCS reset.
3. The ASN asserts the clock shutdown signal to the Standard PCS and Gen3 PCS to dynamically shut down the clock.
4. When the rate changes to or from the Gen3 speed, the ASN asserts the clock and data multiplexer selection signals.
5. The ASN uses a `pipe_sw[1:0]` output signal to send a rate change request to the PMA.
6. The ASN continuously monitors the `pipe_sw_done[1:0]` input signal from the PMA.
7. After the ASN receives the `pipe_sw_done[1:0]` signal, it deasserts the clock shut down signals to release the clock.
8. The ASN deasserts the PCS reset.
9. The ASN sends the speed change completion to the PHY-MAC interface. This is done through the `pipe_phy_status` signal to PHY-MAC interface.

Figure 2-79: Speed Change Sequence

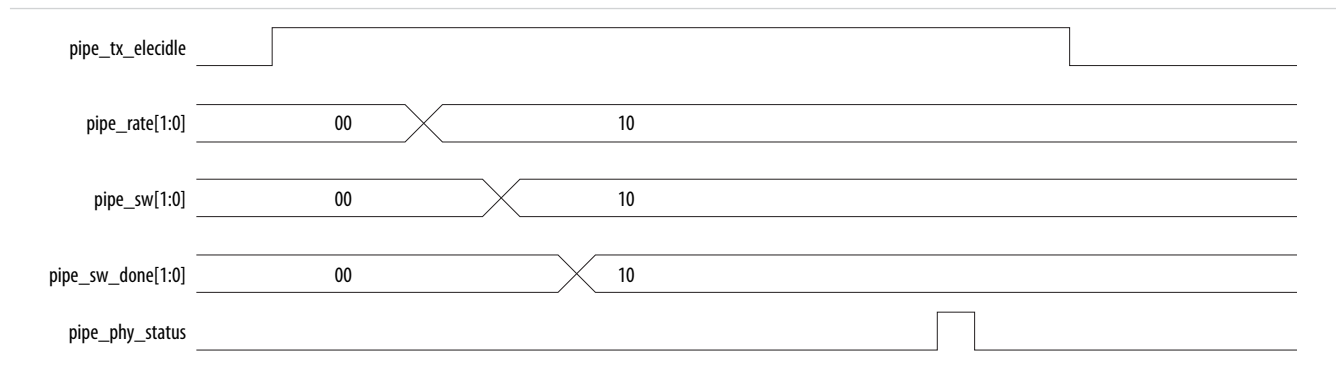

Gen3 Transmitter Electrical IDLE Generation

In the PIPE 3.0-based interface, you can place the transmitter in electrical idle during low power states. Before the transmitter enters electrical idle, you must send the Electrical Idle ordered set, consisting of 16 symbols with value 0x66. During electrical idle, the transmitter differential and common mode voltage levels are based on the *PCIe Base Specification 3.0*.

Gen3 Clock Compensation

Enable this mode from the Parameter Editor when using the Gen3 PIPE transceiver configuration rule.

To accommodate PCIe protocol requirements and to compensate for clock frequency differences of up to ± 300 ppm between source and termination equipment, receiver channels have a rate match FIFO. The rate match FIFO adds or deletes four SKP characters (32 bits) to keep the FIFO from becoming empty or full. If the rate match FIFO is almost full, the FIFO deletes four SKP characters. If the rate match FIFO is nearly empty, the FIFO inserts a SKP character at the start of the next available SKP ordered set. The `pipe_rx_status [2:0]` signal indicates FIFO full, empty, insertion and deletion.

Note: Refer to the Gen1 and Gen2 Clock Compensation section for waveforms.

Related Information


[Gen1 and Gen2 Clock Compensation](#) on page 2-235

Gen3 Power State Management

The PCIe base specification defines low power states for PHY layer devices to minimize power consumption. The Gen3 PCS does not implement these power saving measures, except when placing the transmitter driver in electrical idle in the low power state. In the P2 low power state, the transceivers do not disable the PIPE block clock.

Figure 2-80: P1 to P0 Transition

The figure below shows the transition from P1 to P0 with completion provided by `pipe_phy_status`.

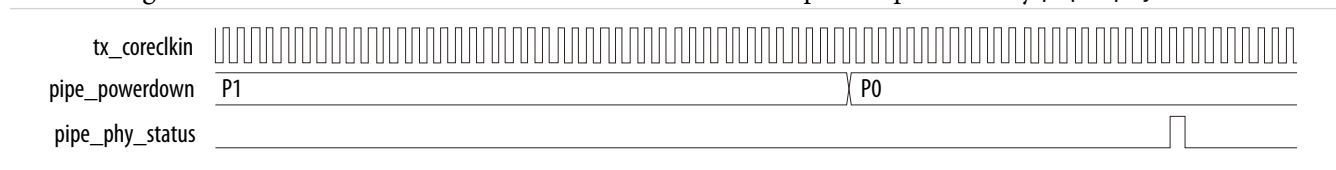

CDR Control

The CDR control block performs the following functions:

- Controls the PMA CDR to obtain bit and symbol alignment
- Controls the PMA CDR to deskew within the allocated time
- Generates status signals for other PCS blocks


The PCIe base specification requires that the receiver L0s power state exit time be a maximum of 4 ms for Gen1, 2 ms for Gen2, and 4 ms for Gen3 signaling rates. The transceivers have an improved CDR control block to accommodate fast lock times. Fast lock times are necessary for the CDR to relock to the new multiplier/divider settings when entering or exiting Gen3 speeds.

Gearbox

As per the PIPE 3.0 specification, for every 128 bits that are moved across the Gen3 PCS, the PHY must transmit 130 bits of data. Altera uses the `pipe_tx_data_valid` signal every 16 blocks of data to transmit the built-up backlog of 32 bits of data.


The 130-bit block is received as follows in the 32-bit data path: 34 (32+2-bit sync header), 32, 32, 32. During the first cycle, the gearbox converts the 34-bit input data to 32-bit data. During the next three clock cycles, the gearbox merges bits from adjacent cycles. For the gearbox to work correctly, a gap must be provided in the data for every 16 shifts because each shift contains two extra bits for converting the initial 34 bits to 32 bits in the gearbox. After 16 shifts, the gearbox has an extra 32 bits of data that are transmitted out. This requires a gap in the input data stream, which is achieved by driving `pipe_tx_data_valid` low for one cycle after every 16 blocks of data.

Figure 2-81: Gen3 Data Transmission

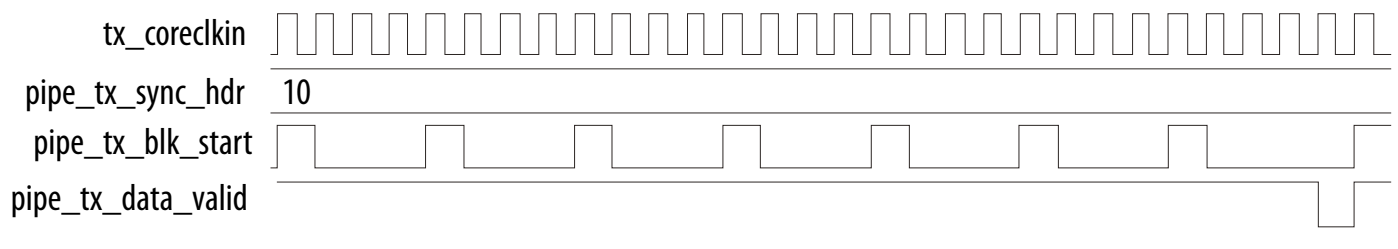

How to Connect TX PLLs for PIPE Gen1, Gen2, and Gen3 Modes


Figure 2-82: Use ATX PLL or fPLL for Gen1/Gen2 x1 Mode

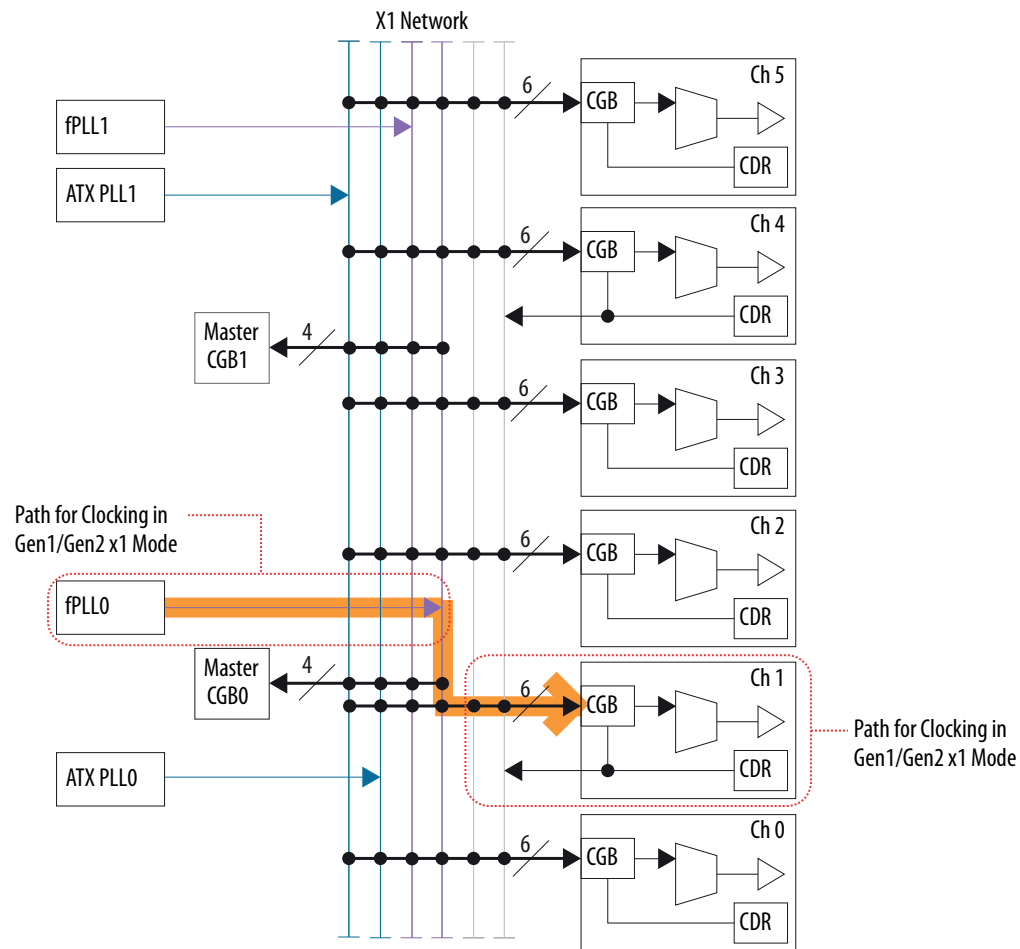

Notes:

1. The figure shown is just one possible combination for the PCIe Gen1/Gen2 x1 mode.
2. Gen1/Gen2 x1 mode uses the ATX PLL or fPLL.
3. Gen1/Gen2 x1 can use any channel from the given bank for which the ATX PLL or fPLL is enabled.
4. Use the pll_pcie_clk from either the ATX PLL or fPLL. This is the hclk required by the PIPE interface.


Figure 2-83: Use ATX PLL or fPLL for Gen1/Gen2 x4 Mode

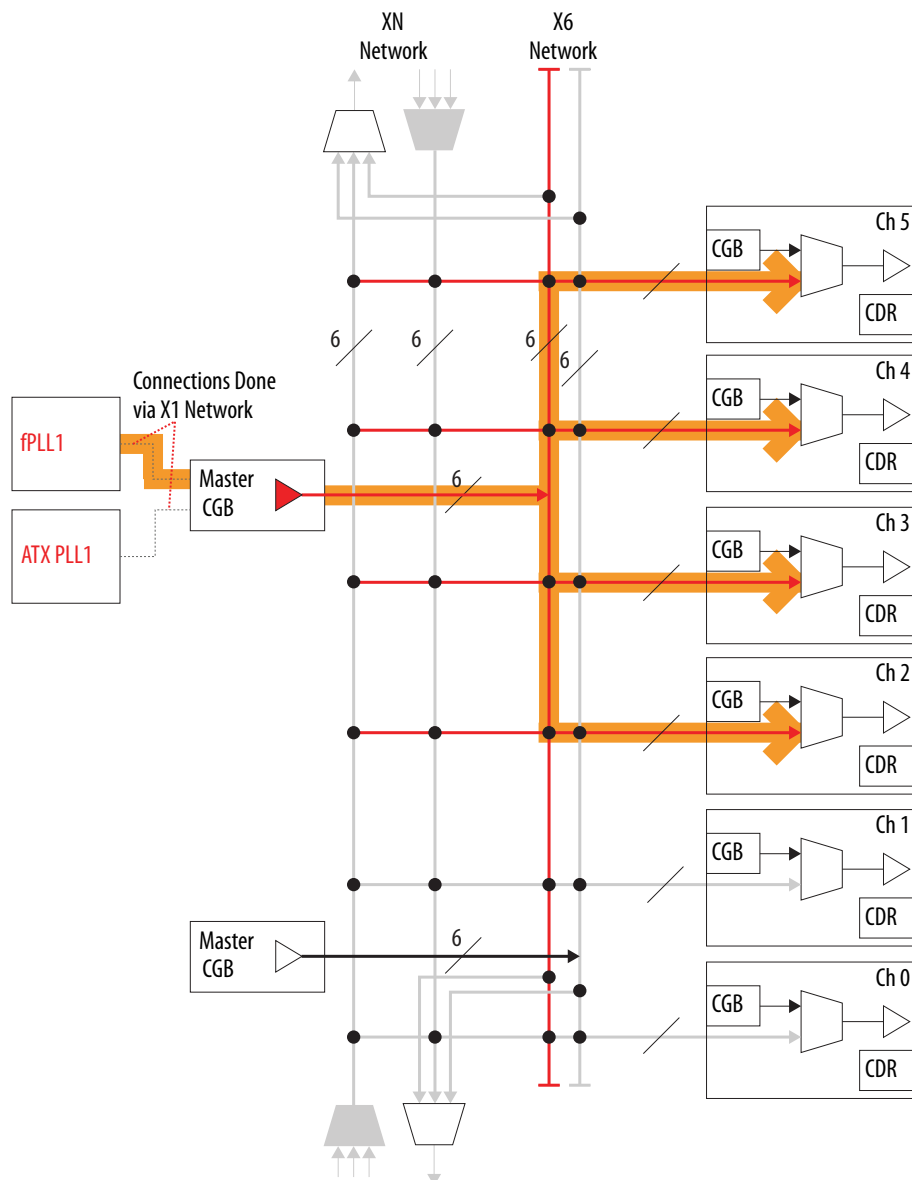

Notes:

1. The figure shown is just one possible combination for the PCIe Gen1/Gen2 x4 mode.
2. The x6 and xN clock networks are used for channel bonding applications.
3. Each master CGB drives one set of x6 clock lines.
4. Gen1/Gen2 x4 modes use the ATX PLL or fPLL only.
5. Use the `pll_pcie_clk` from either the ATX or fPLL. This is the `hclk` required by the PIPE interface.
6. In this case the Master PCS channel is logical channel 3 (physical channel 4).


Figure 2-84: Use ATX PLL or fPLL for Gen1/Gen2 x8 Mode

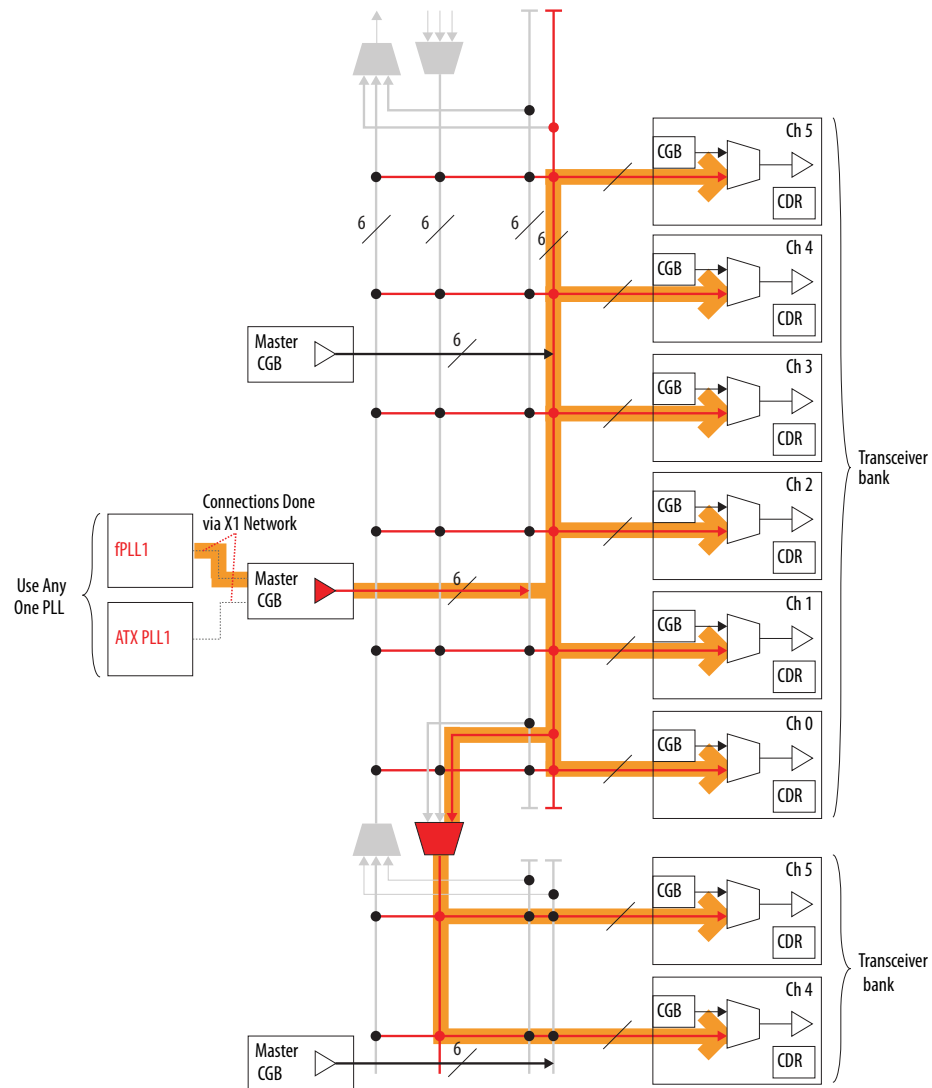

Notes:

1. Figure shown is just one possible combination for the PCIe Gen1/Gen2 x8 mode.
2. The x6 and xN clock networks are used for channel bonding applications.
3. Each master CGB drives one set of x6 clock lines. The x6 lines further drive the xN lines.
4. Gen1/Gen2 x8 mode uses the ATX PLL or fPLL only.
5. Use the `pll_pcie_clk` from either the ATX or fPLL. This is the `hclk` required by the PIPE interface.
6. In this case the Master PCS channel is logical channel 4 (Ch 1 in the top bank).


Figure 2-85: Use ATX PLL or fPLL for Gen1/Gen2/Gen3 x1 Mode

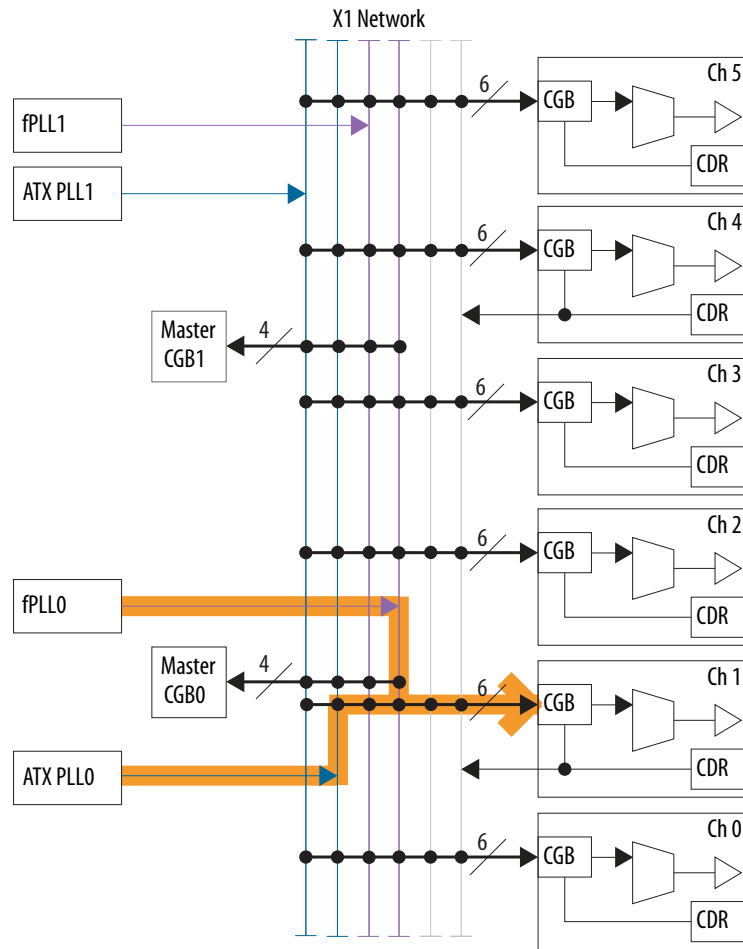

Notes:

1. The figure shown is just one possible combination for the PCIe Gen1/Gen2/Gen3 x1 mode.
2. Gen1/Gen2 modes use the fPLL only.
3. Gen3 mode uses the ATX PLL only.
4. Use the pll_pcie_clk from the fPLL, configured as Gen1/Gen2. This is the hclk required by the PIPE interface.
5. Select the number of TX PLLs (2) in the Native PHY wizard.


Figure 2-86: Use ATX PLL or fPLL for Gen1/Gen2/Gen3 x4 Mode

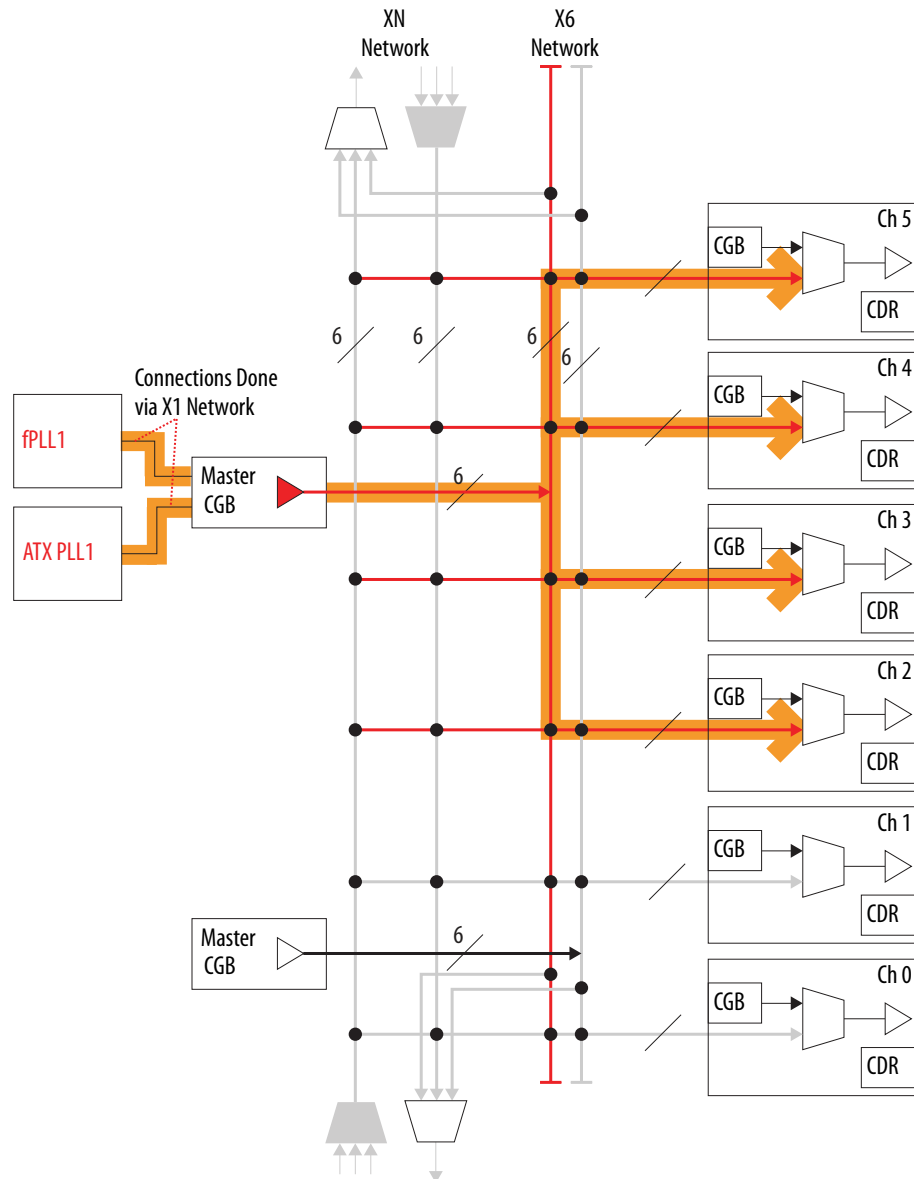

Notes:

1. The figure shown is just one possible combination for the PCIe Gen1/Gen2/Gen3 x4 mode.
2. The x6 and xN clock networks are used for channel bonding applications.
3. Each master CGB drives one set of x6 clock lines.
4. Gen1/Gen2 modes use the fPLL only.
5. Gen3 mode uses the ATX PLL only.
6. Use the `pll_pcie_clk` from the fPLL, configured as Gen1/Gen2. This is the `hclk` required by the PIPE interface.

Figure 2-87: Use ATX PLL or fPLL for Gen1/Gen2/Gen3 x8 Mode

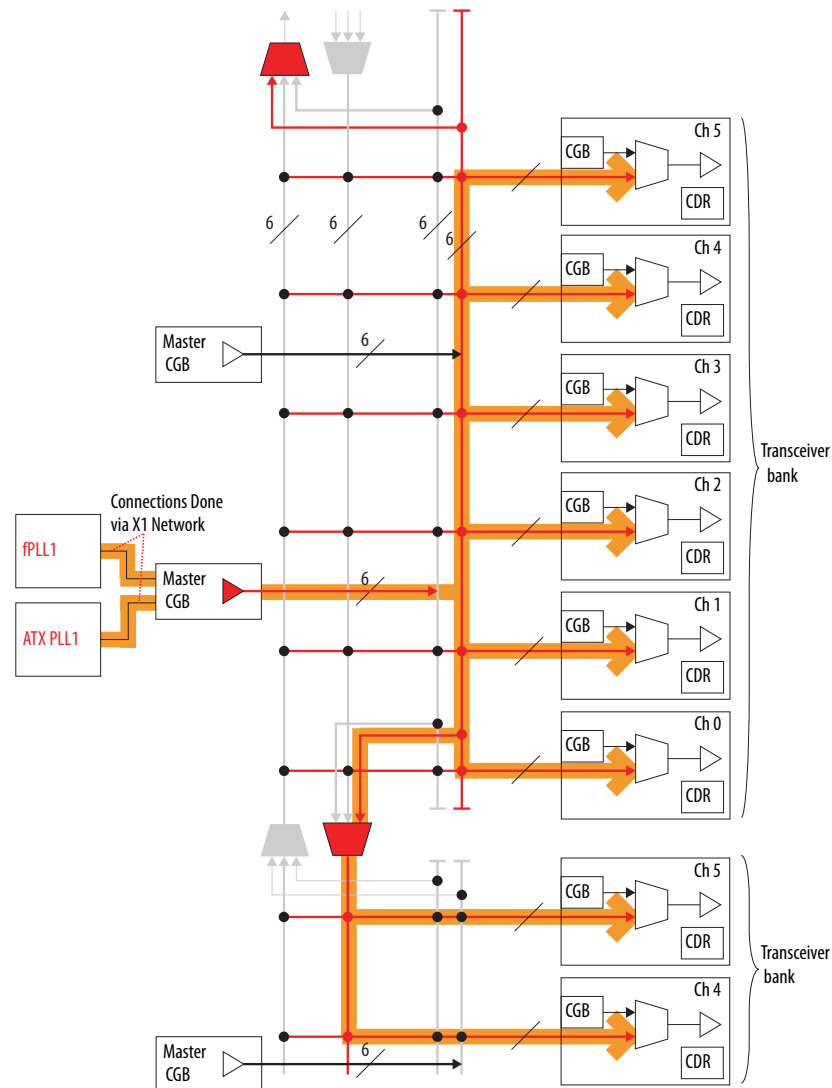

Notes:

1. The figure shown is just one possible combination for the PCIe Gen1/Gen2/Gen3 x8 mode.
2. The x6 and xN clock networks are used for channel bonding applications.
3. Each master CGB drives one set of x6 clock lines. The x6 lines further drive the xN lines.
4. Gen1/Gen2 x8 modes use the fPLL only.
5. Gen3 mode uses the ATX PLL only.
6. Use the pll_pcie_clk from the fPLL, configured as Gen1/Gen2. This is the hclk required by the PIPE interface.

Related Information

- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing clock configurations and configuring PLLs.
- [PIPE Design Example](#)
For more information about the PLL configuration for PCIe.


How to Implement PCI Express (PIPE) in Arria 10 Transceivers

Before you begin

You must be familiar with the Standard PCS architecture, Gen3 PCS architecture, PLL architecture, and the reset controller before implementing the PCI Express protocol.

1. Go to the IP Catalog and select the **Arria 10 Transceiver Native PHY IP Core**. Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for more details.
2. Select **Gen1/Gen2/Gen3 PIPE** from the **Arria 10 Transceiver configuration rules** list, located under **Datapath Options**.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for PIPE Express](#) as a starting point. Alternatively, you can use **Arria 10 Transceiver Native PHY Presets**. You can then modify the settings to meet your specific requirements.
4. Click **Finish** to generate the Native PHY IP (this is your RTL file).
5. Instantiate and configure your PLL.
6. Create a transceiver reset controller. You can use your own reset controller or use the Altera Transceiver PHY Reset Controller IP.
7. Connect the Native PHY IP to the PLL IP and the reset controller. Use the information in [Native PHY IP Ports for PIPE](#) to connect the ports.
8. Simulate your design to verify its functionality.

Figure 2-88: Connection Guidelines for a PIPE Design

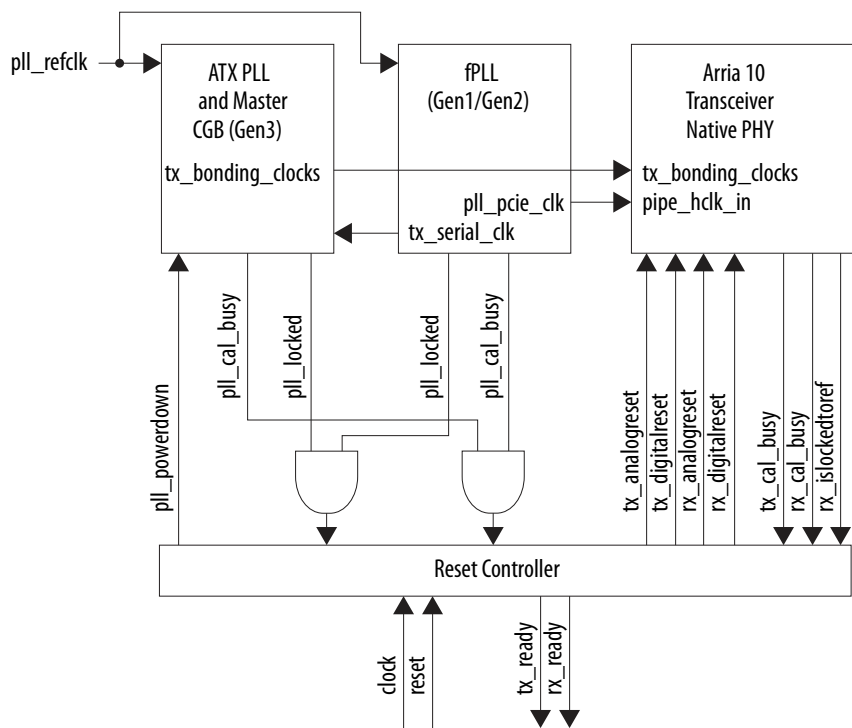

Note:
1. This is one possible combination to represent the PIPE Gen3 solution, using the Native PHY.

Related Information

- [Arria 10 Standard PCS Architecture](#) on page 5-35
- [PLLs](#) on page 3-3
For information about PLL architecture and implementation details.
- [Resetting Transceiver Channels](#) on page 4-1
For information about the Reset controller and implementation details.
- [Using PLLs and Clock Networks](#) on page 3-49
- [Design Example](#) on page 2-269

Native PHY IP Parameter Settings for PIPE Express

Table 2-158: Parameters for Arria 10 Native PHY IP in PIPE Gen1, Gen2, Gen3 Modes

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
Parameter			
Message level for rule violations	Error	Error	Error
Datapath Options			
Transceiver configuration rules	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
PMA configuration rules	Basic	Basic	Basic
Transceiver mode	TX / RX Duplex	TX / RX Duplex	TX / RX Duplex
Number of data channels	Gen1 x1: 1 channel	Gen2 x1: 1 channel	Gen3 x1: 1 channel
	Gen1 x2: 2 channels	Gen2 x2: 2 channels	Gen3 x2: 2 channels
	Gen1 x4: 4 channels	Gen2 x4: 4 channels	Gen3 x4: 4 channels
	Gen1 x8: 8 channels	Gen2 x8: 8 channels	Gen3 x8: 8 channels
Data rate	2.5 Gbps	5 Gbps	5 Gbps ⁽²⁴⁾
Enable datapath and interface reconfiguration	Optional	Optional	Optional
Enable simplified data interface	On	On	On
Provide separate interface for each channel	Off	Off	Off

Table 2-159: Parameters for Arria 10 Native PHY IP in PIPE Gen1, Gen2, Gen3 Modes - TX PMA

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
TX Bonding Options			
TX channel bonding mode	Nonbonded (x1) PMA & PCS Bonding	Nonbonded (x1) PMA & PCS Bonding	Nonbonded (x1) PMA & PCS Bonding
PCS TX channel bonding master	Auto	Auto	Auto
Default PCS TX channel bonding master	Gen1 x1: 0 Gen1 x2: 1 Gen1 x4: 2 Gen1 x8: 4	Gen1 x1: 0 Gen1 x2: 1 Gen1 x4: 2 Gen1 x8: 4	Gen1 x1: 0 Gen1 x2: 1 Gen1 x4: 2 Gen1 x8: 4
TX PLL Options			
TX local clock division factor	N/A	N/A	N/A
Number of TX PLL clock inputs per channel	1	1	Gen3 x1: 2 All other modes: 1
Initial TX PLL clock input selection	N/A	N/A	N/A
TX PMA Optional Ports			
Enable tx_pma_clkout port	Optional	Optional	Optional
Enable tx_pma_div_clkout port	Optional	Optional	Optional

⁽²⁴⁾ The PIPE is configured in Gen1/Gen2 during Power Up. Gen3 PCS is configured for 8 Gbps.

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
tx_pma_div_clkout division factor	Optional	Optional	Optional
Enable tx_pma_elecidle port	Off	Off	Off
Enable tx_pma_qpipullup port (QPI)	Off	Off	Off
Enable tx_pma_qpipulldn port (QPI)	Off	Off	Off
Enable tx_pma_txdetectrx port (QPI)	Off	Off	Off
Enable tx_pma_rxfound port (QPI)	Off	Off	Off
Enable rx_serialpbken port	Off	Off	Off

Table 2-160: Parameters for Arria 10 Native PHY IP in PIPE Gen1, Gen2, Gen3 Modes - RX PMA

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
RX CDR Options			
Number of CDR reference clocks	1	1	1
Selected CDR reference clock	0	0	0
Selected CDR reference clock frequency	100 MHz	100 MHz	100 MHz
PPM detector threshold	1000	1000	1000
Equalization			
CTLE adaptation mode	Manual / Triggered	Manual / Triggered	Manual / Triggered
DFE adaptation mode	Disabled	Disabled	Disabled
Number of fixed dfe taps	NA	NA	NA
RX PMA Optional Ports			
Enable rx_pma_clkout port	Optional	Optional	Optional
Enable rx_pma_div_clkout port	Optional	Optional	Optional
rx_pma_div_clkout division factor	Optional	Optional	Optional
Enable rx_pma_clkslip port	Optional	Optional	Optional
Enable rx_pma_qpipulldn port (QPI)	Off	Off	Off
Enable rx_is_lockedtodata port	Optional	Optional	Optional
Enable rx_is_lockedtoref port	Optional	Optional	Optional
Enable rx_set_locktodata and rx_set_locktoref ports	Optional	Optional	Optional
Enable rx_serialpbken port	Optional	Optional	Optional

	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
Enable PRBS Verifier Control and Status ports	Optional	Optional	Optional

Table 2-161: Parameters for Arria 10 Native PHY IP in PIPE Gen1, Gen2, Gen3 Modes - Standard PCS

Parameter	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
Standard PCS configurations			
Standard PCS / PMA interface width	10	10	10 ⁽²⁵⁾
FPGA Fabric / Standard TX PCS interface width	8, 16	16	32
FPGA Fabric / Standard RX PCS interface width	8, 16	16	32
Enable Standard PCS low latency mode	Off	Off	Off
Standard PCS FIFO			
TX FIFO mode	low_latency	low_latency	low_latency
RX FIFO Mode	low_latency	low_latency	low_latency
Enable tx_std_pcfifo_full port	Optional	Optional	Optional
Enable tx_std_pcfifo_empty port	Optional	Optional	Optional
Enable rx_std_pcfifo_full	Optional	Optional	Optional
Enable rx_std_pcfifo_empty port	Optional	Optional	Optional
Byte Serializer and Deserializer			
TX byte serializer mode	Disabled, Serialize x2	Serialize x2	Serialize x4
RX byte deserializer mode	Disabled, Serialize x2	Serialize x2	Deserialize x4
8B/10B Encoder and Decoder			
Enable TX 8B/10B encoder	Enabled	Enabled	Enabled
Enable TX 8B/10B disparity control	Enabled	Enabled	Enabled
Enable RX 8B/10B decoder	Enabled	Enabled	Enabled
Rate Match FIFO			
Rate Match FIFO mode	PIPE	PIPE	PIPE
RX rate match insert / delete - ve pattern (hex)	0x0002f17c (K28.5/K28.0/)	0x0002f17c (K28.5/K28.0/)	0x0002f17c (K28.5/K28.0/)

⁽²⁵⁾ The PIPE is configured in Gen1/Gen2 during Power Up. Gen3 PCS is configured for PCS/PMA width of 32.

Parameter	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
RX rate match insert / delete +ve pattern (hex)	0x000d0e83 (K28.5/K28.0/)	0x000d0e83 (K28.5/K28.0/)	0x000d0e83 (K28.5/K28.0/)
Enable rx_std_rmfifo_full port	Optional	Optional	Optional
Enable rx_std_rmfifo_empty port	Optional	Optional	Optional
PCI Express Gen 3 rate match FIFO mode	Bypass	Bypass	600

Word Aligner and Bit Slip

Enable TX bit slip	Off	Off	Off
Enable tx_std_bitslipboundarysel port	Optional	Optional	Optional
RX word aligner mode	Synchronous State Machine	Synchronous State Machine	Synchronous State Machine
RX word aligner pattern length	10	10	10
RX word aligner pattern (hex)	0x0000 00000000017c (/K28.5/)	0x0000 00000000017c (/K28.5/)	0x0000 00000000017c (/K28.5/)
Number of word alignment patterns to achieve sync	3	3	3
Number of invalid data words to lose sync	16	16	16
Number of valid data words to decrement error count	15	15	15
Enable rx_std_wa_patternalign port	Optional	Optional	Optional
Enable rx_std_wa_a1a2size port	Off	Off	Off
Enable rx_std_bitslipboundarysel port	Optional	Optional	Optional
Enable rx_bitslip port	Off	Off	Off

Bit Reversal and Polarity Inversion

Enable TX bit reversal	Off	Off	Off
Enable TX byte reversal	Off	Off	Off
Enable TX polarity inversion	Off	Off	Off
Enable tx_polinv port	Off	Off	Off
Enable RX bit reversal	Off	Off	Off
Enable rx_std_bitrev_ena port	Off	Off	Off

Parameter	Gen1 PIPE	Gen2 PIPE	Gen3 PIPE
Enable RX byte reversal	Off	Off	Off
Enable rx_std_byterev_ena port	Off	Off	Off
Enable RX polarity inversion	Off	Off	Off
Enable rx_polinv port	Off	Off	Off
Enable rx_std_signaldetect port	Optional	Optional	Optional
PCIe Ports			
Enable PCIe dynamic datarate switch ports	Off	Enabled	Enabled
Enable PCIe pipe_hclk_in and pipe_hclk_out ports	Enabled	Enabled	Enabled
Enable PCIe Gen3 analog control ports	Off	Off	Enabled
Enable PCIe electrical idle control and status ports	Enabled	Enabled	Enabled
Enable PCIe pipe_rx_polarity port	Enabled	Enabled	Enabled

Table 2-162: Bit Mappings When the Simplified Interface Is Disabled

Signal Name	Gen1 (TX Byte Serializer and RX Byte Deserializer disabled)	Gen1 (TX Byte Serializer and RX Byte Deserializer in X2 mode), Gen2 (TX Byte Serializer and RX Byte Deserializer in X2 mode)	Gen3
tx_parallel_data	tx_parallel_data[7:0]	tx_parallel_data[29:22, 7:0]	tx_parallel_data[40:33, 29:22, 18:11, 7:0]
tx_dataak	tx_parallel_data[8]	tx_parallel_data[30, 8]	tx_parallel_data[41, 30, 19, 8]
pipe_tx_compliance	tx_parallel_data[9]	tx_parallel_data[31, 9]	tx_parallel_data[42, 31, 20, 9]
pipe_tx_elecidle	tx_parallel_data[10]	tx_parallel_data[32, 10]	tx_parallel_data[43, 32, 21, 10]

Signal Name	Gen1 (TX Byte Serializer and RX Byte Deserializer disabled)	Gen1 (TX Byte Serializer and RX Byte Deserializer in X2 mode), Gen2 (TX Byte Serializer and RX Byte Deserializer in X2 mode)	Gen3
pipe_tx_detectrx_loopback	tx_parallel_data[46]	tx_parallel_data[46]	tx_parallel_data[46]
pipe_powerdown	tx_parallel_data[48:47]	tx_parallel_data[48:47]	tx_parallel_data[48:47]
pipe_tx_margin	tx_parallel_data[51:49]	tx_parallel_data[51:49]	tx_parallel_data[51:49]
pipe_tx_swing	tx_parallel_data[53]	tx_parallel_data[53]	tx_parallel_data[53]
rx_parallel_data	rx_parallel_data[7:0]	rx_parallel_data[39:32, 7:0]	rx_parallel_data[55:48, 39:32, 23:16, 7:0]
rx_dataak	rx_parallel_data[8]	rx_parallel_data[40, 8]	rx_parallel_data[56, 40, 24, 8]
rx_syncstatus	rx_parallel_data[10]	rx_parallel_data[42, 10]	rx_parallel_data[58, 42, 26, 10]
pipe_phy_status	rx_parallel_data[65]	rx_parallel_data[65]	rx_parallel_data[65]
pipe_rx_valid	rx_parallel_data[66]	rx_parallel_data[66]	rx_parallel_data[66]
pipe_rx_status	rx_parallel_data[69:67]	rx_parallel_data[69:67]	rx_parallel_data[69:67]
pipe_tx_deemph	N/A	tx_parallel_data[52]	N/A
pipe_tx_sync_hdr	N/A	N/A	tx_parallel_data[55:54]
pipe_tx_blk_start	N/A	N/A	tx_parallel_data[56]
pipe_tx_data_valid	N/A	N/A	tx_parallel_data[60]
pipe_rx_sync_hdr	N/A	N/A	rx_parallel_data[71:70]

Signal Name	Gen1 (TX Byte Serializer and RX Byte Deserializer disabled)	Gen1 (TX Byte Serializer and RX Byte Deserializer in X2 mode), Gen2 (TX Byte Serializer and RX Byte Deserializer in X2 mode)	Gen3
pipe_rx_blk_start	N/A	N/A	rx_parallel_data[72]
pipe_rx_data_valid	N/A	N/A	rx_parallel_data[76]

Note: The signals in the left-most column are automatically mapped to a subset of a 128-bit tx_parallel_data word when the Simplified Interface is enabled.

Native PHY IP Ports for PIPE

Figure 2-89: Signals and Ports of Native PHY IP for PIPE

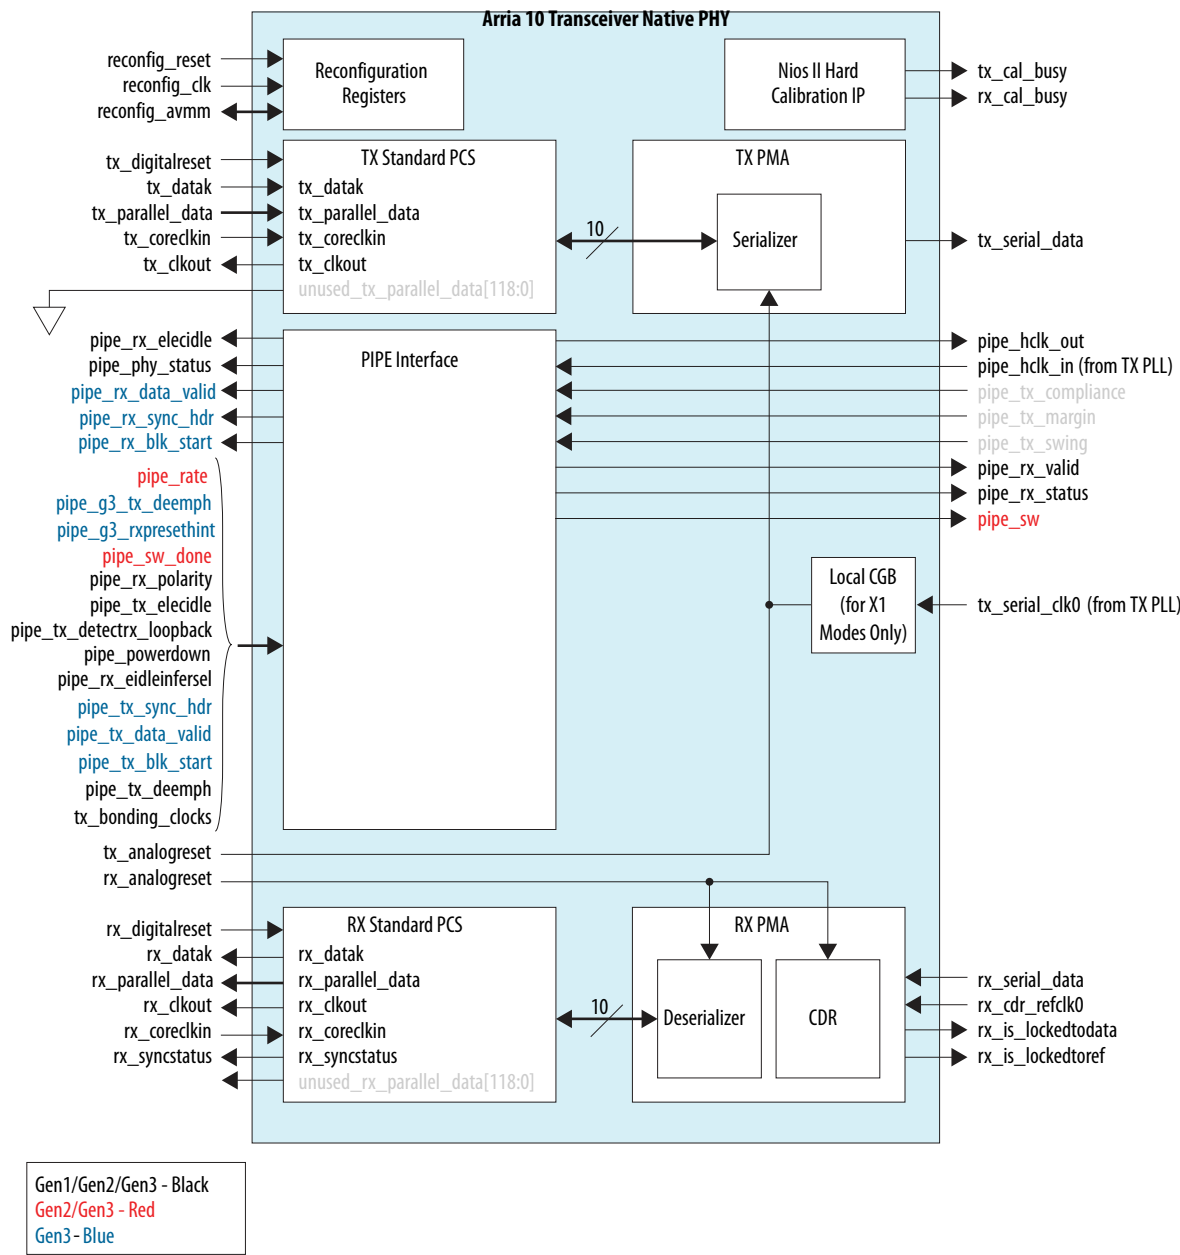


Table 2-163: Ports for Arria 10 Transceiver Native PHY in PIPE Mode

Port	Direction	Clock Domain	Description
Clocks			
rx_cdr_refclk0	In	N/A	The 100/125 MHz input reference clock source for the PHY's TX PLL and RX CDR.

Port	Direction	Clock Domain	Description
tx_serial_clk0 / tx_serial_clk1	In	N/A	The high speed serial clock generated by the PLL. Note: For Gen3 x1 ONLY tx_serial_clk1 is used.
pipe_hclk_in	In	N/A	The 500 MHz clock used for the ASN block. This clock is generated by the PLL, configured for Gen1/Gen2. Note: For Gen3 designs, use from the fPLL that is used for Gen1/Gen2.
pipe_hclk_out	Out	N/A	The 500 MHz clock output provided to the PHY - MAC interface.
PIPE Input from PHY - MAC Layer			
tx_parallel_data[31:0], [15:0], or [7:0]	In	tx_coreclk_in	The TX parallel data driven from the MAC. For Gen1 this can be 8 or 16 bits. For Gen2 this is 16 bits. For Gen3 this is 32 bits. Note: unused_tx_parallel_data should be tied to '0'. Active High
tx_dataak[3:0], [1:0], or [0]	In	tx_coreclk_in	The data and control indicator for the transmitted data. For Gen1 or Gen2, when 0, indicates that tx_parallel_data is data, when 1, indicates that tx_parallel_data is control. For Gen3, bit[0] corresponds to tx_parallel_data[7:0], bit[1] corresponds to tx_parallel_data[15:8], and so on. Active High

Port	Direction	Clock Domain	Description
pipe_tx_sync_hdr[1:0]	In	tx_coreclk	For Gen3, indicates whether the 130-bit block transmitted is a Data or Control Ordered Set Block. The following encodings are defined: 2'b10: Data block 2'b01: Control Ordered Set Block This value is read when pipe_tx_blk_start = 1b'1 Refer to <i>Lane Level Encoding</i> in the <i>PCI Express Base Specification, Rev. 3.0</i> for a detailed explanation of data transmission and reception using 128b/130b encoding and decoding. Not used for Gen1 and Gen2 data rates. Active High
pipe_tx_blk_start	In	tx_coreclk	For Gen3, specifies the start block byte location for TX data in the 128-bit block data. Used when the interface between the PCS and PHY-MAC (FPGA Core) is 32 bits. Not used for Gen1 and Gen2 data rates. Active High
pipe_tx_elecidle	In	Asynchronous	Forces the transmit output to electrical idle. Refer to <i>Intel PHY Interface for PCI Express (PIPE)</i> for timing diagrams. Active High
pipe_tx_detectrx_loopback	In	tx_coreclk	Instructs the PHY to start a receive detection operation. After power-up, asserting this signal starts a loopback operation. Refer to section 6.4 of <i>Intel PHY Interface for PCI Express (PIPE)</i> for a timing diagram. Active High

Port	Direction	Clock Domain	Description
pipe_tx_compliance	In	tx_coreclkln	Asserted for one cycle to set the running disparity to negative. Used when transmitting the compliance pattern. Refer to section 6.11 of <i>Intel PHY Interface for PCI Express (PIPE) Architecture</i> for more information. Active High
pipe_rx_polarity	In	Asynchronous	When 1'b1, instructs the PHY layer to invert the polarity on the received data. Active High
pipe_powerdown[1:0]	In	tx_coreclkln	Requests the PHY to change its power state to the specified state. The Power States are encoded as follows: 2'b00: P0 - Normal operation 2'b01: P0s - Low recovery time, power saving state 2'b10: P1 - Longer recovery time, lower power state 2'b11: P2 - Lowest power state
pipe_tx_margin[2:0]	In	tx_coreclkln	Transmit V_{OD} margin selection. The PHY-MAC sets the value for this signal based on the value from the Link Control 2 Register. The following encodings are defined: 3'b000: Normal operating range 3'b001: Full swing; 800 - 1200 mV; Half swing; 400 - 700 mV 3'b010:-3'b011: Reserved 3'b100-3'b111: Full swing; 200 - 400mV; Half swing; 100 - 200 mV else reserved
pipe_tx_swing	In	tx_coreclkln	Indicates whether the transceiver is using Full swing or Half swing voltage as defined by the pipe_tx_margin 1'b0-Full swing 1'b1-Half swing

Port	Direction	Clock Domain	Description
pipe_tx_deemph	In	Asynchronous	Transmit de-emphasis selection. In PCI Express Gen2 (5 Gbps) mode it selects the transmitter de-emphasis: 1'b0: -6 dB 1'b1: -3.5 dB
pipe_g3_txdeemph[17:0]	In	Asynchronous	For Gen3, selects the transmitter de-emphasis. The 18 bits specify the following coefficients: [5:0]: C-1 [11:6]: C0 [17:12]: C+1 In Gen3 capable designs, the TX de-emphasis for Gen2 data rate is always -6 dB. The TX de-emphasis for Gen1 data rate is always -3.5 dB. Refer to section 6.6 of <i>Intel PHY Interface for PCI Express (PIPE) Architecture</i> for more information.
pipe_g3_rxpresethint	In	Asynchronous	Provides the RX preset hint for the receiver.
pipe_rx_eidlein- fersel[2:0]	In	Asynchronous	When asserted high, the electrical idle state is inferred instead of being identified using analog circuitry to detect a device at the other end of the link. The following encodings are defined: 3'b0xx: Electrical Idle Inference not required in current LTSSM state 3'b100: Absence of COM/SKP OS in 128 ms 3'b101: Absence of TS1/TS2 OS in 1280 UI interval for Gen1 or Gen2 3'b110: Absence of Electrical Idle Exit in 2000 UI interval for Gen1 and 16000 UI interval for Gen2 3'b111: Absence of Electrical Idle exit in 128 ms window for Gen1 Note: Recommended to implement Receiver Electrical Idle Inference (EII) in FPGA fabric

Port	Direction	Clock Domain	Description
pipe_rate[1:0]	In	Asynchronous	The 2-bit encodings defined in the following list: 2'b00: Gen1 rate (2.5 Gbps) 2'b01: Gen2 rate (5.0 Gbps) 2'b1x: Gen3 rate (8.0 Gbps)
pipe_sw_done	In	N/A	Signal from the Master clock generation buffer, indicating that the rate switch has completed. Use this signal for bonding mode only. For non-bonded applications, this signal is internally connected to the local CGB.
pipe_tx_data_valid	In	tx_coreclkin	For Gen3, this signal is deasserted by the MAC to instruct the PHY to ignore tx_parallel_data for current clock cycle. A value of 1'b1 indicates the PHY should use the data. A value of 0 indicates the PHY should not use the data. Active High

PIPE Output to PHY - MAC Layer

rx_parallel_data[31:0], [15:0], or [7:0]	Out	rx_coreclkin	The RX parallel data driven to the MAC. For Gen1 this can be 8 or 16 bits. For Gen2 this is 16 bits only. For Gen3 this is 32 bits.
rx_data[3:0], [1:0], or [0]	Out	rx_coreclkin	The data and control indicator. For Gen1 or Gen2, when 0, indicates that rx_parallel_data is data, when 1, indicates that rx_parallel_data is control. For Gen3, Bit[0] corresponds to rx_parallel_data[7:0], Bit[1] corresponds to rx_parallel_data[15:8], and so on.

Port	Direction	Clock Domain	Description
pipe_rx_sync_hdr[1:0]	Out	rx_coreclk	For Gen3, indicates whether the 130-bit block being transmitted is a Data or Control Ordered Set Block. The following encodings are defined: 2'b10: Data block 2'b01: Control Ordered Set block This value is read when pipe_rx_blk_start = 4'b0001. Refer to <i>Section 4.2.2.1. Lane Level Encoding</i> in the <i>PCI Express Base Specification, Rev. 3.0</i> for a detailed explanation of data transmission and reception using 128b/130b encoding and decoding.
pipe_rx_blk_start	Out	rx_coreclk	For Gen3, specifies the start block byte location for RX data in the 128-bit block data. Used when the interface between the PCS and PHY-MAC (FPGA Core) is 32 bits. Not used for Gen1 and Gen2 data rates. Active High
pipe_rx_data_valid	Out	rx_coreclk	For Gen3, this signal is deasserted by the PHY to instruct the MAC to ignore rx_parallel_data for current clock cycle. A value of 1'b1 indicates the MAC should use the data. A value of 1'b0 indicates the MAC should not use the data. Active High
pipe_rx_valid	Out	rx_coreclk	Asserted when RX data and control are valid.
pipe_phy_status	Out	rx_coreclk	Signal used to communicate completion of several PHY requests. Active High
pipe_rx_elecidle	Out	Asynchronous	When asserted, the receiver has detected an electrical idle. Active High

Port	Direction	Clock Domain	Description
pipe_rx_status[2:0]	Out	rx_coreclkin	Signal encodes receive status and error codes for the receive data stream and receiver detection. The following encodings are defined: 3'b000 - Receive data OK 3'b001 - 1 SKP added 3'b010 - 1 SKP removed 3'b011 - Receiver detected 3'b100 - Either 8B/10B or 128b/130b decode error and (optionally) RX disparity error 3'b101 - Elastic buffer overflow 3'b110 - Elastic buffer underflow 3'b111 - Receive disparity error, not used if disparity error is reported using 3'b100.
pipe_sw	Out	N/A	Signal to clock generation buffer indicating the rate switch request. Use this signal for bonding mode only. For non-bonded applications this signal is internally connected to the local CGB. Active High

How to Place Channels for PIPE Configurations

Instead of the fitter (or software model), the hardware dictates all the placement restrictions. The restrictions are listed below:

- The channels must be contiguous for bonded designs.
- The master CGB is the only way to access x6 lines and must be used in bonded designs. The local CGB cannot be used to route clock signals to slave channels (the local CGB does not have access to x6 lines).

Master Channel in Bonded Configurations

For PCIe, both the PMA and PCS must be bonded. There is no need to specify the PMA Master Channel because of the separate Master CGB in the hardware. However, you must specify the PCS Master Channel through the Native PHY. You can choose any one of the data channels (part of the bonded group) as the logical PCS Master Channel.


Note: Whichever channel you pick as the PCS master, the fitter will select physical CH1 or CH4 of a transceiver bank as the master channel. This is because the ASN and Master CGB connectivity only exists in the hardware of these two channels of the transceiver bank.

Table 2-164: Logical PCS Master Channel for PIPE Configuration

PIPE Configuration	Logical PCS Master Channel # (default)
x1	0
x2	1
x4	2 ⁽²⁶⁾
x8	4

The following figures show the default configurations:

Figure 2-90: x2 Configuration

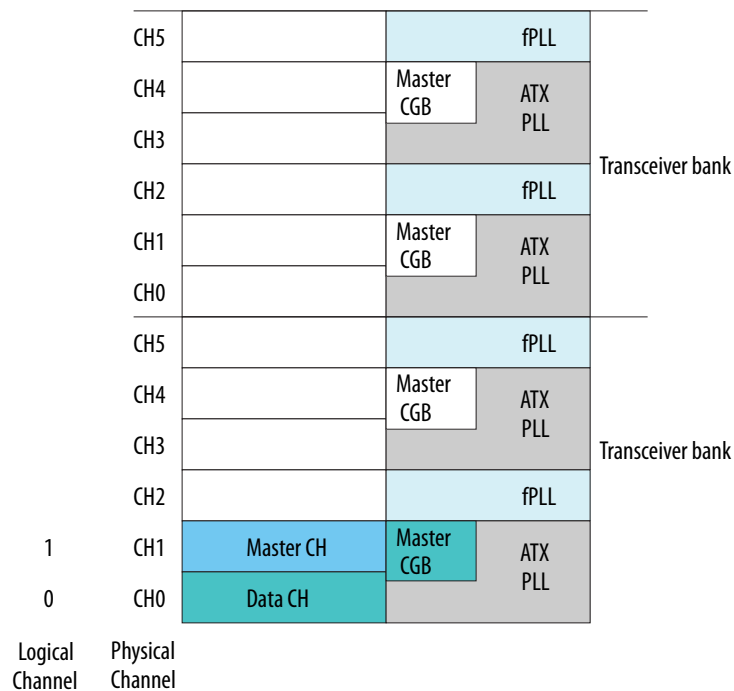

Note: The physical channel 0 aligns with logical channel 0.

⁽²⁶⁾ Ensure that the Logical PCS Master Channel aligns with Physical Channel 1 or 4 in a given transceiver bank.

Figure 2-91: x4 Configuration

	CH5		fPLL	
	CH4	Master CGB	ATX PLL	
	CH3			
	CH2		fPLL	
	CH1	Master CGB	ATX PLL	
	CH0			
	CH5		fPLL	
	CH4	Master CGB	ATX PLL	
3	CH3	Data CH		
2	CH2	Data CH	fPLL	
1	CH1	Master CH	Master CGB	ATX PLL
0	CH0	Data CH		
Logical Channel	Physical Channel			

Note: The physical channel 0 aligns with logical channel 0.

Figure 2-92: x8 Configuration


For x8 configurations, Altera recommends you choose a master channel that is a maximum of four channels away from the farthest slave channel.

	CH5		fPLL	
	CH4	Master CGB	ATX PLL	
	CH3			
	CH2		fPLL	
7	CH1	Data CH	Master CGB	ATX PLL
6	CH0	Data CH		
5	CH5	Data CH	fPLL	
4	CH4	Master CH	Master CGB	ATX PLL
3	CH3	Data CH		
2	CH2	Data CH	fPLL	
1	CH1	Data CH	Master CGB	ATX PLL
0	CH0	Data CH		
Logical Channel	Physical Channel			

Note: The physical channel 0 aligns with logical channel 0.

Figure 2-93: x4 Alternate Configuration

The figure below shows an alternate way of placing 4 bonded channels. In this case, the logical PCS Master Channel number must be specified as

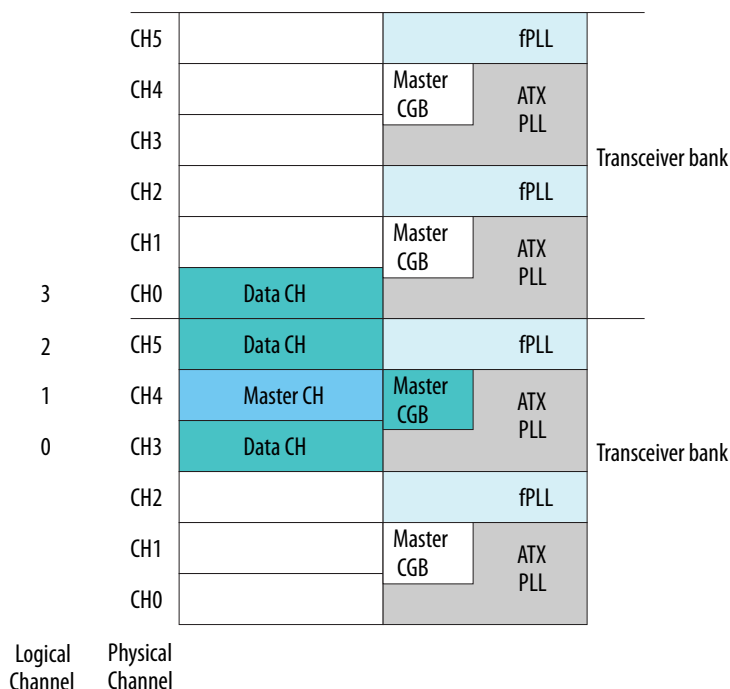

As indicated in the figures above, the fitter picks either physical CH1 or CH4 as the PCS master in bonded configurations for PIPE.

PHY IP Core for PCIe (PIPE) Link Equalization for Gen3 Data Rate

Gen3 mode requires TX and RX link equalization because of the data rate, the channel characteristics, receiver design, and process variations. The link equalization process allows the Endpoint and Root Port to adjust the TX and RX setup of each lane to improve signal quality. This process results in Gen3 links with a receiver Bit Error Rate (BER) that is less than 10^{-12} .

For detailed information about the four-stage link equalization procedure for 8.0 GT/s data rate, refer to Section 4.2.3 in the *PCI Express Base Specification, Rev 3.0*. A new LTSSM state, Recovery.Equalization with Phases 0–3, reflects progress through Gen3 equalization. Phases 2 and 3 of link equalization are optional. Each link must progress through all four phases, even if no adjustments occur. If you skip Phases 2 and 3, you will speed up link training at the expense of link BER optimization.

Phase 0

Phase 0 includes the following steps:

1. The upstream component enters Phase 0 of equalization during Recovery.Rcvrconfig by sending EQ TS2 training sets with starting presets for the downstream component. EQ TS2 training sets may be sent at 2.5 GT/s or 5 GT/s.
2. The downstream component enters Phase 0 of equalization after exiting Recovery.Speed at 8 GT/s. It receives the starting presets from the training sequences and applies them to its transmitter. At this time, the upstream component has entered Phase 1 and is operating at 8 GT/s.
3. To move to Phase 1, the receiver must have a BER < 10⁻⁴. The receiver should be able to decode enough consecutive training sequences.
4. In order to move to Equalization Phase 1, the downstream component must detect training sets with Equalization Control (EC) bits set to 2'b01.

Phase 1

During Phase 1 of the equalization process, the link partners exchange Full Swing (FS) and Low Frequency (LF) information. These values represent the upper and lower bounds for the TX coefficients. The receiver uses this information to calculate and request the next set of transmitter coefficients.

1. The upstream component moves to EQ Phase 2 when training sets with EC bits set to 1'b0 are captured on all lanes. It also sends EC=2'b10, starting pre-cursor, main cursor, and post-cursor coefficients.
2. The downstream component moves to EQ Phase 2 after detecting these new training sets.

Phase 2 (Optional)

During Phase 2, the Endpoint tunes the TX coefficients of the Root Port. The TS1 Use Preset bit determines whether the Endpoint uses presets for coarse resolution or coefficients for fine resolution.

Note: You cannot perform Phase 2 tuning, if you are using the PHY IP Core for PCI Express (PIPE) as an Endpoint. The PIPE interface does not provide any measurement metric to the Root Port to guide coefficient preset decision making. The Root Port should reflect the existing coefficients and move to the next phase. The default Full Swing (FS) value advertised by the Altera device is 40 and Low Frequency (LF) is 13.

If you are using the PHY IP Core for PCI Express (PIPE) as the Root Port, the Endpoint can tune the Root Port TX coefficients.

The tuning sequence typically includes the following steps:

1. The Endpoint receives the starting presets from the Phase 2 training sets sent by the Root Port.
2. The circuitry in the Endpoint receiver determines the BER. It calculates the next set of transmitter coefficients using FS and LF. It also embeds this information in the Training Sets for the Link Partner to apply to its transmitter.

The Root Port decodes these coefficients and presets, performs legality checks for the three transmitter coefficient rules and applies the settings to its transmitter and also sends them in the Training Sets. The three rules for transmitter coefficients are:

1. $|C_{-1}| \leq \text{Floor}(\text{FS}/4)$
2. $|C_{-1}| + C_0 + |C_{+1}| = \text{FS}$
3. $C_0 - |C_{-1}| - |C_{+1}| \geq \text{LF}$

Where: C_0 is the main cursor (boost), C_{-1} is the pre-cursor (pre-shoot), and C_{+1} is the post-cursor (de-emphasis).

3. This process is repeated until the downstream component's receiver achieves a BER of $< 10^{-12}$

Phase 3 (Optional)

During this phase, the Root Port tunes the Endpoint's transmitter. This process is analogous to Phase 2 but operates in the opposite direction.

If you are using the PHY IP Core for PCI Express (PIPE) as a Root Port, you cannot perform Phase 3 tuning.

After Phase 3 tuning is complete, the Root Port moves to Recovery.RcvrLock, sending EC=2'b00, and the final coefficients or preset agreed upon in Phase 2. The Endpoint moves to Recovery.RcvrLock using the final coefficients or preset agreed upon in Phase 3.

Recommendations for Tuning Link

To improve the BER of the receiver, Altera recommends that you turn on CTLE during Phase 2 Equalization for Endpoints or Phase 3 Equalization for Root Ports. You enable CTLE in different modes.

Note: Refer to the CTLE section of this document for more details.

Related Information

- [Continuous Time Linear Equalization \(CTLE\)](#) on page 5-6
- [PCI Express Base Specification](#)
- [PIPE Specification](#)

Design Example

The *PIPE Design Example*, located on the Arria 10 Transceiver PHY Design Examples Wiki page, demonstrates the connectivity between several IPs that form a complete PCIe design. The example contains the following components:

- **PHY**—Native PHY IP Core configured for PIPE Gen1x4, Gen2x8, Gen3x1 or Gen3 x8 mode
- **ATX PLL**—PLL used for Gen3 data rate
- **fPLL**—PLL used for Gen1, Gen2 data rates
- **Reset controller**
- **MAC**
- **Data generator**

The design example exercises the PIPE-specific features and blocks. The pseudo-MAC exercises the control signals and implements part of the LTSSM. The data generator and checker can generate and verify ordered sets such as TS1, TS2, EIOS, EIEOS, and SKP OS. They can also scramble and descramble data while operating at Gen3 rates.

The *PIPE Design Example User Guide*, located in the PIPE Design File on the Wiki page, contains recommendations about SDC timing constraints.

Note: The design examples on the Wiki page provide useful guidance for developing your own designs, but they are not guaranteed by Altera. Use them with caution.

Related Information

[PIPE Design Example](#)

CPRI

The common public radio interface (CPRI) is a high-speed serial interface developed for wireless network radio equipment controller (REC) to uplink and downlink data from available remote radio equipment (RE).

The CPRI protocol defines the interface of radio base stations between the REC and the RE. The physical layer supports both the electrical interfaces (for example, traditional radio base stations) and the optical interface (for example, radio base stations with a remote radio head). The scope of the CPRI specification is restricted to the link interface only, which is a point-to-point interface. The link has all the features necessary to enable a simple and robust usage of any given REC and RE network topology, including a direct interconnection of multiport REs.

Transceiver Channel Datapath and Clocking for CPRI

You can accurately compute the transceiver datapath latencies when using the CPRI protocol standardized interfaces.

Figure 2-94: Transceiver Channel Datapath and Clocking for CPRI

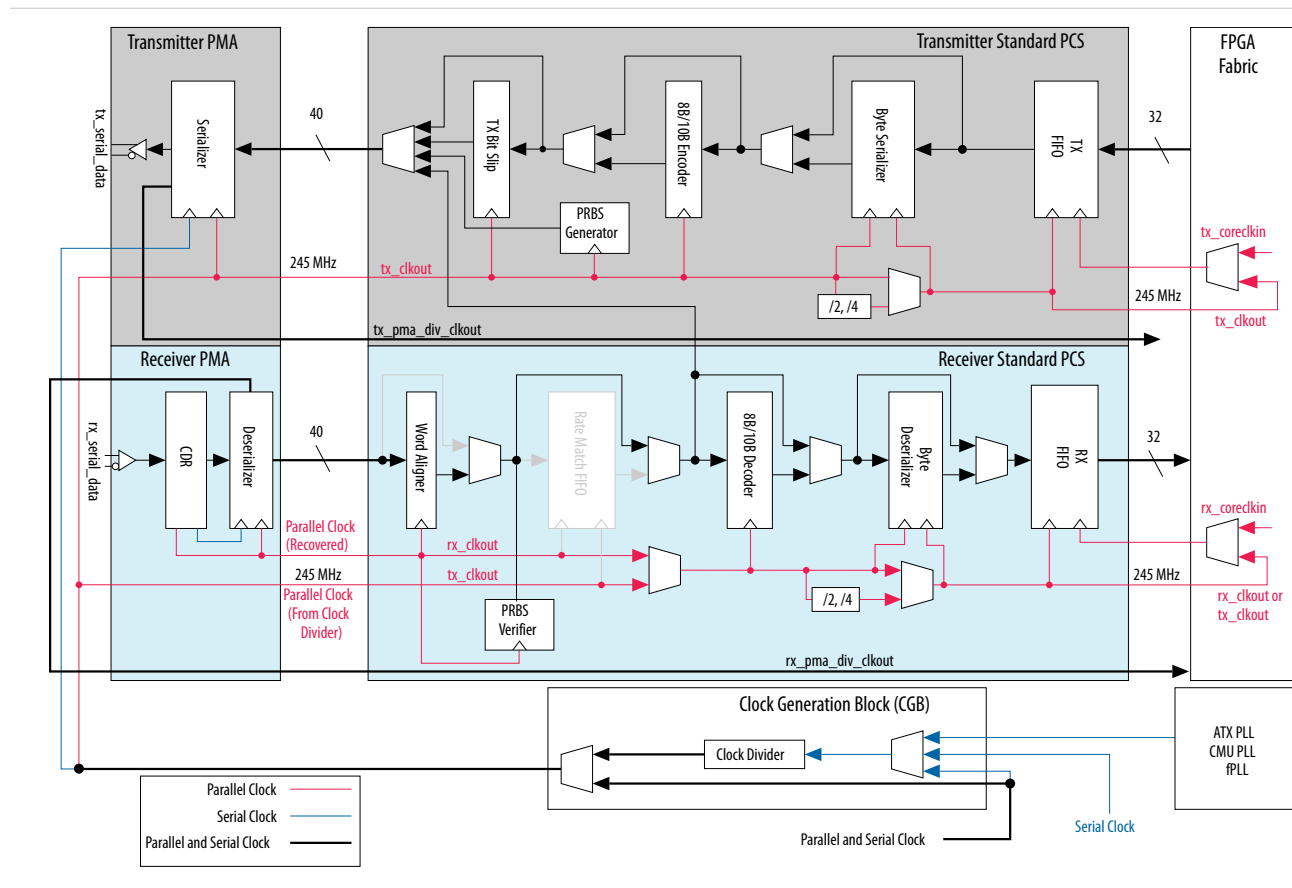


Table 2-165: Channel Width Options for Supported Serial Data Rates

Serial Data Rate (Mbps)	Channel Width (FPGA-PCS Fabric)			
	8/10 Bit Width		16/20 Bit Width	
	8-Bit	16-Bit	16-Bit	32-Bit
614.4	Yes	N/A	N/A	N/A
1228.8	Yes	Yes	Yes	Yes
2457.6	N/A	Yes	Yes	Yes
3072	N/A	Yes	Yes	Yes
4915.2	N/A	N/A	N/A	Yes
6144	N/A	N/A	N/A	Yes
9830.4	N/A	N/A	N/A	Yes

TX PLL Selection for CPRI

Choose a transmitter PLL that fits your required data rate.

Table 2-166: TX PLL Supported Data Rates

ATX and fPLL support the clock bonding feature.

TX PLLs	Supported Data Rate (Mbps)
ATX	614.4, 1228.8, 2457.6, 3072, 4915.2, 6144, 9830.4
fPLL	614.4, 1228.8, 2457.6, 3072, 4915.2, 6144
CMU	614.4, 1228.8, 2457.6, 3072, 4915.2, 6144, 9830.4

Note:

Channels that use the CMU PLL cannot be bonded. The CMU PLL that provides the clock can only drive channels in the transceiver bank where it resides.

Auto-Negotiation

When auto-negotiation is required, the channels initialize at the highest supported frequency and switch to successively lower data rates if frame synchronization is not achieved. If your design requires auto-negotiation, choose a base data rate that minimizes the number of PLLs required to generate the clocks required for data transmission.

By selecting an appropriate base data rate, you can change data rates by changing the local clock generation block (CGB) divider. If a single base data rate is not possible, you can use an additional PLL to generate the required data rates.

Table 2-167: Recommended Base Data Rates and Clock Generation Blocks for Available Data Rates

Data Rate (Mbps)	Base Data Rate	Local CGB Divider
1228.8	9830.4	8

Data Rate (Mbps)	Base Data Rate	Local CGB Divider
2457.6	9830.4	4
3072.0	6144.0	2
4915.2	9830.4	2
6144.0	6144.0	1
9830.4	9830.4	1

Supported Features for CPRI

The CPRI protocol places stringent requirements on the amount of latency variation that is permissible through a link that implements these protocols.


CPRI (Auto) and CPRI (Manual) transceiver configuration rules are both available for CPRI designs. Both modes use the same functional blocks, but the configuration mode of the word aligner is different between the Auto and Manual modes. In CPRI (Auto) mode, the word aligner works in deterministic mode. In CPRI (manual) mode, the word aligner works in manual mode.

To avoid transmission interference in time division multiplexed systems, every radio in a cell network requires accurate delay estimates with minimal delay uncertainty. Lower delay uncertainty is always desired for increased spectrum efficiency and bandwidth. The devices are designed with features to minimize the delay uncertainty for both RECs and REs.


Word Aligner in Deterministic Latency Mode for CPRI

The deterministic latency state machine in the word aligner reduces the known delay variation from the word alignment process. It automatically synchronizes and aligns the word boundary by slipping one half of a serial clock cycle (1UI) in the deserializer. Incoming data to the word aligner is aligned to the boundary of the word alignment pattern (K28.5).

Figure 2-95: Deterministic Latency State Machine in the Word Aligner

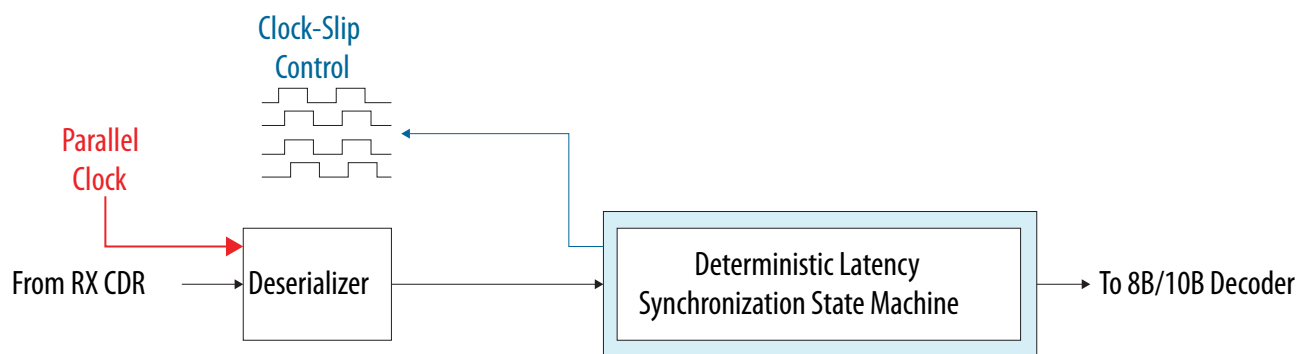

When using deterministic latency state machine mode, assert `rx_std_wa_patternalign` to initiate the pattern alignment after the reset sequence is complete. This is an edge-triggered signal in all cases except one: when the word aligner is in manual mode and the PMA width is 10, in which case `rx_std_wa_patternalign` is level sensitive. This signal must be asserted for at least 2 parallel clock cycles to allow synchronization of the word boundary.

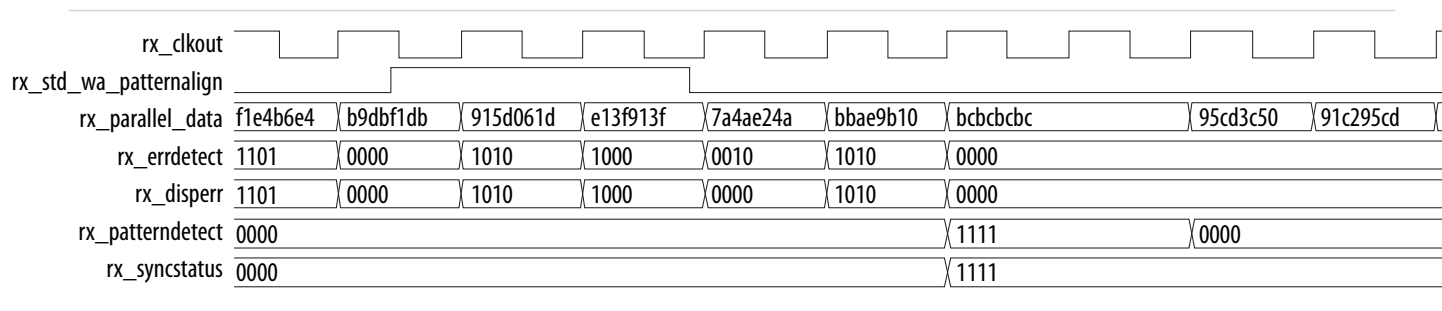Figure 2-96: Word Aligner in Deterministic Mode Waveform**Related Information**

[Word Aligner](#) on page 5-42

Transmitter and Receiver Latency

The latency variation from the link synchronization function (in the word aligner block) is deterministic with the rx_bitslipboundaryselectout port. Additionally, you can use the tx_bitslipboundaryselect port to fix the round trip transceiver latency for port implementation in the remote radio head to compensate for latency variation in the word aligner block. The tx_bitslipboundaryselect port is available to control the number of bits to be slipped in the transmitter serial data stream. You can optionally use the tx_bitslipboundaryselect port to round the round-trip latency to a whole number of cycles.

When using the byte deserializer, create additional logic in the FPGA fabric to determine if the comma byte is received in the lower or upper byte of the word. The delay is dependent on the word in which the comma byte appears.

The total transmitter and receiver channel datapath latencies are computed as follows:

- The total transmitter channel datapath latency is equal to the transmitter fixed latency and tx_bitslipboundaryselect delay.
- The total receiver channel datapath latency is equal to the receiver fixed latency, rx_std_bitslipboundaryselect delay, and byte deserializer delay.

Note: Latency numbers are pending device characterization.

Word Aligner in Manual Mode for CPRI

When configuring the word aligner in CPRI (Manual), the word aligner parses the incoming data stream for a specific alignment character.

After rx_digitalreset deasserts, asserting the rx_std_wa_patternalign triggers the word aligner to look for the predefined word alignment pattern or its complement in the received data stream. The word aligner automatically synchronizes to the new word boundary. Any alignment pattern found thereafter in a different word boundary causes the word aligner to resynchronize to this new word boundary if the rx_std_wa_patternalign remains asserted. If you deassert rx_std_wa_patternalign, the word aligner maintains the current word boundary even when it finds the alignment pattern in a new word boundary. When the word aligner is synchronized to the new word boundary, rx_patterndetect and rx_syncstatus are assert for one parallel clock cycle.

Figure 2-97: Word Aligner in Manual Alignment Mode Waveform**Related Information**

[Word Aligner](#) on page 5-42


How to Implement CPRI in Arria 10 Transceivers

Before you begin

You should be familiar with the Standard PCS and PMA architecture, PLL architecture, and the reset controller before implementing your CPRI protocol.


1. Instantiate the **Arria 10 Transceiver Native PHY IP** from the IP Catalog.
Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for more details.
2. Select **CPRI (Auto)** or **CPRI (Manual)** from the **Transceiver configuration rules** list located under **Datapath Options**, depending on which protocol you are implementing.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for CPRI](#) on page 2-276 as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the setting to meet your specific requirements.
4. Click **Generate** to generate the Native PHY IP (this is your RTL file).

Figure 2-98: Signals and Ports of Native PHY IP for CPRI

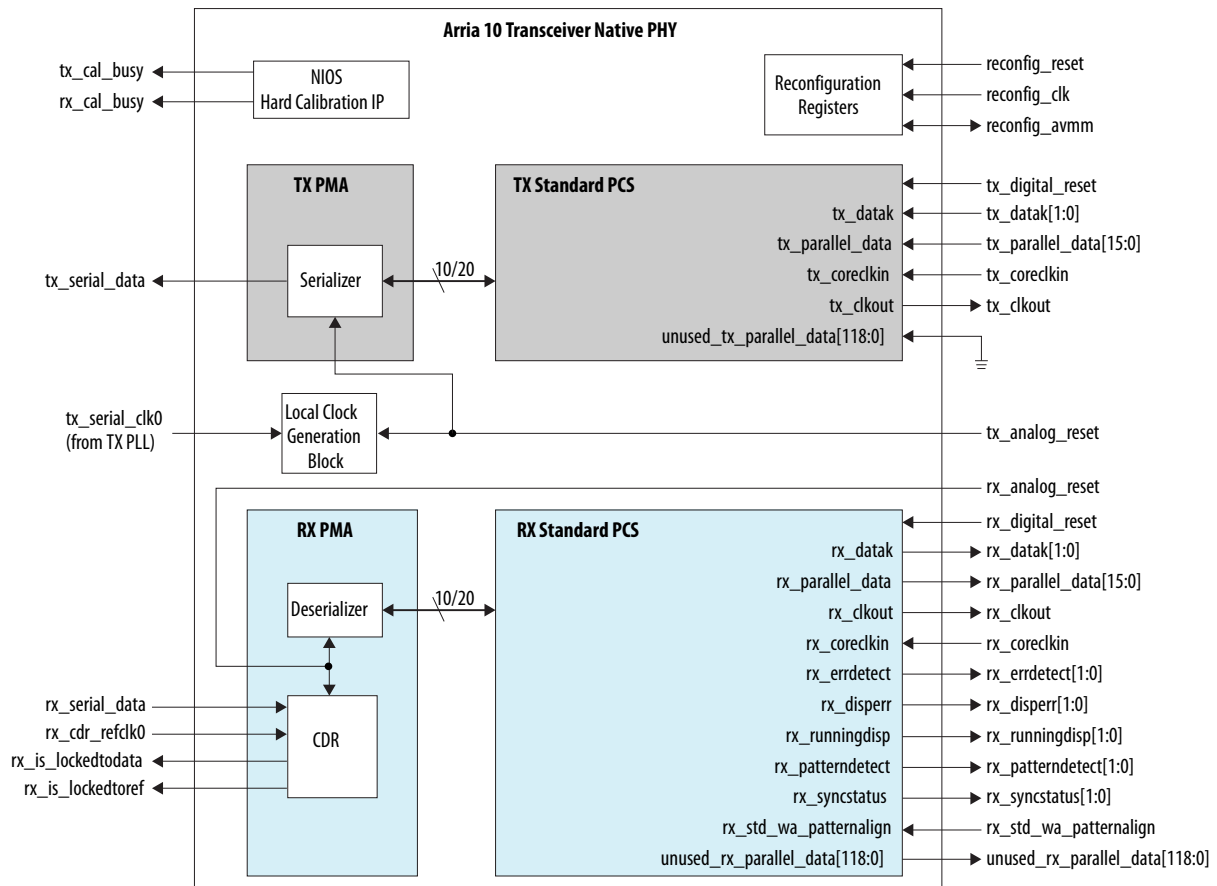

5. Instantiate and configure your PLL.
6. Create a transceiver reset controller.
You can use your own reset controller or use the Native PHY Reset Controller IP.
7. Connect the Native PHY IP to the PLL IP and the reset controller. Use the information in the following figure to connect the ports.

Figure 2-99: Connection Guidelines for a CPRI PHY Design

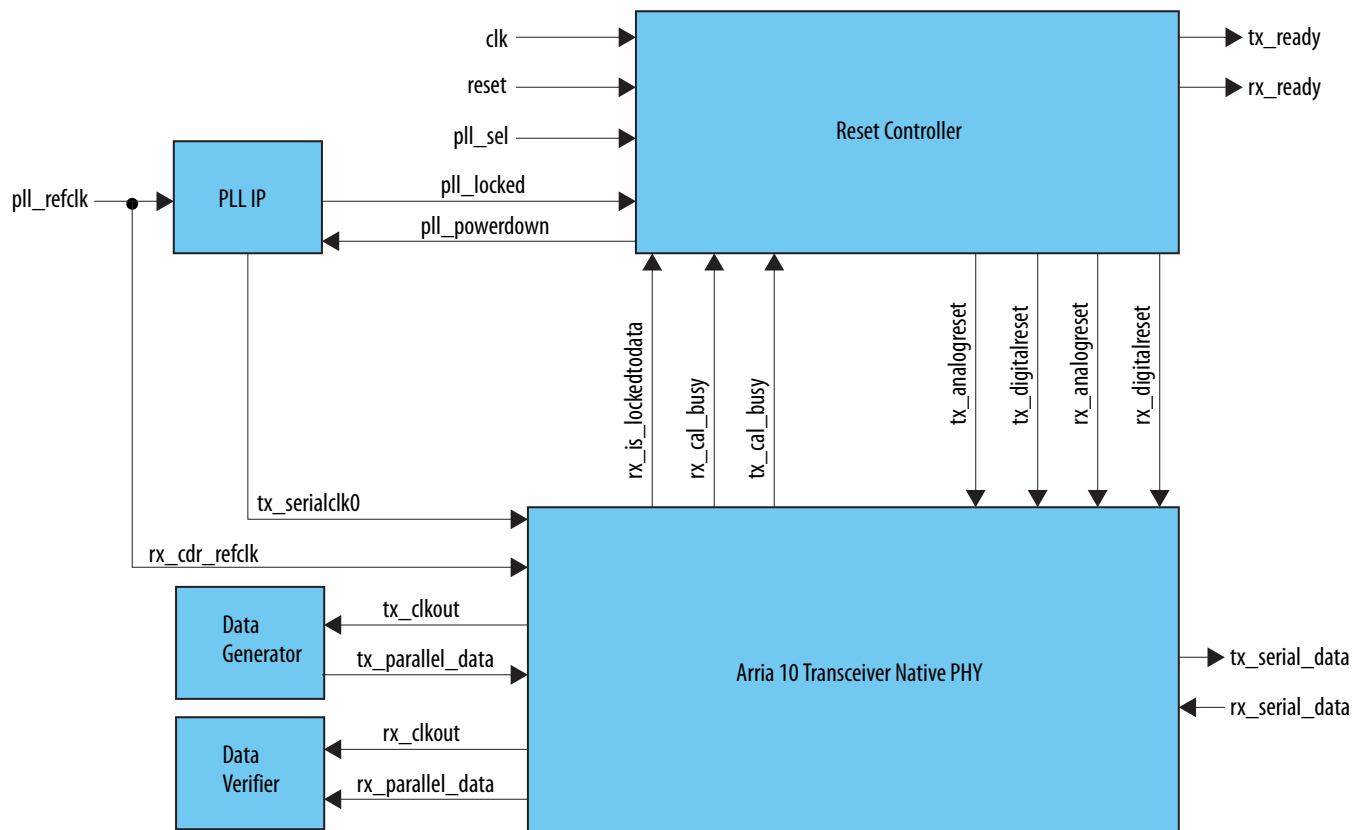

8. Simulate your design to verify its functionality.

Related Information

- [Arria 10 Standard PCS Architecture](#) on page 5-35
For more information about Standard PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Standard PCS Ports](#) on page 2-66
Port definitions for the Transceiver Native PHY Standard Datapath

Native PHY IP Parameter Settings for CPRI

Table 2-168: General and Datapath Options

The first two sections of the Parameter Editor for the Native PHY IP provide a list of general and datapath options to customize the transceiver.

Parameter	Value
Message level for rule violations	error warning
Transceiver configuration rules	CPRI (Auto) CPRI (Manual)
PMA configuration rules	basic
Transceiver mode	TX/RX Duplex
Number of data channels	1
Data rate	1.2288 Gbps 9.830 Gbps
Enable datapath and interface reconfiguration	Off
Enable simplified data interface	On

Table 2-169: TX PMA Parameters

Parameter	Value
TX channel bonding mode	Not bonded
TX local clock division factor	1
Number of TX PLL clock inputs per channel	1
Initial TX PLL clock input selection	0
Enable tx_pma_clkout port	Off
Enable tx_pma_div_clkout port	On
tx_pma_div_clkout division factor	2
Enable tx_pma_elecidle port	Off
Enable tx_pma_qpipullup port (QPI)	Off
Enable tx_pma_qpipulldn port (QPI)	Off
Enable tx_pma_txdetectrx port (QPI)	Off
Enable tx_pma_rxfound port (QPI)	Off
Enable rx_serialpbken port	Off

Table 2-170: RX PMA Parameters

Parameter	Value
Number of CDR reference clocks	1
Selected CDR reference clock	0
Selected CDR reference clock frequency	Select legal range defined by the Quartus II software
PPM detector threshold	1000
CTLE adaptation mode	manual
DFE adaptation mode	disabled
Number of fixed dfe taps	3
Enable rx_pma_clkout port	Off
Enable rx_pma_div_clkout port	On
rx_pma_div_clkout division factor	2
Enable rx_pma_clkslip port	Off
Enable rx_pma_qpipulldn port (QPI)	Off
Enable rx_is_lockedto data port	On
Enable rx_is_lockedto ref port	On
Enable rx_set_lockto data and rx_set_lockto ref ports	Off
Enable rx_serialpbken port	Off
Enable PRBS verifier control and status ports	Off

Table 2-171: Standard PCS Parameters

Parameters	Value
Standard PCS / PMA interface width	20
FPGA fabric / Standard TX PCS interface width	32
FPGA fabric / Standard RX PCS interface width	32
Enable 'Standard PCS' low latency mode	Off
TX FIFO mode	register_fifo
RX FIFO mode	register_fifo
Enable tx_std_pcfifo_full port	Off
Enable tx_std_pcfifo_empty port	Off
Enable rx_std_pcfifo_full port	Off
Enable rx_std_pcfifo_empty port	Off

Parameters	Value
TX byte serializer mode	Serialize x2
RX byte deserializer mode	Deserialize x2
Enable TX 8B/10B encoder	On
Enable TX 8B/10B disparity control	Off
Enable RX 8B/10B decoder	On
RX rate match FIFO mode	Disabled
RX rate match insert / delete -ve pattern (hex)	0x00000000
RX rate match insert / delete +ve pattern (hex)	0x00000000
Enable rx_std_rmfifo_full port	Off
Enable rx_std_rmfifo_empty port	Off
PCI Express Gen3 rate match FIFO mode	Bypass
Enable TX bit slip	Off (CPRI Auto configuration) On (CPRI Manual configuration)
Enable tx_std_bitslipboundarysel port	Off (CPRI Auto configuration) On (CPRI Manual configuration)
RX word aligner mode	deterministic latency (CPRI Auto configuration) manual (FPGA fabric controlled) (CPRI Manual configuration)
RX word aligner pattern length	10
RX word aligner pattern (hex)	0x0000000000000017c
Number of word alignment patterns to achieve sync	3
Number of invalid data words to lose sync	3
Number of valid data words to decrement error count	3
Enable fast sync status reporting for deterministic latency SM	Off
Enable rx_std_wa_patternalign port	Off (CPRI Auto configuration) On (CPRI Manual configuration)
Enable rx_std_wa_a1a2size port	Off

Parameters	Value
Enable rx_std_bitslipboundarysel port	Off (CPRI Auto configuration) On (CPRI Manual configuration)
Enable rx_bitslip port	Off (CPRI Auto configuration) On (CPRI Manual configuration)
All options under Bit Reversal and Polarity Inversion	Off
All options under PCIe Ports	Off

Table 2-172: Dynamic Reconfiguration

Parameter	Value
Enable dynamic reconfiguration	Off
Share reconfiguration interface	Off
Enable Altera Debug Master Endpoint	Off
Enable embedded debug	Off
Enable capability registers	Off
Set user-defined IP identifier	0
Enable control and status registers	Off
Enable prbs soft accumulators	Off
Configuration file prefix	altera_xcvr_native_a10
Generate SystemVerilog package file	Off
Generate C header file	Off
Generate MIF (Memory Initialization File)	Off

Table 2-173: Generation Options

Parameter	Value
Generate parameter documentation file	On

Other Protocols

Using the "Basic (Enhanced PCS)" and "Basic with KR FEC" Configurations of Enhanced PCS

You can use Arria 10 transceivers to configure the Enhanced PCS to support other 10G or 10G-like protocols. The Basic (Enhanced PCS) transceiver configuration rule allows access to the Enhanced PCS with full user control over the transceiver interfaces, parameters, and ports.


You can configure the transceivers for Basic functionality using the **Native PHY IP Basic (Enhanced PCS)** transceiver configuration rule.

Basic with KR FEC is a KR FEC sublayer support with a low latency physical coding sublayer (PCS). The KR FEC sublayer increases the bit error rate (BER) performance of a link. Use this configuration to implement applications with low latency or low BER requirements or applications such as 10 Gbps or 40 Gbps Ethernet over backplane (10GBASE-KR protocol).

The Forward Error Correction (FEC) function is defined in Clause 74 of IEEE 802.3ap-2007. FEC provides an error detection and correction mechanism that allows noisy channels to achieve the Ethernet-mandated Bit Error Rate (BER) of 10^{-12} . The FEC sublayer provides additional link margin by compensating for variations in manufacturing and environmental conditions. To distinguish it from other FEC mechanisms (for example, Optical Transport Network FEC), FEC as defined in Clause 74 of IEEE 802.3ap-2007 is called KR FEC.

Note: This configuration supports the FIFO in phase compensation and register modes, and KR FEC PCS blocks. You can implement all other required logic for your specific application, such as standard or proprietary protocol multi-channel alignment, either in the FPGA fabric in soft IP or use Altera's 10GBASE-KR PHY IP core product as full solutions in the FPGA.


Figure 2-100: Transceiver Channel Datapath and Clocking for Basic (Enhanced PCS) Configuration

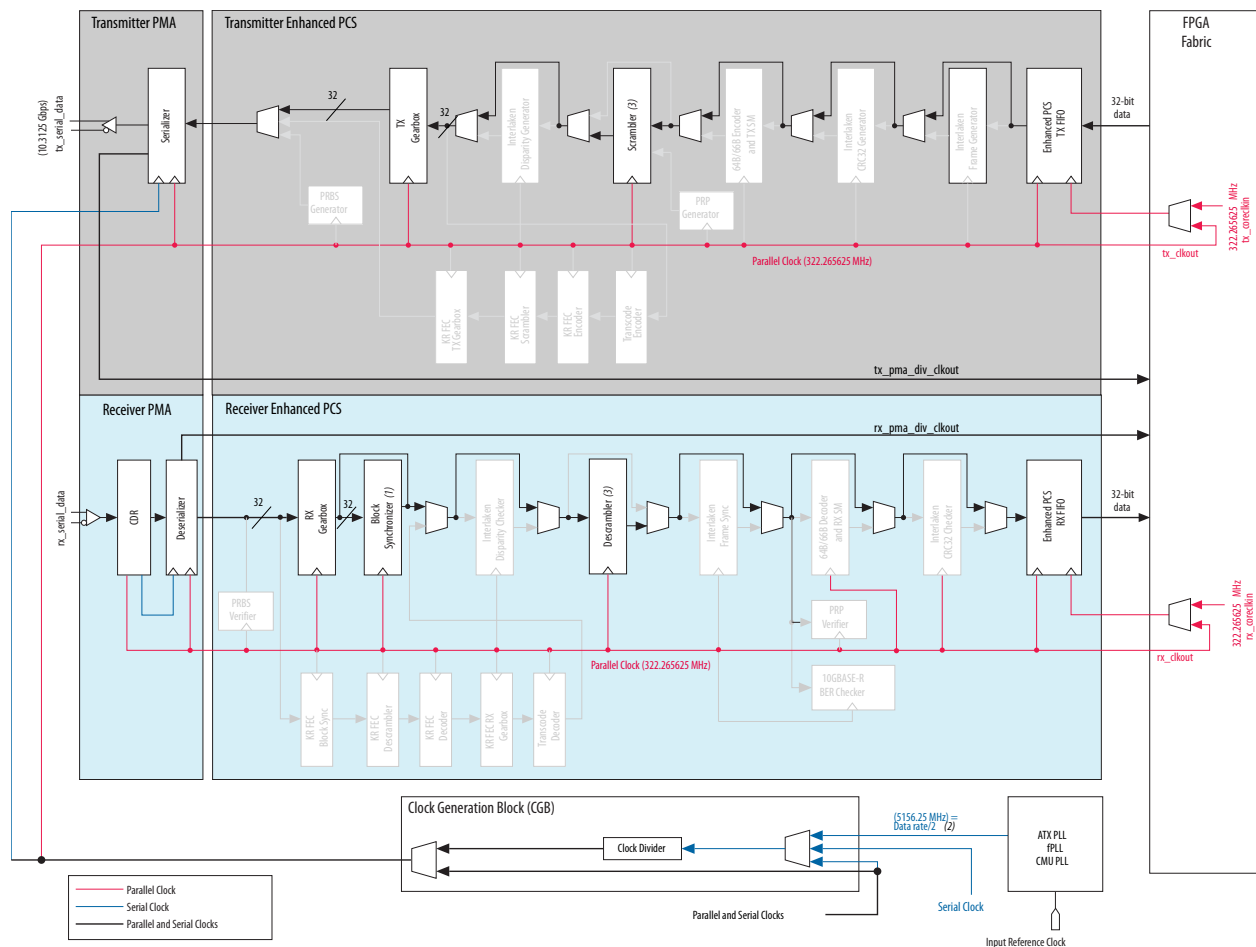

Notes:

1. Can be enabled or disabled based on the gearbox ratio selected
2. Depends on the value of the clock division factor chosen
3. To use the Scrambler and Descrambler, you must use a 66:32, 66:40, or 66:64 gear ratio and the Block Synchronizer must be enabled

Figure 2-101: Transceiver Channel Datapath and Clocking for a Basic with KR FEC Configuration

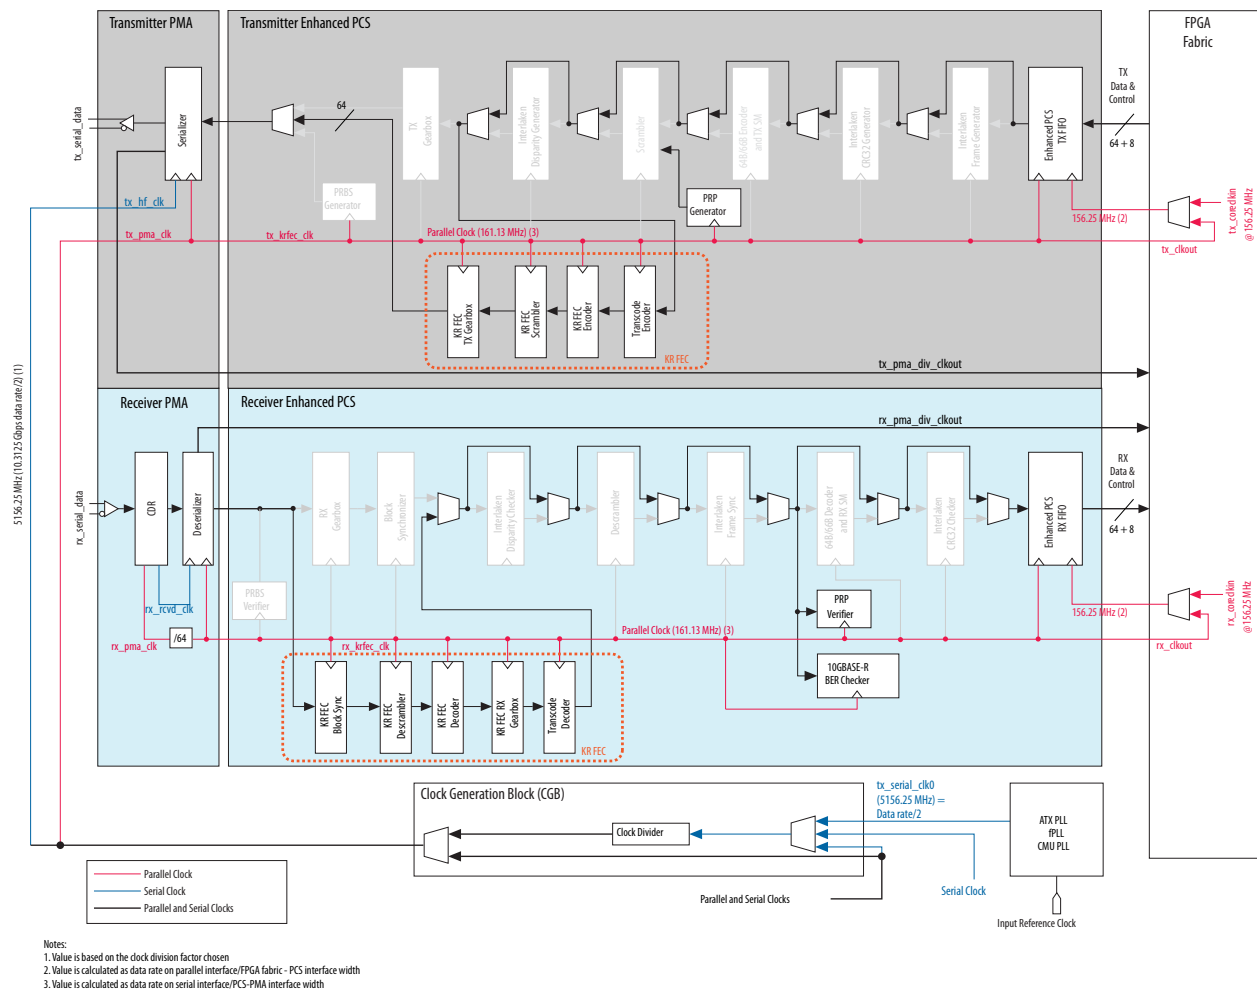


How to Implement the Basic (Enhanced PCS) and Basic with KR FEC Transceiver Configuration Rules in Arria 10 Transceivers

Before you begin

You should be familiar with the Basic (Enhanced PCS) and PMA architecture, PLL architecture, and the reset controller before implementing the Basic (Enhanced PCS) or Basic with KR FEC Transceiver Configuration Rule.

1. Open the IP Catalog and select the **Arria 10 Transceiver Native PHY IP**. Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for more details.
2. Select **Basic (Enhanced PCS)** or **Basic with KR FEC** from the **Transceiver Configuration Rules** list located under **Datapath Options**.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for Basic \(Enhanced PCS\) and Basic with KR FEC](#) as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the settings to meet your specific requirements.
4. Click **Finish** to generate the Native PHY IP (this is your RTL file).

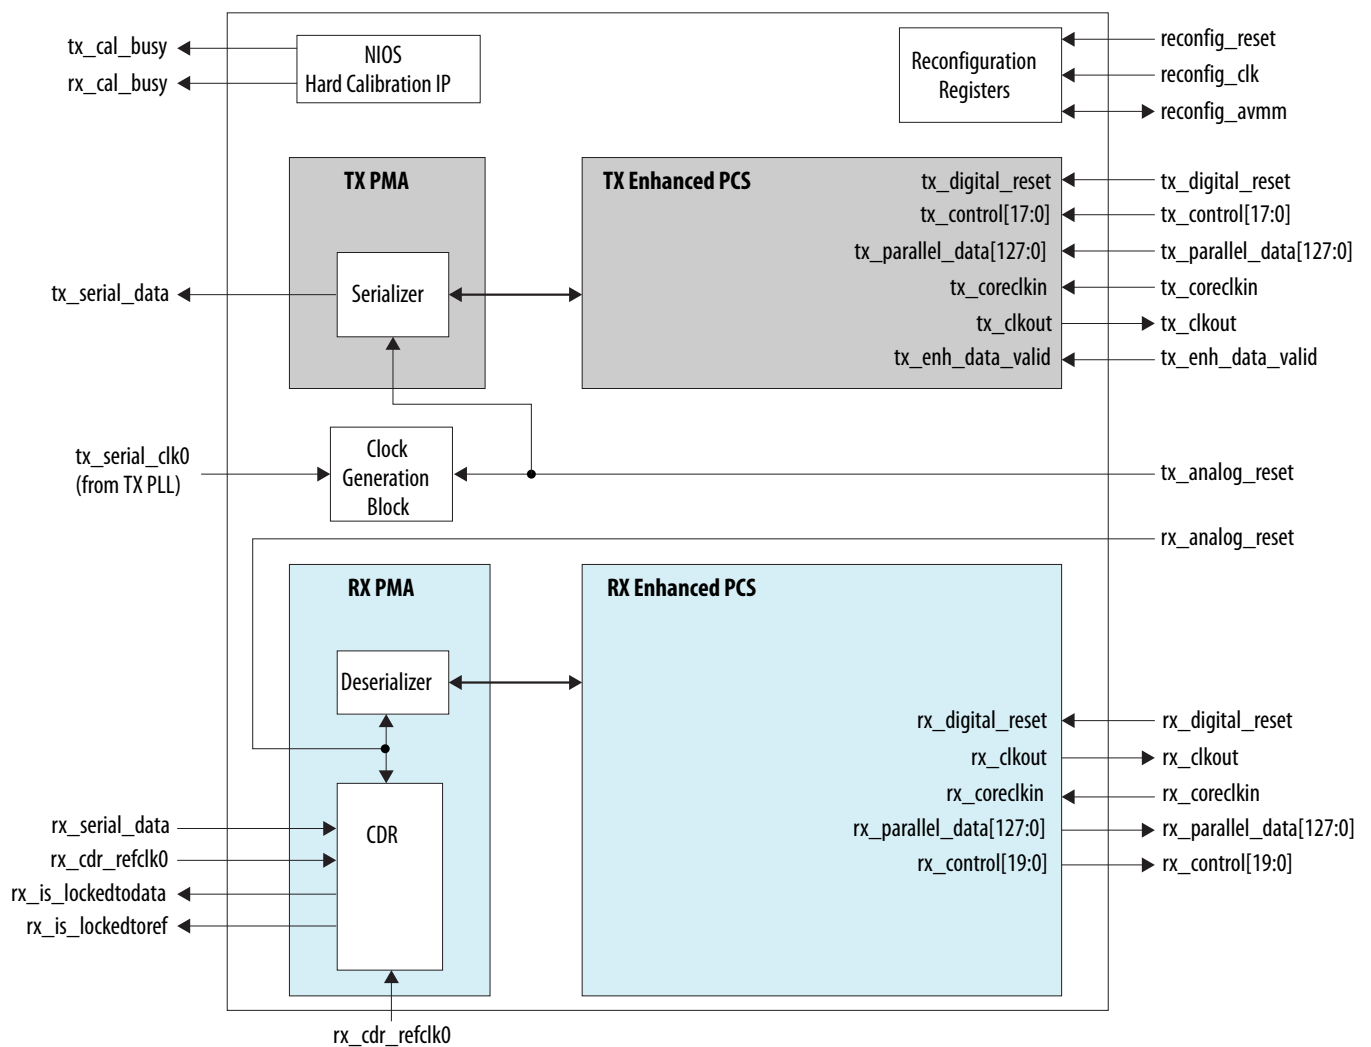Figure 2-102: Signals and Ports of Native PHY IP for Basic (Enhanced PCS) and Basic with KR FEC Configurations

5. Instantiate and configure your PLL.
6. Create a transceiver reset controller. You can use your own reset controller or use the Altera Transceiver PHY Reset Controller IP.
7. Connect the Native PHY IP to the PLL IP and the reset controller.

Figure 2-103: Connection Guidelines for a Basic (Enhanced PCS) Transceiver Design


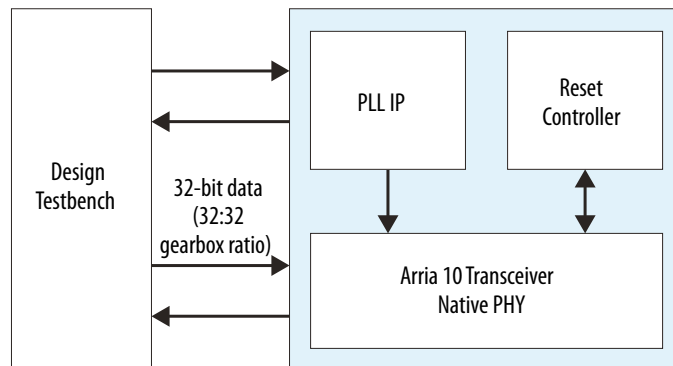


Figure 2-104: Connection Guidelines for a Basic with KR FEC Transceiver Design

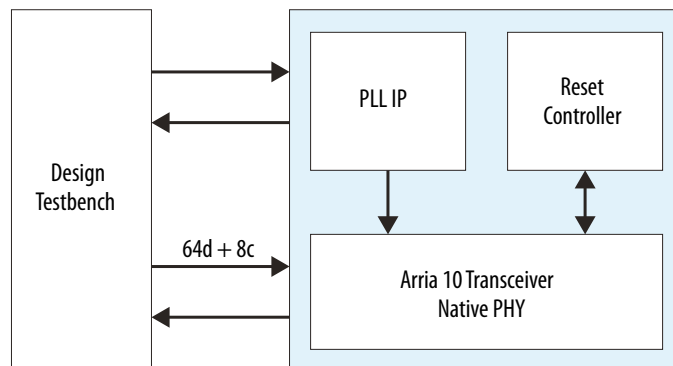

8. Simulate your design to verify its functionality.

Related Information

- [Arria 10 Enhanced PCS Architecture](#) on page 5-18
For more information about Enhanced PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Enhanced PCS Ports](#) on page 2-50
For detailed information about the available ports in the Basic protocol.

Native PHY IP Parameter Settings for Basic (Enhanced PCS) and Basic with KR FEC

Table 2-174: General and Datapath Parameters

The first two sections of the Parameter Editor for the Transceiver Native PHY provide a list of general and datapath options to customize the transceiver.

Parameter	Range
Message level for rule violations	error, warning
Transceiver configuration rules	Basic (Enhanced PCS), Basic w/KR FEC
PMA configuration rules	basic, QPI, GPON
Transceiver mode	TX / RX Duplex, TX Simplex, RX Simplex
Number of data channels	1 to 96
Data rate	1600 Mbps to 28.3 Gbps
Enable datapath and interface reconfiguration	On / Off
Enable simplified data interface	On / Off

Table 2-175: TX PMA Parameters

Parameter	Range
TX channel bonding mode	Not bonded, PMA only bonding, PMA and PCS bonding
PCS TX channel bonding master	Auto, n-1, n (where n = the number of data channels)
Actual PCS TX channel bonding master	n-1 (where n = the number of data channels)
TX local clock division factor	1, 2, 4, 8
Number of TX PLL clock inputs per channel	1, 2, 3, 4
Initial TX PLL clock input selection	0
Enable tx_pma_clkout port	On / Off
Enable tx_pma_div_clkout port	On / Off
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable tx_pma_elecidle port	On / Off
Enable tx_pma_qpipullup port (QPI)	On / Off
Enable tx_pma_qpipulldn port (QPI)	On / Off

Parameter	Range
Enable tx_pma_txdetectrx port (QPI)	On / Off
Enable tx_pma_rxfound port (QPI)	On / Off
Enable rx_serialpbken port	On / Off

Table 2-176: RX PMA Parameters

Parameter	Range
Number of CDR reference clocks	1 to 5
Selected CDR reference clock	0 to 4
Selected CDR reference clock frequency	For Basic (Enhanced PCS): Depends on the data rate parameter For Basic with KR FEC: 50 to 800
PPM detector threshold	100, 300, 500, 1000
CTLE adaptation mode	manual, triggered
DFE adaptation mode	continuous, triggered, manual, disabled
Number of fixed dfe taps	3, 7
Enable rx_pma_clkout port	On / Off
Enable rx_pma_div_clkout port	On / Off
rx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable rx_pma_cksip port	On / Off
Enable rx_pma_qpipulldn port (QPI)	On / Off
Enable rx_is_lockedto data port	On / Off
Enable rx_is_lockedto ref port	On / Off
Enable rx_set_lockto data and rx_set_lockto ref ports	On / Off
Enable rx_serialpbken port	On / Off
Enable PRBS verifier control and status ports	On / Off

Table 2-177: Enhanced PCS Parameters

Parameter	Range
Enhanced PCS/PMA interface width	32, 40, 64 Note: Basic with KR FEC allows 64 only

Parameter	Range
FPGA fabric/Enhanced PCS interface width	32, 40, 50, 64, 66, 67 Note: Basic with KR FEC allows 66 only
Enable 'Enhanced PCS' low latency mode	On / Off
Enable RX/TX FIFO double width mode	On / Off
TX FIFO mode	Phase compensation, Register, Interlaken, Basic, Fast register
TX FIFO partially full threshold	10, 11, 12, 13, 14, 15
TX FIFO partially empty threshold	1, 2, 3, 4, 5
Enable tx_enh_fifo_full port	On / Off
Enable tx_enh_fifo_pfull port	On / Off
Enable tx_enh_fifo_empty port	On / Off
Enable tx_enh_fifo_pempty port	On / Off
RX FIFO mode	Phase Compensation, Register, Basic
RX FIFO partially full threshold	0 to 31
RX FIFO partially empty threshold	0 to 31
Enable RX FIFO alignment word deletion (Interlaken)	On / Off
Enable RX FIFO control word deletion (Interlaken)	On / Off
Enable rx_enh_data_valid port	On / Off
Enable rx_enh_fifo_full port	On / Off
Enable rx_enh_fifo_pfull port	On / Off
Enable rx_enh_fifo_empty port	On / Off
Enable rx_enh_fifo_pempty port	On / Off
Enable rx_enh_fifo_del port (10GBASE-R)	On / Off
Enable rx_enh_fifo_insert port (10GBASE-R)	On / Off

Parameter	Range
Enable rx_enh_fifo_rd_en port (Interlaken)	On / Off
Enable rx_enh_fifo_align_val port (Interlaken)	On / Off
Enable rx_enh_fifo_align_cir port (Interlaken)	On / Off
Enable TX 64b/66b encoder	On / Off
Enable RX 64b/66b decoder	On / Off
Enable TX sync header error insertion	On / Off
Enable RX block synchronizer	On / Off
Enable rx_enh_blk_lock port	On / Off
Enable TX data bitflip	On / Off
Enable TX data polarity inversion	On / Off
Enable RX data bitflip	On / Off
Enable RX data polarity inversion	On / Off
Enable tx_enh_bitflip port	On / Off
Enable rx_bitflip port	On / Off
Enable RX KR-FEC error marking	On / Off
Error marking type	10G, 40G
Enable KR-FEC TX error insertion	On / Off
KR-FEC TX error insertion spacing	On / Off
Enable tx_enh_frame port	On / Off
Enable rx_enh_frame port	On / Off
Enable rx_enh_frame_dian_status port	On / Off

Table 2-178: Dynamic Reconfiguration Parameters

Parameter	Range
Enable dynamic reconfiguration	On / Off

Parameter	Range
Share reconfiguration interface	On / Off
Enable Altera Debug Master Endpoint	On / Off
Enable embedded debug	On / Off
Enable capability registers	On / Off
Set user-defined IP identifier	number
Enable control and status registers	On / Off
Enable prbs soft accumulators	On / Off
Configuration file prefix	text string
Generate System Verilog package file	On / Off
Generate C header file	On / Off

Table 2-179: Generate Options Parameters

Parameter	Range
Generate parameter documentation file	On / Off

How to Enable Low Latency in Basic Enhanced PCS

In the Parameter Editor, use the following settings to enable low latency:

1. Select the **Enable 'Enhanced PCS' low latency mode** option.
2. Select one of the following gear ratios:
Single-width mode: **32:32**, **40:40**, **64:64**, **66:40**, **66:64**, or **64:32**
Double-width mode: **40:40**, **64:64**, or **66:64**
3. Select **Phase_compensation** in the TX and RX FIFO mode list.
4. If you need the Scrambler and Descrambler features, enable **Block Synchronize** and use the **66:32**, **66:40**, or **66:64** gear ratio.


TX Bit Slip

The bit slip feature in the TX gearbox allows you to slip the transmitter bits before they are sent to the serializer.

The value specified on the TX bit slip bus indicates the number of bit slips. The minimum slip is one UI. The maximum number of bits slipped is equal to the FPGA fabric-to-transceiver interface width minus 1. For example, if the FPGA fabric-to-transceiver interface width is 64 bits, the bit slip logic can slip a maximum of 63 bits. Each channel has 6 bits to determine the number of bits to slip. The TX bit slip bus is a level-sensitive port, so the TX serial data is bit slipped statically by TX bit slip port assignments. Each TX channel has its own TX bit slip assignment and the bit slip amount is relative to the other TX channels. You can improve lane-to-lane skew by assigning TX bit slip ports with proper values.

The following figure shows the effect of slipping `tx_serial_data[0]` by one UI to reduce the skew with `tx_serial_data[1]`. After the bit slip, `tx_serial_data[0]` and `tx_serial_data[1]` are aligned.

Figure 2-105: TX Bit Slip

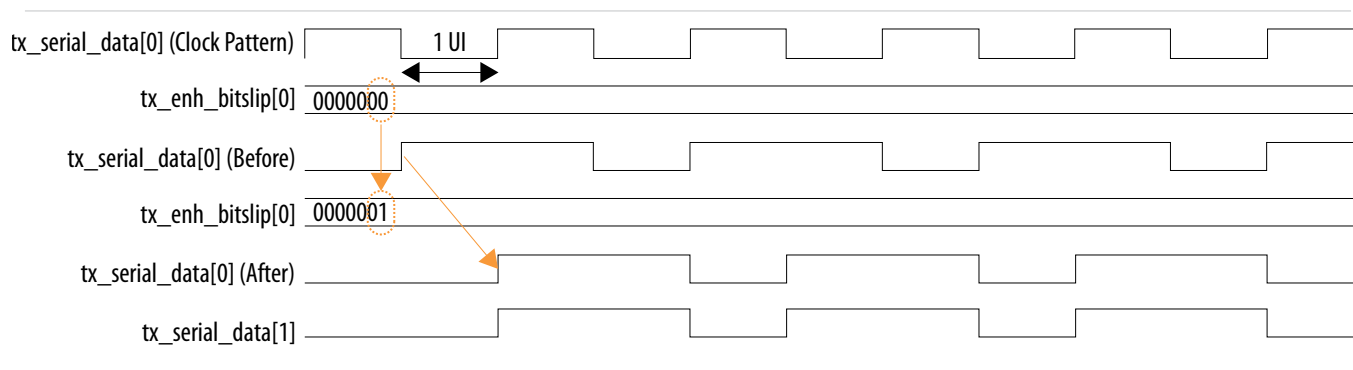

TX Polarity Inversion


Use the TX polarity inversion feature to swap the positive and negative signals of a serial differential link if they were erroneously swapped during board layout. To enable TX polarity inversion, select the **Enable TX data polarity inversion** option in the Gearbox section.

RX Bit Slip

The RX bit slip in the RX gearbox allows you to slip the recovered data.

An active high edge on the `rx_bitslip` port (`rx_clkout` synchronous) changes the word boundary, shifting `rx_parallel_data` one bit at a time. Use the `rx_bitslip` port with its own word aligning logic. You can verify the word alignment by monitoring `rx_parallel_data`. The RX bit slip feature is optional and may or may not be enabled.

Figure 2-106: RX Bit Slip

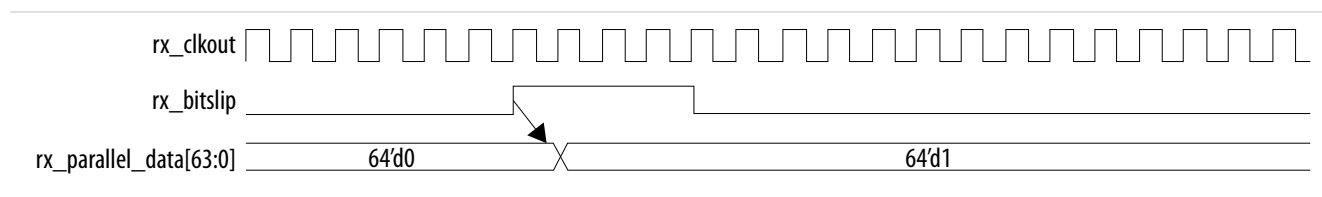

RX Polarity Inversion

Use the RX polarity inversion feature to swap the positive and negative signals of a serial differential link if they were erroneously swapped during board layout. To enable RX polarity inversion, select the **Enable RX data polarity inversion** option in the Gearbox section.


Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS

Use one of the following transceiver configuration rules to implement protocols such as SONET/SDH, SDI/HD, SATA, or your own custom protocol:

- Basic protocol
- Basic protocol with low latency enabled
- Basic with rate match protocol

Figure 2-107: Transceiver Channel Datapath and Clocking for the Basic and Basic with Rate Match Configurations

The clocking calculations in this figure are for an example when the data rate is 1250 Mbps and the PMA width is 10 bits.

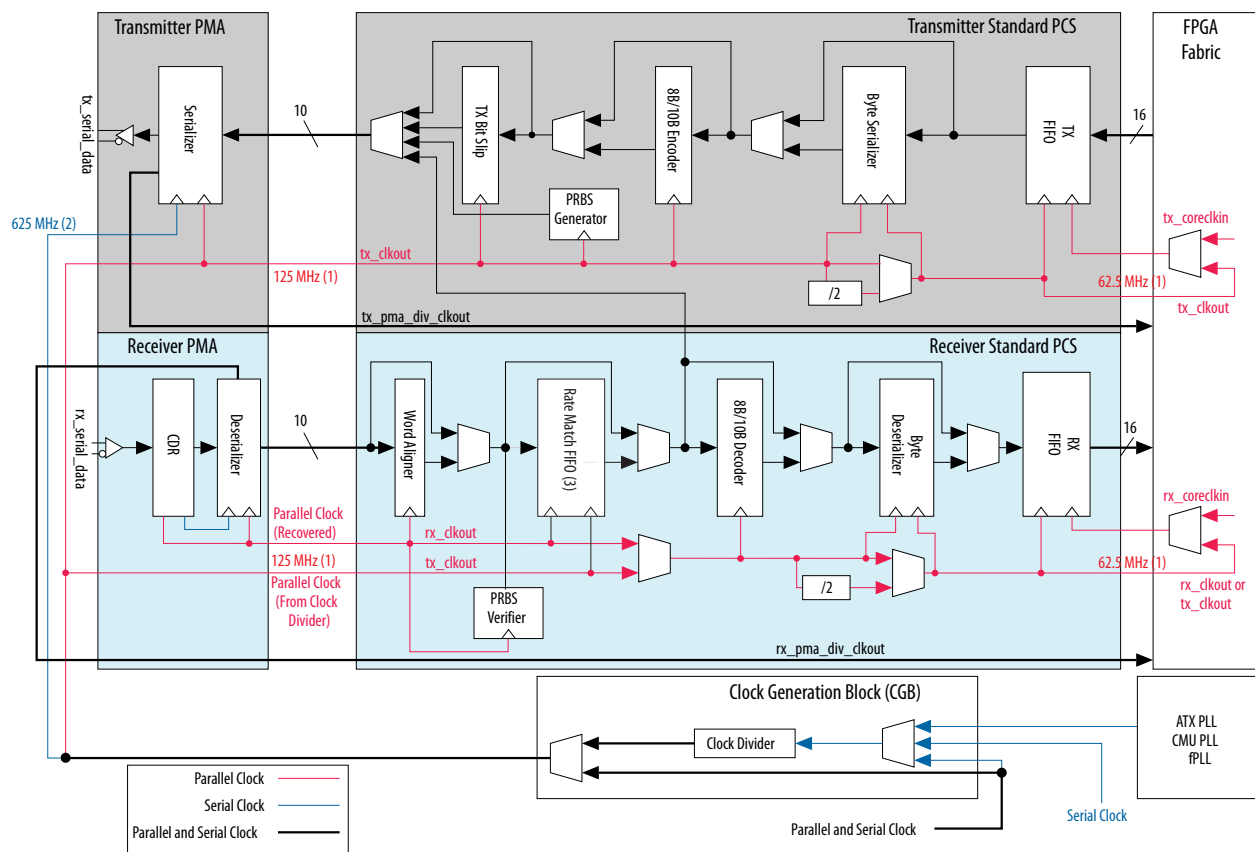


Notes:

1. The parallel clock (tx_clkout or rx_clkout) is calculated as data rate/PCS-PMA interface width = 1250/10 = 125 MHz. When the Byte Serializer is set to Serialize x2 mode, tx_clkout and rx_clkout become 1250/20 = 62.5 MHz.
2. The serial clock is calculated as data rate/2. The PMA runs on a dual data rate clock.
3. This block is only enabled when using the Basic with Rate Match transceiver configuration rule.

In low latency mode, much of the Standard PCS is bypassed, which allows more design control in the FPGA fabric.

Figure 2-108: Transceiver Channel Datapath and Clocking for Basic Configuration with Low Latency Enabled

The clocking calculations in this figure are for an example when the data rate is 1250 Mbps and the PMA width is 10 bits.

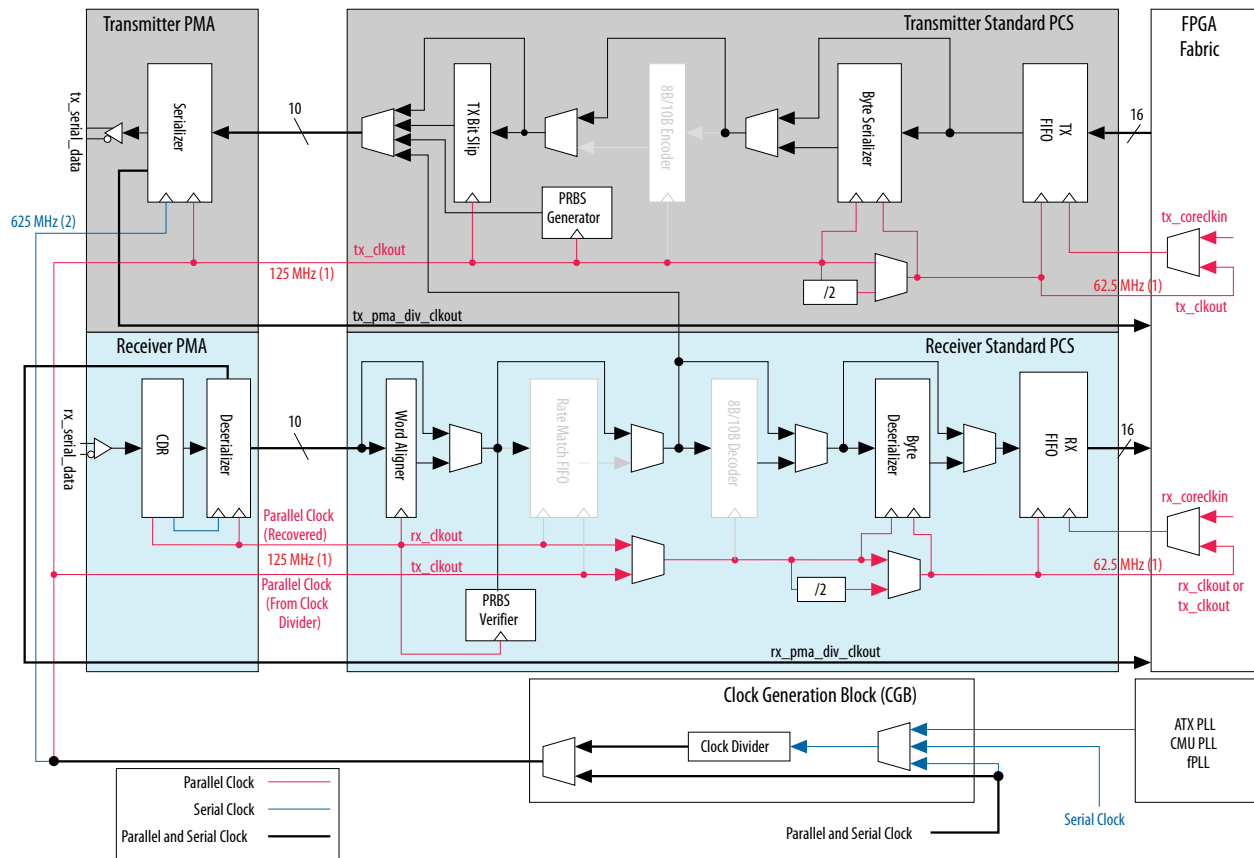**Notes:**

1. The parallel clock (tx_clkout or rx_clkout) is calculated as data rate/PCS-PMA interface width = $1250/10 = 125$ MHz.
When the Byte Serializer is set to Serialize x2 mode, tx_clkout and rx_clkout become $1250/20 = 62.5$ MHz.
2. The serial clock is calculated as data rate/2. The PMA runs on a dual data rate clock.

In low latency datapath modes, the transmitter and receiver FIFOs are always enabled. Depending on the targeted data rate, you can optionally bypass the byte serializer and deserializer blocks.

Related Information

[Arria 10 Standard PCS Architecture](#) on page 5-35

Word Aligner Manual Mode

To use this mode:

1. Set the **RX word aligner mode** to **Manual (FPGA Fabric controlled)**.
2. Set the **RX word aligner pattern length** option according to the PCS-PMA interface width.
3. Enter a hexadecimal value in the **RX word aligner pattern (hex)** field.

This mode adds rx_patterndetect and rx_syncstatus. You can select the **Enable rx_std_wa_patternalign port** option to enable rx_std_wa_patternalign. An active high on rx_std_wa_patternalign re-aligns the word aligner one time.

Note:

- rx_patterndetect is asserted whenever there is a pattern match.
- rx_syncstatus is asserted after the word aligner achieves synchronization.
- rx_std_wa_patternalign is also asserted to re-align and re-synchronize.
- If there is more than one channel in the design, rx_patterndetect, rx_syncstatus and rx_std_wa_patternalign become buses in which each bit corresponds to one channel.

You can verify this feature by monitoring rx_parallel_data.

The following timing diagrams demonstrate how to use the ports and show the relationship between the various control and status signals.

Figure 2-109: Manual Mode when the PCS-PMA Interface Width is 8 Bits

tx_parallel_data = 0xBC and the word aligner pattern = 8'hBC

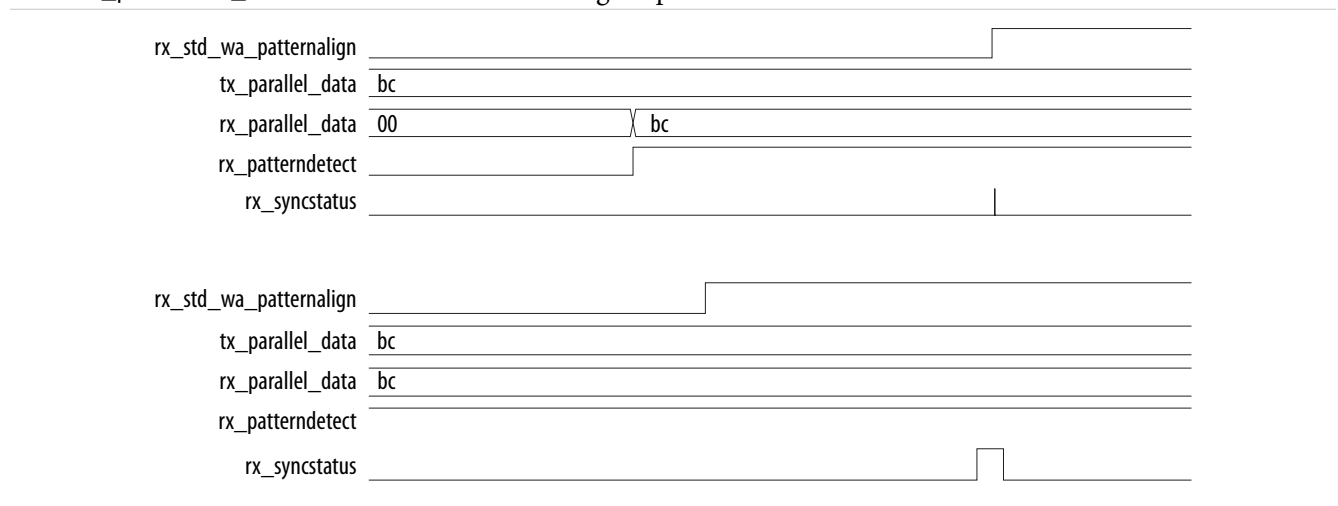


Figure 2-110: Manual Mode when the PCS-PMA Interface Width is 10 Bits

tx_parallel_data = 10'h3BC and the word aligner pattern = 0x3BC

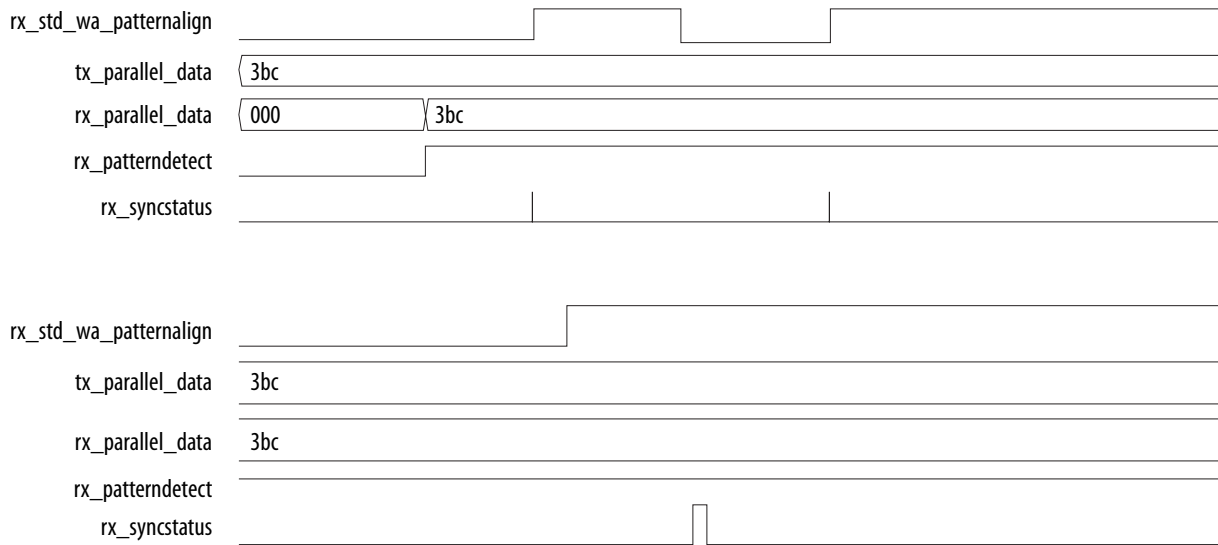


Figure 2-111: Manual Mode when the PCS-PMA Interface Width is 16 Bits

tx_parallel_data = 16'hF3BC and the word aligner pattern = 0x3BC


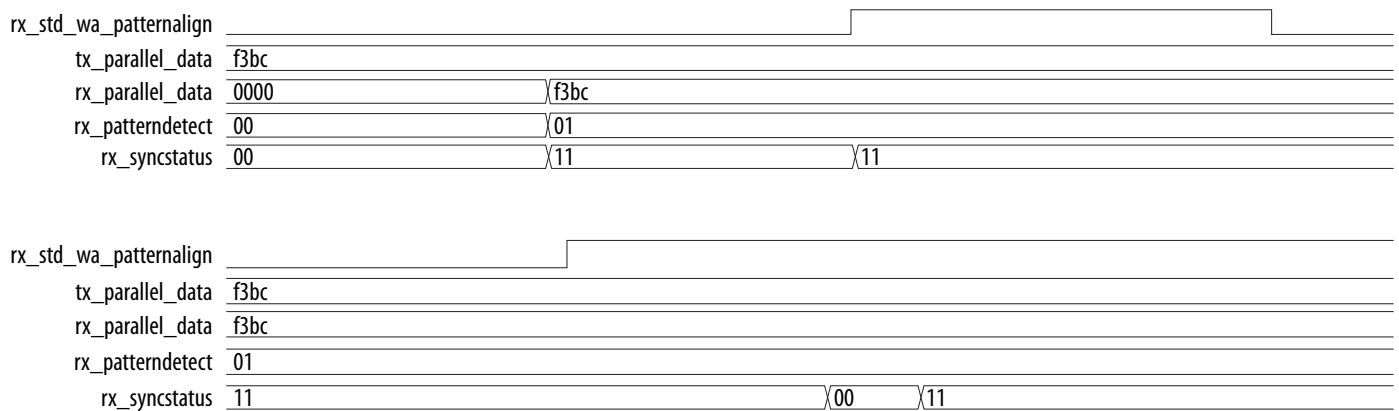


Figure 2-112: Manual Mode when the PCS-PMA Interface Width is 20 Bits

tx_parallel_data = 20'h3FC3BC and the word aligner pattern = 0x3BC

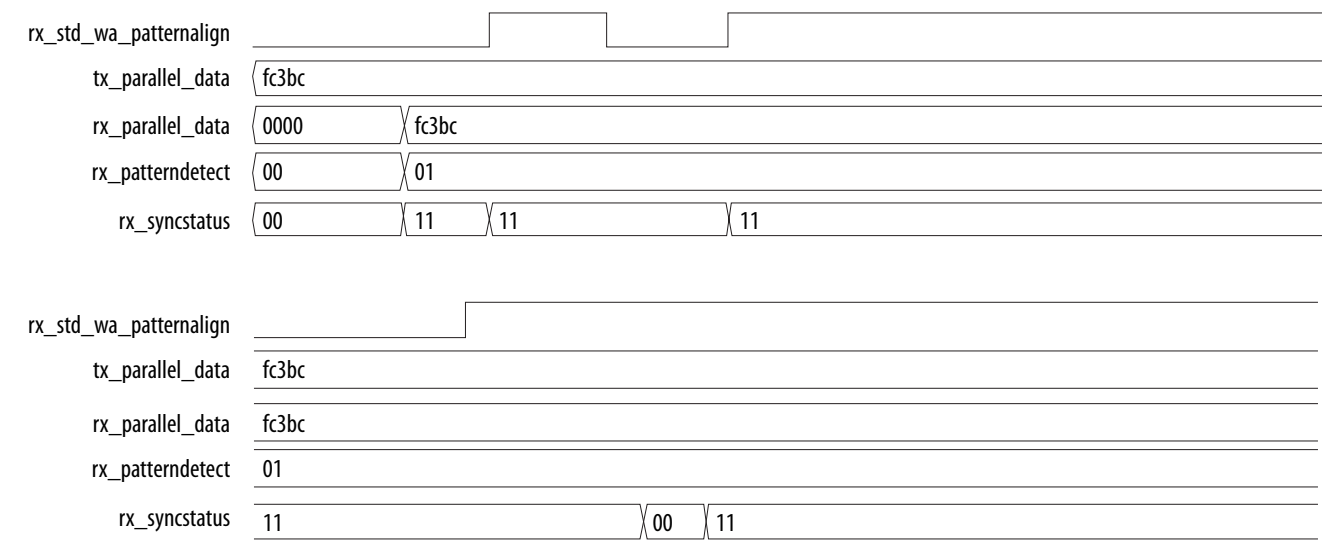

Word Aligner Synchronous State Machine Mode

To use this mode:

- Select the **Enable TX 8B/10B encoder** option.
- Select the **Enable RX 8B/10B decoder** option.

The 8B/10B encoder and decoder add the following additional ports:

- tx_dataak
- rx_dataak
- rx_errdetect
- rx_disperr
- rx_runningdisp

1. Set the **RX word aligner mode** to **synchronous state machine**.
2. Set the **RX word aligner pattern length** option according to the PCS-PMA interface width.
3. Enter a hexadecimal value in the **RX word aligner pattern (hex)** field.

The RX word aligner pattern is the 8B/10B encoded version of the data pattern. You can also specify the number of word alignment patterns to achieve synchronization, the number of invalid data words to lose synchronization, and the number of valid data words to decrement error count. This mode adds two additional ports: rx_patterndetect and rx_syncstatus.

- Note:**
- rx_patterndetect is asserted whenever there is a pattern match.
 - rx_syncstatus is asserted after the word aligner achieves synchronization.
 - rx_std_wa_patternalign is also asserted to re-align and re-synchronize.
 - If there is more than one channel in the design, tx_dataak, rx_dataak, rx_errdetect, rx_disperr, rx_runningdisp, rx_patterndetect, and rx_syncstatus become buses in which each bit corresponds to one channel.

You can verify this feature by monitoring `rx_parallel_data`.

Figure 2-113: Synchronization State Machine Mode when the PCS-PMA Interface Width is 20 Bits

tx_datak	11																															
tx_parallel_data	bc02																															
rx_parallel_data	0000								02bc																							
rx_datak	00								01																							
rx_errdetect	11								00																							
rx_dispers	11								00																							
rx_runningdisp	00				11				00				11				00				11				00				11			
rx_patterndetect	00								01																							
rx_syncstatus	00																11															

RX Bit Slip

To use the RX bit slip, select **Enable rx_bitslip port**, and set the word aligner mode to **bit slip**. This adds rx_bitslip as an input control port. An active high edge on rx_bitslip slips one bit at a time, and when rx_bitslip is toggled, then the word aligner slips one bit at a time on every active high edge. You can verify this feature by monitoring rx_parallel_data.

The RX bit slip feature is optional and may or may not be enabled.

Figure 2-114: RX Bit Slip in 8-bit Mode

tx_parallel_data = 8'hbc

rx_std_bitslipboundarysel 01111

rx_bitslip

tx_parallel_data bc

rx_parallel_data 00 97 cb e5 f2 79 bc

Figure 2-115: RX Bit Slip in 10-bit Mode

tx_parallel_data = 10'h3bc

rx_std_bitslipboundarysel 01111

rx_bitslip

tx_parallel_data 3bc

rx_parallel_data 000 1de 0ef 277 33b 39d 3ce 1e7 2f3 379 3bc

Figure 2-116: RX Bit Slip in 16-bit Mode


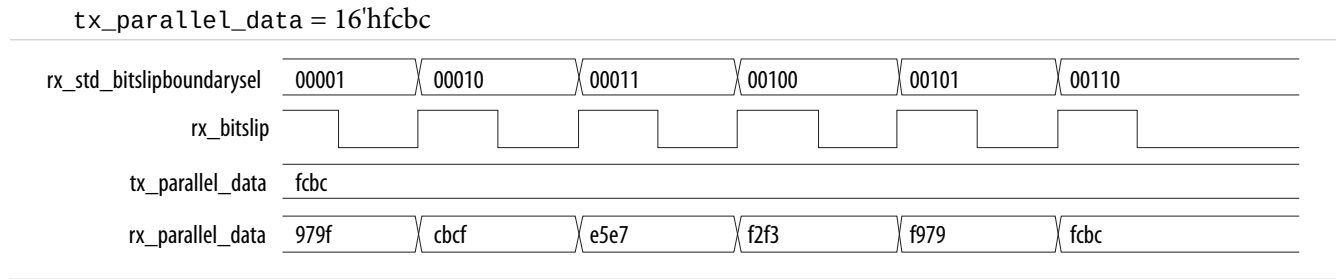


Figure 2-117: RX Bit Slip in 20-bit Mode

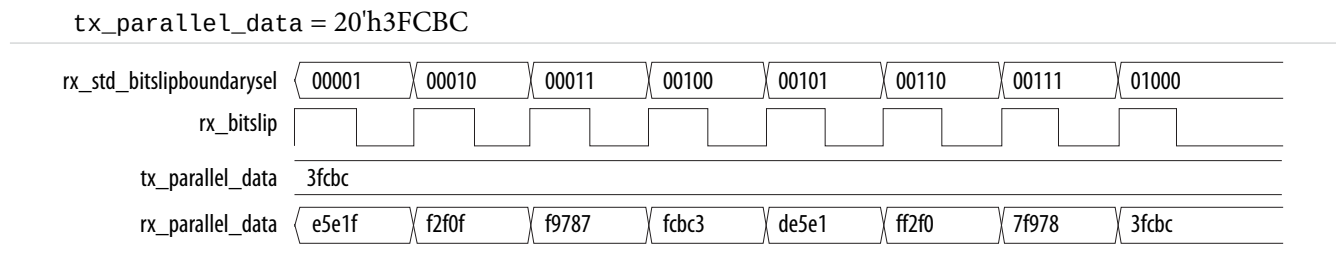

RX Polarity Inversion


Receiver polarity inversion can be enabled in low latency, basic, and basic rate match modes; whereas, the word aligner is available in any mode.

To enable the RX polarity inversion feature, select the **Enable RX polarity inversion** and **Enable rx_polinv port** options.

This mode adds rx_polinv. If there is more than one channel in the design, rx_polinv is a bus in which each bit corresponds to a channel. As long as rx_polinv is asserted, the RX data received has a reverse polarity.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-118: RX Polarity Inversion

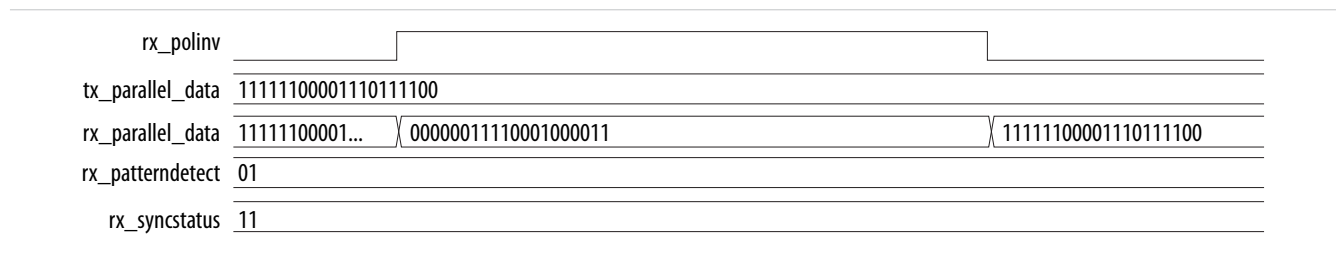

RX Bit Reversal


The RX bit reversal feature can be enabled in low latency, basic, and basic rate match mode. The word aligner is available in any mode, bit slip, manual, or synchronous state machine.

To enable this feature, select the **Enable RX bit reversal** and **Enable rx_std_bitrev_ena port** options. This adds rx_std_bitrev_ena. If there is more than one channel in the design, rx_std_bitrev_ena becomes

a bus in which each bit corresponds to a channel. As long as rx_std_bitrev_ena is asserted, the RX data received by the core shows bit reversal.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-119: RX Bit Reversal

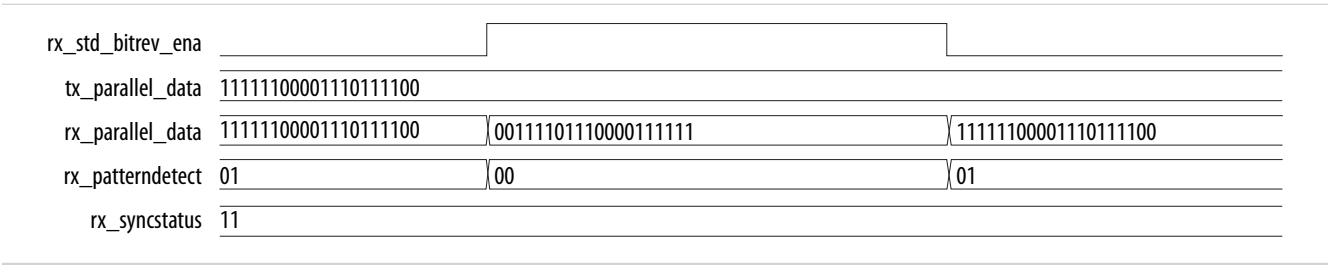


RX Byte Reversal

The RX byte reversal feature can be enabled in low latency, basic, and basic rate match mode; whereas, the word aligner is available in any mode.

To enable this feature, select the **Enable RX byte reversal** and **Enable rx_std_byterev_ena port** options. This adds rx_std_byterev_ena. If there is more than one channel in the design, rx_std_byterev_ena becomes a bus in which each bit corresponds to a channel. As long as rx_std_byterev_ena is asserted, the RX data received by the core shows byte reversal.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-120: RX Byte Reversal

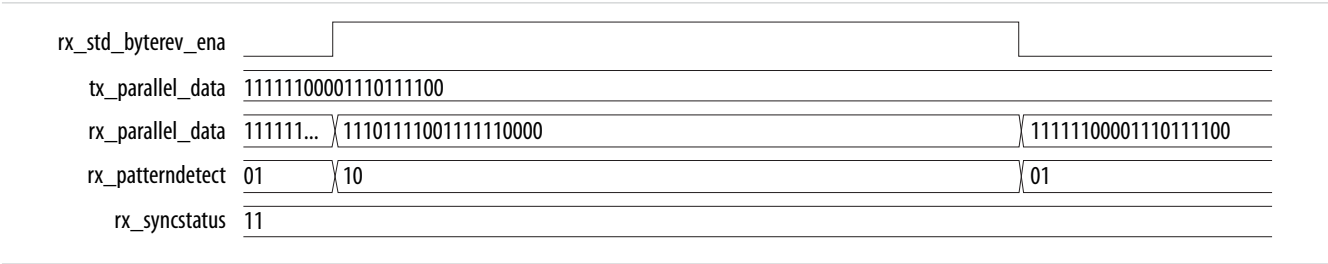

Rate Match FIFO in Basic (Single Width) Mode


Only rate match FIFO operation is covered in these steps.

- 1. Select **basic (single width)** in the **RX rate match FIFO mode** list.
- 2. Enter values for the following parameters.

Parameter	Value	Description
RX rate match insert/delete +ve pattern (hex)	20 bits of data specified as a hexadecimal string	The first 10 bits correspond to the skip pattern and the last 10 bits correspond to the control pattern. The skip pattern must have neutral disparity.

Parameter	Value	Description
RX rate match insert/delete -ve pattern (hex)	20 bits of data specified as a hexadecimal string	The first 10 bits correspond to the skip pattern and the last 10 bits correspond to the control pattern. The skip pattern must have neutral disparity.

Figure 2-121: Rate Match FIFO Deletion with Three Skip Patterns Required for Deletion

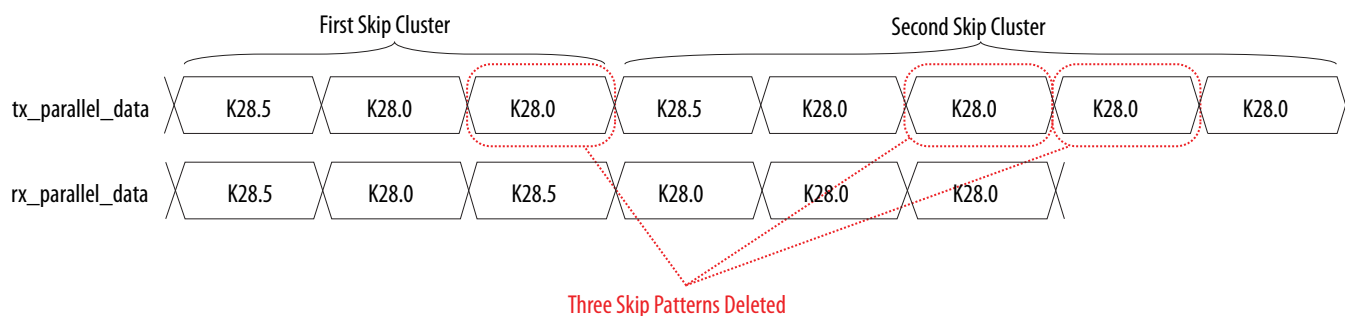


Note: /K28.5/ is the control pattern and /K28.0/ is the skip pattern

In this example, the first skip cluster has a /K28.5/ control pattern followed by two /K28.0/ skip patterns. The second skip cluster has a /K28.5/ control pattern followed by four /K28.0/ skip patterns. The rate match FIFO deletes only one /K28.0/ skip pattern from the first skip cluster to maintain at least one skip pattern in the cluster after deletion. Two /K28.0/ skip patterns are deleted from the second cluster for a total of three skip patterns deletion requirement.

The rate match FIFO can insert a maximum of four skip patterns in a cluster, if there are no more than five skip patterns in the cluster after insertion.

Figure 2-122: Rate Match FIFO Deletion with Three Skip Patterns Required for Insertion

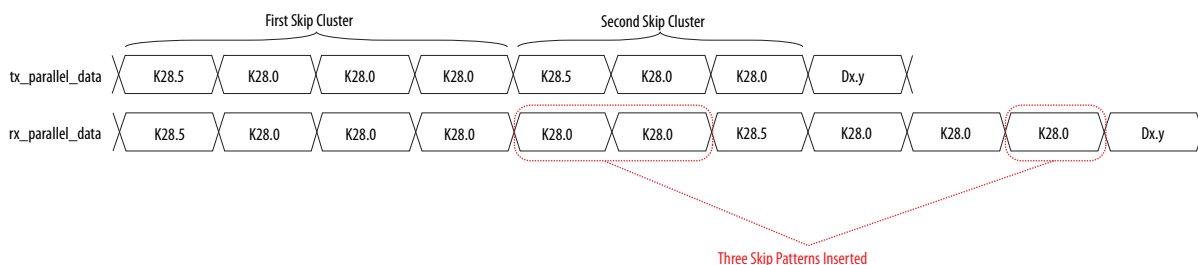

In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern followed by three /K28.0/ skip patterns. The second skip cluster has a /K28.5/ control pattern followed by one /K28.0/ skip pattern. The rate match FIFO inserts only two /K28.0/ skip patterns into the first skip cluster to maintain a maximum of five skip patterns in the cluster after insertion. One /K28.0/ skip pattern is inserted into the second cluster for a total of three skip patterns to meet the insertion requirement.

Figure 2-123: Rate Match FIFO Becoming Full After Receiving D5


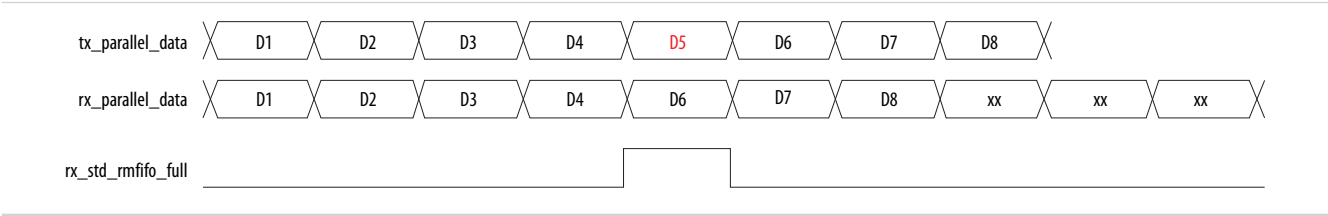


Figure 2-124: Rate Match FIFO Becoming Empty After Receiving D3

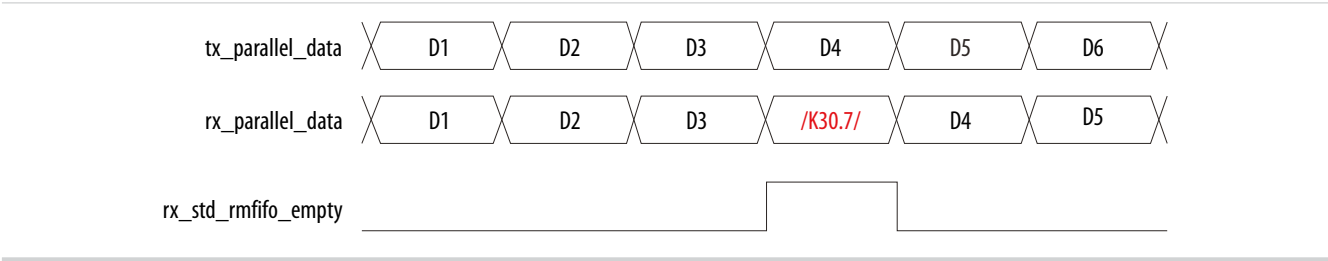

Rate Match FIFO Basic (Double Width) Mode


- 1. Select **basic (double width)** in the **RX rate match FIFO mode** list.
- 2. Enter values for the following parameters.

Parameter	Value	Description
RX rate match insert/delete +ve pattern (hex)	20 bits of data specified as a hexadecimal string	The first 10 bits correspond to the skip pattern and the last 10 bits correspond to the control pattern. The skip pattern must have neutral disparity.
RX rate match insert/delete -ve pattern (hex)	20 bits of data specified as a hexadecimal string	The first 10 bits correspond to the skip pattern and the last 10 bits correspond to the control pattern. The skip pattern must have neutral disparity.

The rate match FIFO can delete as many pairs of skip patterns from a cluster as necessary to avoid the rate match FIFO from overflowing. The rate match FIFO can delete a pair of skip patterns only if the two 10-bit skip patterns appear in the same clock cycle on the LSByte and MSByte of the 20-bit word. If the two skip patterns appear straddled on the MSByte of a clock cycle and the LSByte of the next clock cycle, the rate match FIFO cannot delete the pair of skip patterns.


Figure 2-125: Rate Match FIFO Deletion with Four Skip Patterns Required for Deletion

/K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern.


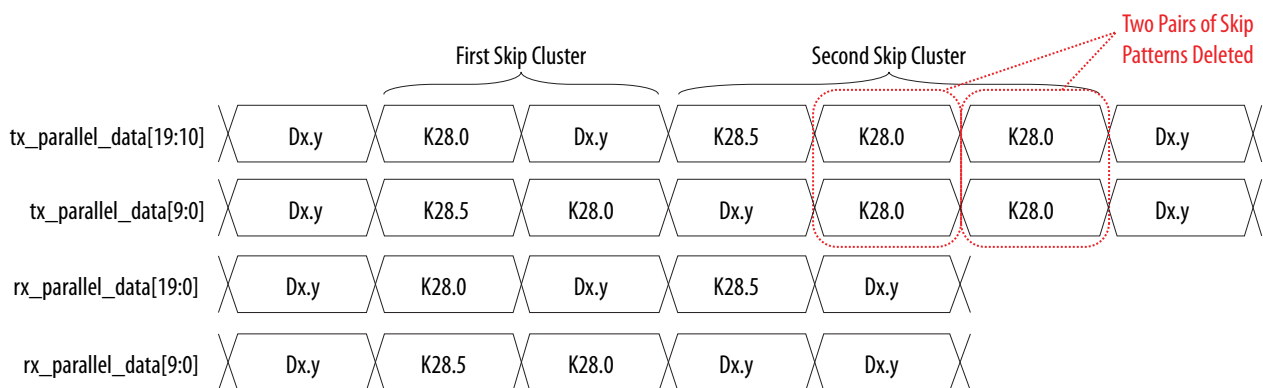


In this example, the first skip cluster has a /K28.5/ control pattern in the LSByte and /K28.0/ skip pattern in the MSByte of a clock cycle followed by one /K28.0/ skip pattern in the LSByte of the next clock cycle. The rate match FIFO cannot delete the two skip patterns in this skip cluster because they do not appear in the same clock cycle. The second skip cluster has a /K28.5/ control pattern in the MSByte of a clock cycle followed by two pairs of /K28.0/ skip patterns in the next two cycles. The rate match FIFO deletes both pairs of /K28.0/ skip patterns (for a total of four skip patterns deleted) from the second skip cluster to meet the three skip pattern deletion requirement.

The rate match FIFO can insert as many pairs of skip patterns into a cluster necessary to avoid the rate match FIFO from under running. The 10-bit skip pattern can appear on the MSByte, the LSByte, or both, of the 20-bit word.

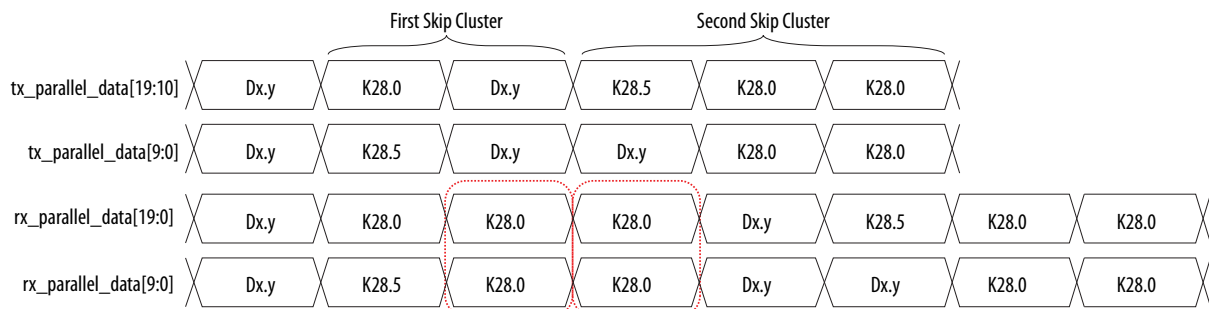Figure 2-126: Rate Match FIFO Deletion with Four Skip Patterns Required for Insertion

In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern in the LSByte and /K28.0/ skip pattern in the MSByte of a clock cycle followed by one /K28.0/ skip pattern in the LSByte of the next clock cycle. The rate match FIFO inserts pairs of skip patterns in this skip cluster to meet the three skip pattern insertion requirement.

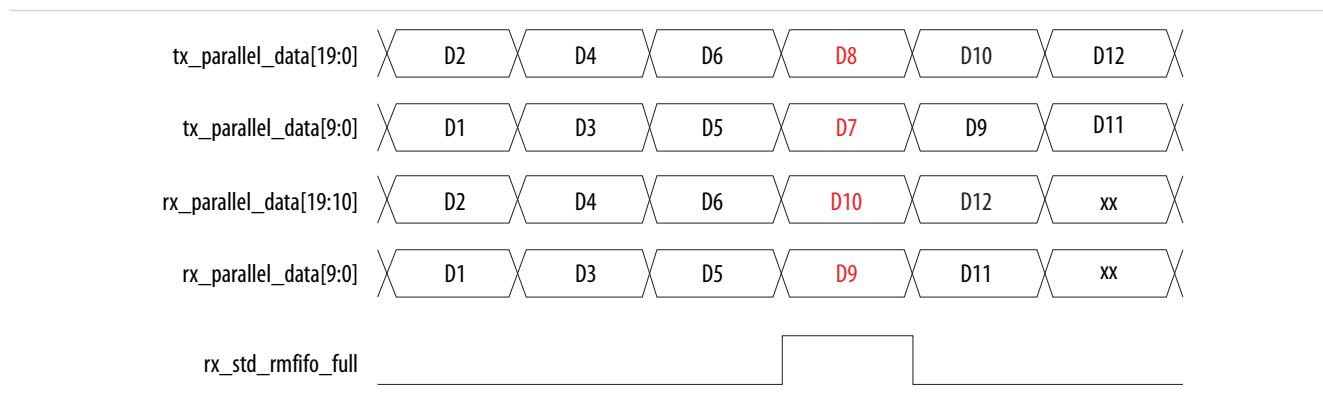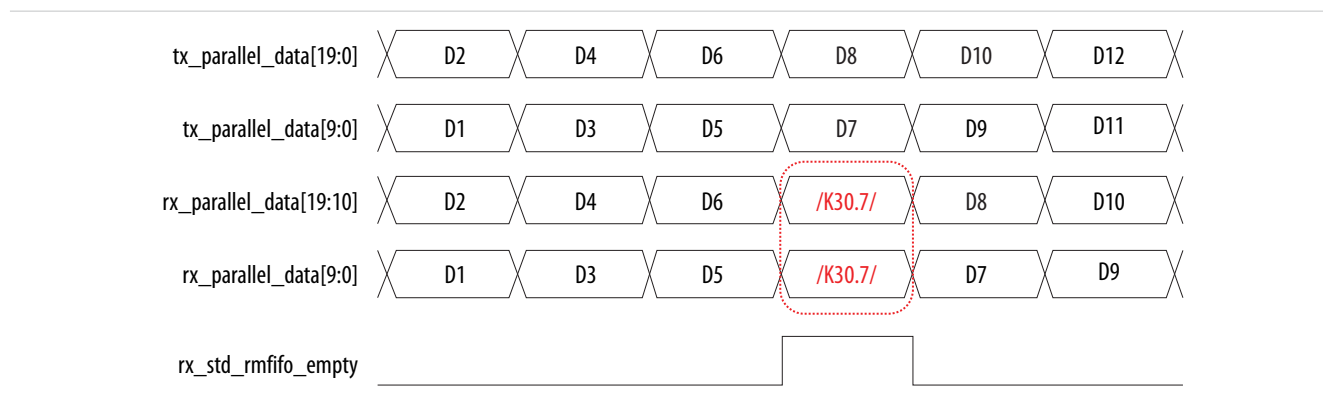Figure 2-127: Rate Match FIFO Becoming Full After Receiving the 20-Bit Word D5D6**Figure 2-128: Rate Match FIFO Becoming Empty After Reading out the 20-Bit Word D5D6**

8B/10B Encoder and Decoder

To enable the 8B/10B Encoder and the 8B/10B Decoder, select the **Enable TX 8B/10B Encoder** and **Enable RX 8B/10B Decoder** options on the **Standard PCS** tab in the IP Editor. The following ports are added:

- tx_dataak
- rx_dataak
- rx_runningdisp
- rx_dispersr
- rx_errdetect

rx_dataak and tx_dataak indicate whether the parallel data is a control word or a data word. The incoming 8-bit data (tx_parallel_data) and the control identifier (tx_dataak) are converted into a 10-bit data. After a power on reset, the 8B/10B encoder takes the 10-bit data from the RD- column. Next, the encoder chooses the 10-bit data from the RD+ column to maintain neutral disparity. The running disparity is shown by rx_runningdisp.

8B/10B TX Disparity Control


The Disparity Control feature controls the running disparity of the output from the 8B/10B Decoder.

To enable TX Disparity Control, select the **Enable TX 8B/10B Disparity Control** option. The following ports are added:

- `tx_forcedisp`—a control signal that indicates whether a disparity value has to be forced or not
- `tx_dispval`—a signal that indicates the value of the running disparity that is being forced

When the number of data channels is more than 1, `tx_forcedisp` and `tx_dispval` are shown as buses in which each bit corresponds to one channel.

The following figure shows the current running disparity being altered in Basic single-width mode by forcing a positive disparity /K28.5/ when it was supposed to be a negative disparity /K28.5/. In this example, a series of /K28.5/ code groups are continuously being sent. The stream alternates between a positive running disparity (RD+) /K28.5/ and a negative running disparity (RD-) /K28.5/ to maintain a neutral overall disparity. The current running disparity at time $n + 3$ indicates that the /K28.5/ in time $n + 4$ should be encoded with a negative disparity. Because `tx_forcedisp` is high at time $n + 4$, and `tx_dispval` is low, the /K28.5/ at time $n + 4$ is encoded as a positive disparity code group.

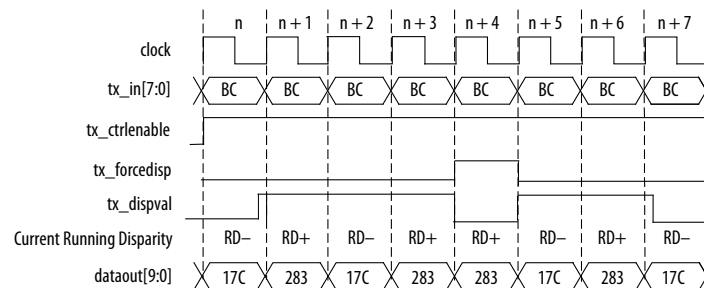

How to Enable Low Latency in Basic

In the Arria 10 Transceiver Native PHY IP Parameter Editor, use the following settings to enable low latency:

1. Select the **Enable 'Standard PCS' low latency mode** option.
2. Select either **low_latency** or **register FIFO** in the **TX FIFO mode** list.
3. Select either **low_latency** or **register FIFO** in the **RX FIFO mode** list.
4. Select either **Disabled** or **Serialize x2** in the **TX byte serializer mode** list.
5. Select either **Disabled** or **Serialize x2** in the **RX byte deserializer mode** list.
6. Ensure that **RX rate match FIFO mode** is **disabled**.
7. Set the **RX word aligner mode** to **bitslip**.
8. Set the **RX word aligner pattern length** to 7 or 16.

Note: TX bitslip, RX bitslip, bit reversal, and polarity inversion modes are supported.

TX Bit Slip

To use the TX bit slip, select the **Enable TX bitslip** and **Enable tx_std_bitslipboundarysel port** options. This adds the `tx_std_bitslipboundarysel` input port. The TX PCS automatically slips the number of bits specified by `tx_std_bitslipboundarysel`. There is no port for TX bit slip. If there is more than one channel in the design, `tx_std_bitslipboundarysel` port becomes a bus in which each bit corresponds to one channel. You can verify this feature by monitoring the `tx_parallel_data` port.

The TX bit slip feature is optional and may or may not be enabled.

Figure 2-129: TX Bit Slip in 8-bit Mode

tx_parallel_data = 8'hbc. tx_std_bitslipboundarysel = 5'b00001(bit slip by 1 bit).

tx_std_bitslipboundarysel	00001
tx_parallel_data	bc
rx_parallel_data	5e

Figure 2-130: TX Bit Slip in 10-bit Mode

tx_parallel_data = 10'h3bc. tx_std_bitslipboundarysel = 5'b00011(bit slip by 3 bits).

tx_std_bitslipboundarysel	00011
tx_parallel_data	3bc
rx_parallel_data	1e7

Figure 2-131: TX Bit Slip in 16-bit Mode

tx_parallel_data = 16'hfcbc. tx_std_bitslipboundarysel = 5'b00011(bit slip by 3 bits).

tx_std_bitslipboundarysel	00011
tx_parallel_data	fcbc
rx_parallel_data	79f9

Figure 2-132: TX Bit Slip in 20-bit Mode

tx_parallel_data = 20'h3FCBC. tx_std_bitslipboundarysel = 5'b00111 (bit slip by 7 bits)

tx_std_bitslipboundarysel	00111
tx_parallel_data	f3bc
rx_parallel_data	e5e1f

TX Polarity Inversion

Transmitter polarity inversion can be enabled in low latency, basic, and basic rate match modes; whereas, the word aligner is available in any mode.

To enable the TX polarity inversion feature, select the **Enable TX polarity inversion** and **Enable tx_polinv port** options.

This mode adds tx_polinv. If there is more than one channel in the design, tx_polinv is a bus with each bit corresponding to a channel. As long as tx_polinv is asserted, the TX data transmitted has a reverse polarity.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-133: TX Polarity Inversion

tx_polinvs	
tx_parallel_data	11111100001110111100
rx_parallel_data	0000000... 111111000011101... 00000011110001000011 11111100001110111100
rx_patterndetect	00 01
rx_syncstatus	00 11

TX Bit Reversal

The TX bit reversal feature can be enabled in low latency, basic, and basic rate match mode; whereas, the word aligner is available in any mode. This feature is parameter-based, and creates no additional ports. If there is more than one channel in the design, all channels have TX bit reversal.

To enable this feature, select the **Enable TX bit reversal** option.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-134: TX Bit Reversal

tx_parallel_data	11111100001110111100
rx_parallel_data	00000... 00111101110000111111

TX Byte Reversal

The TX byte reversal feature can be enabled in low latency, basic, and basic rate match mode; whereas, the word aligner is available in any mode. This feature is parameter-based, and creates no additional ports. If there is more than one channel in the design, all channels have TX byte reversal.

To enable this feature, select the **Enable TX byte reversal** option.

You can verify this feature by monitoring rx_parallel_data.

Figure 2-135: TX Byte Reversal

tx_parallel_data	11111100001110111100
rx_parallel_data	00000000... 11101111001111110000

How to Implement the Basic, Basic with Rate Match Transceiver Configuration Rules in Arria 10 Transceivers

Before you begin


You should be familiar with the Standard PCS and PMA architecture, PLL architecture, and the reset controller before implementing your Basic protocol IP.

1. Open the IP Catalog and select the PHY IP.

Refer to [Select and Instantiate PHY IP Core](#) on page 2-2.

2. Select **Basic/Custom (Standard PCS)** or **Basic/Custom w/Rate Match (Standard PCS)** from the **Transceiver configuration rules** list located under **Datapath Options** depending on which configuration you want to use.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for Basic, Basic with Rate Match Configurations](#) as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the setting to meet your specific requirements.
4. Click **Finish** to generate the Native PHY IP (this is your RTL file).

Figure 2-136: Signals and Ports of Native PHY IP for Basic, Basic with Rate Match Configurations

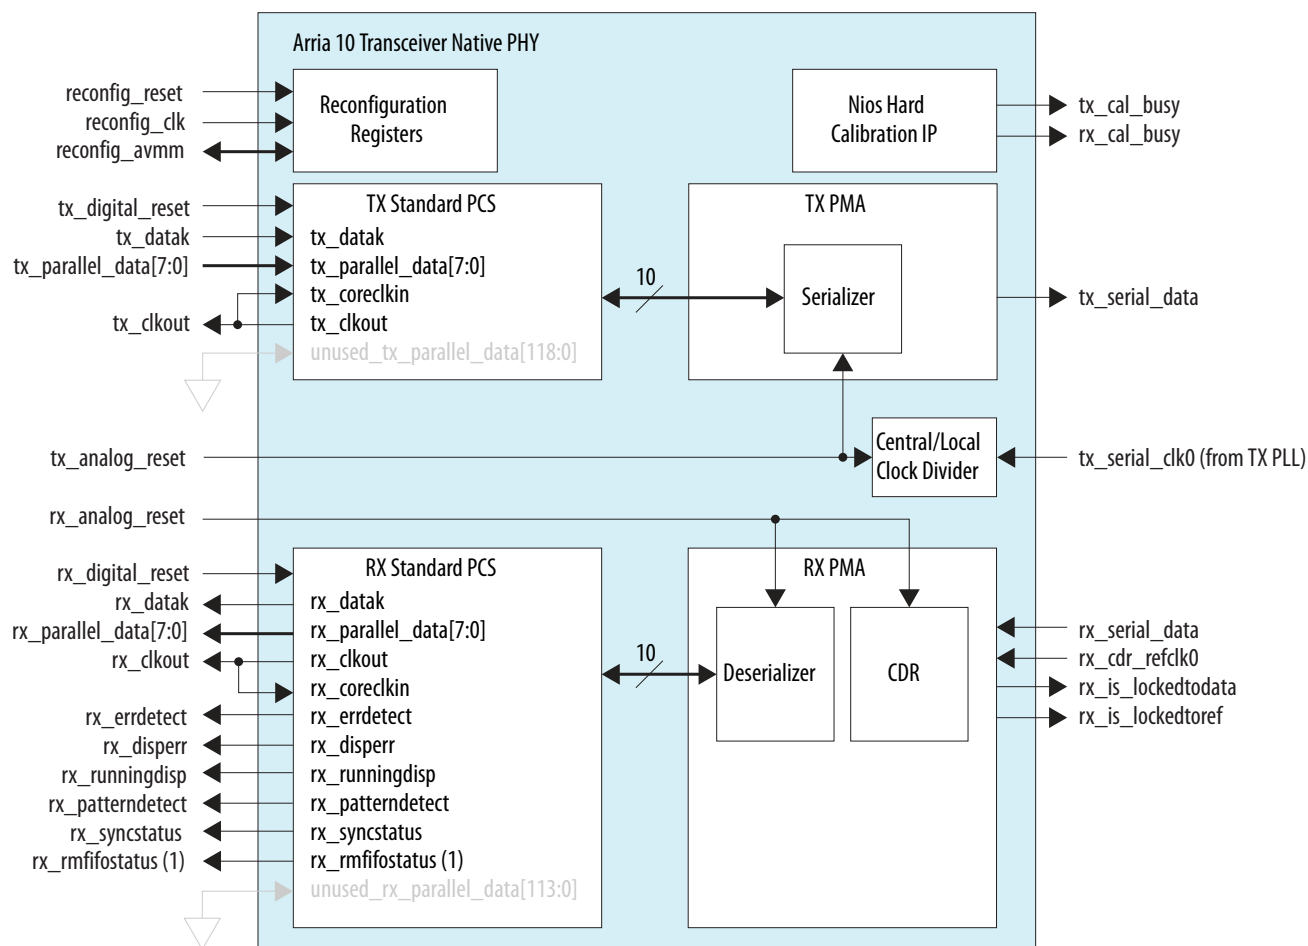


Note:

1. Only applies when using the Basic with Rate Match transceiver configuration rule.

5. Instantiate and configure your PLL.
6. Create a transceiver reset controller.
7. Connect the Native PHY IP to the PLL IP and the reset controller. Use the information in [Native PHY IP Parameter Settings for Basic, Basic with Rate Match Configurations](#) to connect the ports.

Figure 2-137: Connection Guidelines for a Basic/Custom Design

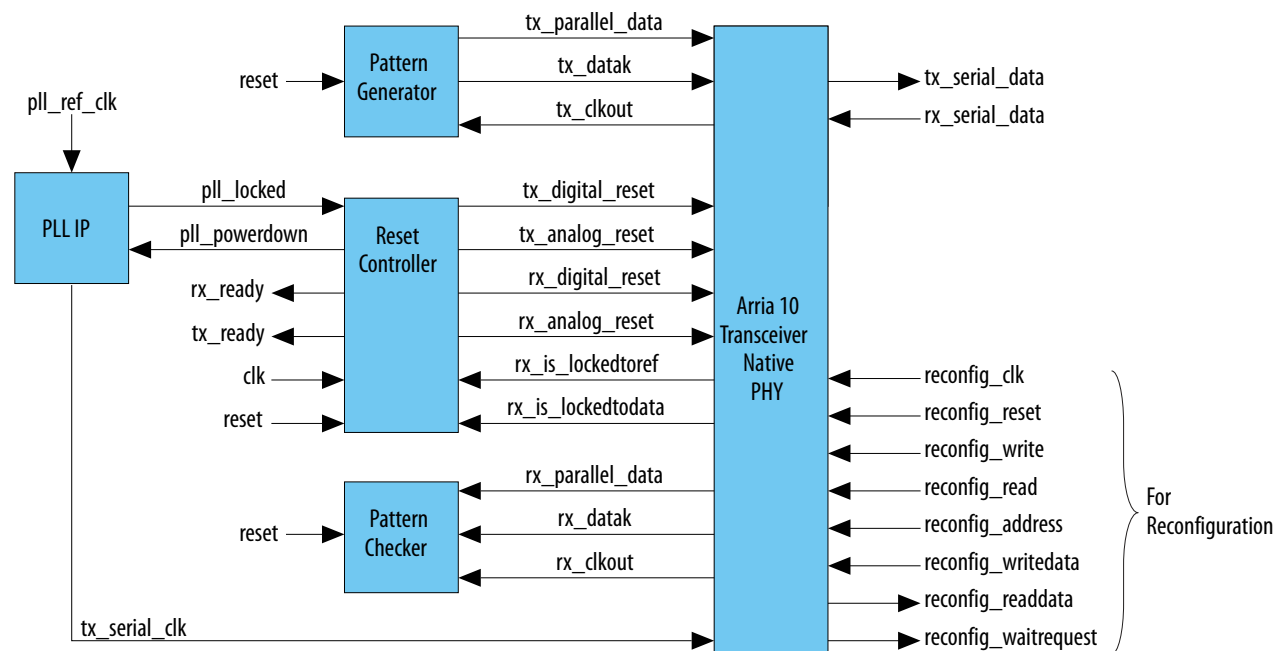

8. Simulate your design to verify its functionality.

Related Information

- [Arria 10 Standard PCS Architecture](#) on page 5-35
For more information about Standard PCS architecture
- [Arria 10 PMA Architecture](#) on page 5-1
For more information about PMA architecture
- [Using PLLs and Clock Networks](#) on page 3-49
For more information about implementing PLLs and clocks
- [PLLs](#) on page 3-3
PLL architecture and implementation details
- [Resetting Transceiver Channels](#) on page 4-1
Reset controller general information and implementation details
- [Standard PCS Ports](#) on page 2-66
Port definitions for the Transceiver Native PHY Standard Datapath

Native PHY IP Parameter Settings for Basic, Basic with Rate Match Configurations

Table 2-180: General and Datapath Options Parameters

Parameter	Range
Message level for rule violations	error warning

Parameter	Range
Transceiver configuration rules	Basic/Custom (Standard PCS) Basic/Custom w/Rate Match (Standard PCS)
PMA configuration rules	basic
Transceiver mode	TX/RX Duplex TX Simplex RX Simplex
Number of data channels	1 to 96
Data rate	1 Gbps to 28.3 Gbps
Enable datapath and interface reconfiguration	On/Off
Enable simplified data interface	On/Off

Table 2-181: TX PMA Parameters

Parameter	Range
TX channel bonding mode	Not bonded PMA-only bonding PMA and PCS bonding
PCS TX channel bonding master	Auto, n-1 (where n = the number of data channels)
Actual PCS TX channel bonding master	n-1 (where n = the number of data channels)
TX local clock division factor	1, 2, 4, 8
Number of TX PLL clock inputs per channel	1, 2, 3, 4
Initial TX PLL clock input selection	0 (Depends on the Number of TX PLL clock inputs per channel value)
Enable tx_pma_clkout port	On/Off
Enable tx_pma_div_clkout port	On/Off
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable tx_pma_elecidle port	On/Off
Enable tx_pma_qpipullup port (QPI)	On/Off
Enable tx_pma_qpipulldn port (QPI)	On/Off

Parameter	Range
Enable tx_pma_txdetectrx port (QPI)	On/Off
Enable tx_pma_rxfound port (QPI)	On/Off
Enable rx_serialpbken port	On/Off

Table 2-182: RX PMA Parameters

Parameter	Range
Number of CDR reference clocks	1, 2, 3, 4, 5
Selected CDR reference clock	0, 1, 2, 3, 4
Selected CDR reference clock frequency	Legal range defined by Quartus II
PPM detector threshold	100, 300, 500, 1000
CTLE adaptation mode	manual, triggered
DFE adaptation mode	disabled
Number of fixed dfe taps	3, 7
Enable rx_pma_clkout port	On/Off
Enable rx_pma_div_clkout port	On/Off
rx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 50, 66
Enable rx_pma_clkslip port	On/Off
Enable rx_pma_qpipulldn port (QPI)	On/Off
Enable rx_is_lockedtodata port	On/Off
Enable rx_is_lockedtoref port	On/Off
Enable rx_set_locktodata and rx_set_locktoref ports	On/Off
Enable rx_serialpbken port	On/Off
Enable PRBS verifier control and status ports	On/Off

Table 2-183: Standard PCS Parameters

Parameter	Range
Standard PCS / PMA interface width	8, 10, 16, 20
FPGA fabric / Standard TX PCS interface width	8, 10, 16, 20, 32, 40
FPGA fabric / Standard RX PCS interface width	8, 10, 16, 20, 32, 40
Enable 'Standard PCS' low latency mode	On/Off Off (for Basic with Rate Match)

Parameter	Range
TX FIFO mode	low_latency register_fifo fast_register
RX FIFO Mode	low_latency register_fifo
Enable tx_std_pcfifo_full port	On/Off
Enable tx_std_pcfifo_empty port	On/Off
Enable rx_std_pcfifo_full port	On/Off
Enable rx_std_pcfifo_empty port	On/Off
TX byte serializer mode	Disabled Serialize x2 Serialize x4
RX byte deserializer mode	Disabled Deserialize x2 Deserialize x4
Enable TX 8B/10B encoder	On/Off
Enable TX 8B/10B disparity control	On/Off
Enable RX 8B/10B decoder	On/Off
RX rate match FIFO mode	Disabled Basic 10-bit PMA (for Basic with Rate Match) Basic 20-bit PMA (for Basic with Rate Match)
RX rate match insert/delete -ve pattern (hex)	User-defined value
RX rate match insert/delete +ve pattern (hex)	User-defined value
Enable rx_std_rmfifo_full port	On/Off
Enable rx_std_rmfifo_empty port	On/Off
PCI Express Gen 3 rate match FIFO mode	Bypass
Enable TX bit slip	On/Off
Enable tx_std_bitslipboundarysel port	On/Off

Parameter	Range
RX word aligner mode	bitslip manual (PLD controlled) synchronous state machine
RX word aligner pattern length	7, 8, 10, 16, 20, 32, 40
RX word aligner pattern (hex)	User-defined value
Number of word alignment patterns to achieve sync	0-255
Number of invalid data words to lose sync	0-63
Number of valid data words to decrement error count	0-255
Enable fast sync status reporting for deterministic latency SM	On/Off
Enable rx_std_wa_patternalign port	On/Off
Enable rx_std_wa_a1a2size port	On/Off
Enable rx_std_bitslipboundarysel port	On/Off
Enable rx_bitslip port	On/Off
Enable TX bit reversal	On/Off
Enable TX byte reversal	On/Off
Enable TX polarity inversion	On/Off
Enable tx_polinv port	On/Off
Enable RX bit reversal	On/Off
Enable rx_std_bitrev_ena port	On/Off
Enable RX byte reversal	On/Off
Enable rx_std_bytrev_ena port	On/Off
Enable RX polarity inversion	On/Off
Enable rx_polinv port	On/Off
Enable rx_std_signaldetect port	On/Off
Enable PCIe dynamic datarate switch ports	Off
Enable PCIe pipe_hclk_in and pipe_hclk_out ports	Off
Enable PCIe Gen 3 analog control ports	Off
Enable PCIe electrical idle control and status ports	Off
Enable PCIe pipe_rx_polarity port	Off

Table 2-184: Dynamic Reconfiguration Parameters

Parameter	Range
Enable dynamic reconfiguration	On/Off
Share reconfiguration interface	On/Off
Enable Altera Debug Master Endpoint	On/Off

Table 2-185: Generation Options Parameters

Parameter	Range
Generate parameter documentation file	On/Off

Design Considerations for Data Rates Above 17.4 Gbps Using Arria 10 GT Channels

This section provides information on using the Arria 10 GT transceiver channels to achieve data rates from 17.4 to 28.3 Gbps. Arria 10 GT transceiver channels are used to implement data rates above 17.4 Gbps.

GT channels can be used in Enhanced PCS Low Latency mode to support data rates from 17.4 Gbps to 28.3 Gbps. GT channels can also operate in PCS-Direct configuration for data rates up to 28.3 Gbps. When GT channels are used in PCS-Direct configuration, the PCS blocks are bypassed. The serializer / deserializer in GT channels supports 64 bit and 128 bit serialization factors.

Arria 10 GT Channel Usage

All Arria 10 GT devices have a total of 16 GT transceiver channels that can support data rates up to 28.3 Gbps.

In Arria 10 GT devices, each transceiver bank supports up to 4 GT channels that can operate as a duplex channel, TX only, or RX only channel. Transceiver banks GXBL1E, GXBL1F, GXBL1G, and GXBL1H each contain four GT transceiver channels - 0, 1, 3 and 4. Channels 2 and 5 can only be configured as GX transceiver channels.

Table 2-186: Valid Permutations for GT and GX Channel Configuration in Transceiver Banks GXBL1E, GXBL1F, GXBL1G, and GXBL1H for Channels 0, 1, and 2

GT Transceiver Channel	Configuration A	Configuration B	Configuration C	Configuration D	Configuration E	Configuration F
Ch2	Unusable	Unusable	Unusable	GX	GX	GX
Ch1	GT	GT	GX	Unusable	GT	GX
Ch0	GT	GX	GT	GT	Unusable	GX

Notes on grouping channels Ch0, Ch1, and Ch2:

- If channels 0 and 1 are configured as GT channels, channel 2 is unusable.
- If either channel 0 or 1 is configured as a GT channel, only one other channel can be used in this grouping.
- If channels 0 and 1 are not configured as GT channels, this grouping can be all configured as GX channels.
- If either channel 0 or 1 is used as a GT channel, then the ATX PLL adjacent to channel 0 and 1 must be reserved for GT channel configurations.

Table 2-187: Valid Permutations for GT and GX Channel Configuration in Transceiver Banks GXBL1E, GXBL1F, GXBL1G, and GXBL1H for Channels 3, 4, and 5

GT Transceiver Channel	Configuration A	Configuration B	Configuration C	Configuration D	Configuration E	Configuration F
Ch5	Unusable	Unusable	Unusable	GX	GX	GX
Ch4	GT	GT	GX	Unusable	GT	GX
Ch3	GT	GX	GT	GT	Unusable	GX

Notes on grouping channels Ch3, Ch4, and Ch5:

- If channels 3 and 4 are configured as GT channels, channel 5 is unusable.
- If either channel 3 or 4 is configured as a GT channel, only one other channel can be used in this grouping.
- If channels 3 and 4 are not configured as GT channels, this grouping can be all configured as GX channels.
- If either channel 3 or 4 is used as a GT channel, then the ATX PLL adjacent to channel 3 and 4 must be reserved for GT channel configurations.

Transceiver PHY IP

Arria 10 GT transceiver channels are implemented using the Native PHY IP with the Basic (Enhanced PCS) transceiver configuration rule.


- To support data rates from 17.4 Gbps to 28.3 Gbps, the Enhanced PCS must be configured in low latency mode. To configure the Enhanced PCS in low latency mode, do not enable any functional blocks in the Enhanced PCS (that is, disable Block Synchronizer, Gearbox, Scrambler, and Encoder).
- You can also use the PCS-Direct mode, for data rates from 17.4 Gbps to 28.3 Gbps.

You can bundle several GT transceiver channels with one Native PHY IP instantiation, but you must instantiate a separate ATX PLL IP for every ATX PLL used.

PLL and GT Transceiver Channel Clock Lines

The ATX PLL is used to provide the clock source for the GT transceiver channels. Each ATX PLL has two dedicated GT clock lines which connect the PLL directly to the GT transceiver channels within a transceiver bank. The top ATX PLL drives channels 3 and 4, and the bottom ATX PLL drives channels 0 and 1. These connections bypass the rest of the clock network for higher performance.

Figure 2-138: GT Channel Configuration

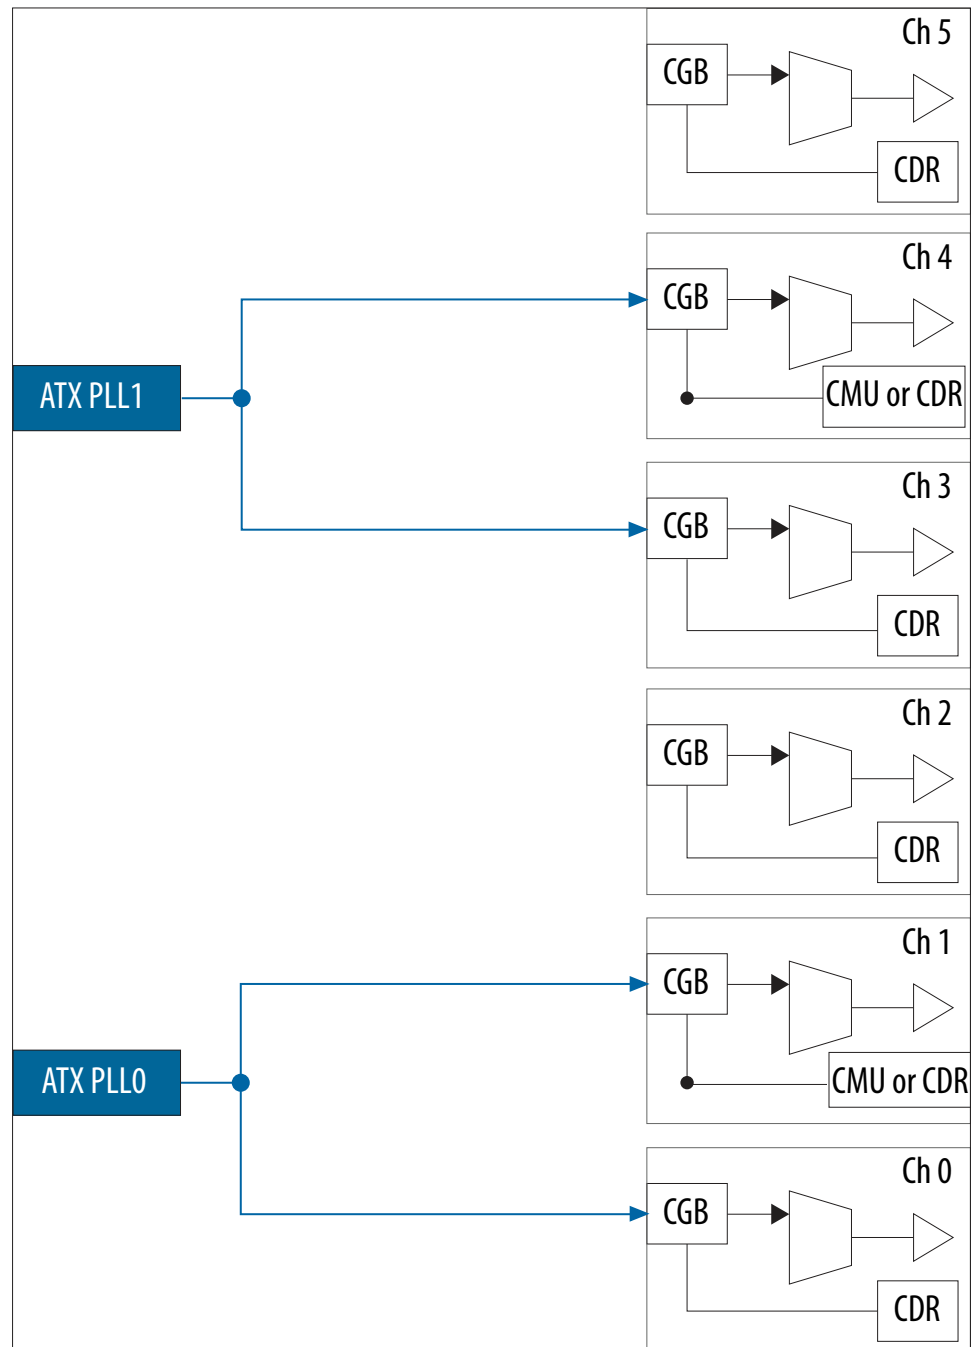

When both the channels 0 and 1 are configured as GT channels, they are driven by the same ATX PLL and have to be configured to run at the same data rates. This is also true for channels 3 and 4 when they are configured as GT channels.

Skew is expected between GT channels and the exact values are pending device characterization. Currently, GT channel bonding is not supported.

Reset Controller

Each GT channel instantiated will have independent analog and digital reset ports. Refer to the *Resetting Transceiver Channels* chapter for more details on designing a reset controller to reset these ports.

Related Information

[Resetting Transceiver Channels](#) on page 4-1

Reset controller general information and implementation details

Native PHY IP Parameter Settings for PCS Direct Transceiver Configuration Rules

Table 2-188: General and Datapath Parameters

Parameter	Range
Message level for rule violations	error warning
Transceiver configuration rules	PCS Direct
PMA configuration rules	basic, QPI
Transceiver mode	TX/RX Duplex TX Simplex RX Simplex
Number of data channels	1 to 96
Data rate	1 Gbps to 28.3 Gbps
Enable datapath and interface reconfiguration	On / Off
Enable simplified data interface	On / Off

Table 2-189: TX PMA Parameters

Parameter	Range
TX channel bonding mode	Not bonded PMA only bonding (For PCS Direct, you cannot select PMA and PCS bonding mode.)
TX local clock division factor	1, 2, 4, 8
Number of TX PLL clock inputs per channel	1, 2, 3, 4
Initial TX PLL clock input selection	0, 1, 2, 3

Parameter	Range
Enable tx_pma_clkout port	On / Off
Enable tx_pma_div_clkout port	On / Off
tx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable tx_pma_elecidle port	On / Off
Enable tx_pma_qpipullup port (QPI)	On / Off
Enable tx_pma_qpipulldn port (QPI)	On / Off
Enable tx_pma_txdetectrx port (QPI)	On / Off
Enable tx_pma_rxfound port (QPI)	On / Off
Enable rx_serialpbken port	On / Off

Table 2-190: RX PMA Parameters

Parameter	Range
Number of CDR reference clocks	1 to 5
Selected CDR reference clock	0 to 4
Selected CDR reference clock frequency	Depends on the data rate
PPM detector threshold	100, 300, 500, 1000
CTLE adaptation mode	manual, triggered
DFE adaptation mode	continuous, triggered, manual, disabled
Number of fixed dfe taps	3, 7
Enable rx_pma_clkout port	On / Off
Enable rx_pma_div_clkout port	On / Off
rx_pma_div_clkout division factor	Disabled, 1, 2, 33, 40, 66
Enable rx_pma_clkslip port	On / Off
Enable rx_pma_qpipulldn port (QPI)	On / Off
Enable rx_is_lockedto data port	On / Off

Parameter	Range
Enable rx_is_lockedto ref port	On / Off
Enable rx_set_lockto data and rx_set_lockto ref ports	On / Off
Enable rx_serialpbken port	On / Off
Enable PRBS verifier control and status ports	On / Off

Table 2-191: PCS Direct Datapath Parameters

Parameter	Range
PCS Direct interface width	8, 10, 16, 20, 32, 40, 64


Table 2-192: Dynamic Reconfiguration Parameters

Parameter	Range
Enable dynamic reconfiguration	On / Off
Share reconfiguration interface	On / Off
Enable Altera Debug Master Endpoint	On / Off
Enable embedded debug	On / Off
Enable capability registers	On / Off
Set user-defined IP identifier	number
Enable control and status registers	On / Off
Enable prbs soft accumulators	On / Off
Configuration file prefix	text string
Generate System Verilog package file	On / Off
Generate C header file	On / Off
Generate MIF (Memory Initialization File)	On / Off

Table 2-193: Generation Options Parameters

Parameter	Range
Generate parameter documentation file	On / Off

Figure 2-139: Connection Guidelines for a PCS Direct PHY Design

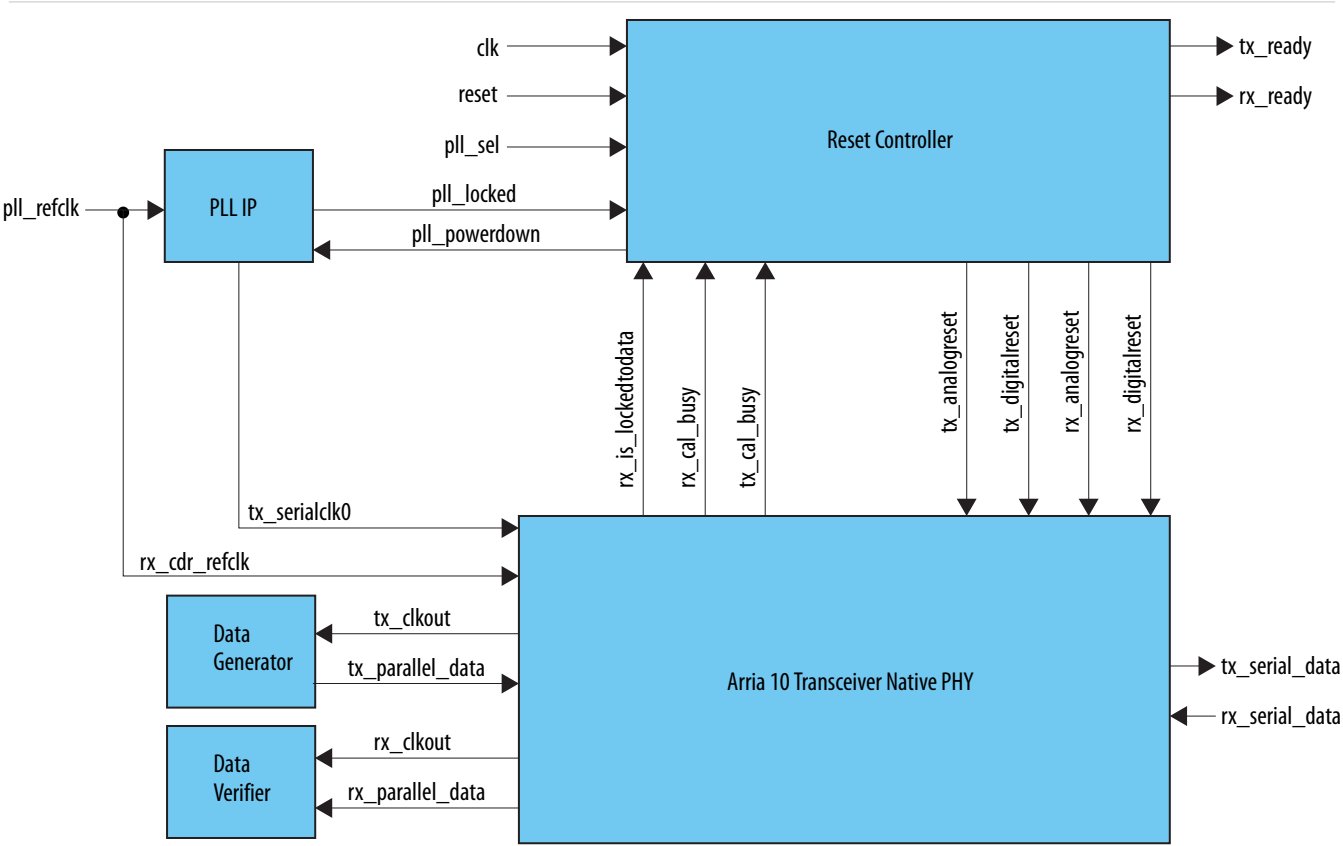


How to Implement Designs for Data Rates Above 17.4 Gbps Using Enhanced PCS in Low Latency Mode

Before you begin

- You should be familiar with the Enhanced PCS and PMA architecture, PLL architecture, and the reset controller.
1. Select **Tools > IP Catalog > Interface Protocols > Transceiver PHY > Arria 10 Transceiver Native PHY**. Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for detailed steps.
 2. Select **Basic (Enhanced PCS)** from the **Transceiver configuration rules** list located under **Datapath Options**.
 3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for Basic \(Enhanced PCS\) and Basic with KR FEC](#) for each input of the Arria 10 Transceiver Native PHY Parameter Editor as a starting point. Or, you can use the protocol presets described in [Presets](#). You can then modify the settings to meet your specific requirements.

- Ensure that the data rate is between 17400 and 28100 Mbps. Select a CDR reference clock to match your data rate.
- Set the Enhanced PCS / PMA interface width to 64 bits.
- Set the FPGA Fabric / Enhanced PCS interface width to 64 bits.
- You can enable RX/TX FIFO double width mode to create a FPGA fabric / PCS interface width of 128 bits.
- Click **Finish** to generate the Native PHY IP (this is your RTL file).

Figure 2-140: Signals and Ports of the Native PHY for Basic (Enhanced PCS) Transceiver Configuration Rule for Data Rates Above 17.4 Gbps and FPGA Fabric / PCS Interface width of 128 bits

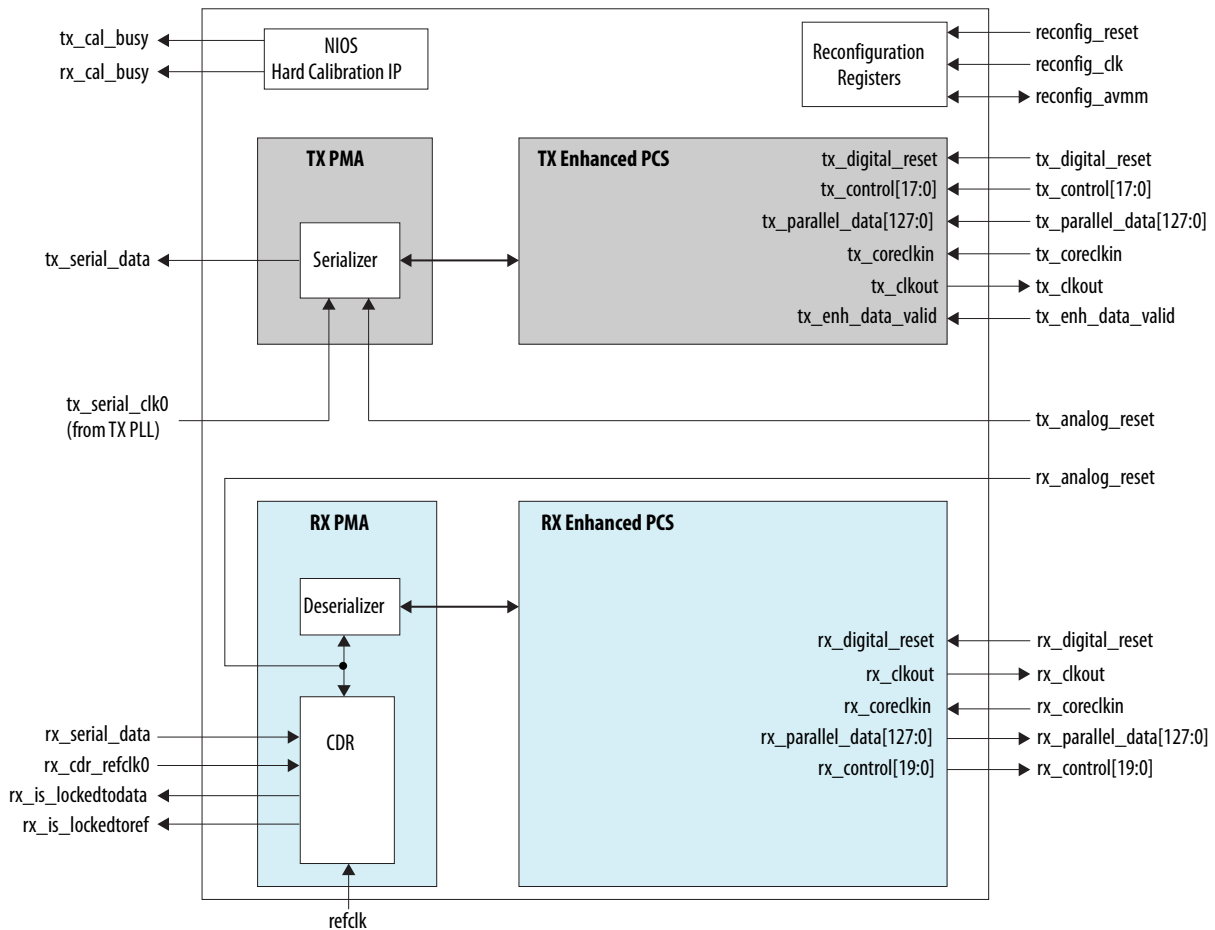


Note: For GT transceiver channels, all the individual functional blocks within the enhanced PCS are not enabled (and are bypassed) to provide the lowest latency PCS from the PMA. `rx_control` and `tx_control` ports are not used.

4. Select **Tools > IP Catalog > Basic Functions > Clocks > PLLs and Resets > PLL > Arria 10 Transceiver ATX PLL**. Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 for detailed steps.
5. Configure the ATX PLL IP using the Parameter Editor.

- Select the GT clock output buffer.
- Enable the PLL GT clock output port.
- Set the PLL output clock frequency to the Native PHY IP recommended frequency.

Figure 2-141: ATX PLL IP with GT Clock Lines Enabled

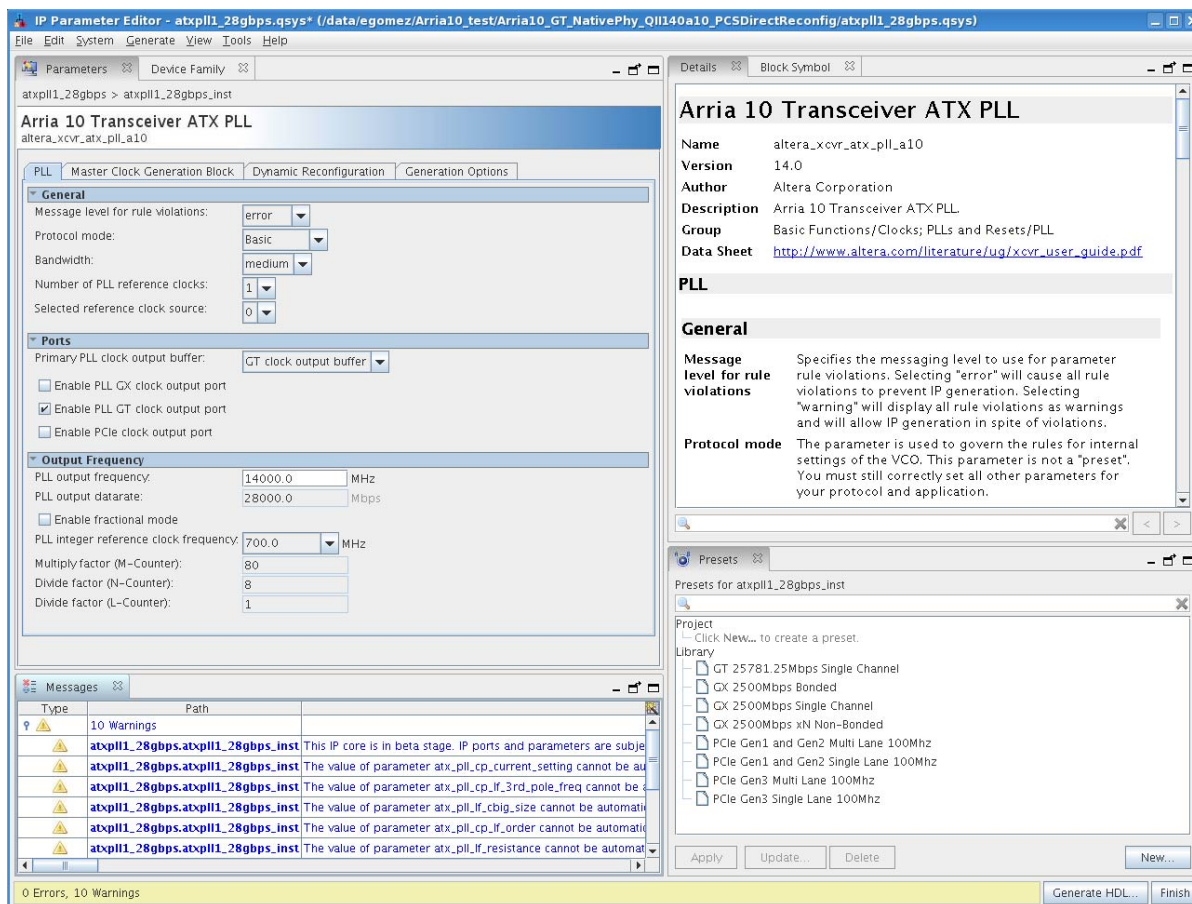

6. Create a transceiver reset controller. Refer to [Resetting Transceiver Channels](#) on page 4-1 for more details about configuring the reset IP.
7. Connect the Native PHY IP to the PLL IP and the reset controller.

The ATX PLL's port `tx_serial_clk_gt` represents the dedicated GT clock lines. Connect this port to the Native PHY IP's `tx_serial_clk0` port. The Quartus II software will automatically use the dedicated GT clocks instead of the x1 clock network.


How to Implement PCS Direct Transceiver Configuration Rule

Before you begin

You should be familiar with PCS Direct architecture, PMA architecture, PLL architecture, and the reset controller before implementing PCS Direct Transceiver Configuration Rule.

1. Open the IP Catalog and select **Arria 10 Transceiver Native PHY IP**. Refer to [Select and Instantiate PHY IP Core](#) on page 2-2 for detailed steps.
2. Select **PCS Direct** from the **Transceiver configuration rules** list located under **Datapath Options**.
3. Use the parameter values in the tables in [Native PHY IP Parameter Settings for Basic \(Enhanced PCS\) and Basic with KR FEC](#) as a starting point to configure your Native PHY IP.
4. Click **Generate** to generate the Native PHY IP (this is your RTL file).
5. Instantiate and configure your PLL.
6. Create a transceiver reset controller. You can use your own controller or use the Altera Transceiver PHY Reset Controller IP.
7. Connect the Native PHY IP to the PLL IP and the reset controller.

Figure 2-142: Connection Guidelines for a PCS Direct PHY Design

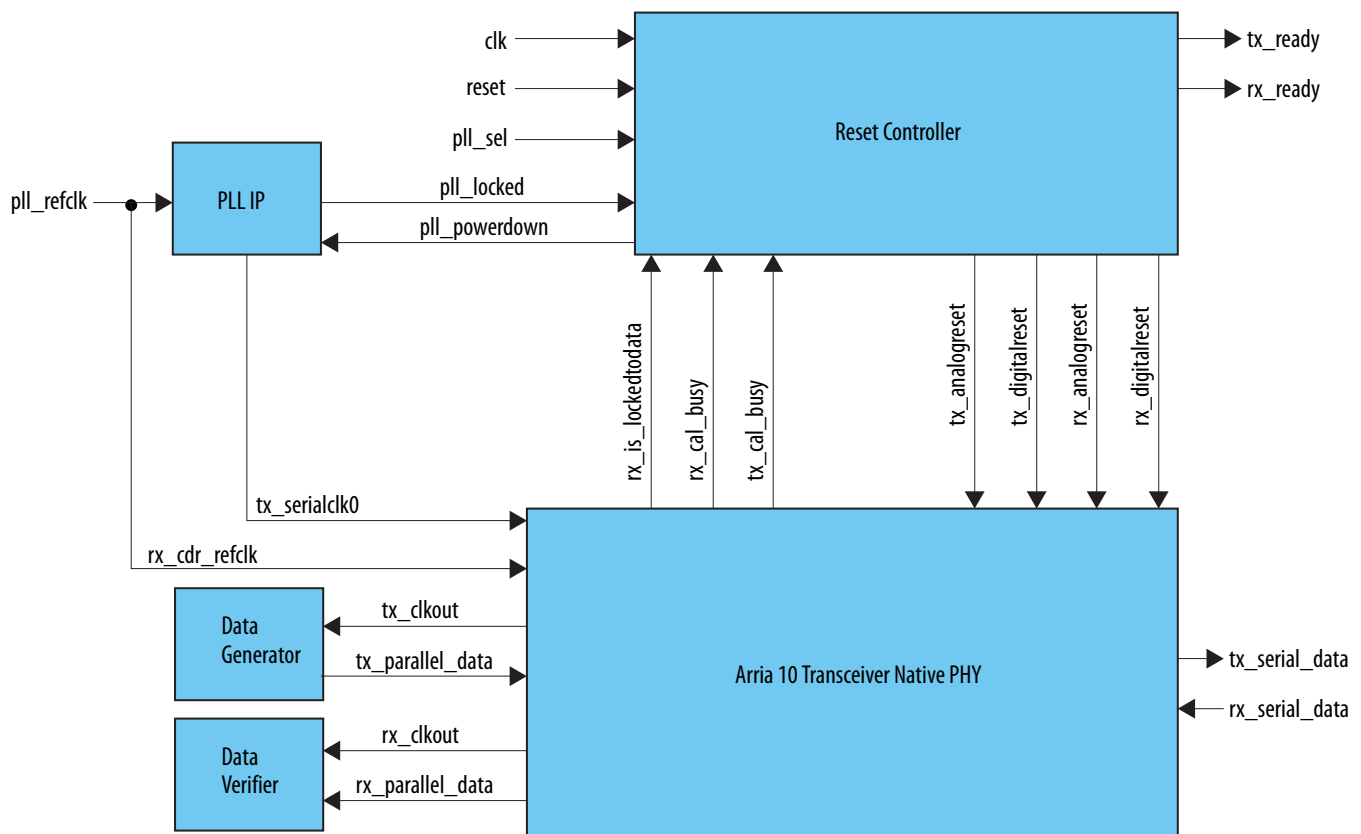

8. Simulate your design to verify its functionality.

Simulating the Transceiver Native PHY IP Core

Use simulation to verify the Native PHY transceiver functionality. The Quartus II software supports register transfer level (RTL) and gate-level simulation in both ModelSim®-Altera® and third-party simulators. You run simulations using your Quartus II project files.

The following simulation flows are available:

- NativeLink with ModelSim-Altera—This flow simplifies simulation by allowing you to start a simulation from the Quartus II software. This flow automatically creates a simulation script and compiles design files, IP simulation model files, and Altera simulation library models.
- Custom Flow—This flow allows you to customize simulation for more complex requirements. You can use this flow to compile design files, IP simulation model files, and Altera simulation library models manually.

You can simulate the following netlists:

- The RTL functional netlist—This netlist provides cycle-accurate simulation using Verilog HDL, SystemVerilog, and VHDL design source code. Altera and third-party EDA vendors provide the simulation models.
- The post-synthesis gate-level functional netlist—This netlist verifies functionality after synthesis.

Note: Gate-level timing simulation is no longer supported.

Prerequisites to Simulation

Before you can simulate your design, you must have successfully passed Quartus II Analysis and Synthesis.

Related Information

[Simulating Altera Designs](#)

NativeLink Simulation Flow

The NativeLink settings available in the Quartus II software allow you to specify your simulation environment, simulation scripts, and test benches. The Quartus II software saves these settings in your project. After you specify the NativeLink settings, you can start simulations easily from the Quartus II software.

How to Use NativeLink to Specify a ModelSim-Altera Simulation

Complete the following steps to specify the directory path and test bench settings for your simulator:

1. On the **Tools** menu, click **Options**, and then click **EDA Tool Options**.
2. Browse to the directory for your simulator. The following table lists the directories for supported simulators:

Table 2-194: Simulator Path

Simulator	Path
Mentor Graphics ModelSim-Altera	<drive>:\<simulator install path>\win32aloem (Windows) /<simulator install path>/bin (Linux)


3. On the **Assignments** menu, click **Settings**.
4. In the **Category** list, under **EDA Tool Settings** select **Simulation**.
5. In the **Tool name** list, select your simulator.

Note: ModelSim refers to ModelSim SE and PE. These simulators use the same commands as QuestaSim. ModelSim-Altera refers to ModelSim-Altera Starter Edition and ModelSim-Altera Subscription Edition.

6. In the **Output directory**, browse to the directory for your output files.
7. To map illegal HDL characters, turn on **Map illegal HDL characters**.
8. To filter netlist glitches, turn on **Enable glitch filtering**.
9. Complete the following steps to specify additional options for NativeLink automation:
 - a. Turn on **Compile test bench**.
 - b. Click **Test Benches**.
The **Test Benches** dialog box appears.
 - c. Click **New**.
 - d. Under **Create new test bench settings**, for **Test bench name** type the test bench name. For Top level module in the test bench, type the top-level module name. These names should match the actual test bench module names.
 - e. Select **Use test bench to perform VHDL timing simulation** and specify the name of your design instance under **Design instance name in test bench**.
 - f. Under the **Simulation period**, turn on **Run simulation until all vector stimuli are used**.
 - g. Under **Test bench and simulation files**, select your test bench file from your folder. Click **Add**.
 - h. Click **OK**.

How to Use NativeLink to Run a ModelSim-Altera RTL Simulation

Figure 2-143: NativeLink Simulation Flow Diagram

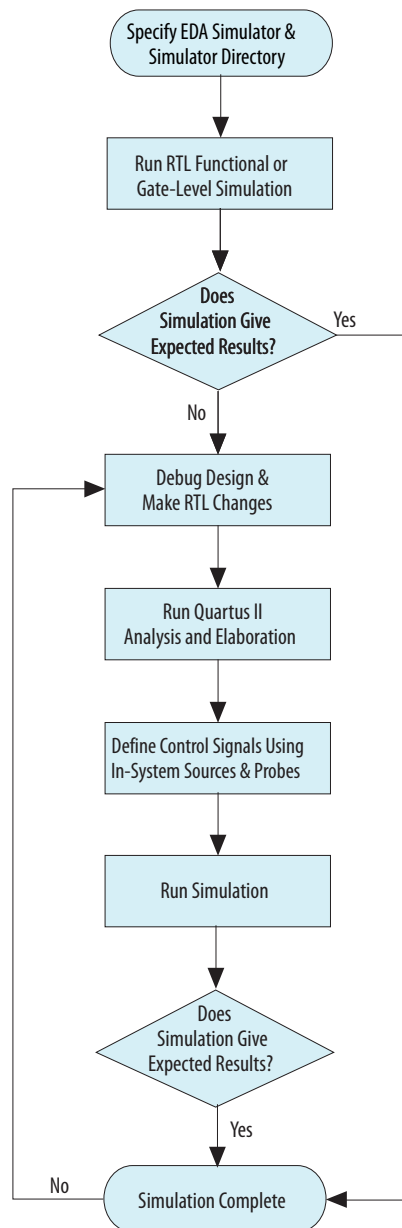

Complete the following steps to run an RTL functional simulation:

1. Open your Quartus II project.
2. On the Tools menu, select **Run Simulation Tool**, then select **RTL Simulation** or **Gate Level Simulation**.
3. Complete the following steps to define control signals necessary for simulation.
4. On the Tools menu, select **In-System Sources and Probes Editor**.

Note: To re-simulate after correcting errors, you must first rerun Quartus II Analysis and Elaboration and re-instantiate control signals that you defined using the In-System Sources and Probe Editor. The In-System Sources and Probe Editor can only access the pins of the device. Consequently, you must route any signal that you want to observe to the top-level of your design.

5. To monitor additional signals, highlight the desired instances or nodes in **Instance**, and right-click **Add wave**.
6. Select **Simulate** and then **Run**.
7. Specify the simulation duration.
8. Complete the following steps to restart the simulation:
 - a. On the ModelSim-Altera Simulate menu, select **restart**, then click **ok**.
This action clears the existing waves.
 - b. Highlight **run** and select the appropriate options to run the simulation.


Related Information

[Simulating the Transceiver Native PHY IP Core](#) on page 2-322

How to Use NativeLink to Specify Third-Party RTL Simulators

The following figure illustrates the high-level steps for using the NativeLink with Third-Party EDA RTL simulator.

Figure 2-144: Using NativeLink with Third-Party Simulators

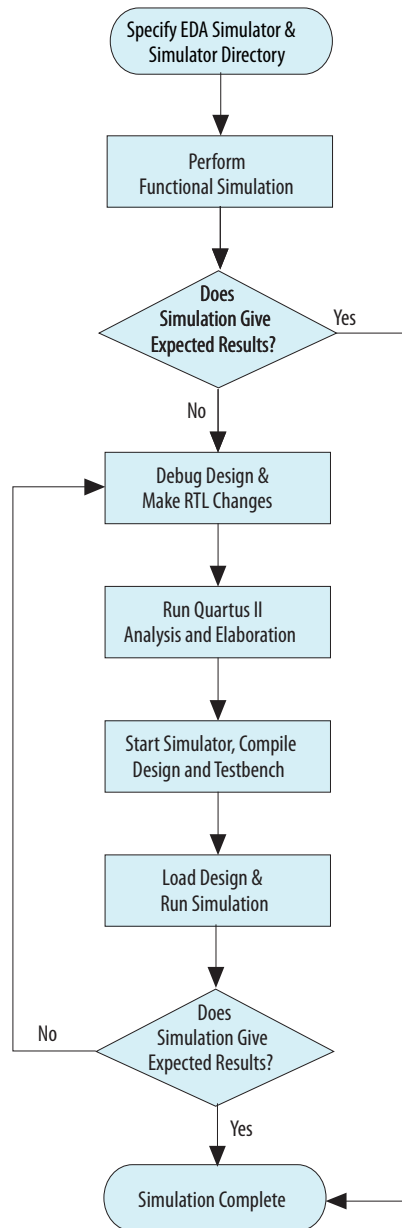

Complete the following steps to specify the directory path and test bench settings for your simulator:

1. On the **Tools** menu, click **Options**, and then click **EDA Tool Options**.
2. Browse to the directory for your simulator. The following table lists the directories for supported third-party simulators:

Table 2-195: Simulator Path

Simulator	Path
Mentor Graphics ModelSim Mentor Graphics QuestaSim	<drive>:\<simulator install path>\win32 (Windows) /<simulator install path>/bin (Linux)
Synopsys VCS/VCS MX	/<simulator install path>/bin (Linux)
Cadence Incisive Enterprise	/<simulator install path>/tools/bin (Linux)
Aldec Active-HDL Aldec Riviera-Pro	<drive>:\<simulator install path>\bin (Windows) /<simulator install path>/bin (Linux)

3. On Assignments menu, click **Settings**.
4. In the **Category** list, under **EDA Tool Settings**, select **Simulation**.
5. In the **Tool name** list, select your simulator.
6. To enable your simulator, on the **Tools** menu, click **Options** and then click **License Setup**. Make necessary changes for EDA tool licenses.
7. Compile your design and test bench files.
8. Load the design and run the simulation in the EDA tool.

To learn more about third-party simulators, click on the appropriate link below.

Related Information

- [Mentor Graphics ModelSim and QuestaSim Support](#)
- [Synopsys VCS and VCS MX Support](#)
- [Cadence Incisive Enterprise Simulator Support](#)
- [Aldec Active-HDL and Riviera-Pro Support](#)


Custom Simulation Flow

The custom simulation flow allows you to customize the simulation process for more complex simulation requirements. This flow allows you to control the following aspects of your design:

- Component binding
- Compilation order
- Run commands
- IP cores
- Simulation library model files

The following figure illustrates the steps for custom flow simulation. If you use a simulation script, you can automate some of the steps.

Figure 2-145: Custom flow Simulation

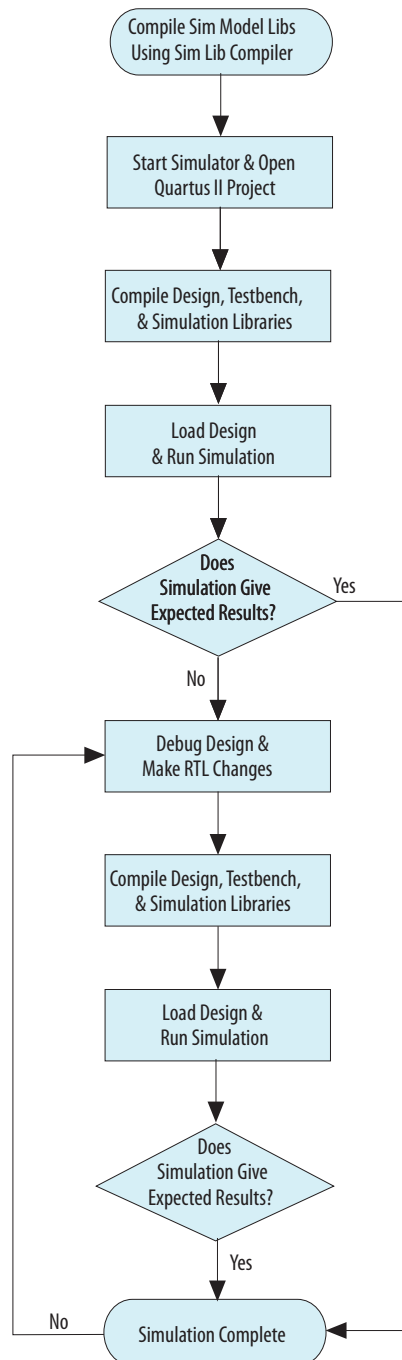

How to Use the Simulation Library Compiler

The Simulation Library Compiler compiles Altera simulation libraries for supported simulation tools, and saves the simulation files in the output directory you specify.

Note: Because the ModelSim-Altera software provides precompiled simulation libraries, you do not have to compile simulation libraries if you are using the ModelSim-Altera software.

Complete the following steps to compile the simulation model libraries using the Simulation Library Compiler:

1. On the Tools menu, click **Launch Simulation Library Compiler**.
2. Under **EDA simulation tool**, for the **Tool name**, select your simulation tool.
3. Under **Executable location**, browse to the location of the simulation tool you specified. You must specify this location before you can run the EDA Simulation Library Compiler.
4. Under **Library families**, select one or more family names and move them to the **Selected families** list.
5. Under **Library language**, select **Verilog**, **VHDL**, or both.
6. In the **Output directory** field, specify a location to store the compiled libraries.
7. Click **Start Compilation**.

Complete the following steps to add the simulation files to your project:

1. On the Assignments menu, click **Settings**.
2. In the **Category** list, select **Files**.
3. Click **Browse** to open the **Select File** dialog box and select one or more files in the **Files** list to add to your project.
4. Click **Open**, and then **Add** to add the selected file(s) to your project.
5. Click **OK** to close the **Settings** dialog box.

Related Information

- [Preparing for EDA Simulation](#)
- [Altera Simulation Models](#)

How to Generate Scripts

When you compile your design, the Quartus II software and Qsys automatically generate simulation scripts for the supported third-party simulation tools. You can also use the `ip-make-simscript` utility to generate scripts for multiple IP cores or a Qsys system.

Custom Simulation Scripts

You can automate simulations by creating customized scripts. You can generate scripts manually. In addition, you can use NativeLink to generate a simulation script as a template and then make the necessary changes. The following table shows a list of script directories NativeLink generates.

Table 2-196: NativeLink Generated Scripts for Third-Party RTL Simulation

Simulator	Simulation File	Use
Mentor Graphics ModelSim or QuestaSim	/simulation/ modelsim/modelsim_setup.do Or mentor/msim_setup.tcl	Source directly with your simulator. Run <code>do msim_setup.tcl</code> , followed by <code>ld debug</code> . If you have more than one IP, each IP has a dedicated <code>msim_setup.tcl</code> file. Make sure that you combine all the files included in the <code>msim_setup.tcl</code> files into one common <code>msim_setup.tcl</code> file.

Simulator	Simulation File	Use
Aldec Riviera Pro	<code>/simulation/ aldec/rivierapro_setup.tcl</code>	Source directly with your simulator
Synopsys VCS	<code>/simulation/synopsys/vcs/vcs_setup.sh</code>	Add your test bench file name to this options file to pass the file to VCS using the <code>-file</code> option. If you specify a test bench file for NativeLink and do not choose to simulate, NativeLink generates a script that runs VCS.
Synopsys VCS MX	<code>/simulation/synopsys/vcsmx/vcsmx_setup.sh</code>	Run this script at the command line using <code>quartus_sh -t <script></code> . Any test bench you specify with NativeLink is included in this script.
Cadence Incisive (NCSim)	<code>/simulation/cadence/ncsim_setup.sh</code>	Run this script at the command line using <code>quartus_sh -t <script></code> . Any test bench you specify with NativeLink is included in this script.

Qsys Simulation Scripts

If you use Qsys to create your design, you have the following two options to create scripts:

Generate Scripts in Qsys

Qsys system generation creates the interconnect between components. It also generates files for synthesis and simulation, including the **.spd** files necessary for the `ip-make-simscript` utility. Complete the following steps to generate a simulation module for a Qsys system.

1. On the Generate menu, click **Generate**.
The Generation dialog box appears.
2. Under **Create simulation model**, select your HDL.
Note that Qsys appends **simulation** to your project directory to create a subdirectory for simulation files.
3. Click **Generate**. Qsys generates simulation files and scripts for the Aldec Riviera Pro, Cadence NCSim, and Mentor Graphics ModelSim simulation tools.
4. You can run the scripts to compile the required device libraries and system design files in the correct order. Then, elaborate or load the top-level design for simulation.

Use the ip-make-simscript Utility

This utility generates simulation command scripts for multiple IP cores or Qsys systems. To use this command, you must specify Simulation Package Descriptor (**.spd**) files for each IP core or Qsys system.

This utility compiles IP simulation models into simulation libraries. Complete the following steps to use this command in Qsys:

1. On the Qsys Tools menu, select **Nios II Command Shell [gcc4]**.
A command shell appears.
2. To get usage information for the ip-make-simscript utility, type the following command:
`ip-make-simscript --help`
3. Type `ip-make-simscript` with the appropriate arguments.
4. You can run the scripts to compile the required device libraries and system design files in the correct order. Then, elaborate or load the top-level design for simulation.

Related Information

- [Simulating Altera Designs](#)
- [Creating a System with Qsys](#)

2014.12.15

UG-01143



Subscribe



Send Feedback

This chapter describes the transceiver phase locked loops (PLLs), internal clocking architecture, and the clocking options for the transceiver and the FPGA fabric interface.

As shown in the following figure, transceiver banks can have either three or six transceiver channels. Transceiver banks with six transceiver channels have two advanced transmit (ATX) PLLs, two fractional PLLs (fPLLs), and two master clock generation blocks (CGBs). Transceiver banks with three transceiver channels have one master CGB, one ATX PLL, and one fPLL. Refer to the *Device Transceiver Layout* section to identify which devices have three channel transceiver banks.


The Arria 10 transceiver clocking architecture supports both bonded and non-bonded transceiver channel configurations. Channel bonding is used to minimize the clock skew between multiple transceiver channels within the same interface. For Arria 10 transceivers, the term bonding can refer to PMA bonding as well as PMA and PCS bonding. Refer to the *Channel Bonding* section for more details.

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Figure 3-1: Arria 10 PLLs and Clock Networks

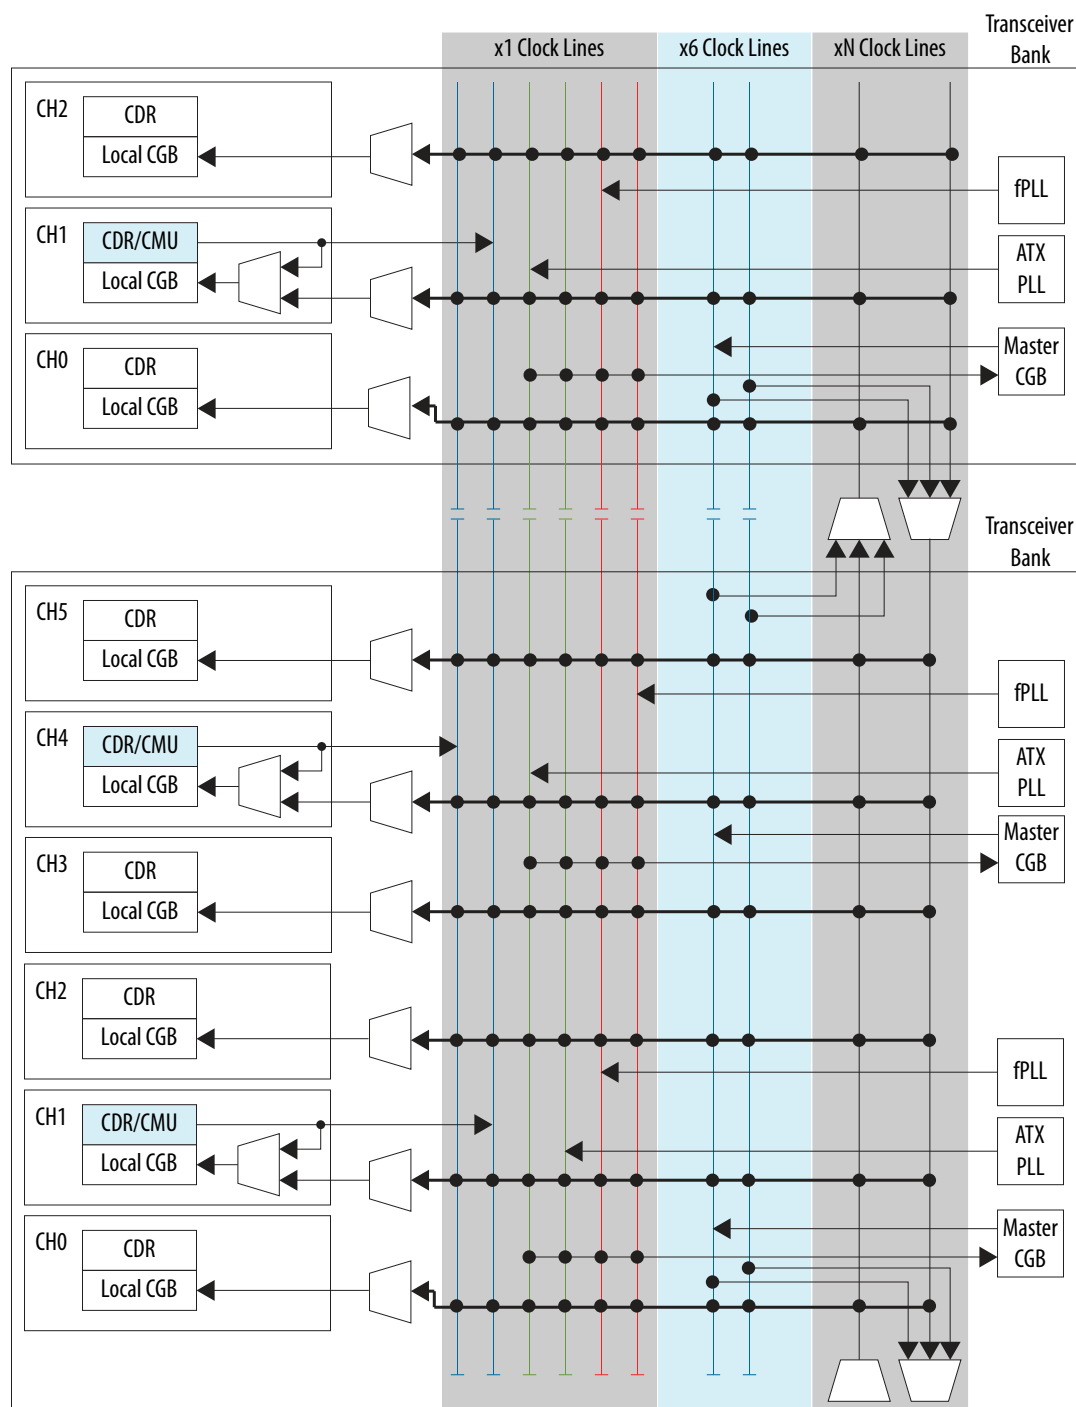**Related Information**

- [Channel Bonding](#) on page 3-44
- [Device Transceiver Layout](#) on page 1-3

PLLs

Table 3-1: Transmit PLLs in Arria 10 Devices

PLL Type	Data Rate Range	Characteristics
Advanced Transmit (ATX) PLL	1 Gbps to 28.3 Gbps ⁽²⁸⁾	• Best jitter performance • LC tank based voltage controlled oscillator (VCO) • Supports fractional synthesis mode • Used for both bonded and non-bonded channel configurations
Fractional PLL (fPLL)	1 Gbps to 12.5 Gbps	• Ring oscillator based VCO • Supports fractional synthesis mode • Used for both bonded and non-bonded channel configurations
Clock Multiplier Unit (CMU) PLL or Channel PLL ⁽²⁹⁾	1 Gbps to 17.4 Gbps	• Ring oscillator based VCO • Used as an additional clock source for non-bonded applications

Note: For best overall performance, use the ATX PLL first, followed by the fPLL. The channel PLL can be used as a transmit PLL if additional PLLs are required.

Related Information

[Clock Networks](#)

ATX PLL

The ATX PLL contains three LC tank-based voltage controlled oscillators (VCOs). These three LC VCOs have different frequency ranges to support a continuous range of operation. It supports both integral and fractional frequency synthesis.

The transceiver banks with six channels have two ATX PLLs each (one located at the top and the other at the bottom of the bank). The transceiver banks with three channels have only one ATX PLL.


The ATX PLL supports both integer and fractional frequency synthesis modes.

⁽²⁷⁾ Data rates depend on characterization and may change after the characterization report is available.

⁽²⁸⁾ ATX PLL supports maximum data rate of 28.3 Gbps only for GT devices. For GX devices, the maximum data rate supported is 17.4 Gbps.

⁽²⁹⁾ The CMU PLL or Channel PLL of channel 1 and channel 4 can be used as a transmit PLL or as a clock data recovery (CDR) block. The channel PLL of all other channels (0, 2, 3, and 5) can only be used as a CDR.

Figure 3-2: ATX PLL Block Diagram

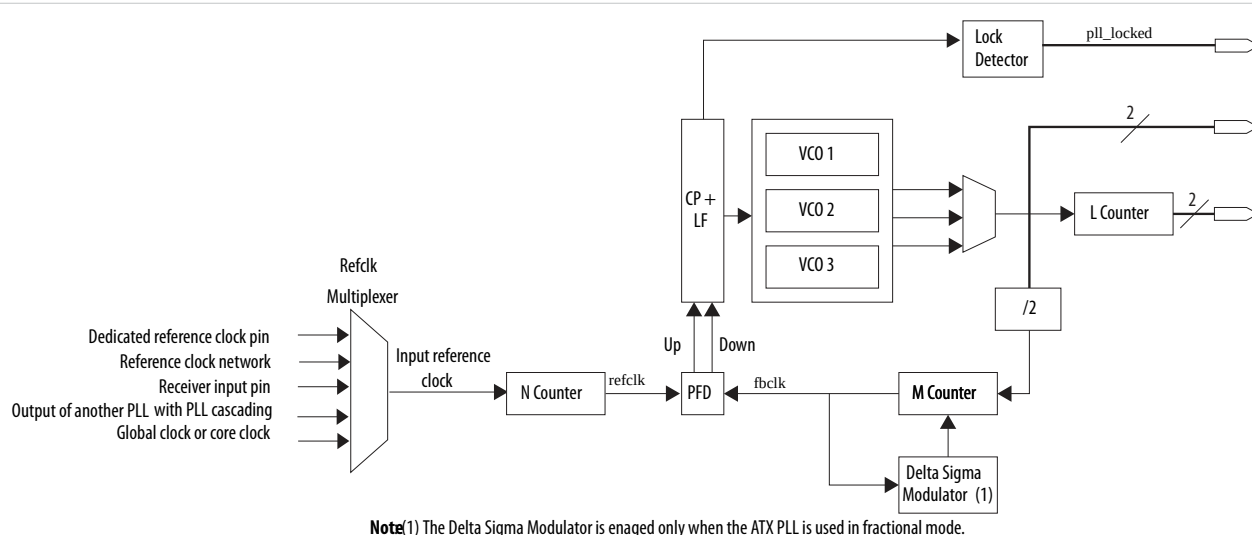

Input Reference Clock

This is the dedicated input reference clock source for the PLL.

The input reference clock can be sourced from one of the following:

- a dedicated reference clock pin
- the reference clock network
- a receiver input pin
- output of another PLL with PLL cascading
- the global clock or the core clock network

The input reference clock is a differential signal. Altera recommends using the dedicated reference clock pin as the input reference clock source for the best jitter performance. The input reference clock must be stable and free-running at device power-up for proper PLL operation. If the reference clock is not available at device power-up, then you need to recalibrate the PLL once the reference clock is available.

Note: The ATX PLL is calibrated by the CLKUSR clock. Refer to the *Calibration* section for more details about the CLKUSR clock.

Reference Clock Multiplexer

The reference clock (refclk) multiplexer selects the reference clock to the PLL from the various reference clock sources available.

N Counter

The N counter divides the refclk mux's output. The division factors supported are 1, 2, 4, and 8.

Phase Frequency Detector (PFD)

The reference clock (refclk) signal at the output of the N counter block and the feedback clock (fbclk) signal at the output of the M counter block are supplied as inputs to the PFD. The output of the PFD is proportional to the phase difference between the refclk and fbclk inputs. It is used to align the refclk signal at the output of the N counter to the feedback clock (fbclk) signal. The PFD generates an "Up"

signal when the reference clock's falling edge occurs before the feedback clock's falling edge. Conversely, the PFD generates a "Down" signal when feedback clock's falling edge occurs before the reference clock's falling edge.

Charge Pump and Loop Filter

The PFD output is used by the charge pump and loop filter (CP + LF) to generate a control voltage for the VCO. The charge pump translates the "Up" or "Down" pulses from the PFD into current pulses. The current pulses are filtered through a low pass filter into a control voltage that drives the VCO frequency. The charge pump, loop filter, and VCO settings determine the bandwidth of the ATX PLL.

Lock Detector

The lock detector block indicates when the reference clock and the feedback clock are phase aligned. The lock detector generates an active high `pll_locked` signal to indicate that the PLL is locked to its input reference clock.

Voltage Controlled Oscillator

The voltage controlled oscillator (VCO) used in the ATX PLL is LC tank based. The output of charge pump and loop filter serves as an input to the VCO. The output frequency of the VCO depends on the input control voltage. The output frequency is adjusted based on the output voltage of the charge pump and loop filter. Each ATX PLL has three LC tank circuits. Each tank circuit has multiple frequency banks that support a continuous frequency range of operation from 7 GHz up to 14.15 GHz.

L Counter

The L counter divides the differential clocks generated by the ATX PLL. The division factors supported are 1, 2, 4, 8, and 16. The L counter is not in the feedback path of the PLL.

M Counter

The M counter's output is the same frequency as the N counter's output. The VCO frequency is governed by the equation:

$$\text{VCO freq} = M * \text{refclk}/N$$

Because the L-counter is not in the feedback path of the PLL, an additional divider divides the high speed serial clock output of the VCO by 2 before it reaches the M counter.

The M counter supports division factors in a continuous range from 8 to 127 in integer frequency synthesis mode and 11 to 127 in fractional mode.

Delta Sigma Modulator

The delta sigma modulator is used only in fractional mode. It modulates the M counter divide value over time so that the PLL can perform fractional frequency synthesis.

Related Information

[Calibration](#) on page 7-1

Instantiating the ATX PLL IP Core

The Arria 10 transceiver ATX PLL IP core provides access to the ATX PLLs in the hardware. One instance of the PLL IP core represents one ATX PLL in the hardware.

1. Open the Quartus II software.
2. Click **Tools > IP Catalog**.
3. In **IP Catalog**, under **Library > Basic Functions > Clocks, PLLs, and Resets > PLL** select **Arria 10 Transceiver ATX PLL** and then click **Add**.
4. In the **New IP Instance** dialog box, provide the IP instance name.
5. Select the **Arria 10** device family.
6. Select the appropriate device and click **OK**.

The ATX PLL IP core **Parameter Editor** window opens.

ATX PLL IP Core

Table 3-2: ATX PLL Configuration Options, Parameters, and Settings

Parameter	Range	Description
Message level for rule violations	Error Warning	Specifies the messaging level to use for parameter rule violations. • Error—Causes all rule violations to prevent IP generation. • Warning—Displays all rule violations as warnings and will allow IP generation in spite of violations.
Protocol mode	Basic PCIe Gen1 PCIe Gen2 PCIe Gen3	Governs the internal setting rules for the VCO. This parameter is not a preset. You must set all other parameters for your protocol.
Bandwidth	Low Medium High	Specifies the VCO bandwidth. Higher bandwidth reduces PLL lock time, at the expense of decreased jitter rejection.
Number of PLL reference clocks	1 to 5	Specifies the number of input reference clocks for the ATX PLL. You can use this parameter for data rate reconfiguration.
Selected reference clock source	0 to 4	Specifies the initially selected reference clock input to the ATX PLL.

Parameter	Range	Description
Primary PLL clock output buffer (30)	GX clock output buffer GT clock output buffer	Specifies which PLL output is active initially. • If GX is selected, turn ON "Enable PLL GX clock output port". • If GT is selected, turn ON "Enable PLL GT clock output port".
Enable PLL GX clock output port (30)	On/Off	Enables the GX output port which feeds x1 clock lines. You must select this parameter for PLL output frequency less than 8 GHz, or if you intend to reconfigure the PLL to frequency below 8 GHz. Turn ON this port if GX is selected in the " Primary PLL clock output buffer ".
Enable PLL GT clock output port (30)	On/Off	Enables the GT output port which feeds dedicated high speed clock lines. You must select this parameter for PLL output frequency greater than 8 GHz, or if you intend to reconfigure the PLL to frequency above 8 GHz. Turn ON this port if GT is selected in the " Primary PLL clock output buffer " parameter.
Enable PCIe clock output port	On/Off	Exposes the <code>pll_pcie_clk</code> port used for PCI Express. The port should be connected to <code>pipe_hclk_input</code> port.
PLL output frequency	437.5 MHz to 14.15 GHz (31)	Use this parameter to specify the target output frequency for the PLL.
PLL integer reference clock frequency	61.5 MHz to 800 MHz	Selects the input reference clock frequency for the PLL.
Enable fractional mode	On/Off	Enables the fractional frequency mode for ATX PLL.

(30) You can enable both the GX clock output port and the GT clock output port. However, only one port can be in operation at any given time. You can switch between the two ports using PLL reconfiguration.

(31) The maximum PLL output frequency supported by ATX PLL is 14.15 GHz for GT devices, and 8.7 GHz for GX devices

Parameter	Range	Description
PLL fractional reference clock frequency	User-defined	Specifies the reference clock frequency for the ATX PLL in fractional mode. This parameter is only applicable for the ATX PLL in fractional mode. When you enable the fractional mode for ATX PLL, this parameter replaces the PLL reference clock frequency parameter in the Parameter Editor window.
Effective M Counter	Read only	Displays the effective M-counter value.
Divide factor (N-Counter)	Read only	Displays the effective N-counter value.
Divide factor (L-Counter)	Read only	Displays the effective L-counter value.
Fractional multiply factor (K)	Read only	Displays the effective K-counter value. This parameter is only available in fractional mode.

Table 3-3: ATX PLL—Master Clock Generation Block Parameters and Settings

Parameter	Range	Description
Include Master Clock Generation Block ⁽³²⁾	On/Off	When enabled, includes a master CGB as a part of the ATX PLL IP. The PLL output drives the Master CGB. This is used for x6/xN bonded and non-bonded modes.
Clock division factor	1, 2, 4, 8	Divides the master CGB clock input before generating bonding clocks.
Enable x6/xN non-bonded high-speed clock output port	On/Off	Enables the master CGB serial clock output port used for x6/xN non-bonded modes.
Enable PCIe clock switch interface	On/Off	Enables the control signals for the PCIe clock switch circuitry. Used for PCIe clock rate switching.
Number of auxiliary MCGB clock input ports	0, 1	Auxiliary input is used to implement the PCIe Gen3 protocol.
MCGB input clock frequency	Read only	Displays the master CGB's required input clock frequency.
MCGB output data rate.	Read only	Displays the master CGB's output data rate.

⁽³²⁾ You have to manually enable the MCGB for bonding applications.

Parameter	Range	Description
Enable bonding clock output ports	On/Off	Enables the tx_bonding_clocks output ports of the master CGB used for channel bonding. This option should be turned ON for bonded designs.
Enable feedback compensation bonding output port	On/Off	Enables the feedback output path of the master CGB used for feedback compensation bonding.
PMA interface width	8, 10, 16, 20, 32, 40, 64	Specifies PMA-PCS interface width. Match this value with the PMA interface width selected for the Native PHY IP core. You must select a proper value for generating bonding clocks for the Native PHY IP core.

Table 3-4: ATX PLL—Dynamic Reconfiguration

Parameter	Range	Description
Enable reconfiguration	On/Off	Enables the PLL reconfiguration interface. Enables the simulation models and adds more ports for reconfiguration.
Enable Altera Debug Master Endpoint	On/Off	When you turn on this option, the Transceiver PLL IP includes an embedded Altera Debug Master Endpoint (ADME) that connects internally to the Avalon-MM slave interface for dynamic reconfiguration. The ADME can access the reconfiguration space of the transceiver. It can perform certain test and debug functions via JTAG using the System Console. Refer to <i>Reconfiguration Interface and Dynamic Reconfiguration</i> chapter for more details.
Enable embedded debug	On/Off	Enables the embedded debug logic in the ATX PLL, and allows access to capability registers, control, and status registers.
Enable capability registers	On/Off	Enables capability registers that provide high level information about the ATX PLL's configuration.
Set user-defined IP identifier	User-defined	Sets a user-defined numeric identifier that can be read from the user_identifier offset when the capability registers are enabled.
Enable control and status registers	On/Off	Enables soft registers for reading status signals and writing control signals on the PLL interface through the embedded debug logic.

Parameter	Range	Description
Configuration file prefix		Enter the prefix name for the configuration files to be generated.
Generate System Verilog package file	On/Off	Generates a System Verilog package file containing all relevant parameters used by the PLL.
Generate C header file	On/Off	Generates a C header file containing all relevant parameters used by the PLL.
Generate MIF (Memory Initialize File)	On/Off	Generates a MIF file which contains the current configuration. Use this option for reconfiguration purposes in order to switch between different PLL configurations.

Table 3-5: ATX PLL—Generation Options

Parameter	Range	Description
Generate parameter documentation file	On/Off	Generates a .csv file which contains descriptions of ATX PLL IP parameters and values.

Table 3-6: ATX PLL IP Ports

Parameter	Direction	Clock Domain	Description
pll_powerdown	Input	Asynchronous	Resets the PLL when asserted high.
pll_refclk0	Input	N/A	Reference clock input port 0. There are a total of five reference clock input ports. The number of reference clock ports available depends on the Number of PLL reference clocks parameter.
pll_refclk1	Input	N/A	Reference clock input port 1.
pll_refclk2	Input	N/A	Reference clock input port 2.
pll_refclk3	Input	N/A	Reference clock input port 3.
pll_refclk4	Input	N/A	Reference clock input port 4.
tx_serial_clk	Output	N/A	High speed serial clock output port for GX channels. Represents the x1 clock network.

Parameter	Direction	Clock Domain	Description
tx_serial_clk_gt	Output	N/A	High speed serial clock output port for GT channels. Represents the x1 clock network.
pll_locked	Output	Asynchronous	Active high status signal which indicates if the PLL is locked.
pll_pcie_clk	Output	N/A	Used for PCIe.
reconfig_clk0	Input	N/A	Optional Avalon interface clock. Used for PLL reconfiguration. The reconfiguration ports appear only if the Enable Reconfiguration parameter is selected in the PLL IP GUI. When this parameter is not selected, the ports are set to OFF internally.
reconfig_reset0	Input	reconfig_clk0	Used to reset the Avalon interface.
reconfig_write0	Input	reconfig_clk0	Active high write enable signal.
reconfig_read0	Input	reconfig_clk0	Active high read enable signal.
reconfig_address0[9:0]	Input	reconfig_clk0	10-bit address bus used to specify address to be accessed for both read and write operations.
reconfig_writedata0[31:0]	Input	reconfig_clk0	32-bit data bus. Carries the write data to the specified address.
reconfig_readdata0[31:0]	Output	reconfig_clk0	32-bit data bus. Carries the read data from the specified address.
reconfig_waitrequest0	Output	reconfig_clk0	Indicates when the Avalon interface signal is busy. When asserted, all inputs must be held constant.
pll_cal_busy	Output	Asynchronous	Status signal which is asserted high when PLL calibration is in progress. OR this signal with tx_cal_busy port before connecting to the reset controller IP.

Parameter	Direction	Clock Domain	Description
mcgb_rst	Input	Asynchronous	Master CGB reset control. If you use pll feedback compensation bonding mode, deassert this reset at the same time as pll_powerdown . If you do not use pll feedback compensation bonding, then you can deassert this port after pll_powerdown is deasserted, but before tx_analogreset is deasserted. Alternatively, you can deassert this port at the same time as pll_powerdown .
mcgb_aux_clk0	Input	N/A	Used for PCIe implementation to switch between fPLL and ATX PLL during link speed negotiation.
tx_bonding_clocks[5:0]	Output	N/A	Optional 6-bit bus which carries the low speed parallel clock outputs from the master CGB. Each transceiver channel in a bonded group has this 6-bit bus. Used for channel bonding, and represents the x6/xN clock network.
mcgb_serial_clk	Output	N/A	High speed serial clock output for x6/xN non-bonded configurations.
pcie_sw[1:0]	Input	Asynchronous	2-bit rate switch control input used for PCIe protocol implementation.
pcie_sw_done[1:0]	Output	Asynchronous	2-bit rate switch status output used for PCIe protocol implementation.

Related Information

- [Calibration](#) on page 1-23
- [Avalon-Memory-Mapped Interfaces specification](#)

The ports related to reconfiguration are compliant with the Avalon Specification. Refer to the Avalon Specification for more details about these ports.

fPLL


The fractional PLL (fPLL) is used for generating lower clock frequencies. It can support both integer and fractional frequency synthesis. The fPLL can be used as a transmit PLL for transceiver applications. The fPLL can either be cascaded to the ATX or to another fPLL, or it can be used to drive the core clock network. The fPLL can also be used to drive the FPGA fabric's core clock network. A single fPLL can be used in any one of these applications at a time and simultaneous operation is not supported.

There are two fPLLs in each transceiver bank with six channels (one located at the top and the other at the bottom of the bank). Transceiver banks with three channels have only one fPLL.

For transceiver and PLL cascading applications, the fPLL can support continuous data rates from 1 Gbps to 12.5 Gbps in both integer and fractional frequency synthesis modes. PLL cascading enables additional flexibility in terms of reference clock selection.

When used to drive the FPGA fabric's core clock network, the fPLL can support frequencies from 27 MHz up to the core clock network's maximum frequency (f_{MAX}).

Figure 3-3: fPLL Block Diagram

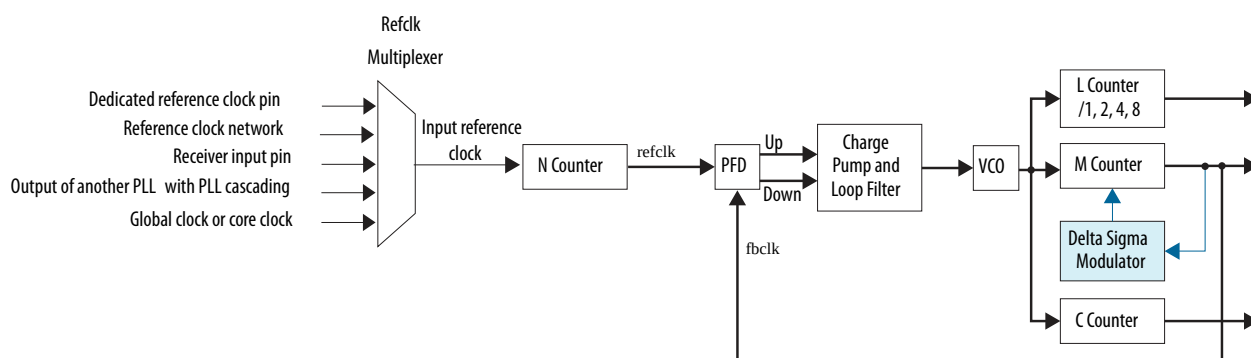

The fPLL generates output clocks with a fixed frequency and phase relation to an input reference clock. In the fractional frequency mode, the fPLL supports data rates from 1 Gbps to 12.5 Gbps.

Input Reference Clock

This is the dedicated input reference clock source for the PLL.

The input reference clock can be sourced from one of the following:

- a dedicated reference clock pin
- the reference clock network
- a receiver input pin
- the output of another PLL with PLL cascading
- from the global clock or the core clock network

The input reference clock is a differential signal. Altera recommends using the dedicated reference clock pin as the input reference clock source for the best jitter performance. The input reference clock must be stable and free-running at device power-up for proper PLL operation. If the reference clock is not available at device power-up, then you need to recalibrate the PLL once the reference clock is available. Refer to the *Calibration* section for details about PLL calibration.

Reference Clock Multiplexer

The refclk mux selects the reference clock to the PLL from the various reference clock sources available.

N Counter

The N counter divides the reference clock (refclk) mux's output. The N counter division helps lower the loop bandwidth or reduce the frequency within the phase frequency detector's (PFD) operating range. The N counter supports division factors from 1 to 32.

Phase Frequency Detector

The reference clock (refclk) signal at the output of the N counter block and the feedback clock (fbclk) signal at the output of the M counter block are supplied as inputs to the PFD. The output of the PFD is proportional to the phase difference between the refclk and fbclk inputs. The PFD aligns the fbclk to the refclk. The PFD generates an "Up" signal when the reference clock's falling edge occurs before the feedback clock's falling edge. Conversely, the PFD generates a "Down" signal when the feedback clock's falling edge occurs before the reference clock's falling edge.

Charge Pump and Loop Filter (CP + LF)

The PFD output is used by the charge pump and loop filter to generate a control voltage for the VCO. The charge pump translates the "Up" / "Down" pulses from the PFD into current pulses. The current pulses are filtered through a low pass filter into a control voltage that drives the VCO frequency.

Voltage Controlled Oscillator

The fPLL has a ring oscillator based VCO. The VCO transforms the input control voltage into an adjustable frequency clock.

$$\text{VCO freq} = M * \text{refclk} / N.$$
 (N and M are the N counter and M counter division factors.)

L Counter

The L counter divides the VCO's clock output. When the fPLL acts as a transmit PLL, the output of the L counter drives the clock generation block (CGB) and the TX PMA. The division factors supported are 1, 2, 4, and 8.

M Counter

The M counter divides the VCO's clock output. The M counter can select any VCO phase. The outputs of the M counter and N counter have same frequency.

Delta Sigma Modulator

The delta sigma modulator is used in fractional mode. Depending on the value of K input, it modulates the output of the M counter over time. The value of K input can be changed dynamically to use the fPLL as replacement for the VCO.

The delta sigma modulator can be configured in 1st-order, 2nd-order, or 3rd-order mode.

C Counter

The C counter's design is identical to the M counter's design. However, the C counter is present in the fPLL's output path and is not in the PLL's feedback path.

Dynamic Phase Shift

The dynamic phase shift block allows you to adjust the phase of the M and C counters in user mode. In fractional mode, dynamic phase shift is only available for the C counters.

Latency

The fPLL contains a 1 ns delay with 50 ps resolution on each C, M, and N counter. In addition, there is a 7 ns delay with 1 ns resolution on both the reference clock and feedback clock paths. The C and M counters can be configured to select any VCO phase and a delay of up to 128 clock cycles. The selected VCO phase can be changed dynamically. The M counter's phase cannot be changed in fractional mode.

Related Information

[Calibration](#) on page 7-1

Instantiating fPLL IP Core

The fPLL IP core for Arria 10 transceivers provides access to fPLLs in hardware. One instance of the fPLL IP core represents one fPLL in the hardware.

1. Open the Quartus II software.
2. Click **Tools > IP Catalog**.
3. In **IP Catalog**, under **Library > Basic Functions > Clocks, PLLs, and Resets > PLL** select **Arria 10 fPLL** IP core and then click **Add**.
4. In the **New IP Instance** dialog box, provide the IP instance name.
5. Select the **Arria 10** device family.
6. Select the appropriate device and click **OK**.

The fPLL IP core **Parameter Editor** window opens.

fPLL IP Core

Table 3-7: fPLL IP Core Configuration Options, Parameters, and Settings

Parameters	Range	Description
Device Family	Read-only	Specifies the device family selected.
Speed grade	Fastest	Specifies the desired device speed grade. You can use this information to validate the frequency of the fPLL.
fPLL Mode	Core Cascade Source HSSI TX	Specifies the fPLL mode of operation. Select Core to use fPLL as a general purpose PLL to drive the FPGA core clock network. Select Cascade Source to connect fPLL to another PLL as a cascading source. Select HSSI TX to use fPLL as a transmit PLL for the transceiver block.

Parameters	Range	Description
Protocol Mode	Basic PCIe Gen1 PCIe Gen2 PCIe Gen3	Governs the internal setting rules for the VCO. This parameter is not a preset. You must set all parameters for your protocol.
Enable fractional mode	On/Off	Enables the fractional frequency mode. This enables the PLL to output frequencies which are not integral multiples of the input reference clock.
Desired Reference clock frequency	27 MHz to 800 MHz	Specifies the desired PLL input reference clock frequency.
Actual reference clock frequency	Read-only	Displays the actual PLL input reference clock frequency.
Bandwidth	Low Medium High	Specifies the VCO bandwidth. Higher bandwidth reduces PLL lock time, at the expense of decreased jitter rejection.
Operation mode	Direct Feedback compensation bonding	Specifies the feedback operation mode for the fPLL.
PLL output frequency		Specifies the target output frequency for the PLL.

Table 3-8: fPLL—Master Clock Generation Block Parameters and Settings

Parameters	Range	Description
Include Master Clock Generation Block	On/Off	When enabled, includes a master CGB as a part of the fPLL IP core. The PLL output drives the master CGB. This is used for x6/xN bonded and non-bonded modes.
Clock division factor	1, 2, 4, 8	Divides the master CGB clock input before generating bonding clocks.
Enable x6/xN non-bonded high-speed clock output port	On/Off	Enables the master CGB serial clock output port used for x6/xN non-bonded modes.
Enable PCIe clock switch interface	On/Off	Enables the control signals used for PCIe clock switch circuitry.

Parameters	Range	Description
MCGB input clock frequency	Read only	Displays the master CGB's required input clock frequency. You cannot set this parameter.
MCGB output data rate	Read only	Displays the master CGB's output data rate. You cannot set this parameter. This value is calculated based on MCGB input clock frequency and MCGB clock division factor.
Enable bonding clock output ports	On/Off	Enables the 'tx_bonding_clocks' output ports of the Master CGB used for channel bonding. You must enable this for bonded designs.
Enable feedback compensation bonding	On/Off	Enables the feedback output path of the master CGB used for feedback compensation bonding. When enabled, the feedback connections are automatically handled by the PLL IP.
PMA interface width	8, 10, 16, 20, 32, 40, 64	Specifies the PMA-PCS interface width. Match this value with the PMA interface width selected for the Native PHY IP core. You must select a proper value for generating bonding clocks for the Native PHY IP core.

Table 3-9: fPLL—Dynamic Reconfiguration Parameters and Settings

Parameter	Range	Description
Enable reconfiguration	On/Off	Enables the PLL reconfiguration interface. Enables the simulation models and adds more ports for reconfiguration.
Enable Altera Debug Master Endpoint	On/Off	When you turn this option ON, the transceiver PLL IP core includes an embedded Altera Debug Master Endpoint (ADME) that connects internally to the Avalon-MM slave interface for dynamic reconfiguration. The ADME can access the reconfiguration space of the transceiver. It can perform certain test and debug functions via JTAG using the System Console. Refer to the <i>Reconfiguration Interface and Dynamic Reconfiguration</i> chapter for more details.
Enable Embedded debug	On/Off	Enables the embedded debug logic in the fPLL and allows access to capability registers, control and status registers.
Enable capability registers	On/Off	Enables capability registers that provide high level information about the fPLL's configuration.

Parameter	Range	Description
Set user-defined IP identifier		Sets a user-defined numeric identifier that can be read from the <code>user_identifier</code> offset when the capability registers are enabled.
Enable control and status registers	On/Off	Enables soft registers for reading status signals and writing control signals on the PLL interface through the embedded debug logic.
Configuration file prefix		Enter the prefix name for the configuration files to be generated.
Generate SystemVerilog package file	On/Off	Generates a SystemVerilog package file containing all relevant parameters used by the PLL.
Generate C header file	On/Off	Generates a C header file containing all relevant parameters used by the PLL.
Generate MIF (Memory Initialize File)	On/Off	Generates a MIF file that contains the current configuration. Use this option for reconfiguration purposes in order to switch between different PLL configurations.

Table 3-10: fPLL - Generation Options

Parameter	Range	Description
Generates parameter documentation file	On/Off	Generates a <code>.csv</code> file that contains descriptions of all the fPLL parameters and values.

Table 3-11: fPLL IP Ports

Parameter	Range	Clock Domain	Description
<code>pll_powerdown</code>	input	Asynchronous	Resets the PLL when asserted high.
<code>pll_refclk0</code>	input	N/A	Reference clock input port 0. There are five reference clock input ports. The number of reference clock ports available depends on the Number of PLL reference clocks parameter.
<code>pll_refclk1</code>	input	N/A	Reference clock input port 1.
<code>pll_refclk2</code>	input	N/A	Reference clock input port 2.

Parameter	Range	Clock Domain	Description
pll_refclk3	input	N/A	Reference clock input port 3.
pll_refclk4	input	N/A	Reference clock input port 4.
tx_serial_clk	output	N/A	High speed serial clock output port for GX channels. Represents the x1 clock network.
tx_serial_clk_n	output	N/A	This is tx_serial_clk with 180 degree phase shift.
pll_locked	output	Asynchronous	Active high status signal which indicates if PLL is locked.
pll_pcie_clk	output	N/A	Used for PCIe.
reconfig_clk0	input	N/A	Optional Avalon interface clock. Used for PLL reconfiguration.
reconfig_reset0	input	reconfig_clk0	Used to reset the Avalon interface.
reconfig_write0	input	reconfig_clk0	Active high write enable signal.
reconfig_read0	input	reconfig_clk0	Active high read enable signal.
reconfig_address0[9:0]	input	reconfig_clk0	10-bit address bus used to specify address to be accessed for both read and write operations.
reconfig_writedata0[31:0]	input	reconfig_clk0	32-bit data bus. Carries the write data to the specified address.
reconfig_readdata0[31:0]	output	reconfig_clk0	32-bit data bus. Carries the read data from the specified address.
reconfig_waitrequest0	output	reconfig_clk0	Indicates when the Avalon interface signal is busy. When asserted, all inputs must be held constant.

Parameter	Range	Clock Domain	Description
pll_cal_busy	output	Asynchronous	Status signal which is asserted high when PLL calibration is in progress. Perform logical OR with this signal and the tx_cal_busy port on the reset controller IP.
mcgb_rst	input	Asynchronous	Master CGB reset control. If pll feedback compensation bonding mode is used, deassert this reset at the same time as pll_powerdown. If pll feedback compensation bonding is not being used, then this port can be deasserted after pll_powerdown is deasserted, but before tx_analogreset is deasserted. Alternatively, this port can be deasserted at the same time as pll_powerdown.
mcgb_aux_clk0	input	N/A	Used for PCIe to switch between fPLL/ATX PLL during link speed negotiation.
tx_bonding_clocks[5:0]	Output	N/A	Optional 6-bit bus which carries the low speed parallel clock outputs from the Master CGB. Used for channel bonding, and represents the x6/xN clock network.
mcgb_serial_clk	Output	N/A	High speed serial clock output for x6/xN non-bonded configurations.
pcie_sw[1:0]	input	Asynchronous	2-bit rate switch control input used for PCIe protocol implementation.
pcie_sw_done[1:0]	output	Asynchronous	2-bit rate switch status output used for PCIe protocol implementation.
pll_cascade_clk	output	N/A	fPLL to fPLL cascading clock output port.

Parameter	Range	Clock Domain	Description
atx_pll_cascade_clk	output	N/A	fPLL to ATX PLL cascading clock output port.
activeclk	output		Creates an output signal that indicates the input clock being used by the PLL. A logic Low on this signal indicates refclk0 is being used and a logic High indicates refclk1 is being used.

Related Information

- [Calibration](#) on page 1-23
- [Reconfiguration Interface and Dynamic Reconfiguration](#) on page 6-1
- [Avalon Memory-Mapped Interface specification](#)
The ports related to reconfiguration are compliant with the Avalon Specification. Refer to the Avalon Specification for more details about these ports.


CMU PLL

The clock multiplier unit (CMU) PLL / channel PLL / CDR resides locally within each transceiver channel. The channel PLL's primary function is to recover the receiver clock and data in the transceiver channel. In this case the PLL is used in clock and data recovery (CDR) mode.

When the channel PLL of channel 1 and 4 is configured in the CMU mode, the channel PLL can drive the local clock generation block (CGB) of its own channel. However, when the channel PLL is used as a CMU PLL, the channel can only be used as a transmitter channel as the CDR block is not available to recover the received clock and data.

The CMU PLL from transceiver channel 1 and channel 4 can be used to drive other transceiver channels within the same transceiver bank. The CDR of channels 0, 2, 3 and 5 cannot be configured as a CMU PLL.

Figure 3-4: CMU PLL Block Diagram

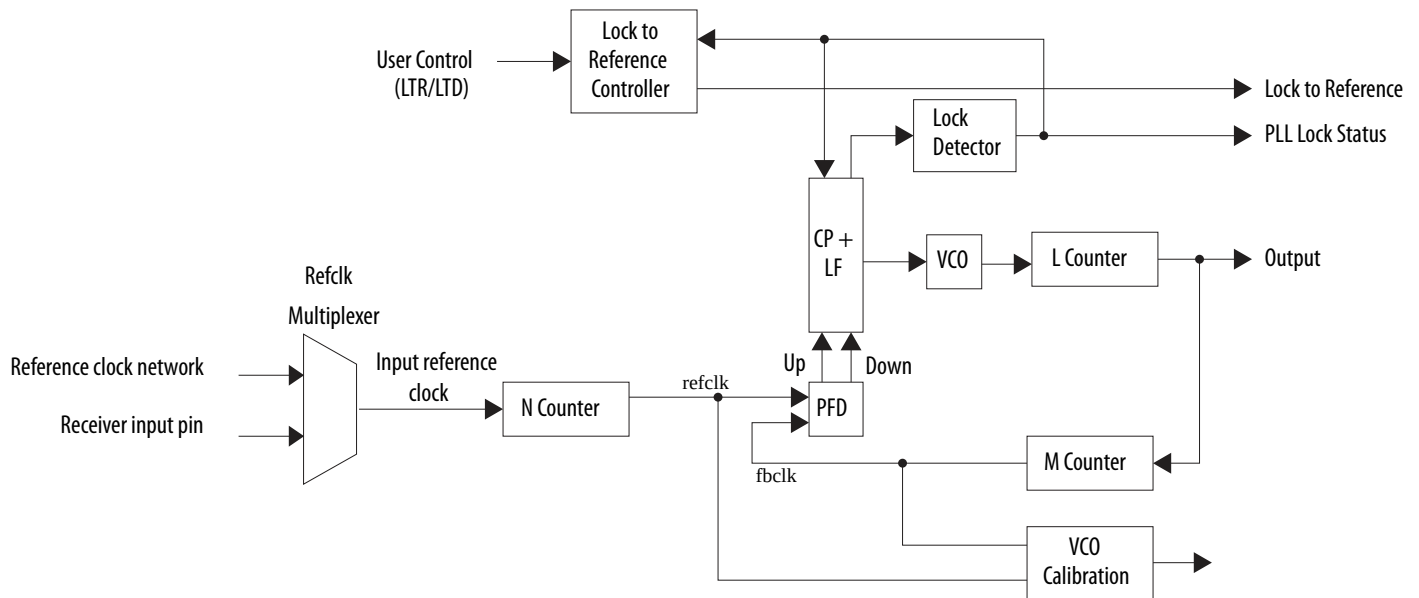

Input Reference Clock

The input reference clock for a CMU PLL can be sourced from either the reference clock network or a receiver input pin. The input reference clock is a differential signal. The input reference clock must be stable and free-running at device power-up for proper PLL operation. If the reference clock is not available at device power-up, then you need to recalibrate the PLL once the reference clock is available. Refer to the *Calibration* section for details about PLL calibration.

Reference Clock Multiplexer (Refclk Mux)

The refclk mux selects the input reference clock to the PLL from the various reference clock sources available.

N Counter

The N counter divides the refclk mux's output. The N counter division helps lower the loop bandwidth or reduce the frequency to within the phase frequency detector's (PFD) operating range. Possible divide ratios are 1 (bypass), 2, 4, and 8.

Phase Frequency Detector (PFD)

The reference clock (refclk) signal at the output of the N counter block and the feedback clock (fbclk) signal at the output of the M counter block is supplied as an input to the PFD. The PFD output is proportional to the phase difference between the two inputs. It aligns the input reference clock (refclk) to the feedback clock (fbclk). The PFD generates an "Up" signal when the reference clock's falling edge occurs before the feedback clock's falling edge. Conversely, the PFD generates a "Down" signal when feedback clock's falling edge occurs before the reference clock's falling edge.

Charge Pump and Loop Filter (CP + LF)

The PFD output is used by the charge pump and loop filter to generate a control voltage for the VCO. The charge pump translates the "Up" / "Down" pulses from the PFD into current pulses. The current pulses are filtered through a low pass filter into a control voltage which drives the VCO frequency.

Voltage Controlled Oscillator (VCO)

The CMU PLL has a ring oscillator based VCO. The fundamental VCO frequency range is from 4 GHz to 14 GHz. Lower frequencies can be generated using the PFD and M counter settings.

L Counter

The L counter divides the differential clocks generated by the CMU PLL. The division factors supported are 1, 2, 4, and 8.

M Counter

The M counter is used in the PFD's feedback path. The output of the L counter is connected to the M counter. The combined division ratios of the L counter and the M counter determine the overall division factor in the PFD's feedback path.

The division factors supported are 8, 9, 10, 12, 15, 16, 18, 20, 24, 25, 30, 32, 36, 40, 48, 50, 60, 64, 72, 80, 96, 100, 120, 128, 160, and 200.

Lock Detector (LD)

The lock detector indicates when the CMU PLL is locked to the desired output's phase and frequency. The lock detector XORs the "Up" / "Down" pulses and indicates when the M counter's output and N counter's output are phase-aligned.

The reference clock (`refclk`) and feedback clock (`fbclk`) are sent to the PCS's ppm detector block. There is a pre-divider to lower the frequency in case the frequency is too high.

Related Information

[Calibration](#) on page 7-1

Instantiating CMU PLL IP Core

The CMU PLL IP core for Arria 10 transceivers provides access to the CMU PLLs in hardware. One instance of the CMU PLL IP core represents one CMU PLL in hardware.

1. Open the Quartus II software.
2. Click **Tools > IP Catalog**.
3. In **IP Catalog**, under **Library > Basic Functions > Clocks, PLLs, and Resets**, > **PLL** select **Arria 10 Transceiver CMU PLL** and then click **Add**.
4. In the **New IP Instance Dialog Box**, provide the IP instance name.
5. Select **Arria 10** device family.
6. Select the appropriate device and click **OK**.

The CMU PLL IP **Parameter Editor** window opens.

CMU PLL IP Core

Table 3-12: CMU PLL Parameters and Settings

Parameters	Range	Description
Message level for rule violations	Error Warning	Specifies the messaging level to use for parameter rule violations. - Error - Causes all rule violations to prevent IP generation. - Warning - Displays all rule violations as warnings and will allow IP generation in spite of violations.
Device speed grade	Fastest	Specifies the desired device speed grade. This information is used for PLL frequency validation.
Bandwidth	Low Medium High	Specifies the VCO bandwidth. Higher bandwidth reduces PLL lock time, at the expense of decreased jitter rejection.
Number of PLL reference clocks	1 to 5	Specifies the number of input reference clocks for the CMU PLL. You can use this parameter for data rate reconfiguration.
Selected reference clock source	0 to 4	Specifies the initially selected reference clock input to the CMU PLL.
TX PLL Protocol mode	Basic PCIe	This parameter governs the rules for correct protocol specific settings. Certain features of the PLL are only available for specific protocol configuration rules. This parameter is not a preset . You must set all the other parameters for your protocol.
PLL output frequency	437.5 MHz to 8.7 GHz	Specify the target output frequency for the PLL.
PLL reference clock frequency	50 MHz to 800 MHz	Selects the input reference clock frequency for the PLL.
Multiply factor (M-Counter)	Read only	Displays the effective M-divider value.
Divide factor (N-Counter)	Read only	Displays the effective N-counter value.
Divide factor (L-Counter)	Read only	Displays the effective L-counter value.

Table 3-13: CMU PLL—Dynamic Reconfiguration

Parameters	Range	Description
Enable reconfiguration	On/Off	Enables the PLL reconfiguration interface. Enables the simulation models and adds more ports for reconfiguration.
Enable Altera Debug Master Endpoint	On/Off	When you turn this option On, the transceiver PLL IP includes an embedded Altera Debug Master Endpoint that connects internally to the Avalon-MM slave interface for dynamic reconfiguration. The ADME can access the reconfiguration space of the transceiver. It can perform certain test and debug functions via JTAG using the System Console. Refer to the <i>Reconfiguration Interface and Dynamic Reconfiguration</i> chapter for more details.
Enable embedded debug	On/Off	Enables the embedded debug logic in the CMU PLL and allows access to capability registers, control and status registers.
Enable capability registers	On/Off	Enables capability registers that provide high level information about the CMU PLL's configuration.
Set user-defined IP identifier		Sets a user-defined numeric identifier that can be read from the <code>user_identifier</code> offset when the capability registers are enabled.
Enable control and status registers	On/Off	Enables soft registers for reading status signals and writing control signals on the PLL interface through the embedded debug logic.
Configuration file prefix		Enter the prefix name for the configuration files to be generated.
Generate SystemVerilog package file	On/Off	Generates a SystemVerilog package file containing all relevant parameters used by the PLL.
Generate C header file	On/Off	Generates a C header file containing all relevant parameters used by the PLL.
Generate MIF (Memory Initialize File)	On/Off	Generates a MIF file that contains the current configuration. Use this option for reconfiguration purposes in order to switch between different PLL configurations.

Table 3-14: CMU PLL—Generation Options

Parameters	Range	Description
Generate parameter documentation file	On/Off	Generates a .csv file which contains the descriptions of all CMU PLL parameters and values.

Table 3-15: CMU PLL IP Ports

Parameter	Range	Clock Domain	Description
pll_powerdown	input	Asynchronous	Resets the PLL when asserted high.
pll_refclk0	input	N/A	Reference clock input port 0. There are 5 reference clock input ports. The number of reference clock ports available depends on the Number of PLL reference clocks parameter.
pll_refclk1	input	N/A	Reference clock input port 1.
pll_refclk2	input	N/A	Reference clock input port 2.
pll_refclk3	input	N/A	Reference clock input port 3.
pll_refclk4	input	N/A	Reference clock input port 4.
tx_serial_clk	output	N/A	High speed serial clock output port for GX channels. Represents the x1 clock network.
pll_locked	output	Asynchronous	Active high status signal which indicates if PLL is locked.
reconfig_clk0	input	N/A	Optional Avalon interface clock. Used for PLL reconfiguration. The reconfiguration ports appear only if the Enable Reconfiguration parameter is selected in the PLL IP GUI. When this parameter is not selected, the ports are set to OFF internally.
reconfig_reset0	input	reconfig_clk0	Used to reset the Avalon interface.

Parameter	Range	Clock Domain	Description
reconfig_write0	input	reconfig_clk0	Active high write enable signal.
reconfig_read0	input	reconfig_clk0	Active high read enable signal.
reconfig_address0[9:0]	input	reconfig_clk0	10-bit address bus used to specify address to be accessed for both read and write operations.
reconfig_writedata0[31:0]	input	reconfig_clk0	32-bit data bus. Carries the write data to the specified address.
reconfig_readdata0[31:0]	output	reconfig_clk0	32-bit data bus. Carries the read data from the specified address.
reconfig_waitrequest0	output	reconfig_clk0	Indicates when the Avalon interface signal is busy. When asserted, all inputs must be held constant.
pll_cal_busy	output	Asynchronous	Status signal that is asserted high when PLL calibration is in progress. Perform logical OR with this signal and the tx_cal_busy port on the reset controller IP.

Related Information

- [Calibration](#) on page 1-23
- [Reconfiguration Interface and Dynamic Reconfiguration](#) on page 6-1
- [Avalon Memory-Mapped Interface specification](#)
The ports related to reconfiguration are compliant with the Avalon Specification. Refer to the Avalon Specification for more details about these ports.

Input Reference Clock Sources


The transmitter PLL and the clock data recovery (CDR) block need an input reference clock source to generate the clocks required for transceiver operation. The input reference clock must be stable and free-running at device power-up for proper PLL operation.

Arria 10 transceiver PLLs have five possible input reference clock sources:

- Dedicated reference clock pins
- Receiver input pins
- The output of another fPLL with PLL cascading
- Reference clock network
- Global clock or core clock

Altera recommends using the dedicated reference clock pins and the reference clock network for the best jitter performance.

Figure 3-5: Input Reference Clock Sources

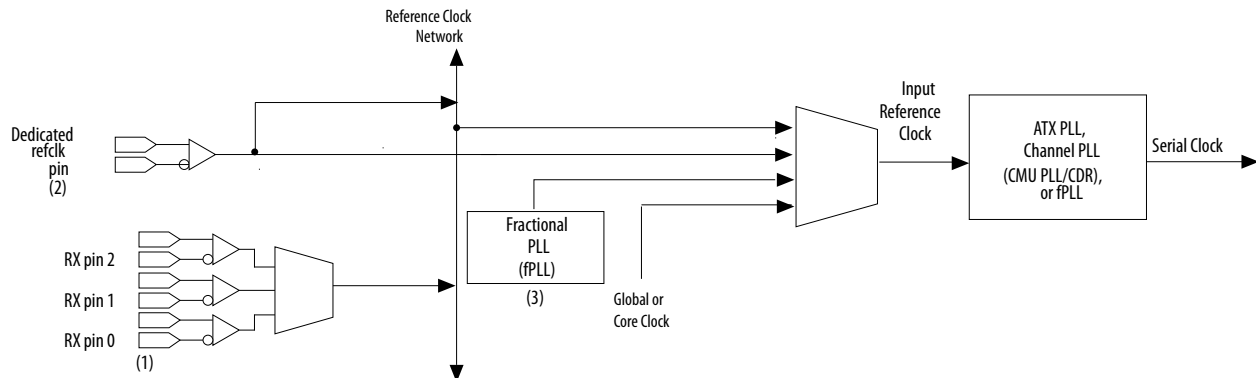

Note : (1) You can choose only one of the three RX pins to be used as an input reference clock source. Any RX pin on the same side of the device can be used as an input reference clock.

(2) Dedicated refclk pin can be used as an input reference clock source only for ATX or fPLL or to the reference clock network. Reference clock network can then drive the CMU PLL.

(3) The output of another PLL can be used as an input reference clock source during PLL cascading. Arria 10 transceivers support fPLL to fPLL, fPLL to ATX PLL, and fPLL to CMU cascading.


Note: In Arria 10 devices, the FPGA fabric core clock network can be used as an input reference source for any PLL type.

Dedicated Reference Clock Pins

To minimize the jitter, the advanced transmit (ATX) PLL and the fractional PLL (fPLL) can source the input reference clock directly from the reference clock buffer without passing through the reference clock network. The input reference clock is also fed into the reference clock network.

Figure 3-6: Dedicated Reference Clock Pins

There are two dedicated reference clock (refclk) pins available in each transceiver bank. The bottom refclk pin feeds the bottom ATX PLL and fPLL. The top refclk pin feeds the top ATX PLL and fPLL. The dedicated reference clock pins can also drive the reference clock network.

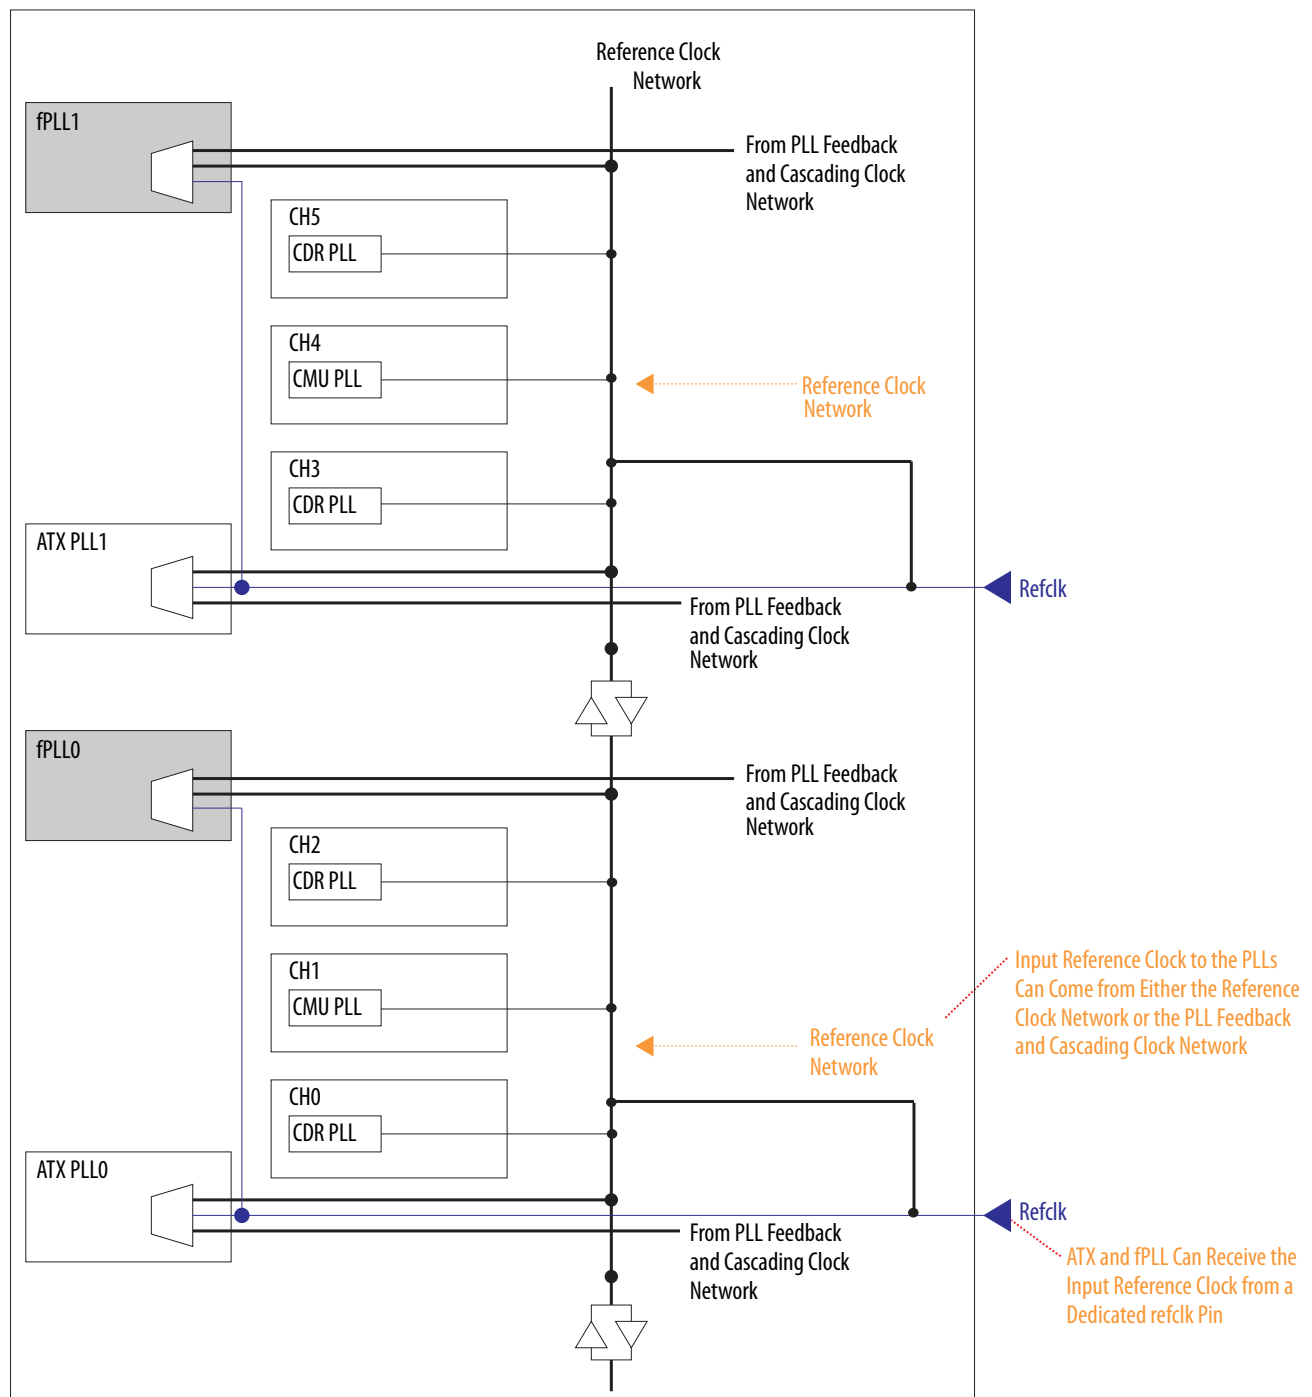

Receiver Input Pins

Receiver input pins can be used as an input reference clock source.

The receiver input pin drives the reference clock network, which can then feed any number of transmitter PLLs on the same side of the device. When a receiver input pin is used as an input reference clock source, the clock data recovery (CDR) block of that channel is not available. As indicated in [Figure 3-5](#), only one RX differential pin pair per three channels can be used as an input reference clock source at any given time.

PLL Cascading as an Input Reference Clock Source

In PLL cascading, PLL outputs are connected to the feedback and cascading clock network. The input reference clock to the first PLL can be sourced from the same network. In this mode, the output of one PLL drives the reference clock input of another PLL. PLL cascading can generate frequency outputs not normally possible with a single PLL solution. The transceivers in Arria 10 devices support fPLL to fPLL or fPLL to ATX PLL cascading.

Note: Due to pending silicon characterization, Altera does not recommend using PLL cascading in ACDS 14.0 Arria 10 edition and 14.1 versions of the Quartus® II software.

Reference Clock Network

The reference clock network distributes a reference clock source to either the entire left or right side of the FPGA where the transceivers reside. This allows any reference clock pin to drive any transmitter PLL on the same side of the device. Designs using multiple transmitter PLLs which require the same reference clock frequency and are located along the same side of the device, can share the same dedicated reference clock (refclk) pin.

Global Clock or Core Clock as an Input Reference Clock

The global clock or the core clock can be used as an input reference clock for any PLL type.

The global or core clock network routes the clock directly to the PLL. In this case the PLL reference clock network is not used. For best performance, use the dedicated reference clock pins or the reference clock network.

Transmitter Clock Network

The transmitter clock network routes the clock from the transmitter PLL to the transmitter channel. It provides following two types of clocks to the transmitter channel:

- High Speed Serial clock – high speed clock for the serializer.
- Low Speed Parallel clock – low speed clock for the serializer and the PCS.

In a bonded channel configuration, both the serial clock and the parallel clock are routed from the transmitter PLL to the transmitter channel. In a non-bonded channel configuration, only the serial clock is routed to the transmitter channel, and the parallel clock is generated locally within the channel. To support various bonded and non-bonded clocking configurations, 4 types of transmitter clock network lines are available:

- x1 Clock Lines
- x6 Clock Lines
- xN Clock Lines
- GT Clock Lines


x1 Clock Lines

The x1 clock lines route the high speed serial clock output of a PLL to any channel within a transceiver bank. The low speed parallel clock is then generated by that particular channel's local clock generation block (CGB). Non-bonded channel configurations use the x1 clock network.

The x1 clock lines can be driven by the ATX PLL, fPLL, or by either one of the two channel PLLs (channel 1 and 4 when used as a CMU PLL) within a transceiver bank.

The x1 clock lines are also used to drive the master CGB in bonded channel configurations. Either one of the master CGBs in each transceiver bank can drive the x6 clock lines for bonded channel configurations. The master CGB can only be driven by the ATX PLL or the fPLL. The CMU PLLs cannot drive the master CGB. Therefore; the CMU PLLs cannot be used for bonding purposes.

Figure 3-7: x1 Clock Lines

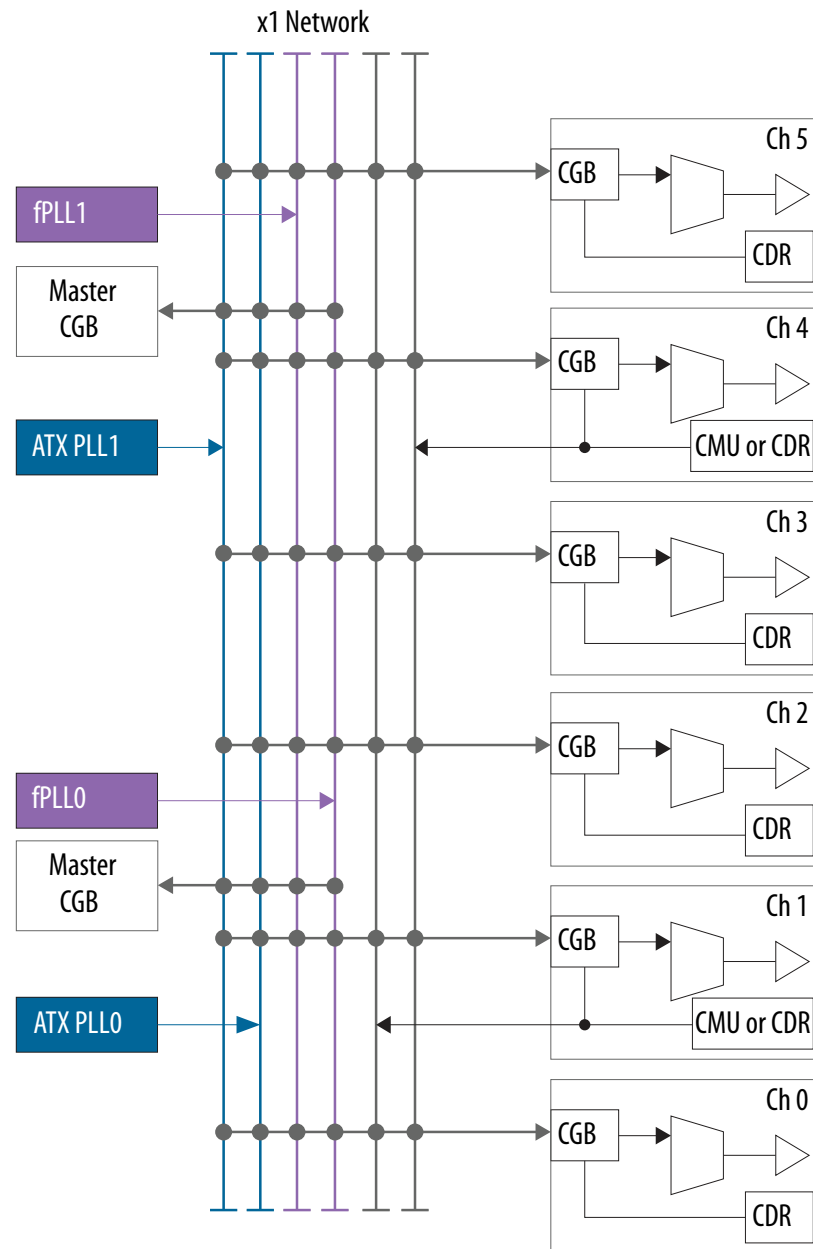


x6 Clock Lines

The x6 clock lines route the clock within a transceiver bank. The x6 clock lines are driven by the master CGB. There are two x6 clock lines per transceiver bank, one for each master CGB. Any channel within a transceiver bank can be driven by the x6 clock lines.

For bonded configuration mode, the low speed parallel clock output of the master CGB is used and the local CGB within each channel is bypassed. For non-bonded configurations, the master CGB can also provide a high speed serial clock output to each channel. In this case, the local CGB within each channel is not bypassed.

The x6 clock lines also drive the xN clock lines which route the clocks to the neighboring transceiver banks.

Figure 3-8: x6 Clock Lines

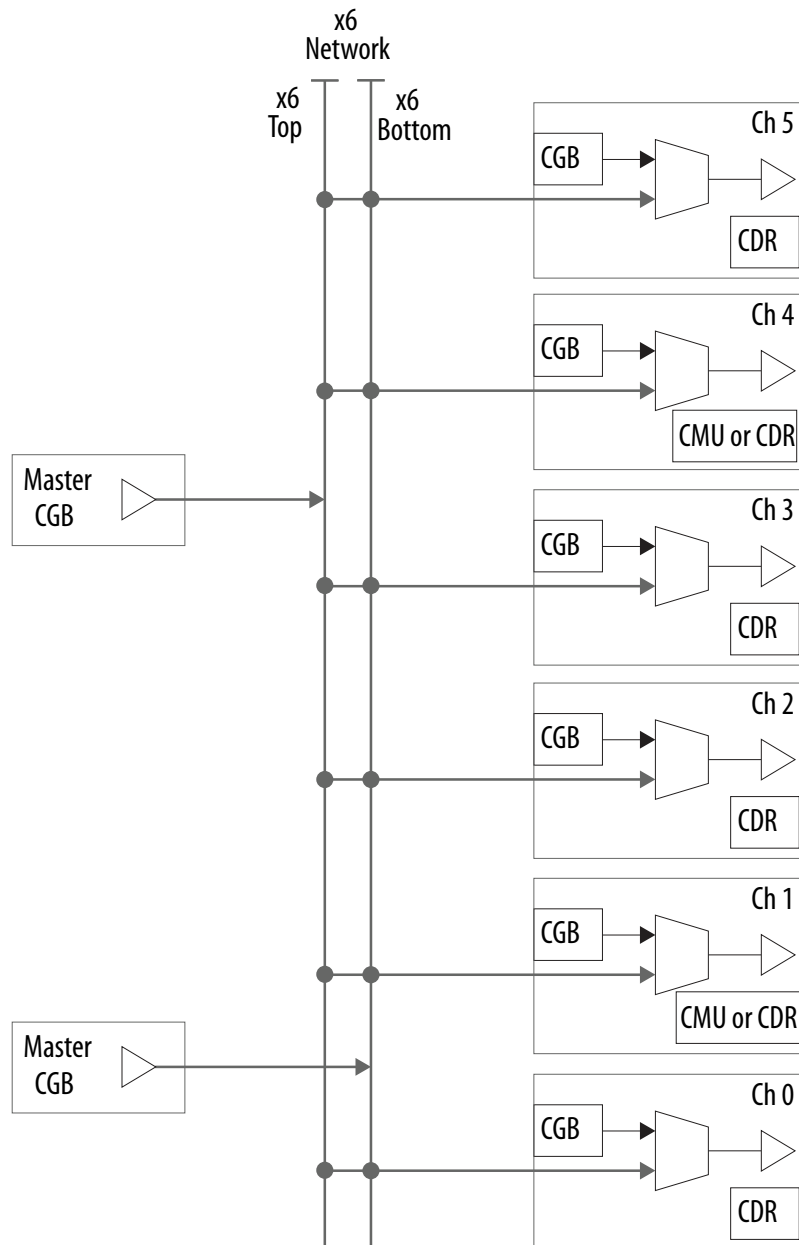


xN Clock Lines

The xN clock lines route the transceiver clocks across multiple transceiver banks.

The master CGB drives the x6 clock lines and the x6 clock lines drive the xN clock lines. There are two xN clock lines: xN Up and xN Down. xN Up clock lines route the clocks to transceiver banks located above the master CGB and xN Down clock lines route the clocks to transceiver banks located below the master CGB. The xN clock lines can be used in both bonded and non-bonded configurations. For bonded

configurations, the low speed parallel clock output of the master CGB is used, and the local CGB within each channel is bypassed. For non-bonded configurations, the master CGB provides a high speed serial clock output to each channel.

Figure 3-9: xN Clock Network

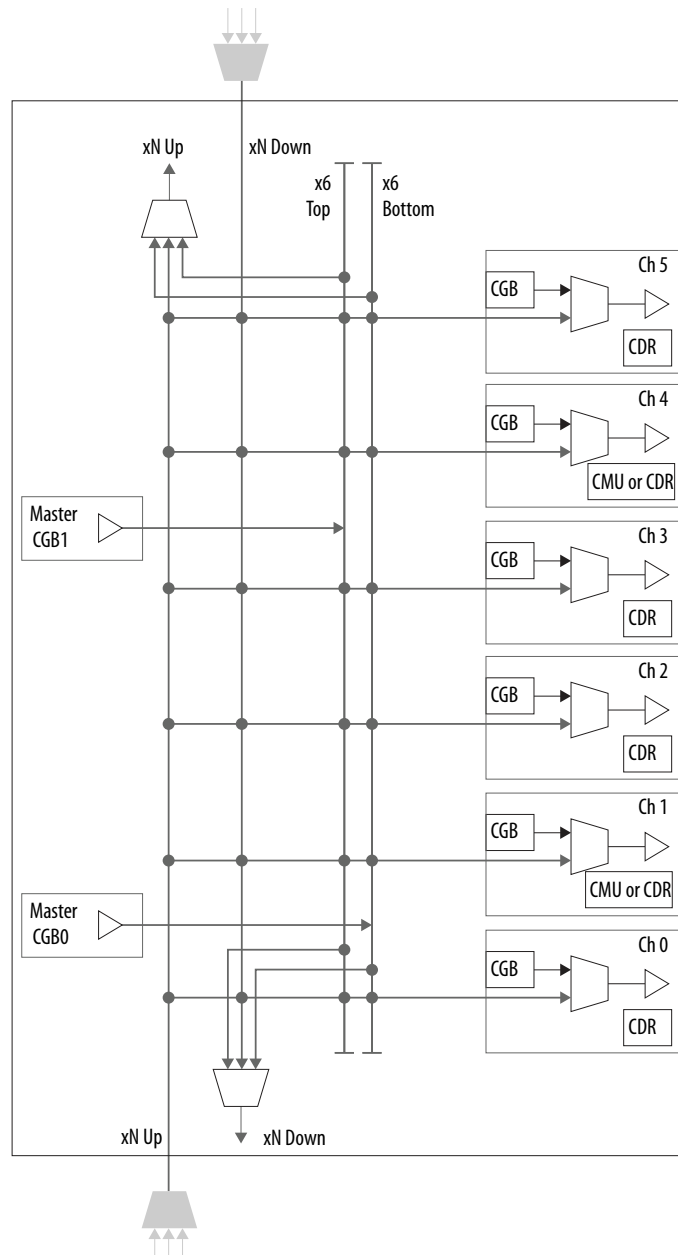

The maximum channel span of xN clock network is one transceiver bank above and one transceiver bank below the bank that contains the driving PLL and the master CGB. A maximum of 18 channels can be used in a single bonded or non-bonded xN group.

Note: For QPI protocols, the maximum channel span of xN clock network is two transceiver banks above and below the bank that contains the driving PLL and the master CGB.

The maximum data rate supported by the xN clock network while driving channels in either the bonded or non-bonded mode depends on the voltage used to drive the transceiver banks. All transceiver banks in a bonded group must share the same voltage. The data rates supported by different transceiver voltage levels are pending characterization.

Related Information


- [Implementing x6/xN Bonding Mode](#) on page 3-54
- [x6/xN Bonding](#) on page 3-44
- [Implementing x6/xN Bonding Mode](#) on page 3-54

GT Clock Lines

GT clock lines are dedicated clock lines available only in Arria 10 GT devices.

Each ATX PLL has two dedicated GT clock lines which connect the PLL directly to the transceiver channels within a transceiver bank. The top ATX PLL drives channels 3 and 4, and the bottom ATX PLL drives channels 0 and 1. These connections bypass the rest of the clock network for higher performance. These channels can be used only for non-bonded configurations.

Figure 3-10: GT Clock Lines

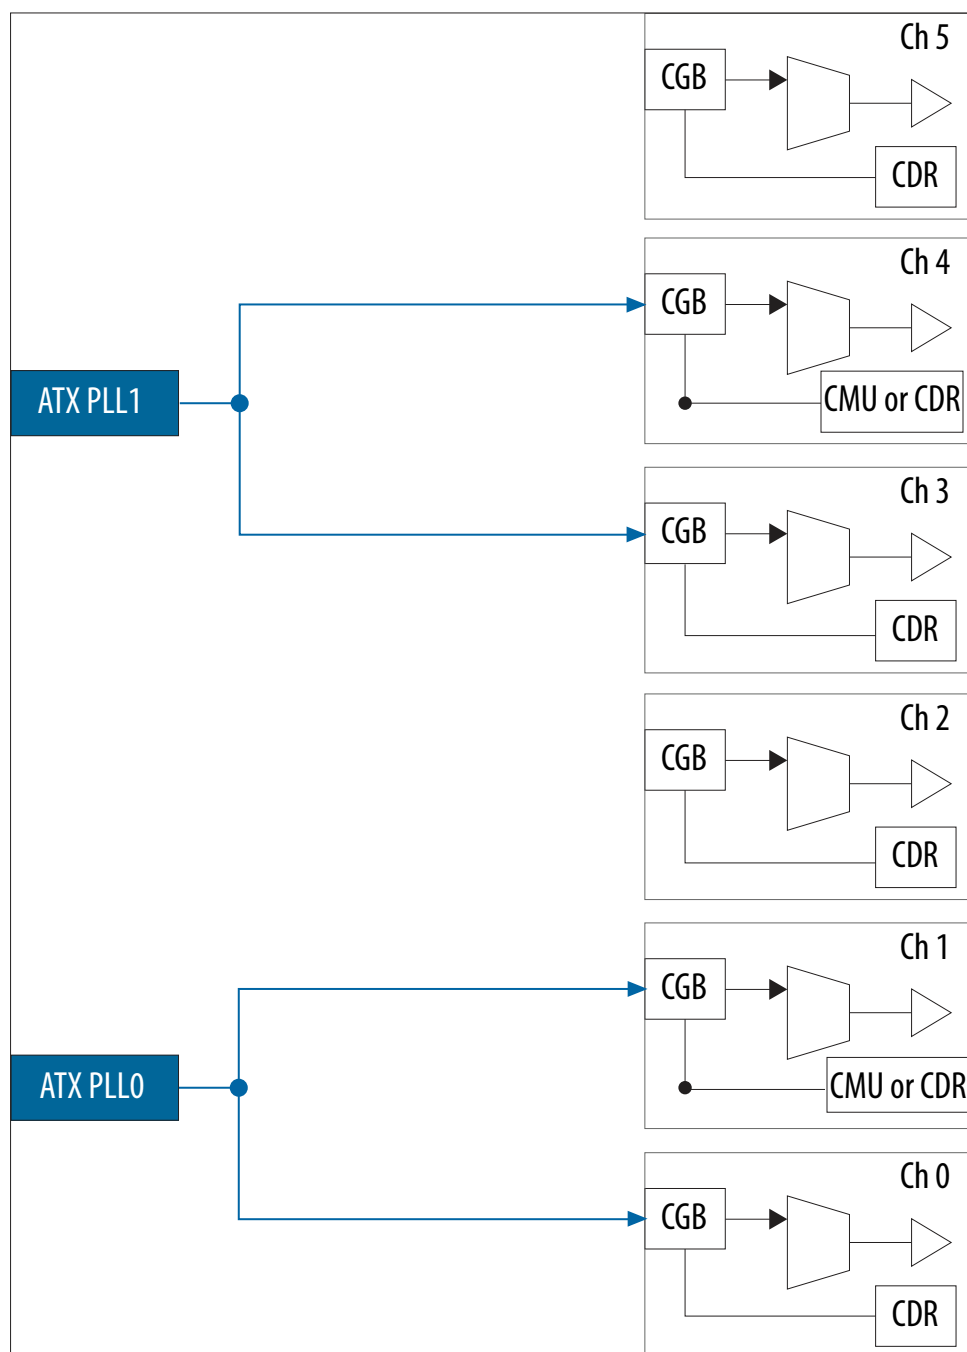

Clock Generation Block

In Arria 10 devices, there are two types of clock generation blocks (CGBs)


- Local clock generation block (local CGB)
- Master clock generation block (master CGB)

Each transmitter channel has a local clock generation block (CGB). For non-bonded channel configurations, the serial clock generated by the transmit PLL drives the local CGB of each channel. The local CGB generates the parallel clock used by the serializer and the PCS.

There are two standalone master CGBs within each transceiver bank. The master CGB provides the same functionality as the local CGB within each transceiver channel. The output of the master CGB can be routed to other channels within a transceiver bank using the x6 clock lines. The output of the master CGB can also be routed to channels in other transceiver banks using the xN clock lines. Each transmitter channel has a multiplexer to select its clock source from either the local CGB or the master CGB.

Figure 3-11: Clock Generation Block and Clock Network

The local clock for each transceiver channel can be sourced from either the local CGB via the x1 network, or the master CGB via the x6/xN network. For example, as shown by the red highlighted path, the ATX PLL 1 drives the x1 network which in turn drives the master CGB. The master CGB then drives the x6 clock network which routes the clocks to the local channels. As shown by the blue highlighted path, the ATX PLL 0 can also drive the x1 clock network which can directly feed a channel's local CGB. In this case, the low speed parallel clock is generated by the local CGB.

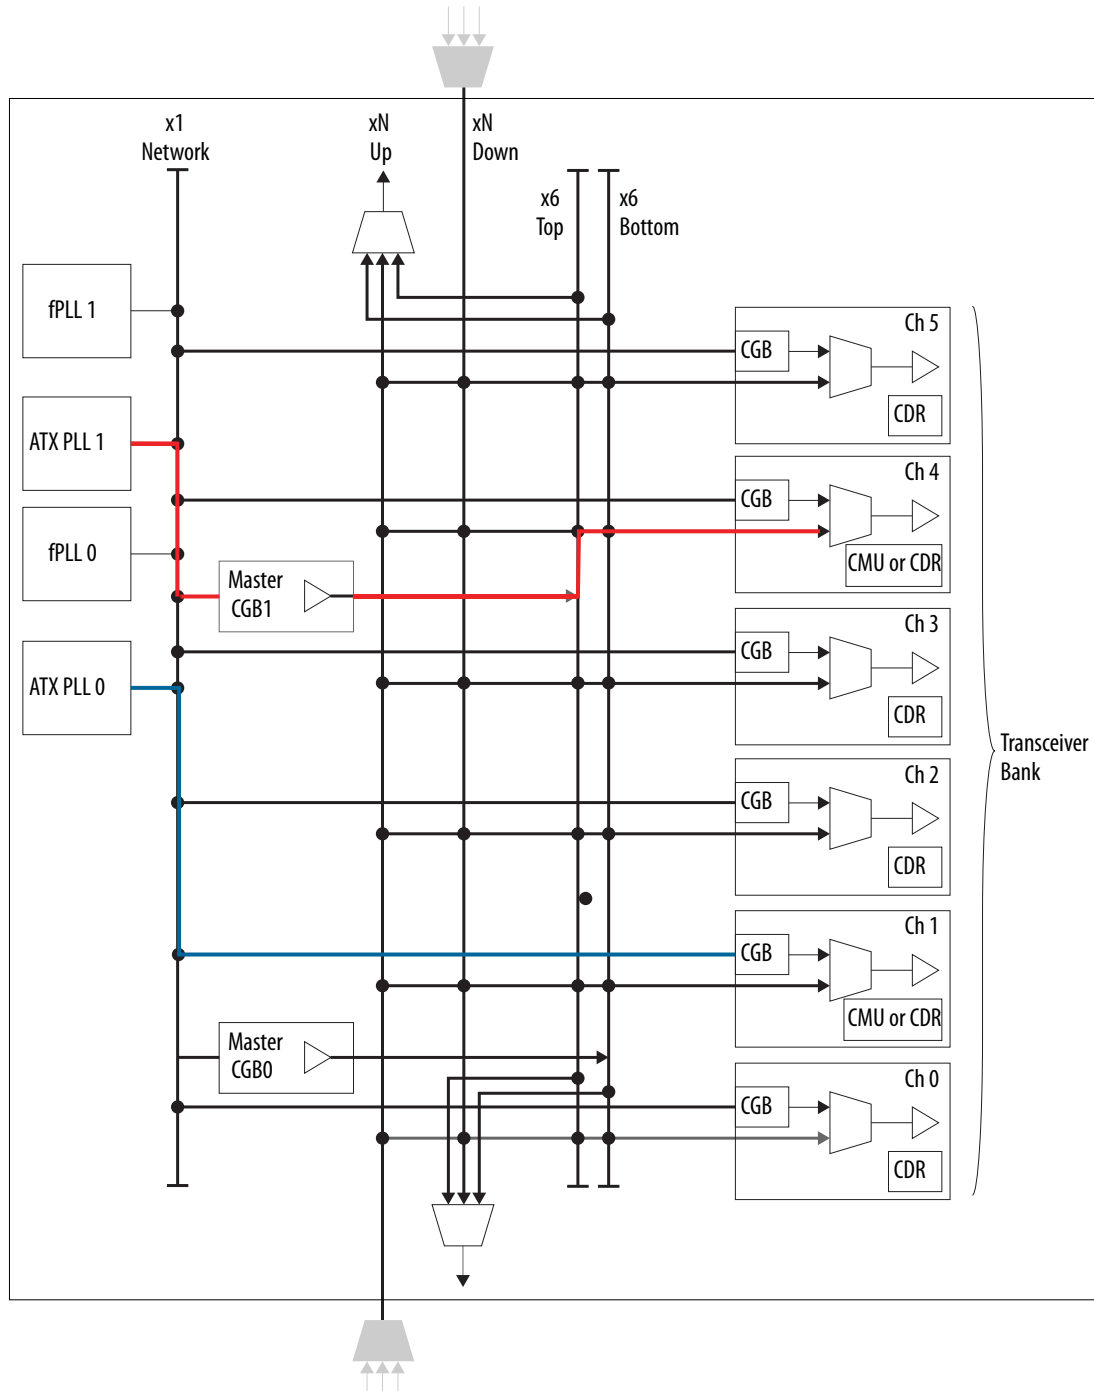


FPGA Fabric-Transceiver Interface Clocking

The FPGA fabric-transceiver interface consists of clock signals from the FPGA fabric into the transceiver and clock signals from the transceiver into the FPGA fabric. These clock signals use the global (GCLK), regional (RCLK), and periphery (PCLK) clock networks in the FPGA core.

The transmitter channel forwards a parallel output clock (`tx_clkout`) to the FPGA fabric to clock the transmitter data and control signals. The receiver channel forwards a parallel output clock to the FPGA fabric to clock the data and status signals from the receiver into the FPGA fabric. Based on the receiver channel configuration, the parallel output clock is recovered from either the receiver serial data or the `tx_clkout` clock (in configurations without the rate matcher) or the `tx_clkout` clock (in configurations with the rate matcher).

Figure 3-12: FPGA Fabric - Transceiver Interface Clocking

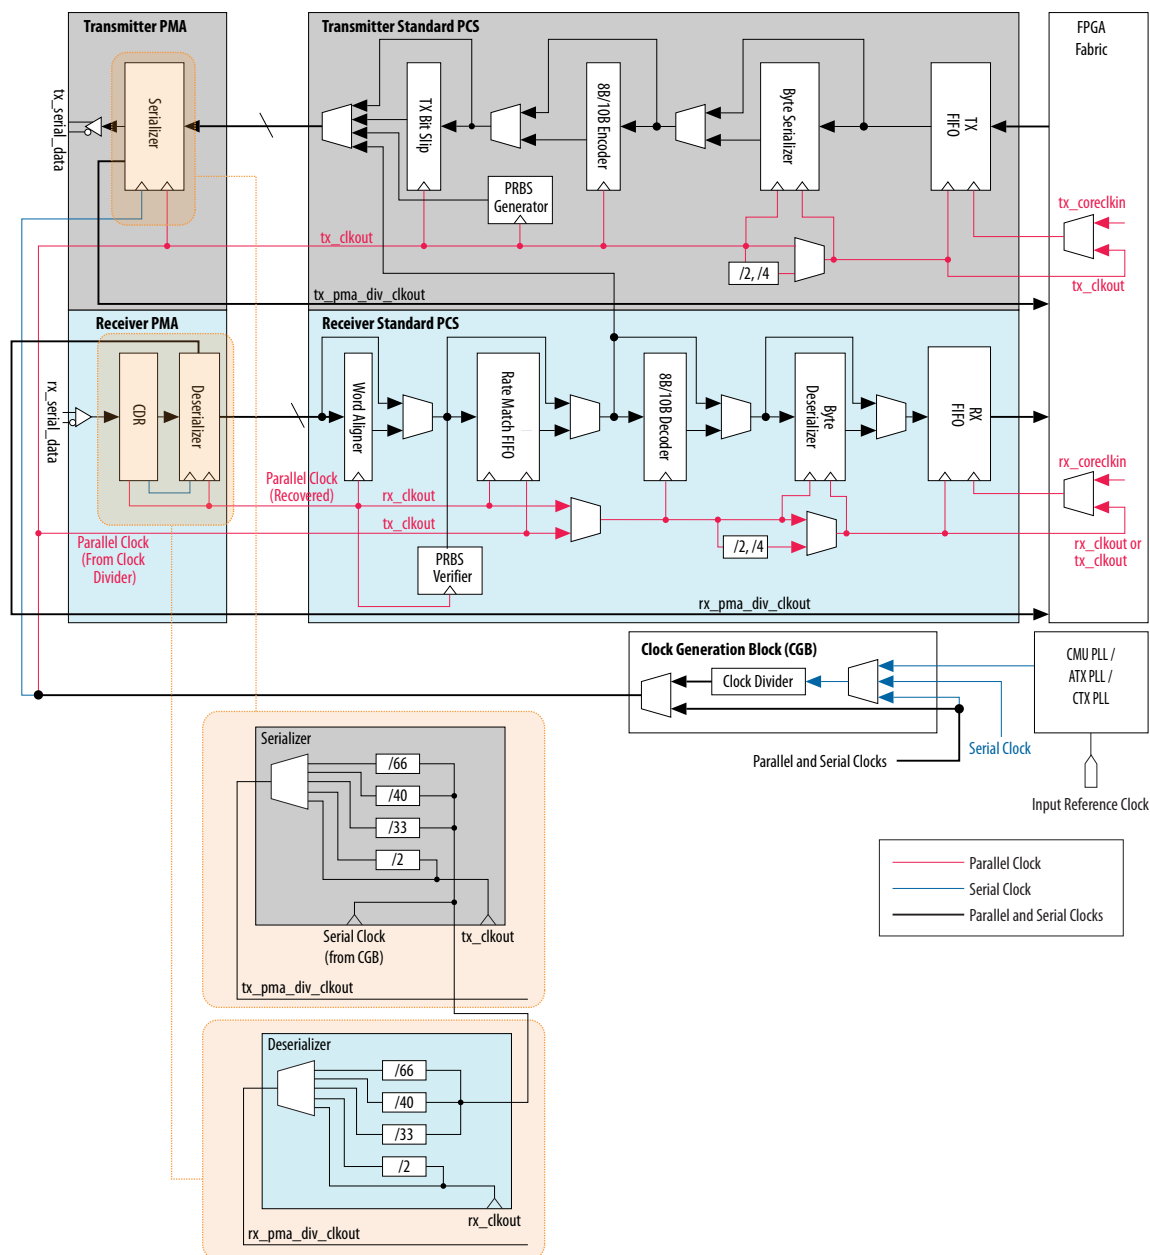

The divided versions of the tx_clkout and rx_clkout are available as tx_pma_div_clkout and rx_pma_div_clkout respectively.

The output frequency of tx_pma_div_clkout and rx_pma_div_clkout can be one of the following:

- A divided down version of the tx_clkout or rx_clkout respectively, where divide by 1 and divide by 2 ratios are available.
- A divided down version of the serializer clock where divide by 33, 40, and 66 ratios are available.

The tx_pma_div_clkout and rx_pma_div_clkout can be used as tx_coreclk or rx_coreclk and provide additional flexibility.

Note: Refer to "TX PMA Optional Ports" table in *PMA Parameters* section for details about selecting the division factor.

These clocks can be used to meet core timing by operating the TX and RX FIFO in double-width mode, as this halves the required clock frequency at the PCS to FPGA interface. These clocks can also be used to clock the core side of the TX and RX FIFOs when the Enhanced PCS Gearbox is used.

For example, if you use the Enhanced PCS Gearbox with a 66:40 ratio, then you can use `tx_pma_div_clkout` with a divide by 33 ratio to clock the write side of the TX FIFO, instead of using a PLL to generate the required clock frequency, or using an external clock source.

Related Information


PMA Parameters on page 2-22

Transmitter Data Path Interface Clocking

The clocks generated by the PLLs are used to clock the channel PMA and PCS blocks. The clocking architecture is different for the standard PCS and the enhanced PCS.

Figure 3-13: Transmitter Standard PCS and PMA Clocking

The master or the local CGB provides the high speed serial clock to the serializer of the transmitter PMA, and the low speed parallel clock to the transmitter PCS.

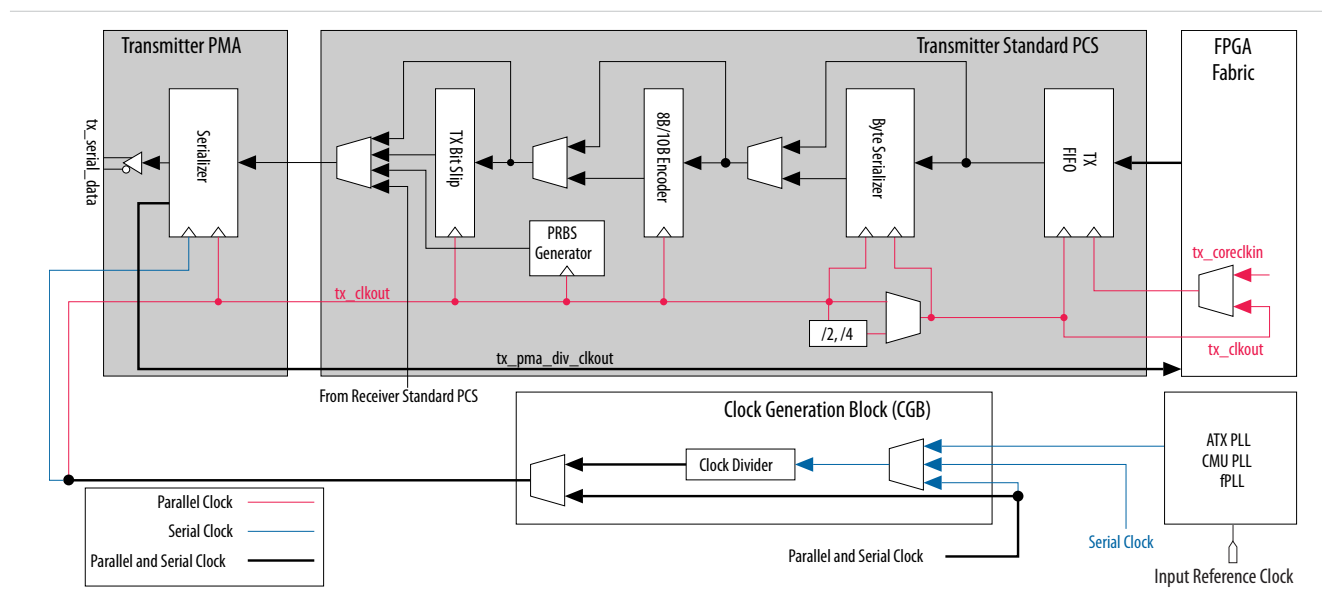


In the Standard PCS, for configurations that do not use the byte serializer, the parallel clock is used by all the blocks up to the read side of the TX phase compensation FIFO. For configurations that use the byte serializer block, the clock divided by 2 or 4 is used by the byte serializer and the read side of the TX phase compensation FIFO. The clock used to clock the read side of the TX phase compensation FIFO is also forwarded to the FPGA fabric to provide an interface between the FPGA fabric and the transceiver.

If the `tx_clkout` that is forwarded to the FPGA fabric is used to clock the write side of the phase compensation FIFO, then both sides of the FIFO have 0 ppm frequency difference because it is the same clock which is used.

If you choose to use a different clock than the `tx_clkout` to clock the write side of the phase compensation FIFO, then you must ensure that the clock provided must have 0 ppm frequency difference with respect to the `tx_clkout`.

Figure 3-14: Transmitter Enhanced PCS and PMA Clocking

The master or local CGB provides the serial clock to the serializer of the transmitter PMA, and the parallel clock to the transmitter PCS.

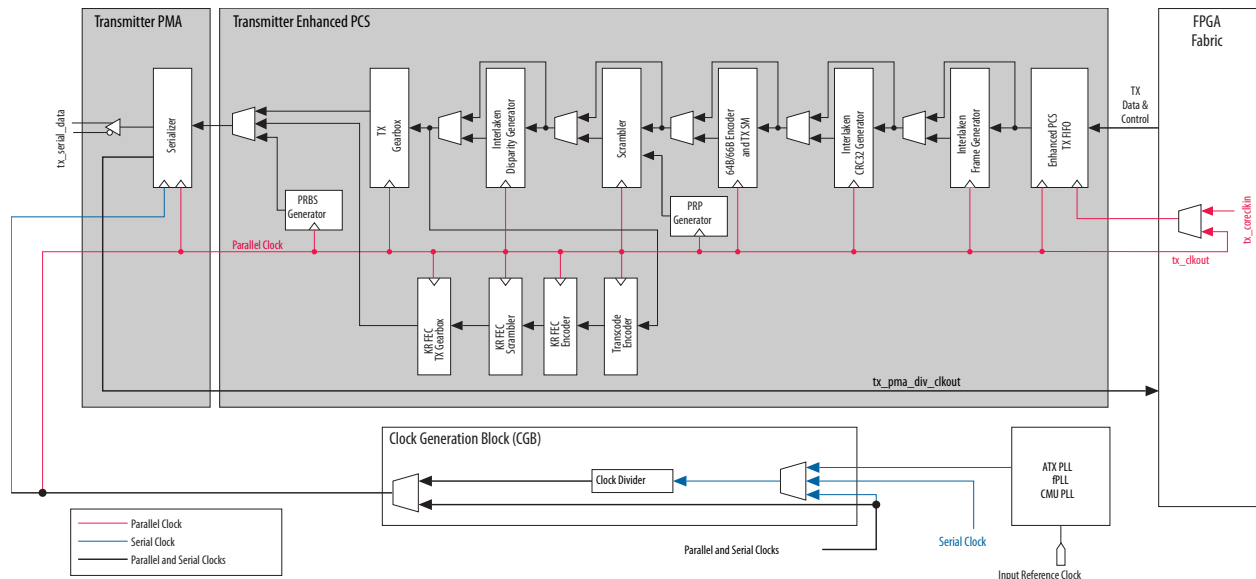

In the Enhanced PCS, the parallel clock is used by all the blocks up to the read side of the TX phase compensation FIFO.

For the enhanced PCS, the transmitter PCS forwards the following clocks to the FPGA fabric:

- `tx_clkout` for each transmitter channel in non-bonded configuration
- `tx_clkout[0]` for all transmitter channels in bonded configuration

You can clock the transmitter datapath interface by using one of the following methods:

- Quartus II selected transmitter datapath interface clock
- User selected transmitter datapath interface clock

Receiver Data Path Interface Clocking


The CDR block present in the PMA of each channel recovers the serial clock from the incoming data. The CDR block also divides the recovered serial clock to generate the recovered parallel clock. Both the

recovered serial and the recovered parallel clocks are used by the deserializer. The receiver PCS can use the following clocks based on the configuration of the receiver channel:

- Recovered parallel clock from the CDR in the PMA.
- Parallel clock from the clock divider used by the transmitter PCS (if enabled) for that channel.


For configurations that use the byte deserializer block, the clock divided by 2 or 4 is used by the byte deserializer and the write side of the RX phase compensation FIFO.

Figure 3-15: Receiver Standard PCS and PMA Clocking

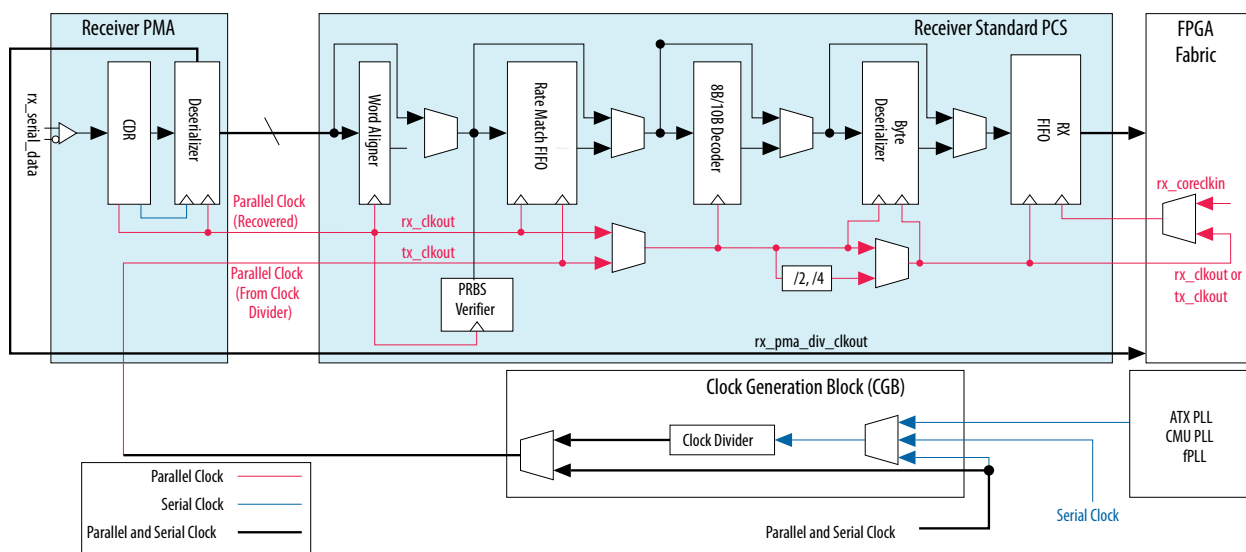

All configurations that use the standard PCS channel must have a 0 ppm phase difference between the receiver datapath interface clock and the read side clock of the RX phase compensation FIFO.

Figure 3-16: Receiver Enhanced PCS and PMA Clocking

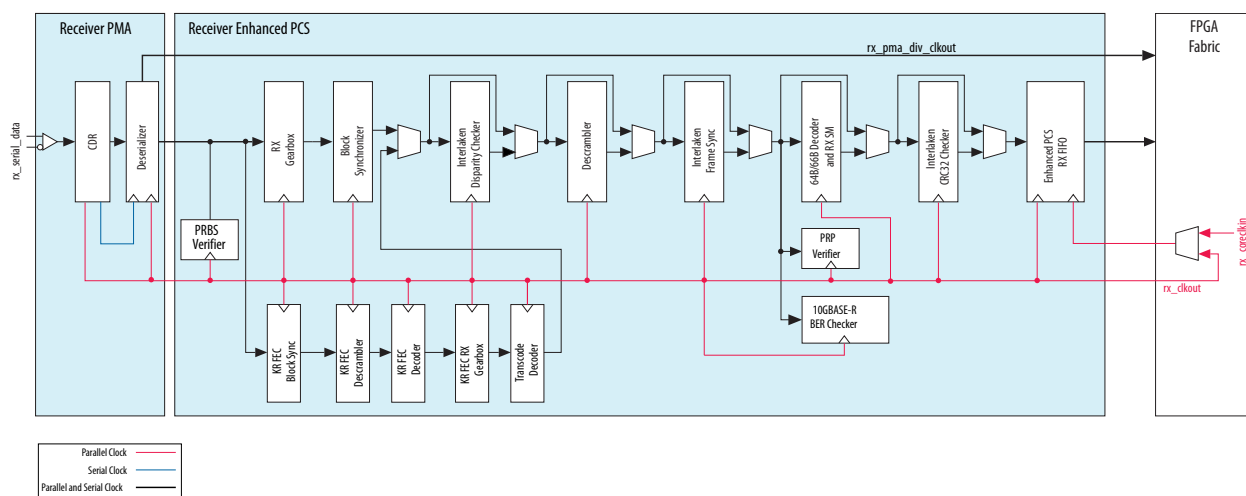

The receiver PCS forwards the following clocks to the FPGA fabric:

- `rx_clkout` — for each receiver channel in a non-bonded configuration when the rate matcher is not used.
- `tx_clkout` — for each receiver channel in a non-bonded configuration when the rate matcher is used.
- `single_rx_clkout[0]` — for all receiver channels in a bonded configuration (for both cases, when rate matcher is used and when rate matcher is not used)

You can clock the receiver datapath interface using either one of the following methods:

- Quartus II selected receiver datapath interface clock
- User-selected receiver datapath interface clock

Channel Bonding

For Arria 10 devices, two types of bonding modes are available:

- PMA bonding
- PMA and PCS bonding

Note: Channel bonding is not supported by GT channels.

PMA Bonding

PMA bonding reduces skew between PMA channels. In PMA bonding, only the PMA portion of the transceiver datapath is skew compensated and the PCS is not skew compensated.

In Arria 10 devices, there are two types of PMA bonding schemes:

- x6/xN bonding
- PLL feedback compensation bonding

In either case, the channels in the bonded group need not be placed contiguously.

x6/xN Bonding

In x6/xN bonding mode, a single transmit PLL is used to drive multiple channels.

The steps below explain the x6/xN bonding process:

1. The ATX PLL or the fPLL generates a high speed serial clock.
2. The PLL drives the high speed serial clock to the Master CGB via the x1 clock network.
3. The master CGB drives the high speed serial and the low speed parallel clock into the x6 clock network.
4. The x6 clock network feeds the TX clock multiplexer for the transceiver channels within the same transceiver bank. The local CGB in each transceiver channel is bypassed.
5. To drive the channels in adjacent transceiver banks, the x6 clock network drives the xN clock network. The xN clock network feeds the TX clock mutiplexer for the transceiver channels in these adjacent transceiver banks.

x6/xN Bonding Advantages over PLL Feedback Compensation Bonding

- x6/xN uses less resources compared to PLL feedback compensation bonding. Only one PLL and one master CGB are required to drive all channels in the bonded group.
- x6/xN has lower skew compared to PLL feedback compensation bonding.

x6/xN Bonding Disadvantages

x6/xN Bonding has the following disadvantages:

- The maximum data rate is restricted based on the transceiver supply voltage.
- The maximum channel span is limited to one transceiver bank above and below the bank containing the transmit PLL. Thus, the maximum span of 18 channels is supported.

Note: For QPI protocols, the maximum channel span supported by xN clock network is two transceiver banks above and below the bank containing the driving PLL and the master CGB. Thus, the maximum span of 30 channels is supported by the xN clock network.

Related Information

- [xN Clock Lines](#) on page 3-33
- [Implementing x6/xN Bonding Mode](#) on page 3-54

PLL Feedback Compensation Bonding

In PLL feedback compensation bonding, channels are divided into bonded groups based on physical location with a three-channel or six-channel transceiver bank. All channels within the same six-channel transceiver bank are assigned to the same bonded group.

In PLL feedback compensation bonding, each bonded group is driven by its own set of high speed serial and low speed parallel clocks. Each bonded group has its own PLL and master CGB. To maintain the same phase relationship, the PLL and master CGB for different groups share the same reference clocks.

The steps below explain the PLL feedback compensation bonding process:

1. The same input reference clock drives the local PLL in each three-channel or six-channel transceiver bank.
2. The local PLL for the bonding group drives the master CGB.
3. The master CGB feeds the x6 clock lines. The master CGB drives the transceiver channels in the bonding group via the x6 clock network.
4. The parallel output of the master CGB is the feedback input to the PLL.
5. In this mode, all channels are phase aligned to the same input reference clock.

PLL Feedback Compensation Bonding Advantages over x6/xN Bonding Mode

- There is no data rate restriction. The x6 clock network used for PLL feedback compensation bonding can run up to the maximum data rate of the device used.
- There is no channel span limitation. It is possible to bond the entire side of the device using PLL feedback compensation.

PLL Feedback Compensation Bonding Disadvantages over x6/xN Bonding Mode

- It uses more resources compared to x6/xN bonding. One PLL and one master CGB is used per transceiver bank. This causes higher power consumption compared to x6/xN bonding.
- The skew is higher compared to x6/xN bonding. The reference clock skew between each transceiver bank is higher than the skew contributed by the xN clock network in x6/xN bonding.
- Because the feedback clock for the PLL comes from the master CGB and not from the PLL, the PLL feedback compensation bonding mode has a reference clock limitation. The PLL's N-counter (reference clock divider) is bypassed resulting in only one valid reference clock frequency for a given data rate.

Note: In order to minimize the reference clock skew for PLL feedback compensation bonding, use a reference clock input near the center of the bonded group.

Related Information


[Implementing PLL Feedback Compensation Bonding Mode](#) on page 3-55

PMA and PCS Bonding

PMA and PCS bonding reduces skew between both the PMA and PCS outputs within a group of channels.

For PMA bonding, either x6/xN or PLL feedback compensation bonding is used. For PCS bonding, some of the PCS control signals within the bonded group are skew aligned using dedicated hardware inside the PCS.

Figure 3-17: PMA and PCS Bonding

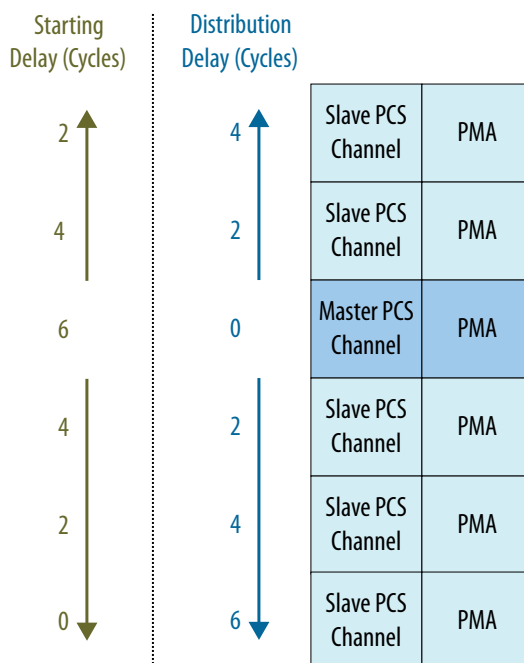

For PMA and PCS bonding, the concept of master and slave channels is used. One PCS channel in the bonded group is selected as the master channel and all others are slave channels. To ensure that all channels start transmitting data at the same time and in the same state, the master channel generates a start condition. This condition is transmitted to all slave channels. The signal distribution of this start condition incurs a two parallel clock cycle delay. Because this signal travels sequentially through each PCS channel, this delay is added per channel. The start condition used by each slave channel is delay compensated based on the slave channel's distance from the master channel. This results in all channels starting on the same clock cycle.

The transceiver PHY IP automatically selects the center channel to be the master PCS channel. This minimizes the total starting delay for the bonded group. You can override this default setting while parameterizing the PHY IP in the **IP Parameter Editor**. If PLL feedback compensation bonding is used then a maximum span of 32 channels in each direction from the master channel is supported by the hardware counter value for delay compensation. Thus, for PLL feedback compensation bonding a total of 65 channels can be bonded if the master PCS channel is placed in the center of the bonded group.

Note: Because the PMA and PCS bonding signals travel through each PCS block, the PMA and PCS bonded groups must be contiguously placed.

Selecting Channel Bonding Schemes

In Arria 10 devices, select PMA and PCS bonding for bonded protocols that are explicitly supported by the hard PCS blocks. For example, PCI-Express, SFI-S, and 40GBASE-KR.

Select PMA only bonding when a bonded protocol is not explicitly supported by the hard PCS blocks. For example, for Interlaken protocol, PMA only bonding is used and a soft PCS bonding IP is implemented in the FPGA fabric.

Skew Calculations

To calculate the maximum skew between the channels, the following parameters are used:

- PMA to PCS datapath interface width (S)
- Maximum difference in number of parallel clock cycles between deassertion of each channel's FIFO reset (N)

To calculate the channel skew, the following five scenarios are considered:

1. Non-bonded

In this case, both the PMA and PCS are non-bonded. Skew ranges from 0 UI to $[(S-1) + N \cdot S]$ UI.

2. PMA bonding using $x6 / xN$ clock network

In this case, the PCS is non-bonded. Skew ranges from $[0 \text{ to } (N \cdot S)]$ UI + $x6/xN$ clock skew.

3. PMA bonding using the PLL feedback compensation clock network

In this case, the PCS is non-bonded. Skew ranges from $[0 \text{ to } (N \cdot S)]$ UI + (reference clock skew) + ($x6$ clock skew).

4. PMA and PCS bonding using the $x6 / xN$ clock network

Skew = $x6/xN$ clock skew.


5. PMA and PCS bonding using PLL feedback compensation clock network

Skew = (reference clock skew) + ($x6$ clock skew)

PLL Feedback and Cascading Clock Network

The PLL feedback and cascading clock network spans the entire side of the device, and is used for PLL feedback compensation bonding and PLL cascading.

Figure 3-18: PLL Feedback and Cascading Clock Network

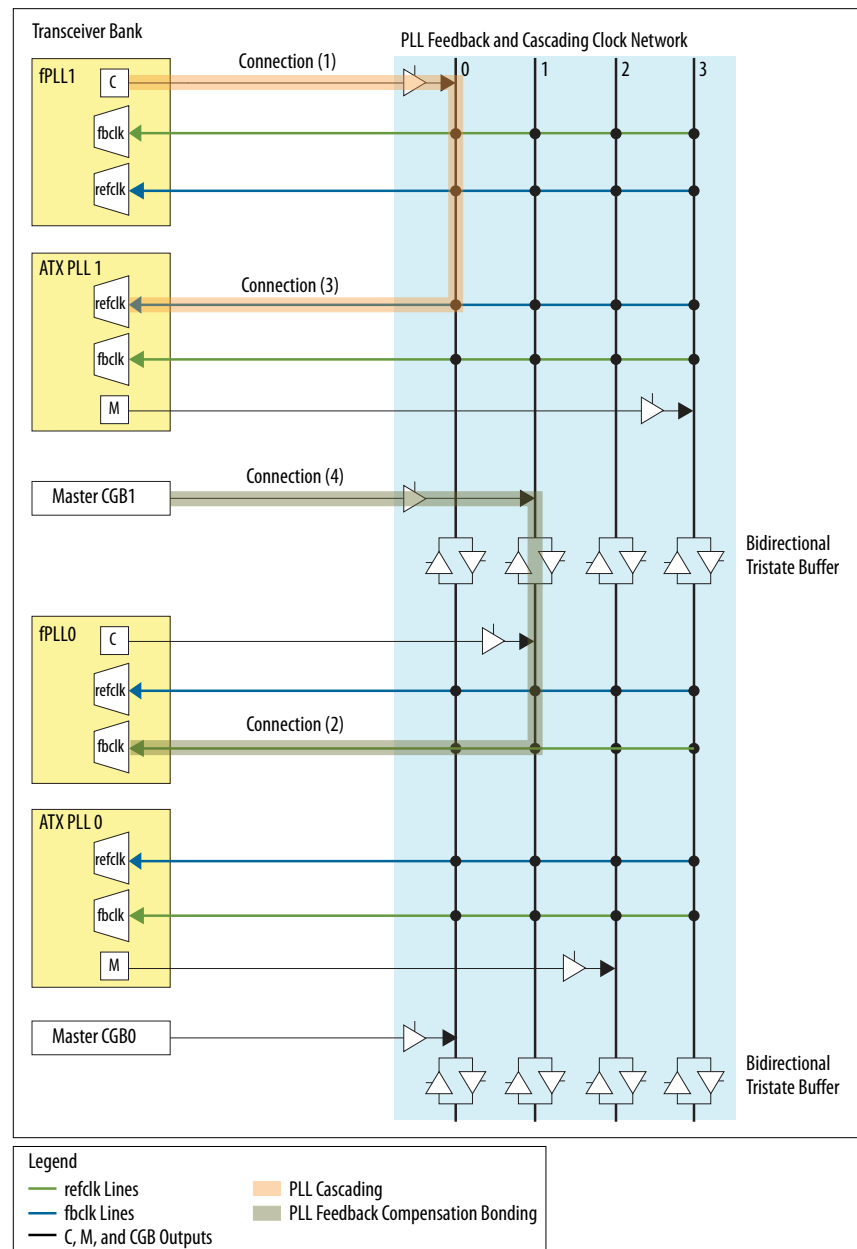

To support PLL feedback compensation bonding and PLL cascading, the following connections are present:

1. The **divided clock output** (the C counter output for fPLL or the M counter output for ATX PLL) of all PLLs drives the **feedback and cascading clock network**.
2. The **feedback and cascading clock network** drives the **feedback clock** input of all PLLs.
3. The **feedback and cascading clock network** drives the **reference clock** input of all PLLs.
4. The **master CGB's parallel clock output** drives the **feedback and cascading clock network**.

For PLL cascading, connections (1) and (3) are used to connect the output of one PLL to the reference clock input of another PLL. Arria 10 transceivers support only fPLL to fPLL, fPLL to ATX PLL, or fPLL to CMU PLL cascading.

For PLL feedback compensation bonding, connections (2) and (4) are used to connect the master CGB's parallel clock output to the PLL feedback clock input port.

PLL feedback compensation bonding can be used instead of xN bonding. The primary difference between PLL feedback compensation and xN bonding configurations, is for PLL feedback compensation, the bonded interface is broken down into smaller groups of 6 bonded channels within a transceiver bank. A PLL within each transceiver bank (ATX PLL or fPLL) is used as a transmit PLL. All the transmit PLLs share the same input reference clock.

In xN bonding configurations, one PLL is used for each bonded group. In PLL feedback compensation bonding, one PLL is used for each transceiver bank that the bonded group spans. There are no data rate limitations in PLL feedback compensation bonding, other than the natural data rate limitations of the transceiver channel and the PLL.

For feedback compensation bonding, the low speed parallel clock must be the same frequency as the reference clock for the PLL.

Note: Due to pending silicon characterization, Altera does not recommend using PLL cascading in ACDS 14.0 Arria 10 edition and 14.1 versions of the Quartus II software.

Related Information

[Implementing PLL Cascading](#) on page 3-57

Using PLLs and Clock Networks

In Arria 10 devices, PLLs are not integrated in the Native PHY IP core. You must instantiate the PLL IP cores separately. Unlike in previous device families, PLL merging is no longer performed by the Quartus II software. This gives you more control, transparency, and flexibility in the design process. You can specify the channel configuration and PLL usage.

Related Information

[Clock Networks](#)

Non-bonded Configurations


In a non-bonded configuration, only the high speed serial clock is routed from the transmitter PLL to the transmitter channel. The low speed parallel clock is generated by the local clock generation block (CGB) present in the transceiver channel. For non-bonded configurations, because the channels are not related to each other and the feedback path is local to the PLL, the skew between channels cannot be calculated. Also, the skew introduced by the clock network is not compensated.

Implementing Single Channel x1 Non-Bonded Configuration

In x1 non-bonded configuration, the PLL source is local to the transceiver bank and the x1 clock network is used to distribute the clock from the PLL to the transmitter channel.

For a single channel design, a PLL is used to provide the clock to a transceiver channel.

Figure 3-19: PHY IP Core and PLL IP Core Connection for Single Channel x1 Non-Bonded Configuration Example

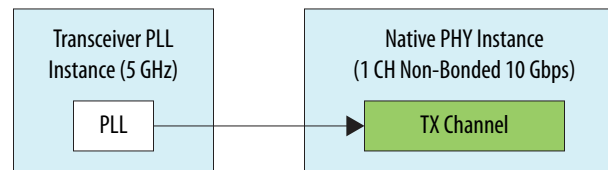

To implement this configuration, instantiate a PLL IP core and a PHY IP core and connect them together as shown in the above figure.

Steps to implement a Single Channel x1 Non-Bonded Configuration


1. Instantiate the PLL IP core (ATX PLL, fPLL, or CMU PLL) you want to use in your design.
 - Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 or [Instantiating CMU PLL IP Core](#) on page 3-23 or [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps.
2. Configure the PLL IP core using the **IP Parameter Editor**.
 - For ATX PLL IP core, do not include the Master CGB.
 - For fPLL IP core, set the PLL feedback operation mode to **direct**.
 - For CMU PLL IP core, specify the reference clock and the data rate. No special configuration rule is required.
3. Configure the Native PHY IP core using the **IP Parameter Editor**.
 - Set the **Native PHY IP TX Channel bonding mode** to **Non Bonded**.
4. Connect the PLL IP core to the Native PHY IP core. Connect the tx_serial_clk output port of the PLL to IP to the corresponding tx_serial_clk0 input port of the Native PHY IP. This port represents the input to the local CGB of the channel. The tx_serial_clk for the PLL represents the high speed serial clock generated by the PLL.

Implementing Multi-Channel x1 Non-Bonded Configuration

This configuration is an extension of the x1 non-bonded case. In the following example, 10 channels are connected to two instances of the PLL IP core. Two PLL instances are required because PLLs using the x1 clock network can only span the 6 channels within the same transceiver bank. A second PLL instance is required to provide the clock to the remaining 4 channels.

Because 10 channels are not bonded and are unrelated, you can use a different PLL type for the second PLL instance. It is also possible to use more than two PLL IP cores and have different PLLs driving different channels. If some channels are running at different data rates, then you need different PLLs driving different channels.

Figure 3-20: PHY IP Core and PLL IP Core Connection for Multi-Channel x1 Non-Bonded Configuration

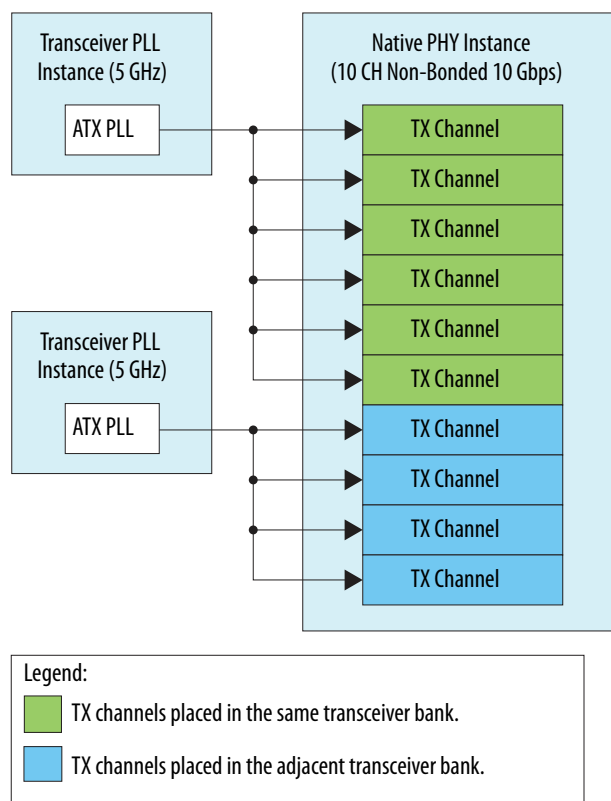

Steps to implement a Multi-Channel x1 Non-Bonded Configuration


1. Choose the PLL IP (ATX PLL, fPLL, or CMU PLL) you want to instantiate in your design and instantiate the PLL IP.
 - Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 or [Instantiating CMU PLL IP Core](#) on page 3-23 or [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps.
2. Configure the PLL IP using the **IP Parameter Editor**
 - For the ATX PLL IP core do not include the Master CGB.
 - For the fPLL IP core, set the PLL feedback operation mode to **direct**.
 - For the CMU PLL IP core, specify the reference clock and the data rate. No special configuration rule is required.
3. Configure the Native PHY IP core using the **IP Parameter Editor**
 - Set the **Native PHY IP TX Channel bonding mode** to **Non-Bonded**.
 - Set the number of channels as per your design requirement. In this example, the number of channels is set to 10.
4. Create a top level wrapper to connect the PLL IP core to the Native PHY IP core.
 - The `tx_serial_clk` output port of the PLL IP represents the high speed serial clock.
 - The Native PHY IP has 10 (for this example) `tx_serial_clk` input ports. Each port corresponds to the input of the local CGB of the transceiver channel.
 - As shown in the figure above, connect the first 6 `tx_serial_clk` input to the first transceiver PLL instance.
 - Connect the remaining 4 `tx_serial_clk` input to the second transceiver PLL instance.

Implementing Multi-Channel xN Non-Bonded Configuration

Using the xN non-bonded configuration reduces the number of PLL resources and the reference clock sources used.

Figure 3-21: PHY IP Core and PLL IP Core Connection for Multi-Channel xN Non-Bonded Configuration

In this example, the same PLL is used to drive 10 channels across two transceiver banks.

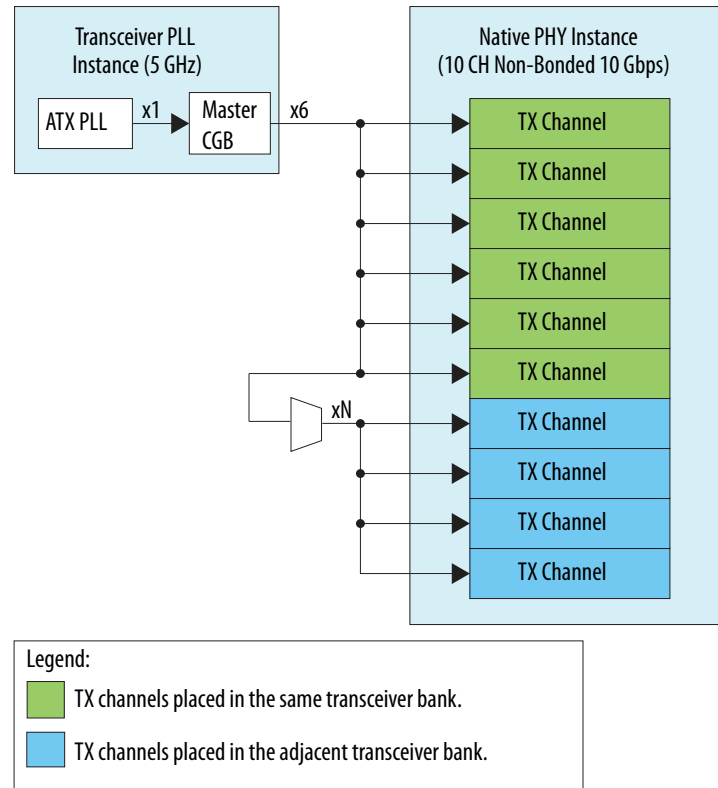


Steps to implement a multi-channel xN non-bonded configuration

1. You can use either the ATX PLL or fPLL for multi-channel xN non-bonded configuration.
 - Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 or [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps.
 - Because the CMU PLL cannot drive the master CGB, only the ATX PLL or fPLL can be used for this example.
2. Configure the PLL IP core using the **IP Parameter Editor**. Enable **Include Master Clock Generation Block**.
3. Configure the Native PHY IP core using the **IP Parameter Editor**
 - Set the **Native PHY IP TX Channel bonding mode** to **Non-Bonded**.
 - Set the number of channels as per your design requirement. In this example, the number of channels is set to 10.
4. Create a top level wrapper to connect the PLL IP core to the Native PHY IP core.

- In this case, the PLL IP core has mcgb_serial_clk output port. This represents the xN clock line.
- The Native PHY IP core has 10 (for this example) tx_serial_clk input ports. Each port corresponds to the input of the local CGB of the transceiver channel.
- As shown in the figure above, connect the mcgb_serial_clk output port of the PLL IP core to the 10 tx_serial_clk input ports of the Native PHY IP core.

Figure 3-22: Multi-Channel x1/xN Non-Bonded Example

The ATX PLL IP core has a tx_serial_clk output port. This port can optionally be used to clock the six channels within the same transceiver bank as the PLL. These channels are clocked by the x1 network. The remaining four channels outside the transceiver bank are clocked by the xN clock network.

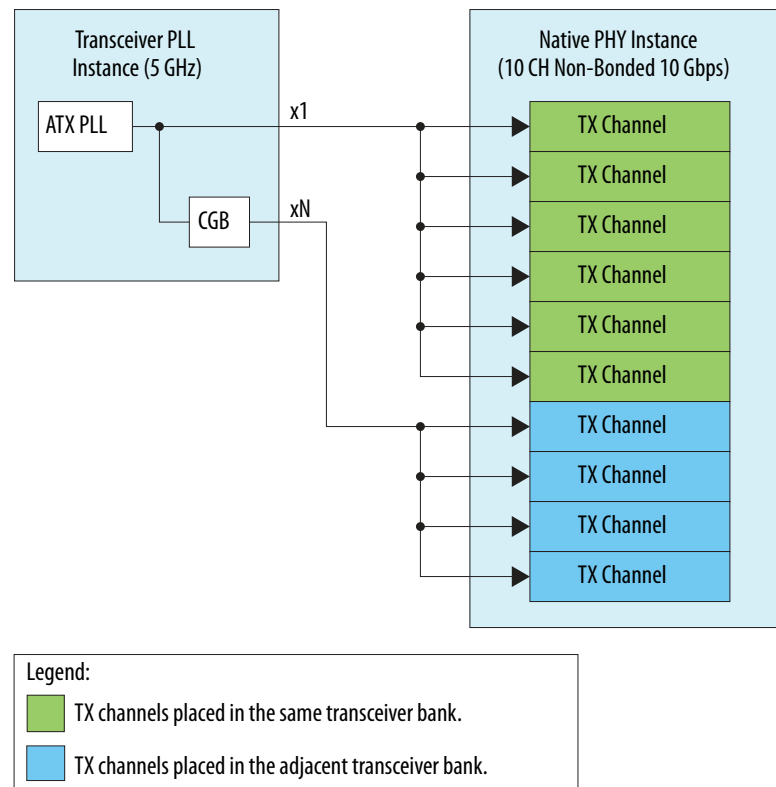


Bonded Configurations

In a bonded configuration, both the high speed serial and low speed parallel clocks are routed from the transmitter PLL to the transmitter channel. In this case, the local CGB in each channel is bypassed and the parallel clocks generated by the master CGB are used to clock the network.

In bonded configurations, the transceiver clock skew between the channels is minimum. Use bonded configurations for channel bonding to implement protocols such as PCIe and XAUI.

Implementing x6/xN Bonding Mode

Figure 3-23: PHY IP Core and PLL IP Core Connection for x6/xN Bonding Mode

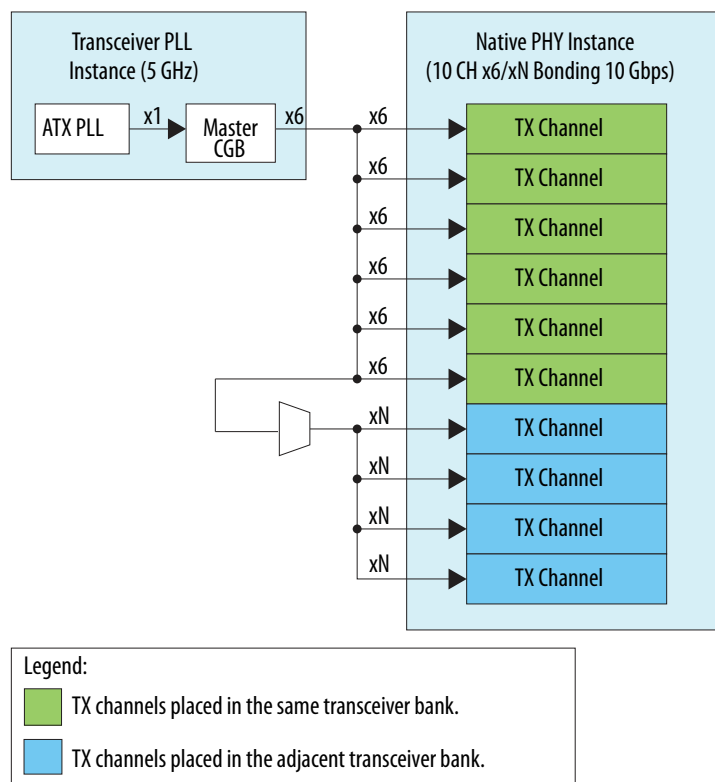

Steps to implement a x6/xN bonded configuration

1. You can instantiate either the ATX PLL of the fPLL for x6/xN bonded configuration.
 - Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 or [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps. Because the CMU PLL cannot drive the Master CGB, only the ATX PLL or fPLL can be used for this example.
2. Configure the PLL IP core using the **IP Parameter Editor**. Enable **Include Master Clock Generation Block**.
3. Configure the Native PHY IP using the **IP Parameter Editor**
 - Set the **Native PHY IP TX Channel bonding mode** to either **PMA bonding** or **PMA/PCS bonding**.
 - Set the number of channels required by your design. In this example, the number of channels is set to 10.
4. Create a top level wrapper to connect the PLL IP core to Native PHY IP core.


- In this case, the PLL IP core has tx_bonding_clocks output bus with width [5:0].
- The Native PHY IP core has tx_bonding_clocks input bus with width [5:0] multiplied by the number of transceiver channels (10 in this case). For 10 channels, the bus width will be [59:0].

Note: While connecting tx_bonding_clocks, leave pll_ref_clk open to avoid any Quartus II software fitter errors.

- Connect the PLL IP core to the PHY IP core by duplicating the output of the PLL[5:0] for the number of channels. For 10 channels, the Verilog syntax for the input port connection is `.tx_bonding_clocks ({10{tx_bonding_clocks_output}})`.

Note: Although the above diagram looks similar to the 10-channel non-bonded configuration example, the clock input ports on the transceiver channels bypass the local CGB in x6/xN bonding configuration. This internal connection is taken care of when the **Native PHY channel bonding mode** is set to **Bonded**.

Figure 3-24: x6/xN Bonding Mode —Internal Channel Connections

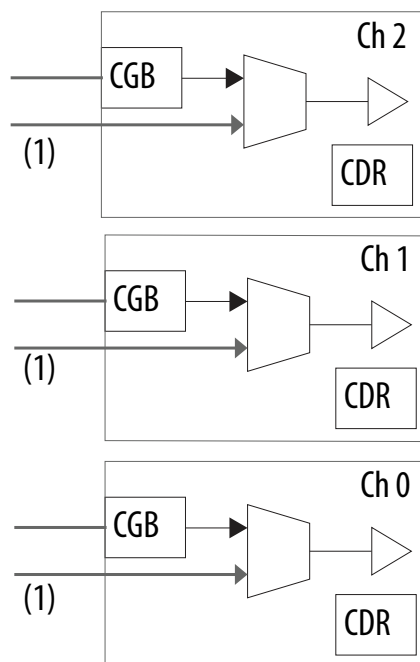

Note: (1) The local CGB is bypassed by the clock input ports in bonded mode.

Related Information


[xN Clock Lines](#) on page 3-33

Information on xN Clock Network Span.

Implementing PLL Feedback Compensation Bonding Mode

In this bonding mode, the channel span limitations of xN bonding mode are removed. This is achieved by dividing all channels into multiple bonding groups.

Figure 3-25: PHY IP Core and PLL IP Core Connection for PLL Feedback Compensation Bonding

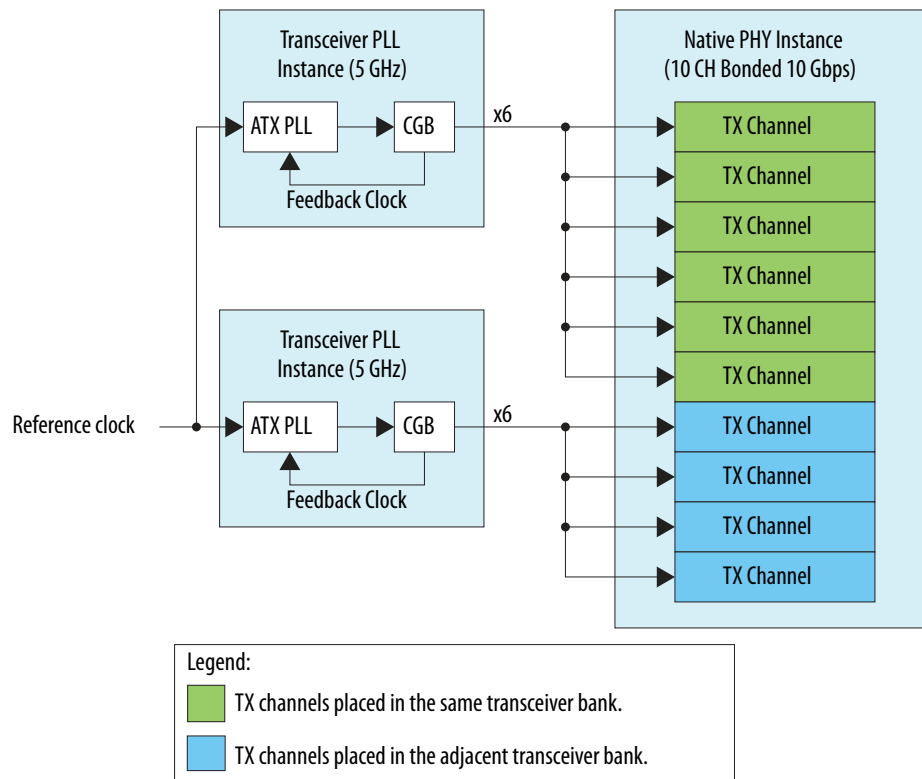

The data rate is limited by the x6 network speed limit. A disadvantage of using PLL feedback compensation bonding is that it consumes more PLL resources. Each transceiver bank consumes one PLL and one master CGB.

In PLL feedback compensation bonding mode, the N counter (reference clock divider) is bypassed in order to ensure that the reference clock skew is minimized between the PLLs in the bonded group. Because the N counter is bypassed the PLL reference clock has a fixed value for any given data rate.

The **PLL IP Parameter Editor** window displays the required data rate in the **PLL reference clock frequency** drop down menu.

Steps to implement a PLL Feedback Compensation Bonding Configuration

1. Instantiate the PLL IP core (ATX PLL or fPLL) you want to use in your design. Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 or [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps. Because the CMU PLL cannot drive the master CGB, only the ATX PLL or fPLL can be used for this example.
2. Configure the PLL IP core using the **IP Parameter Editor**.

- If you use the ATX PLL, set the following configuration settings:
 - Under the **Master Clock Generation Block Tab**
 - Enable **Include Master Clock Generation Block**.
 - Turn ON **Enable Bonding Clock output ports**.
 - Turn ON **Enable feedback compensation bonding**.
 - If you use the fPLL, set the following configuration settings:
 - Under the **PLL Tab**
 - Set the **PLL Feedback type** to **feedback compensation bonding**.
 - Under the **Master Clock Generation Block Tab**
 - Turn ON **Enable Bonding Clock output ports**.
- 3. Configure the Native PHY IP using the **IP Parameter Editor**
 - Set the **Native PHY IP TX Channel bonding mode** to either **PMA bonding** or **PMA/PCS bonding**.
- 4. Create a top level wrapper to connect the PLL IP core to Native PHY IP core.
 - In this case, the PLL IP has tx_bonding_clocks output bus with width [5:0].
 - The Native PHY IP has tx_bonding_clocks input bus with width [5:0] multiplied by the number of channels in a transceiver bank. (six channels in the transceiver bank).
 - Unlike the x6/xN bonding mode, for this mode, the PLL should be instantiated multiple times. (One PLL is required for each transceiver bank that is a part of the bonded group.) Instantiate a PLL for each transceiver bank used.
 - Connect the tx_bonding_clocks output from each PLL to (up to) six channels in the same transceiver bank.
 - Connect the PLL IP core to the PHY IP core by duplicating the output of the PLL[5:0] for the number of transceiver channels used in the bonding group.

Note: For this 10-channel example, two ATX PLLs are instantiated. 6 channels of the tx_bonding_clocks on the Native PHY IP core are connected to the first ATX PLL and the remaining four channels are connected to the second ATX PLL's tx_bonding_clock outputs.


Implementing PLL Cascading

In PLL cascading, the output of the first PLL feeds the input reference clock to the second PLL.

For example, if the input reference clock has a fixed frequency, and the desired data rate was not an integer multiple of the input reference clock. In this case, the first PLL can be used to generate the correct reference clock frequency. This output is fed as the input reference clock to the second PLL. This second PLL generates the clock frequency required for the desired data rate.

The transceivers in Arria 10 devices support fPLL to fPLL or fPLL to ATX PLL cascading. The first PLL must be the fPLL.

Figure 3-26: PLL Cascading

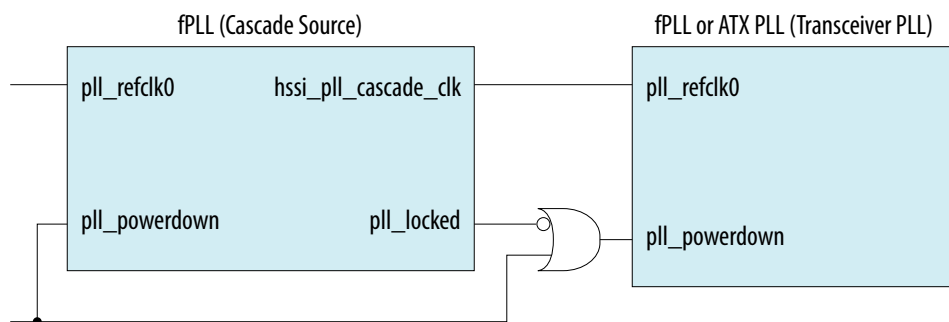**Steps to implement fPLL to ATX PLL cascading:**

1. Instantiate the fPLL IP. Refer to [Instantiating fPLL IP Core](#) on page 3-15 for detailed steps.
2. Set the following configuration settings for the fPLL IP core in the **Parameter Editor**:
 - Set the **fPLL Mode** to **Cascade Source**.
 - Set the **Desired output clock frequency**.
3. Instantiate the ATX PLL IP core (the second PLL in PLL cascading configuration). Refer to [Instantiating the ATX PLL IP Core](#) on page 3-5 for more details.
4. Configure the ATX PLL IP for the desired data rate and the reference clock frequency. Set reference clock frequency for the ATX PLL same as the output frequency of the fPLL.
5. Connect the fPLL IP core (cascade source) to ATX PLL IP core (transceiver PLL) as shown in the above figure. Ensure the following connections:
 - The fPLL has an output port `hssi_pll_cascade_clk`. Connect this port to the ATX PLL's `pll_refclk0` port.
 - For `pll_powerdown`, both the PLLs can share the same `pll_powerdown` or use independent power down sources.
 - Invert (perform logical NOT) `pll_powerdown` of the ATX PLL and then logical OR it (inverted `pll_powerdown`) with `pll_locked` signal of the first PLL. This ensures that the second PLL (downstream PLL) is powered down until the first PLL has successfully locked to the input reference clock. This prevents the second PLL from trying to lock until the output of the first PLL is stable.
6. Ensure both the PLLs are calibrated. If the input reference clock is available at device power-up, no special considerations are required to calibrate the PLLs. If the input reference clock is not available at device power-up, then re-run the calibration for the first PLL. Only when the output of first PLL is stable, re-run the calibration for the second PLL.


Notes:

- No special configuration is required for the Native PHY instance.
- The procedure for fPLL to fPLL cascading is similar to the one described for fPLL to ATX PLL cascading.
- Due to pending silicon characterization, Altera does not recommend using PLL cascading in ACDS 14.0 Arria 10 edition and 14.1 version of the Quartus II software.

Mix and Match Example

In the Arria 10 transceiver architecture, the separate Native PHY IP core and the PLL IP core core scheme allows great flexibility. It is easy to share PLLs and reconfigure data rates. The following design example illustrates PLL sharing and both bonded and non-bonded clocking configurations.

Figure 3-27: Mix and Match Design Example

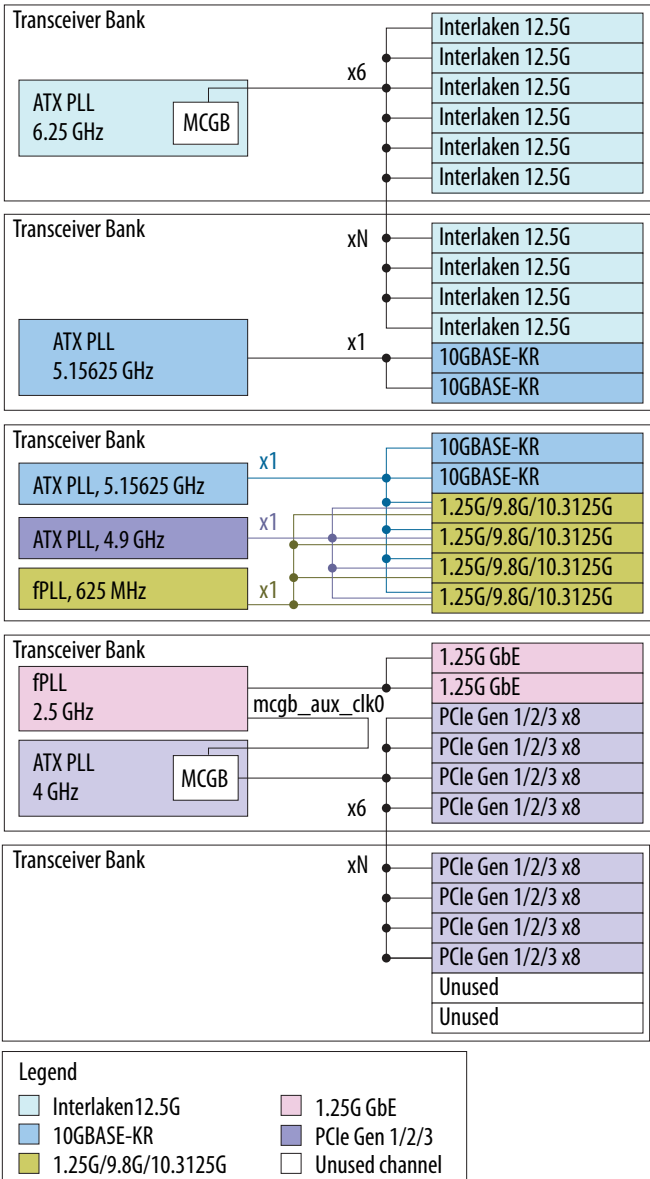

PLL Instances

In this example, five ATX PLL instances and two fPLL instances are used. Choose an appropriate reference clock for each PLL instance. The **IP Catalog** lists the available PLLs.

Use the following data rates and configuration settings for PLL IP cores:

- Transceiver PLL Instance 0: ATX PLL with output clock frequency of 6.25 GHz
 - Enable the Master CGB and bonding output clocks.
- Transceiver PLL instance 1: ATX PLL with output clock frequency of 5.1625 GHz
- Transceiver PLL instance 2: ATX PLL with output clock frequency of 5.1625 GHz
- Transceiver PLL instance 3: ATX PLL with output clock frequency of 4.9 GHz
- Transceiver PLL instance 4: fPLL with output clock frequency of 0.625 GHz
 - Select the **Use as Transceiver PLL** option.
- Transceiver PLL instance 5: fPLL with output clock frequency of 2.5 GHz
 - Select **Enable PCIe clock output port** option.
 - Select **Use as Transceiver PLL** option.
 - Set Protocol Mode to PCIe Gen2.
 - Select the **Use as Core PLL** option
 - Set the **Desired frequency** to 500 MHz with a phase shift of 0 ps.
- Transceiver PLL instance 6: ATX PLL with output clock frequency of 4 GHz
 - Enable Master CGB and bonding output clocks.
 - Select **Enable PCIe clock switch interface** option.
 - Set **Number of Auxiliary MCGB Clock Input ports** to 1.

Native PHY IP Instances

In this example, four Transceiver Native PHY IP instances and four 10GBASE-KR PHY IP instances are used. Use the following data rates and configuration settings for the PHY IPs:

- 12.5 Gbps Interlaken with a bonded group of 10 channels
 - Set the Interlaken 10x12.5 Gbps preset from the Arria 10 Transceiver Native PHY IP GUI.
 - Refer to [Interlaken](#) on page 2-76 for more details.
- Custom multi-data rate 1.25G/9.8G/10.3125 Gbps non-bonded group of four channels
 - Set the **Number of data channels** to 4.
 - Set **TX channel bonding** to Not Bonded.
 - Under the **TX PMA** tab, set the **Number of TX PLL clock inputs per channel** to 3.
 - Under the **RX PMA** tab, set the **Number of CDR reference clocks** to 3.
- 1.25 Gbps Gigabit Ethernet with a non-bonded group of two channels
 - Set the **GIGE-1.25Gbps** preset from the Arria 10 Transceiver Native PHY IP GUI.
 - Change the **Number of data channels** to 2.
- PCIe Gen3 with a bonded group of 8 channels
 - Set the **PCIe PIPE Gen3x8** preset from the Arria 10 Transceiver Native PHY IP GUI.
 - Under **TX Bonding options**, set the **PCS TX channel bonding master** to channel 5.
Note: The PCS TX channel bonding master must be physically placed in channel 1 or channel 4 within a transceiver bank. In this example, the 5th channel of the bonded group is physically placed at channel 1 in the transceiver bank.
 - Refer to [PCI Express \(PIPE\)](#) on page 2-231 for more details.
- 10.3125 Gbps 10GBASE-KR non-bonded group of 4 channels
 - Instantiate the Arria 10 1G/10GbE and 10GBASE-KR PHY IP four times, with one instance for each channel.
 - Refer to [10GBASE-KR PHY IP Core](#) on page 2-126 for more details.

Connection Guidelines for PLL and Clock Networks

- For 12.5 Gbps Interlaken with a bonded group of 10 channels, connect the tx_bonding_clocks to the transceiver PLL's tx_bonding_clocks output port. Make this connection for all 10 bonded channels. This connection uses a master CGB and the x6 / xN clock line to reach all the channels in the bonded group.
- Connect the tx_serial_clk port of the first two instances of the 10GBASE-KR PHY IP to the tx_serial_clk port of PLL instance 1 (ATX PLL at 5.1625 GHz). This connection uses the x1 clock line within the transceiver bank.
- Connect the tx_serial_clk port of the remaining two instances of the 10GBASE-KR PHY IP to the tx_serial_clk port of the PLL instance 2 (ATX PLL at 5.1625 GHz). This connection uses the x1 clock line within the transceiver bank.
- Connect the three tx_serial_clk ports for the custom multi-data rate PHY IP as follows:
 - Connect tx_serial_clk0 port to the tx_serial_clk port of PLL instance 2 (ATX PLL at 5.1625 GHz). This PLL instance is shared with the two 10GBASE-KR PHY IP channels and also uses the x1 clock line within the transceiver bank.
 - Connect the tx_serial_clk1 port to the tx_serial_clk port of the PLL instance 3 (ATX PLL at 4.9 GHz). This connection uses the x1 clock line within the transceiver bank.
 - Connect the tx_serial_clk2 port to the tx_serial_clk port of the PLL instance 4 (ATX PLL at 4.9 GHz). This connection uses the x1 clock line within the transceiver bank.
- Connect the 1.25 Gbps Gigabit Ethernet non-bonded PHY IP instance to the tx_serial_clk port of the PLL instance 5. Make this connection twice, one for each channel. This connection uses the x1 clock line within the transceiver bank.
- Connect the PCIe Gen3 bonded group of 8 channels as follows:
 - Connect the tx_bonding_clocks of the PHY IP to the tx_bonding_clocks port of the Transceiver PLL Instance 6. Make this connection for each of the 8 bonded channels.
 - Connect the pipe_sw_done of the PHY IP to the pipe_sw port of the transceiver PLL instance 6.
 - Connect the pll_pcie_clk port of the PLL instance 5 to the PHY IP's pipe_hclk_in port.
 - Connect tx_serial_clk port of the PLL instance 5 to the mcgb_aux_clk0 port of the PLL instance 6. This connection is required as a part of the PCIe speed negotiation protocol.

2014.12.15

UG-01143




Subscribe



Send Feedback

To ensure that transceiver channels are ready to transmit and receive data, you must properly reset the transceiver PHY. Altera recommends a reset sequence that ensures the physical coding sublayer (PCS) and physical medium attachment (PMA) in each transceiver channel initialize and function correctly.

Figure 4-1: Typical Transceiver PHY Implementation

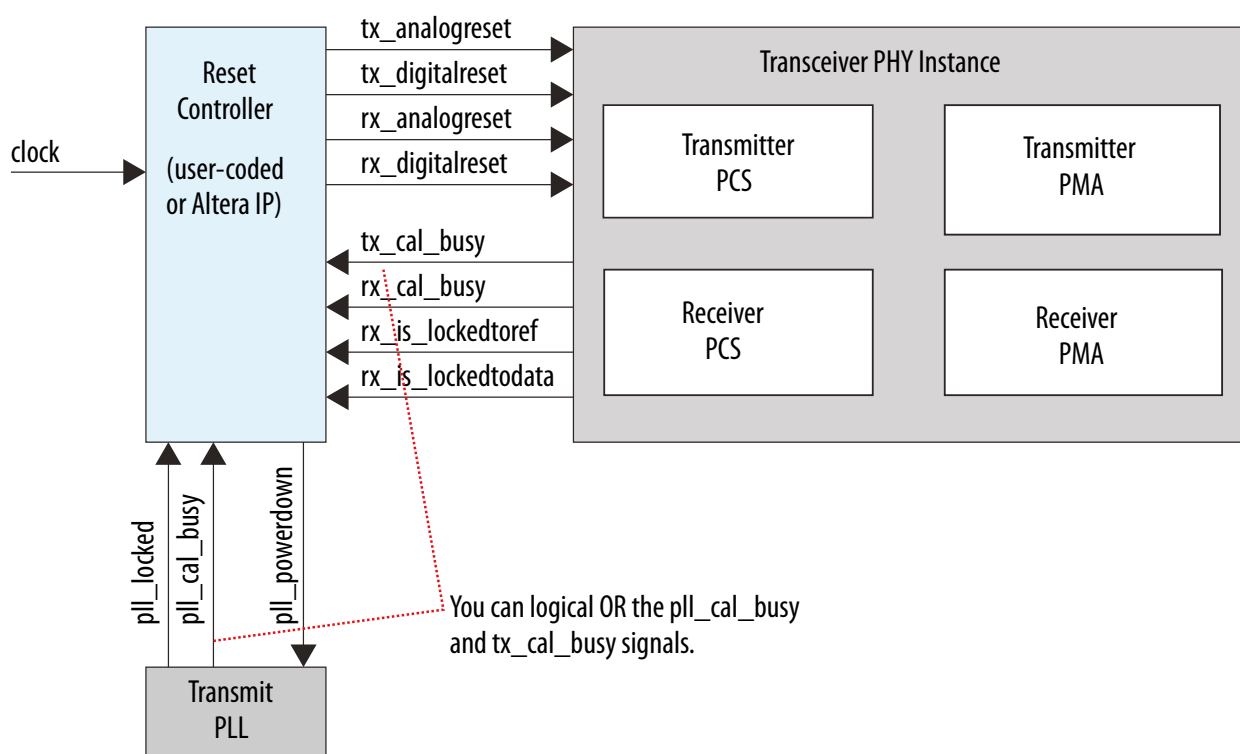

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



When Is Reset Required?

You can reset the transmitter (TX) and receiver (RX) data paths independently or together. The recommended reset sequence requires reset and initialization of the PLL driving the TX or RX channels, as well as the TX and RX datapaths. A reset may be required after any of the following events:

Table 4-1: Reset Conditions


Event	Reset Requirement
Device power up and configuration	Requires reset to the transceiver PHY and the associated PLLs to a known initialize state.
PLL reconfiguration	Requires reset to ensure that the PLL acquires lock at optimal operating conditions and also to reset the PHY.
PLL reference clock frequency change	Requires reset to the PLL to ensure PLL lock. You must also reset the PHY.
PLL recalibration	Requires reset to the PLL to ensure PLL lock. You must also reset the PHY.
PLL lock loss or recovery	Requires reset after a PLL acquired lock from a momentary loss of lock. You must also reset the PHY.
Channel dynamic reconfiguration	Requires reset to the PLL and the PHY to initialize blocks for the new configuration.
Optical module connection	Requires reset of RX to ensure lock of incoming data.
RX CDR lock mode change	Requires reset of the RX channel any time the RX clock and data recovery (CDR) block switches from lock-to-reference to lock-to-data RX channel.

How Do I Reset?

You reset a transceiver PHY or PLL by integrating a reset controller in your system design to initialize the PCS and PMA blocks. You can save time by using the Altera-provided Transceiver PHY Reset Controller IP core, or you can implement your own reset controller that follows the recommended reset sequence. You can design your own reset controller if you require individual control of each signal for reset or need additional control or status signals as part of the reset functionality.

Recommended Reset Sequence

Figure 4-2: Transmitter and Receiver Reset Sequence

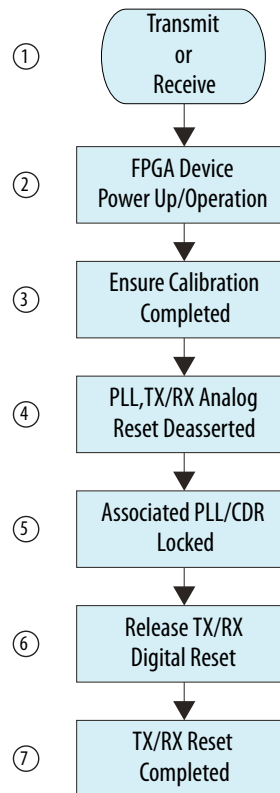

Resetting the Transmitter After Device Power-Up


The FPGA automatically calibrates the PLL at every power-up before entering user-mode. Perform a reset sequence after the device enters user-mode. Your User-Coded Reset Controller must comply with the reset sequence below to ensure a reliable transmitter initialization after the initial power-up calibration.

The following steps detail the transmitter reset sequence during device power-up. The step numbers correspond to the numbers in the following waveform.

1. Ensure that the `pll_cal_busy` and `tx_cal_busy` signals are low. Deassert the transmitter PLL `pll_powerdown` and `tx_analogreset`.
2. Wait for `pll_locked` to go high.
3. Deassert `tx_digitalreset`. The transmitter is now out of reset and ready for operation.

Note: The TX PLL reference clock must be valid and stable before `pll_powerdown` is deasserted so that the TX PLL is properly calibrated for the target data run.

Figure 4-3: Transmitter Reset Sequence After Power-Up

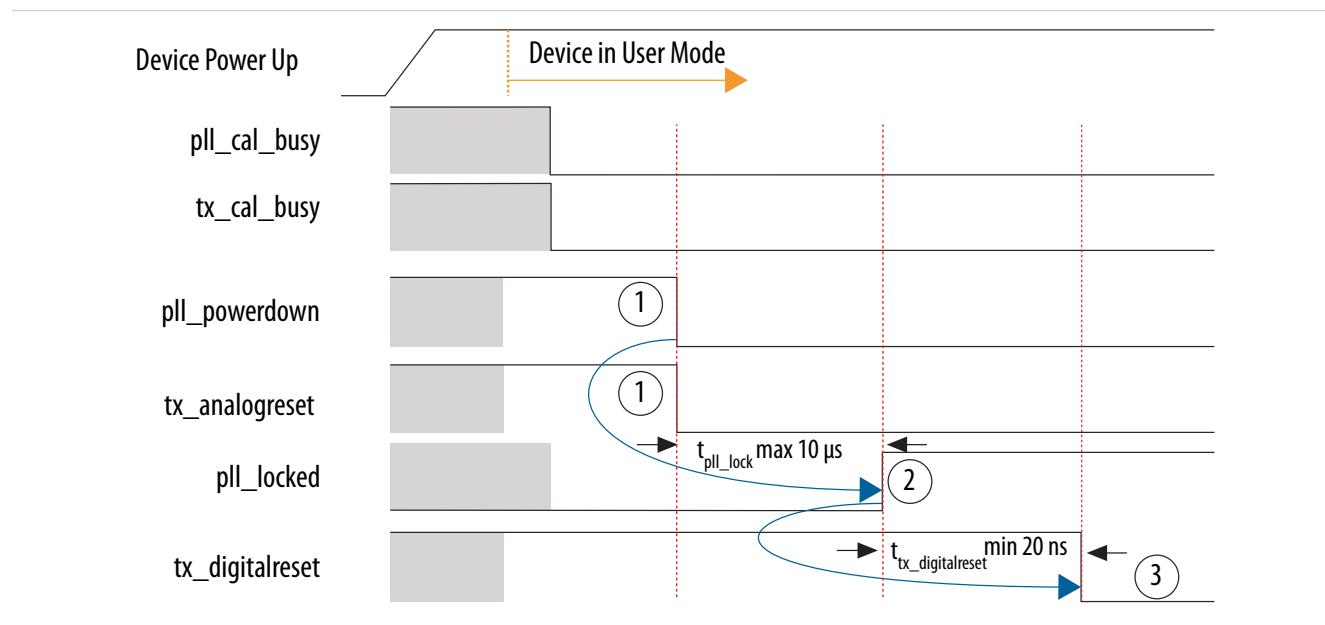


Resetting the Transmitter During Device Operation

Follow this reset sequence to reset the PLL or the analog or digital blocks of the transmitter at any point during the device operation. Use this reset to reestablish a link or after dynamic reconfiguration. The following steps detail the transmitter reset sequence during device operation. The step numbers correspond to the numbers in the following waveform.

1. Perform the following steps:
 - a. Assert `pll_powerdown`, `tx_analogreset`, and `tx_digitalreset` while `pll_cal_busy` and `tx_cal_busy` are low.
 - b. Deassert `pll_powerdown` after a minimum duration of $t_{pll\_powerdown}$.
 - c. Deassert `tx_analogreset`. This step can be done at the same time or after you deassert `pll_powerdown`.
2. The `pll_locked` status signal goes high after the TX PLL acquires lock.
3. Deassert `tx_digitalreset` after `pll_locked` goes high.

Note: You must reset the PCS blocks by asserting `tx_digitalreset`, every time you assert `pll_powerdown` and `tx_analogreset`.

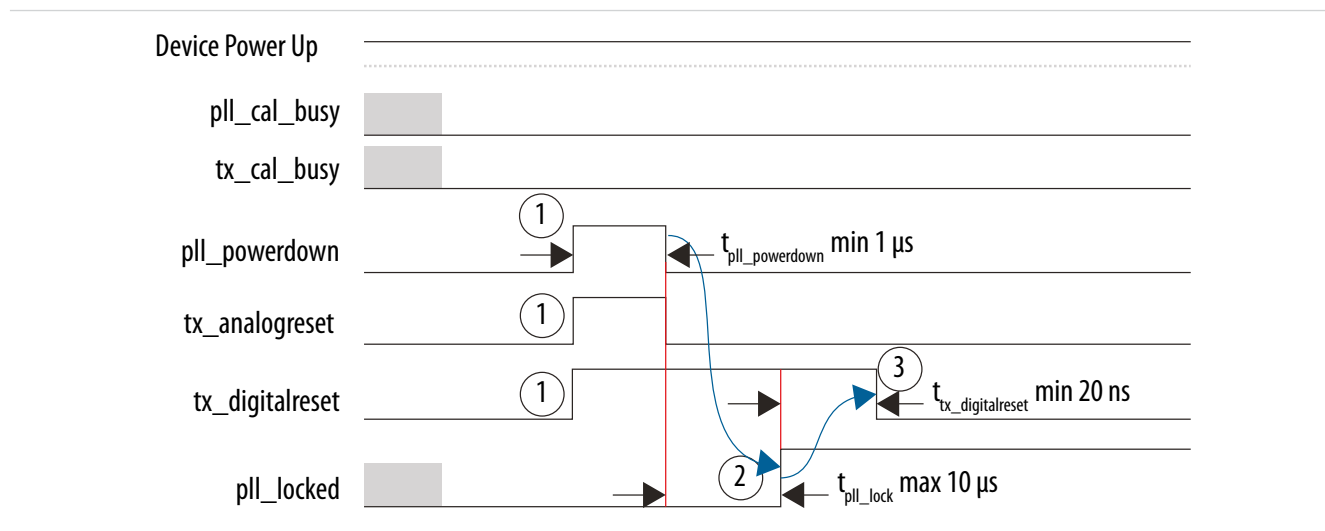Figure 4-4: Transmitter Reset Sequence During Device Operation

Resetting the Receiver After Device Power-Up

Follow this reset sequence to ensure a reliable receiver initialization after initial power-up. Make sure the RX CDR reference clock is valid and stable at device power-up.


The step numbers correspond to the numbers in the following waveform.

1. Hold rx_analogreset and rx_digitalreset active at power-up to hold the receiver in reset.
2. Make sure the rx_cal_busy status is deasserted. Deassert rx_analogreset for a minimum duration of $t_{\text{rx\_analogreset}}$ after the device enters user-mode. The CONF_DONE pin is asserted when the device enters user-mode.
3. Wait for rx_is_lockedtodata to go high.
4. Deassert rx_digitalreset after rx_is_lockedtodata is asserted for a minimum duration of t_{LTD} . If rx_is_lockedtodata is asserted and toggles, you must wait another additional t_{LTD} duration before deasserting rx_digitalreset.

The receiver is now out of reset and ready for operation.



Figure 4-5: Receiver Reset Sequence Following Power-Up

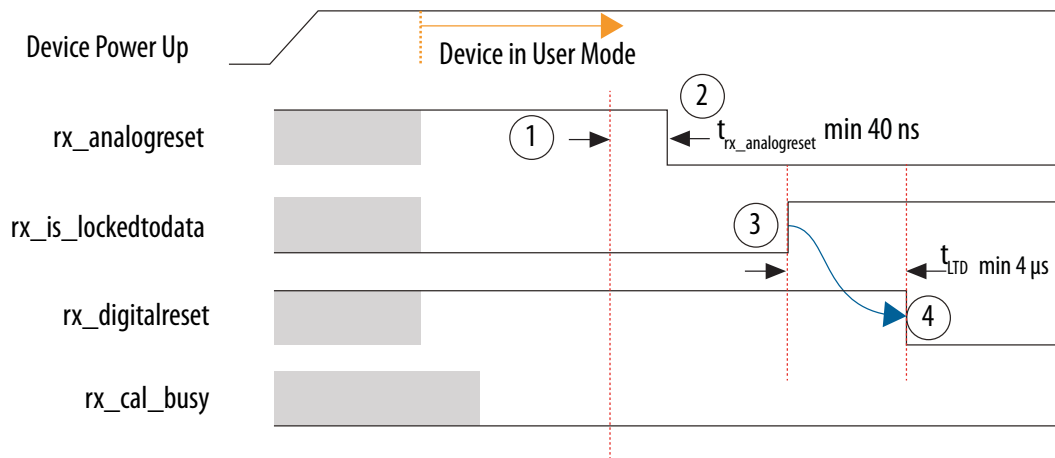


Note: rx_is_lockedtodata might toggle when there is no data at the receiver input.
rx_is_lockedtoref is a don't care when rx_is_lockedtodata is asserted. rx_analogreset must always be followed by rx_digitalreset.

Resetting the Receiver During Device Operation

Follow this reset sequence to reset the analog or digital blocks of the receiver at any point during the device operation. Use this reset to re-establish a link or after dynamic reconfiguration. The step numbers correspond to the numbers in the following waveform.

1. Assert rx_analogreset and rx_digitalreset. Ensure that rx_cal_busy is low. You must reset the PCS by asserting rx_digitalreset every time you assert rx_analogreset.
2. Deassert rx_analogreset after a minimum duration of two parallel system clock cycles.
3. Ensure rx_is_lockedtodata is asserted for t_{LTD} before deasserting rx_digitalreset.

Figure 4-6: Receiver Reset Sequence During Device Operation

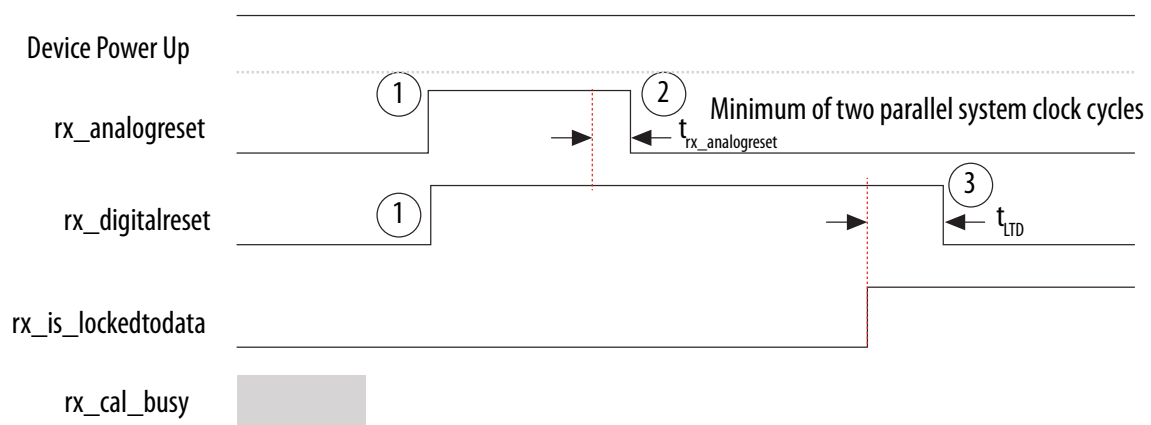

Note: rx_is_lockedtodata might toggle when there is no data at the receiver input.
rx_is_lockedtoref is a don't care when rx_is_lockedtodata is asserted.

Clock Data Recovery in Manual Lock Mode

Use the clock data recovery (CDR) manual lock mode to override the default CDR automatic lock mode depending on your design requirements.

The two control signals to enable and control the CDR in manual lock mode are `rx_set_locktoref` and `rx_set_locktodata`.

Related Information

["Transceiver PHY Reset Controller IP Core" chapter of the Altera Transceiver PHY IP Core User Guide.](#)

Refer to the description of the `rx_digitalreset` signal in the "Top-Level Signals" table for information about using the manual lock mode.

Control Settings for CDR Manual Lock Mode

Use the following control settings to set the CDR lock mode:

Table 4-2: Control Settings for the CDR in Manual Lock Mode


<code>rx_set_locktoref</code>	<code>rx_set_locktodata</code>	CDR Lock Mode
0	0	Automatic
1	0	Manual-RX CDR LTR
X	1	Manual-RX CDR LTD

Resetting the Transceiver in CDR Manual Lock Mode

The numbers in this list correspond to the numbers in the following figure, which guides you through the steps to put the CDR in manual lock mode.

1. Make sure that the calibration is complete (`rx_cal_busy` is low) and the transceiver goes through the initial reset sequence. The `rx_digitalreset` and `rx_analogreset` signals should be low. The `rx_is_lockedtoref` is a don't care and can be either high or low. The `rx_is_lockedtodata` and `rx_ready` signals should be high, indicating that the transceiver is out of reset. Alternatively, you can start directly with the CDR in manual lock mode after the calibration is complete.
2. Assert the `rx_set_locktoref` signal high to switch the CDR to the lock-to-reference mode. The `rx_is_lockedtodata` status signal is deasserted. Assert the `rx_digitalreset` signal high at the same time or after `rx_set_locktoref` is asserted if you use the user-coded reset. When the Transceiver PHY reset controller is used, the `rx_digitalreset` is automatically asserted.
3. After the `rx_digitalreset` signal gets asserted, the `rx_ready` status signal is deasserted.
4. Assert the `rx_set_locktodata` signal high after `tLTR_LTD_manual` to switch the CDR to the lock-to-data mode. The `rx_is_lockedtodata` status signal gets asserted, which indicates that the CDR is now set to LTD mode. The `rx_is_lockedtoref` status signal can be a high or low and can be ignored.
5. Deassert the `rx_digitalreset` signal after `tLTD_Manual`.
6. After the `rx_digitalreset` signal is deasserted, the `rx_ready` status signal gets asserted if you are using the Transceiver PHY Reset Controller, indicating that the receiver is now ready to receive data with the CDR in manual mode.

Figure 4-7: Reset Sequence Timing Diagram for Transceiver when CDR is in Manual Lock Mode

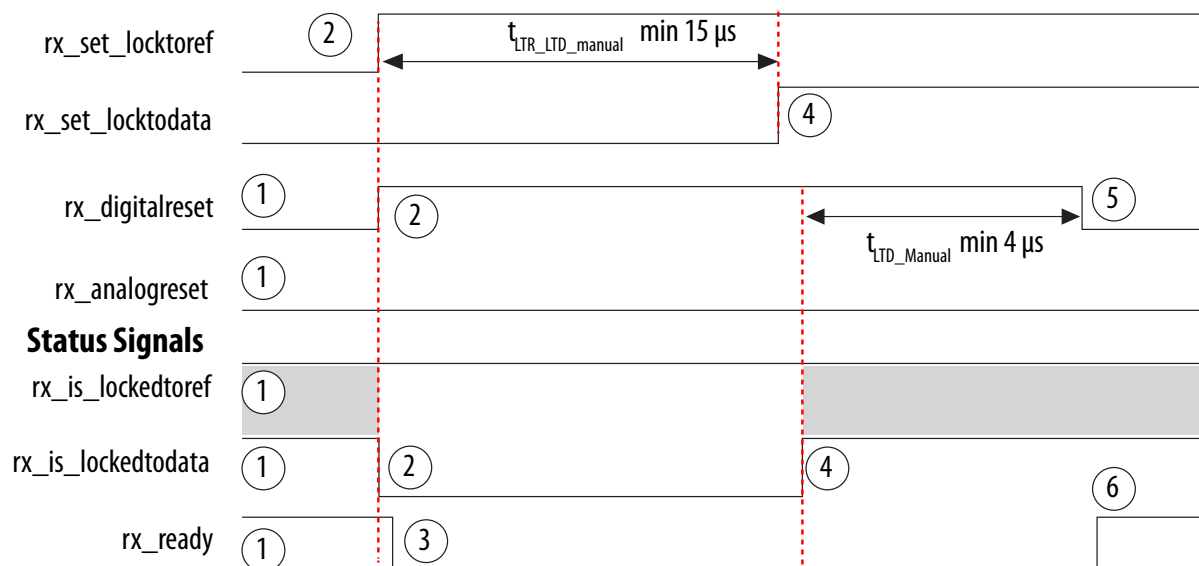Control Signals**Transceiver Blocks Affected by Reset and Powerdown Signals**

You must reset the digital PCS each time you reset the analog PMA or PLL. However, you can reset the digital PCS block alone.

Table 4-3: Transceiver Blocks Affected by Specified Reset and Powerdown Signals

Transceiver Block	pll_powerdown	rx_digitalreset	rx_analogreset	tx_digitalreset	tx_analogreset
CMU PLL	Yes				
ATX PLL	Yes				
fPLL	Yes				
CDR			Yes		
Receiver Standard PCS		Yes			
Receiver Enhanced PCS		Yes			
Receiver PMA			Yes		
Receiver PCIe Gen3 PCS		Yes			

Transceiver Block	pll_powerdown	rx_digitalreset	rx_analogreset	tx_digitalreset	tx_analogreset
Transmitter Standard PCS				Yes	
Transmitter Enhanced PCS				Yes	
Transmitter PMA					Yes
Transmitter PCIe Gen3 PCS				Yes	

Using the Altera Transceiver PHY Reset Controller


Altera's Transceiver PHY Reset Controller is a configurable IP core that resets transceivers mainly in response to PLL lock activity. You can use this IP core rather than creating your own user-coded reset controller. You can define a custom reset sequence for the IP core. You can also modify the IP core's generated clear text Verilog HDL file to implement custom reset logic.

The Transceiver PHY Reset Controller handles all transceiver reset sequencing and supports the following options:

- Separate or shared reset controls per channel in response to PLL lock activity
- Separate controls for the TX and RX channels and PLLs
- Synchronization of the reset inputs
- Hysteresis for PLL locked status inputs
- Configurable reset timing
- Automatic or manual reset recovery mode in response to loss of PLL lock

You should create your own reset controller if the Transceiver PHY Reset Controller IP does not meet your requirements, especially when you require independent transceiver channel reset. The following figure illustrates the typical use of the Transceiver PHY Reset Controller in a design that includes a transceiver PHY instance and the transmit PLL.

Figure 4-8: Altera Transceiver PHY Reset Controller System Diagram

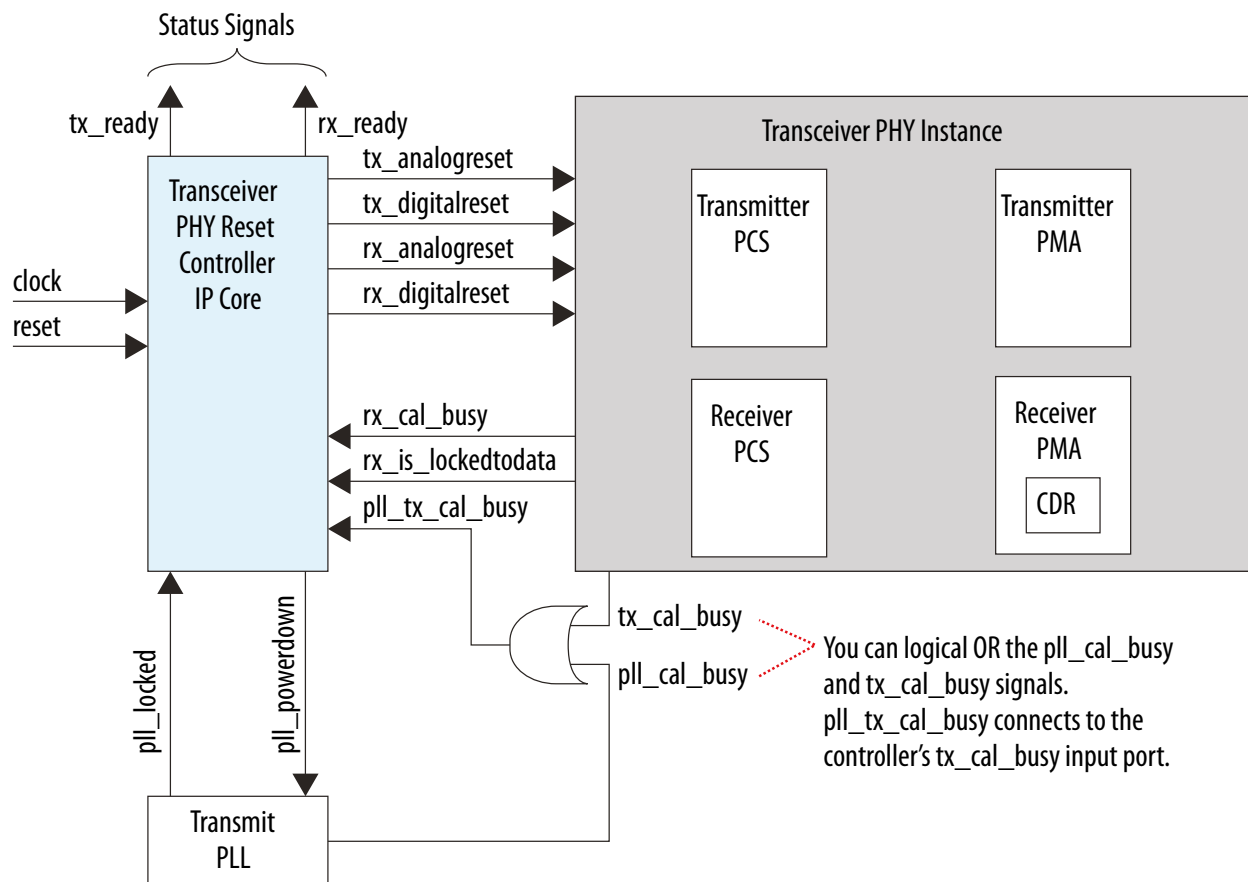

The Transceiver PHY Reset Controller IP core connects to the Transceiver PHY and the Transmit PLL. The Transceiver PHY Reset Controller IP core receives status from the Transceiver PHY and the Transmit PLL. Based on the status signals or the reset input, it generates TX and RX reset signals to the Transceiver PHY and TX PLL.

The `tx_ready` signal indicates whether the TX PMA exits the reset state, and if the TX PCS is ready to transmit data. The `rx_ready` signal indicates whether the RX PMA exits the reset state, and if the RX PCS is ready to receive data. You must monitor these signals to determine when the transmitter and receiver are out of the reset sequence.

Parameterizing the Transceiver PHY Reset Controller IP

This section lists steps to configure the Transceiver PHY Reset Controller IP Core in the IP Catalog. You can customize the following Transceiver PHY Reset Controller parameters for different modes of operation by clicking **Tools > IP Catalog**.

To parameterize and instantiate the Transceiver PHY Reset Controller IP core:

1. For **Device Family**, select your target device from the list.
2. Click **Installed IP > Library > Interface Protocols > Transceiver PHY > Transceiver PHY Reset Controller**.
3. Select the options required for your design. For a description of these options, refer to the **Transceiver PHY Reset Controller Parameters**.
4. Click **Finish**. The wizard generates files representing your parameterized IP variation for synthesis and simulation.

Transceiver PHY Reset Controller Parameters

The Quartus II software provides a GUI to define and instantiate a Transceiver PHY Reset Controller to reset transceiver PHY and external PLL.

Table 4-4: General Options

Name	Range	Description
Number of transceiver channels	1-1000	Specifies the number of channels that connect to the Transceiver PHY Reset Controller IP core. The upper limit of the range is determined by your FPGA architecture.
Number of TX PLLs	1-1000	Specifies the number of TX PLLs that connect to the Transceiver PHY Reset Controller IP core.
Input clock frequency	1-500 MHz	Input clock to the Transceiver PHY Reset Controller IP core. The frequency of the input clock in MHz. The upper limit on the input clock frequency is the frequency achieved in timing closure.
Synchronize reset input	On /Off	When On , the Transceiver PHY Reset Controller synchronizes the reset to the Transceiver PHY Reset Controller input clock before driving it to the internal reset logic. When Off , the reset input is not synchronized.
Use fast reset for simulation	On /Off	When On , the Transceiver PHY Reset Controller uses reduced reset counters for simulation.
Separate interface per channel/ PLL	On /Off	When On , the Transceiver PHY Reset Controller provides a separate reset interface for each channel and PLL.
TX PLL		

Name	Range	Description
Enable TX PLL reset control	On /Off	When On , the Transceiver PHY Reset Controller IP core enables the reset control of the TX PLL. When Off , the TX PLL reset control is disabled.
pll_powerdown duration	1-999999999	Specifies the duration of the PLL powerdown period in ns. The value is rounded up to the nearest clock cycle. The default value is 1000 ns.
Synchronize reset input for PLL powerdown	On /Off	When On , the Transceiver PHY Reset Controller synchronizes the PLL powerdown reset with the Transceiver PHY Reset Controller input clock. When Off , the PLL powerdown reset is not synchronized.

TX Channel

Enable TX channel reset control	On /Off	When On , the Transceiver PHY Reset Controller enables the control logic and associated status signals for TX reset. When Off , disables TX reset control and status signals.
Use separate TX reset per channel	On /Off	When On , each TX channel has a separate reset. When Off , the Transceiver PHY Reset Controller uses a shared TX reset controller for all channels.
TX digital reset mode	Auto, Manual, Expose Port	Specifies the Transceiver PHY Reset Controller behavior when the pll_locked signal is deasserted. The following modes are available: • Auto—The associated tx_digital_reset controller automatically resets whenever the pll_locked signal is deasserted. • Manual—The associated tx_digital_reset controller is not reset when the pll_locked signal is deasserted, allowing you to choose corrective action. • Expose Port—The tx_manual signal is a top-level signal of the IP core. You can dynamically change this port to Auto or Manual. (1= Manual , 0 = Auto)
tx_digitalreset duration	1-999999999	Specifies the time in ns to continue to assert the tx_digitalreset after the reset input and all other gating conditions are removed. The value is rounded up to the nearest clock cycle. The default value is 20 ns.
pll_locked input hysteresis	0-999999999	Specifies the amount of hysteresis in ns to add to the pll_locked status input to filter spurious unreliable assertions of the pll_locked signal. A value of 0 adds no hysteresis. A higher value filters glitches on the pll_locked signal.

Name	Range	Description
RX Channel		
Enable RX channel reset control	On /Off	When On , the Transceiver PHY Reset Controller enables the control logic and associated status signals for RX reset. When Off , disables RX reset control and status signals.
Use separate RX reset per channel	On /Off	When On , each RX channel has a separate reset input. When Off , uses a shared RX reset controller for all channels.
RX digital reset mode	Auto, Manual, Expose Port	Specifies the Transceiver PHY Reset Controller behavior when the PLL lock signal is deasserted. The following modes are available: • Auto—The associated <code>rx_digital_reset</code> controller automatically resets whenever the <code>rx_is_lockedtodata</code> signal is deasserted. • Manual—The associated <code>rx_digital_reset</code> controller is not reset when the <code>rx_is_lockedtodata</code> signal is deasserted, allowing you to choose corrective action. • Expose Port—The <code>rx_manual</code> signal is a top-level signal of the IP core. If the core includes separate reset control for each RX channel, each RX channel uses its respective <code>rx_is_lockedtodata</code> signal for automatic reset control; otherwise, the inputs are ANDed to provide internal status for the shared reset controller.
rx_analogreset duration	1-999999999	Specifies the time in ns to continue to assert the <code>rx_analogreset</code> after the reset input and all other gating conditions are removed. The value is rounded up to the nearest clock cycle. The default value is 40 ns.
rx_digitalreset duration	1-999999999	Specifies the time in ns to continue to assert the <code>rx_digitalreset</code> after the reset input and all other gating conditions are removed. The value is rounded up to the nearest clock cycle. The default value is 4000 ns.

Transceiver PHY Reset Controller Interfaces


This section describes the top-level signals for the Transceiver PHY Reset Controller IP core.

The following figure illustrates the top-level signals of the Transceiver PHY Reset Controller IP core. Many of the signals in the figure become buses if you choose separate reset controls. The variables in the figure represent the following parameters:

- $\langle n \rangle$ —The number of lanes
- $\langle p \rangle$ —The number of PLLs

Figure 4-9: Transceiver PHY Reset Controller IP Core Top-Level Signals

Generating the IP core creates signals and ports based on your parameter settings.

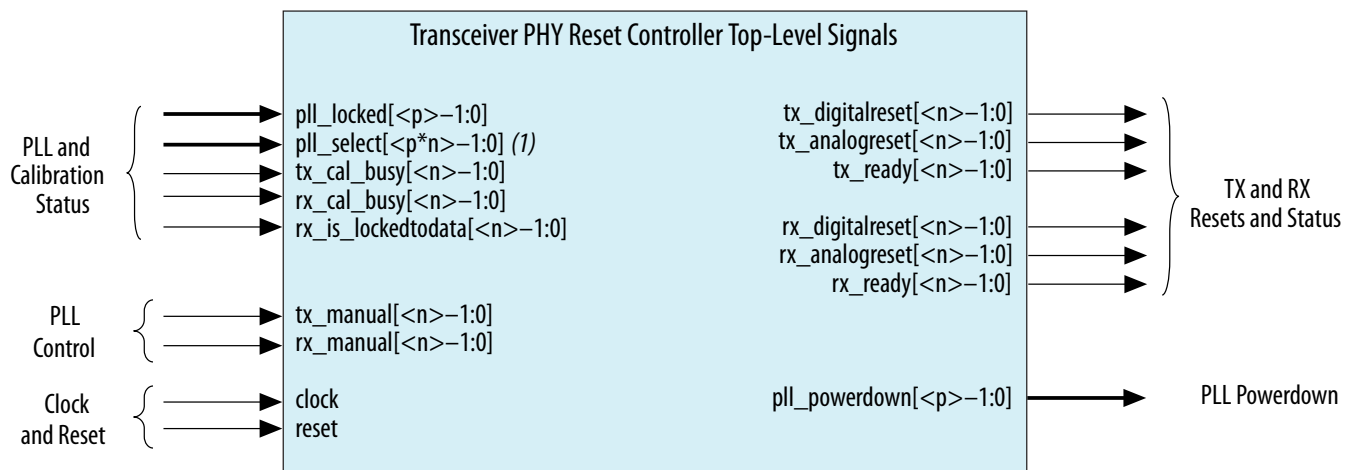

Note:

(1) $n=1$ for `pll_select` signal width when a single TX reset sequence is used for all channels.

Note: PLL control is available when you enable the **Expose Port** parameter.

Table 4-5: Top-Level Signals

This table describes the signals in the above figure in the order that they are shown in the figure.

Signal Name	Direction	Clock Domain	Description
<code>pll_locked[<p>-1:0]</code>	Input	Asynchronous status from TX PLL.	Provides the PLL locked status input from each PLL. When asserted, indicates that the TX PLL is locked. When deasserted, the PLL is not locked. There is one signal per PLL.
<code>pll_select[<p*n>-1:0]</code>	Input	Synchronous to the Transceiver PHY Reset Controller input clock. Set to zero when not using multiple PLLs.	When you select Use separate TX reset per channel , this bus provides enough inputs to specify an index for each <code>pll_locked</code> signal to listen to for each channel. When Use separate TX reset per channel is disabled, the <code>pll_select</code> signal is used for all channels. $n=1$ when a single TX reset sequence is used for all channels.
<code>tx_cal_busy[<n>-1:0]</code>	Input	Asynchronous	This is the calibration status signal that results from the logical OR of <code>pll_cal_busy</code> and <code>tx_cal_busy</code> signals. The signal goes high when either the TX PLL or Transceiver PHY initial calibration is active. It will not be asserted if you manually re-trigger the calibration IP. The signal goes low when calibration is completed. This signal gates the TX reset sequence. The width of this signals depends on the number of TX channels.

Signal Name	Direction	Clock Domain	Description
rx_cal_busy[<n> - 1:0]	Input	Asynchronous	This is calibration status signal from the Transceiver PHY IP core. When asserted, the initial calibration is active. When deasserted, calibration has completed. It will not be asserted if you manually re-trigger the calibration IP. This signal gates the RX reset sequence. The width of this signals depends on the number of RX channels.
rx_is_lockedto-data[<n>-1:0]	Input	CDR	Provides the rx_is_lockedto-data status from each RX CDR. When asserted, indicates that a particular RX CDR is ready to receive input data. If you do not choose separate controls for the RX channels, these inputs are ANDed together internally to provide a single status signal.
tx_manual[<n>-1:0]	Input	Asynchronous	This optional signal places tx_digitalreset controller under automatic or manual control. When asserted, the associated tx_digitalreset controller logic does not automatically respond to deassertion of the pll_locked signal. However, the initial tx_digitalreset sequence still requires a one-time rising edge on pll_locked before proceeding. When deasserted, the associated tx_digitalreset controller automatically begins its reset sequence whenever the selected pll_locked signal is deasserted.
rx_manual[<n> - 1:0]	Input	Asynchronous	This optional signal places rx_digitalreset logic controller under automatic or manual control. In manual mode, the rx_digitalreset controller does not respond to the assertion or deassertion of the rx_is_lockedto-data signal. The rx_digitalreset controller asserts rx_ready when the rx_is_lockedto-data signal is asserted.
clock	Input	N/A	A free running system clock input to the Transceiver PHY Reset Controller from which all internal logic is driven. If a free running clock is not available, hold resets until the system clock is stable.
reset	Input	Asynchronous	Asynchronous reset input to the Transceiver PHY Reset Controller. When asserted, all configured reset outputs are asserted. Holding the reset input signal asserted holds all other reset outputs asserted. An option is available to synchronize with the system clock.

Signal Name	Direction	Clock Domain	Description
tx_digital_reset[<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Digital reset for TX channels. The width of this signal depends on the number of TX channels. This signal is asserted when any of the following conditions is true: • reset is asserted • pll_powerdown is asserted • pll_cal_busy is asserted • tx_cal_busy is asserted • PLL has not reached the initial lock (pll_locked deasserted) • pll_locked is deasserted and tx_manual is deasserted When all of these conditions are false, the reset counter begins its countdown for deassertion of tx_digital_reset.
tx_analogreset[<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Analog reset for TX channels. The width of this signal depends on the number of TX channels. This signal is asserted when any of the following conditions is true: • reset is asserted • pll_powerdown is asserted • pll_cal_busy is asserted • tx_cal_busy is asserted This signal follows pll_powerdown and is deasserted after pll_locked goes high.
tx_ready[<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Status signal to indicate when the TX reset sequence is complete. This signal is deasserted while the TX reset is active. It is asserted a few clock cycles after the deassertion of tx_digitalreset. Some protocol implementations may require you to monitor this signal prior to sending data. The width of this signal depends on the number of TX channels.

Signal Name	Direction	Clock Domain	Description
rx_digital-reset[<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Digital reset for RX. The width of this signal depends on the number of channels. This signal is asserted when any of the following conditions is true: • reset is asserted • rx_analogreset is asserted • rx_cal_busy is asserted • rx_is_lockedto data is deasserted and rx_manual is deasserted When all of these conditions are false, the reset counter begins its countdown for deassertion of rx_digitalreset.
rx_analogreset [<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Analog reset for RX. When asserted, resets the RX CDR and the RX PMA blocks of the transceiver PHY. This signal is asserted when any of the following conditions is true: • reset is asserted • rx_cal_busy is asserted The width of this signal depends on the number of channels.
rx_ready[<n>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Status signal to indicate when the RX reset sequence is complete. This signal is deasserted while the RX reset is active. It is asserted a few clock cycles after the deassertion of rx_digitalreset. Some protocol implementations may require you to monitor this signal prior to sending data. The width of this signal depends on the number of RX channels.
pll_powerdown[<p>-1:0]	Output	Synchronous to the Transceiver PHY Reset Controller input clock.	Asserted to power down a transceiver PLL circuit. When asserted, the selected TX PLL is reset.

Transceiver PHY Reset Controller Resource Utilization

This section describes the estimated device resource utilization for two configurations of the transceiver PHY reset controller. The exact resource count varies by Quartus II version number, as well as by optimization options.

Table 4-6: Reset Controller Resource Utilization

Configuration	Combination ALUTs	Logic Registers
Single transceiver channel	approximately 50	approximately 50

Configuration	Combination ALUTs	Logic Registers
Four transceiver channels, shared TX reset, separate RX resets	approximately 100	approximately 150

Using a User-Coded Reset Controller

You can design your own user-coded reset controller instead of using Altera's Transceiver PHY Reset Controller IP core. Your user-coded reset controller must provide the following functionality for the recommended reset sequence:

- A clock signal input for your reset logic
- Holds the transceiver channels in reset by asserting the appropriate reset control signals
- Checks the PLL status (for example, checks the status of `pll_locked` and `pll_cal_busy`)

Note: You must ensure a stable reference clock is present at the PLL transmitter before releasing PLL powerdown (`pll_powerdown`).

User-Coded Reset Controller Signals

Refer to the signals in the following figure and table for implementation of a user-coded reset controller.

Figure 4-10: User-Coded Reset Controller, Transceiver PHY, and TX PLL Interaction

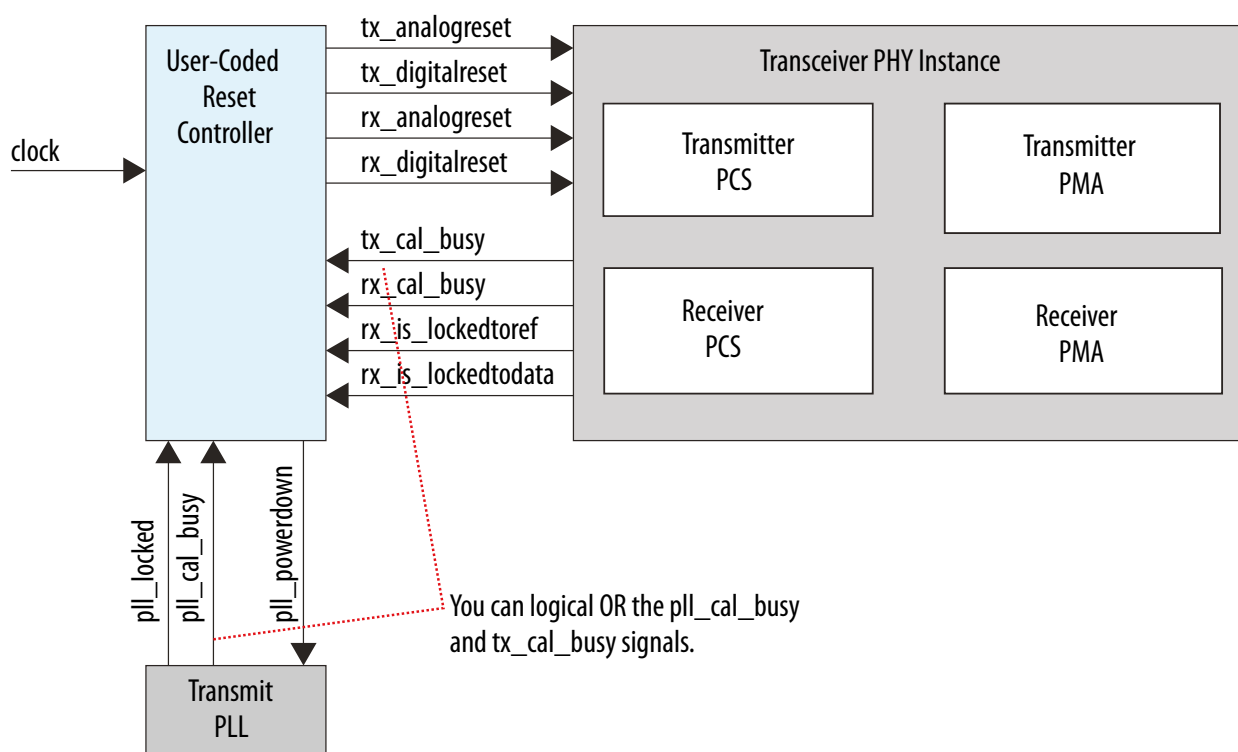
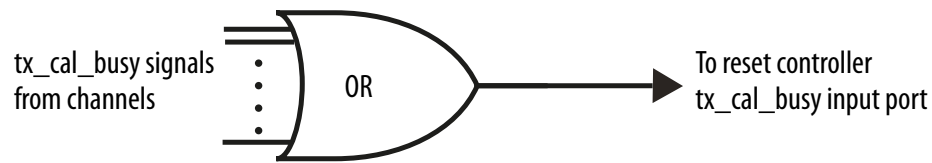


Table 4-7: User-coded Reset Controller, Transceiver PHY, and TX PLL Signals

Signal Name	Direction	Description
pll_powerdown	Output	Resets the TX PLL when asserted high.
tx_analogreset	Output	Resets the TX PMA when asserted high.
tx_digitalreset	Output	Resets the TX PCS when asserted high.
rx_analogreset	Output	Resets the RX PMA when asserted high.
rx_digitalreset	Output	Resets the RX PCS when asserted high.
clock	Input	Clock signal for the user-coded reset controller. You can use the system clock without synchronizing it to the PHY parallel clock. The upper limit on the input clock frequency is the frequency achieved in timing closure.
pll_cal_busy	Input	A high on this signal indicates the PLL is being calibrated.
pll_locked	Input	A high on this signal indicates that the TX PLL is locked to the ref clock.
tx_cal_busy	Input	A high on this signal indicates that TX calibration is active. If you have multiple PLLs, you can OR their pll_cal_busy signals together.
rx_is_lockedtodata	Input	A high on this signal indicates that the RX CDR is in the lock-to-data (LTD) mode.
rx_cal_busy	Input	A high on this signal indicates that RX calibration is active.
rx_is_lockedtoref	Input	A high on this signal indicates that the RX CDR is in the lock-to-reference (LTR) mode. This signal may toggle or be deasserted when the CDR is in LTD mode.


Combining Status or PLL Lock Signals

You can combine multiple PHY status signals before feeding into the reset controller as shown below.

Figure 4-11: Combining Multiple PHY Status Signals

Note: This configuration also applies to the rx_cal_busy signals.

When using multiple PLLs, you can logical AND the pll_locked signals feeding the reset controller. Similarly, you can logical OR the pll_cal_busy signals to the reset controller tx_cal_busy port as shown below.

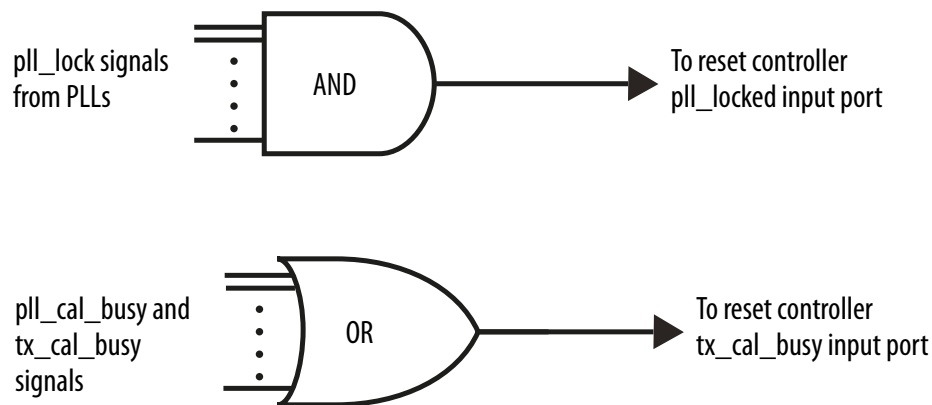
Figure 4-12: Multiple PLL Configuration

Resetting different channels separately requires multiple reset controllers. For example, a group of channels configured for Interlaken requires a separate reset controller from another group of channels that are configured for optical communication.

Timing Constraints for Bonded PCS and PMA Channels

For designs that use bonded TX PCS and PMA channels, the digital reset signal to all TX channels within a bonded group must meet a maximum skew tolerance imposed by physical routing. This skew tolerance is one-half the TX parallel clock cycle (tx_clkout). This requirement is not necessary for bonded TX PMA-only channels or for RX PCS channels.

Figure 4-13: Physical Routing Delay Skew in Bonded Channels

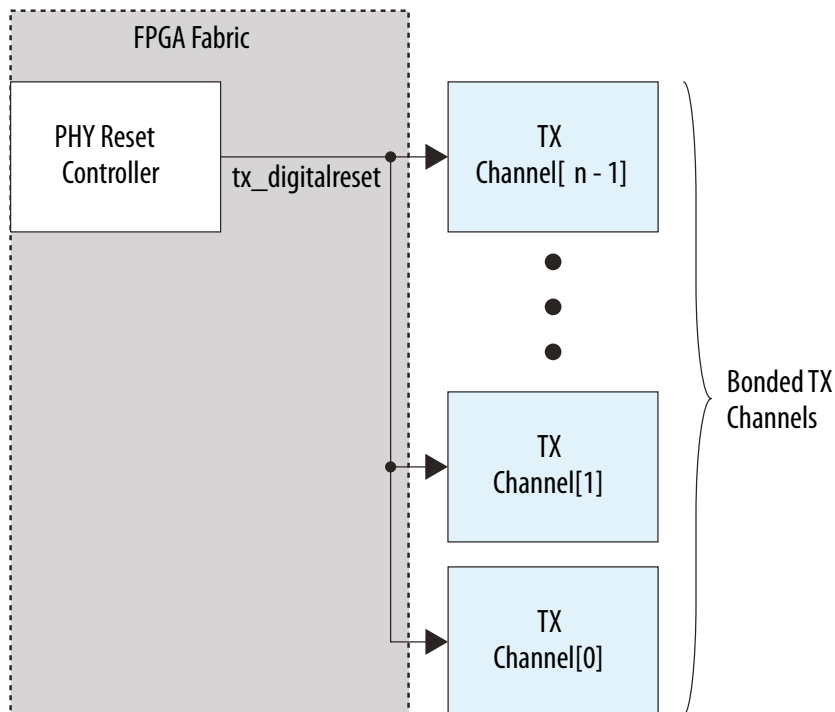

You must provide a Synopsys Design Constraint (SDC) for the reset signals to guarantee that your design meets timing requirements. The Quartus II software generates an **.sdc** file when you generate the Transceiver Native PHY IP.

This **.sdc** contains basic false paths for most asynchronous signals, including resets. In the case of bonded designs, this file contains examples for maximum skew on bonded designs. In addition to general false paths, this **.sdc** file contains an example `false_path` and an example `max_skew` constraint for the `tx_digitalreset` signals. All modified IP constraints from a generated **.sdc** file must be moved to the project's main **.sdc** file, because changes will be lost if the IP is regenerated.

This skew is present whether you tie all `tx_digitalresets` together, or you control them separately. If your design includes the Transceiver PHY Reset Controller IP core, you can substitute your instance and interface names for the generic names shown in the example.

Example 4-1: SDC Constraint for TX Digital Reset When Bonded Clocks Are Used

```
set_max_skew -from *<IP_INSTANCE_NAME> *tx_digitalreset*r_reset
-to *p1d_pcs_interface* <1/2 coreclk period in ps>
```

In the above example, you must make the following substitutions:

- `<IP_INSTANCE_NAME>`—substitute the name of your reset controller IP instance or PHY IP instance
- `<1/2 coreclk period in ps>`—substitute half of the clock period of your design in picoseconds

If your design has custom reset logic, replace the `*<IP_INSTANCE_NAME>*tx_digitalreset*r_reset` with the source register for the TX PCS reset signal, `tx_digitalreset`.

For more information about the `set_max_skew` constraint, refer to the *SDC and TimeQuest API Reference Manual*.

Related Information

[SDC and TimeQuest API Reference Manual](#)

2014.12.15

UG-01143



Subscribe



Send Feedback

Arria 10 PMA Architecture


The Physical Medium Attachment (PMA) acts as the analog front end for the Arria 10 transceivers.

The PMA receives and transmits high-speed serial data depending on the transceiver channel configuration. All serial data transmitted and received passes through the PMA.

Transmitter

The transmitter takes the parallel data and serializes it to create a high-speed serial data stream. The transmitter portion of the PMA is composed of the transmitter serializer and the transmitter buffer. The serializer clock is provided from the transmitter PLL.

Figure 5-1: Transmitter PMA Block Diagram

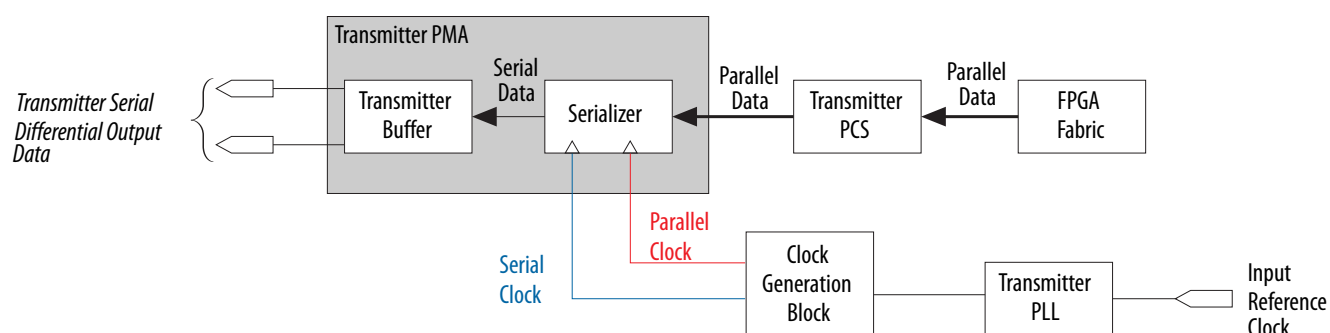

Serializer

The serializer converts the incoming low-speed parallel data from the transceiver PCS or FPGA fabric to high-speed serial data and sends the data to the transmitter buffer.

The channel serializer supports the following serialization factors: 8, 10, 16, 20, 32, 40, and 64.


© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Figure 5-2: Serializer Block

The serializer block sends out the least significant bit (LSB) of the input data first.

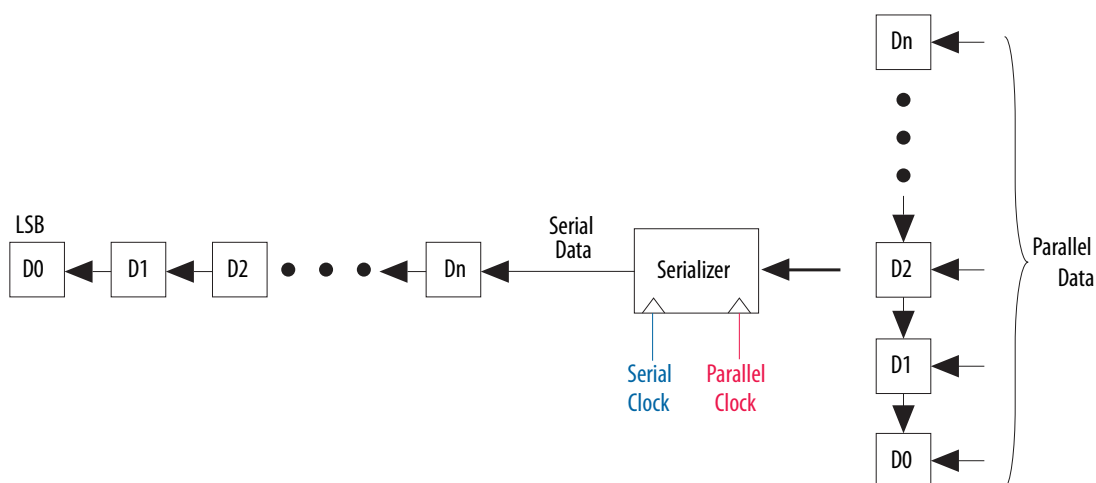


Transmitter Buffer

The transmitter buffer includes the following circuitry:

- High Speed Differential I/O
- Programmable differential output voltage (V_{OD})
 - Main tap
- Programmable four-tap pre-emphasis circuitry
 - Two pre-cursor taps
 - Two post-cursor taps
- Power distribution network (PDN) induced inter-symbol interference (ISI) compensation
- Internal termination circuitry
- Receiver detect capability to support PCI Express and Quick Path Interconnect (QPI) configurations

Figure 5-3: Transmitter Buffer

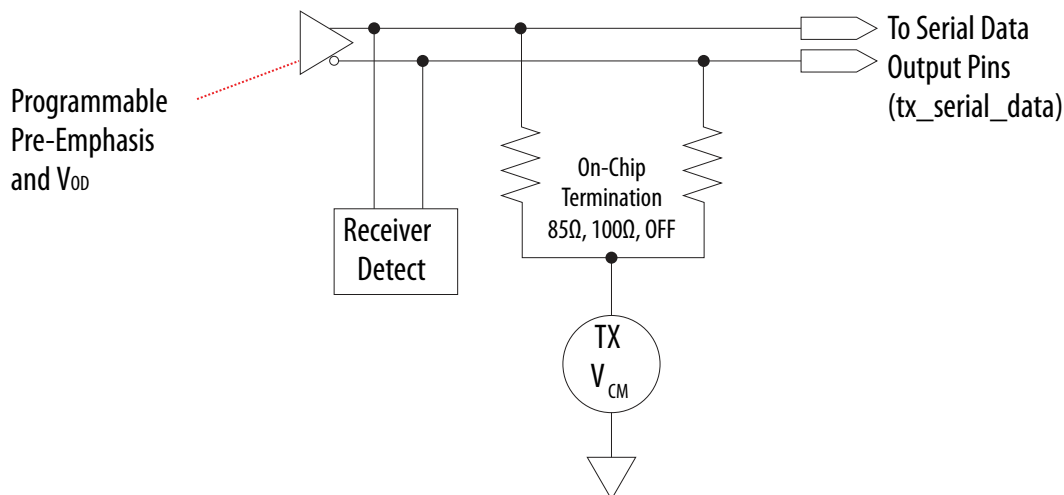


High Speed Differential I/O

To improve performance, Arria 10 Transmitter uses a new architecture in the output buffer—High Speed Differential I/O. You should select "High Speed Differential I/O" for I/O standard of Arria 10 Transmitter pin in Quartus II Assignment Editor or QSF file.

Programmable Output Differential Voltage

You can program the differential output voltage (output swing) to handle different channel losses and receiver requirements. There are 31 differential V_{OD} settings up to VCCT power supply level. The step size is 1/30 of the VCCT power supply level.

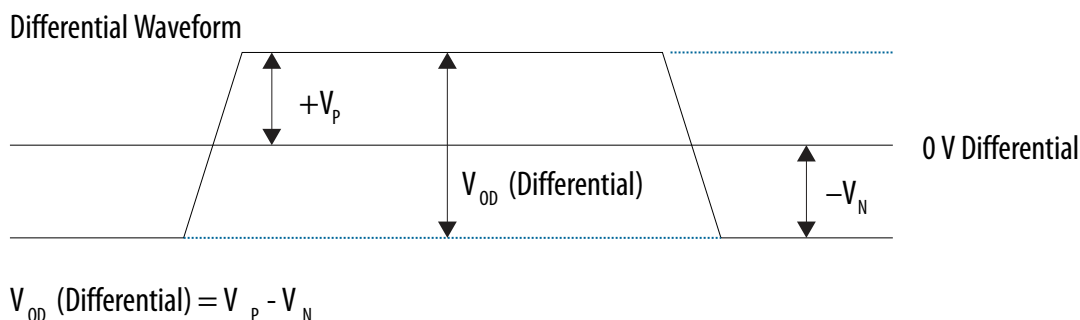Figure 5-4: V_{OD} (Differential) Signal Level

Related Information

[XCVR_A10_RX_TERM_SEL](#) on page 8-5

For more information, refer to [Arria 10 Pre-Emphasis and Output Swing Settings](#)

Programmable Pre-Emphasis

Pre-emphasis can maximize the eye at the far-end receiver. The programmable pre-emphasis module in each transmit buffer amplifies high frequencies in the transmit data signal, to compensate for attenuation in the transmission media.

The pre-tap pre-emphasizes the bit before the transition and de-emphasizes the remaining bits. A different polarity on pre-tap does the opposite.

Table 5-1: Pre-Emphasis Taps

All four pre-emphasis taps provide inversion control, shown by negative values.

Pre-Emphasis Tap	Number of Settings	Channel Loss Compensation (dB)
Second pre-tap	15	2.31
First pre-tap	33	6.62
First post-tap	51	15.56
Second post-tap	25	4.44

You can set pre-emphasis taps through the Quartus Assignment Editor and the Avalon-MM registers.

Related Information

- [For more information, refer to Arria 10 Pre-Emphasis and Output Swing Settings](#)

Power Distribution Network (PDN) induced Inter-Symbol Interference (ISI) compensation

Arria 10 Transmitter driver includes a compensation circuitry to reduce PDN induced ISI jitter. You can enable this compensation circuitry to reduce jitter through QSF setting or Avalon-MM interface. The power consumption will increase when you enable the compensation.

Programmable Transmitter On-Chip Termination (OCT)

Transmitter buffers include programmable on-chip differential termination of 85Ω, 100Ω, or OFF. You can set the OCT value through the Quartus Assignment Editor and the Avalon-MM registers.

Related Information


[Arria 10 Register Map](#)

Receiver

The receiver deserializes the high-speed serial data, creates a parallel data stream for either the receiver PCS or the FPGA fabric, and recovers the clock information from the received data.

The receiver portion of the PMA is comprised of the receiver buffer, the clock data recovery (CDR) unit, and the deserializer.


Figure 5-5: Receiver PMA Block Diagram

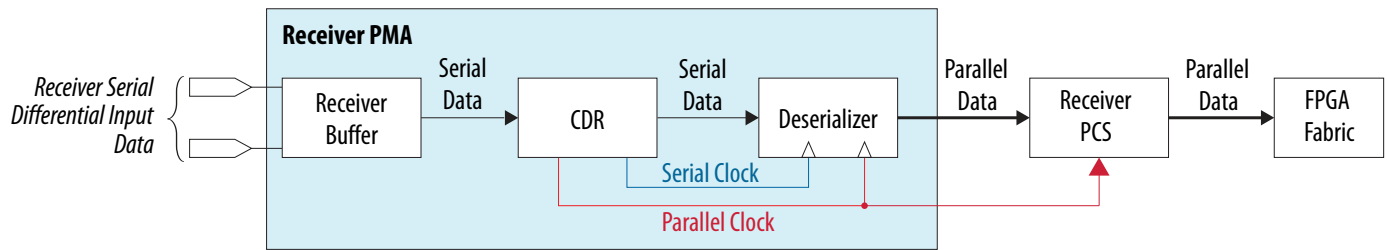

Receiver Buffer

The receiver input buffer receives serial data from `rx_serial_data` and feeds the serial data to the clock data recovery (CDR) unit and deserializer.

Figure 5-6: Receiver Buffer

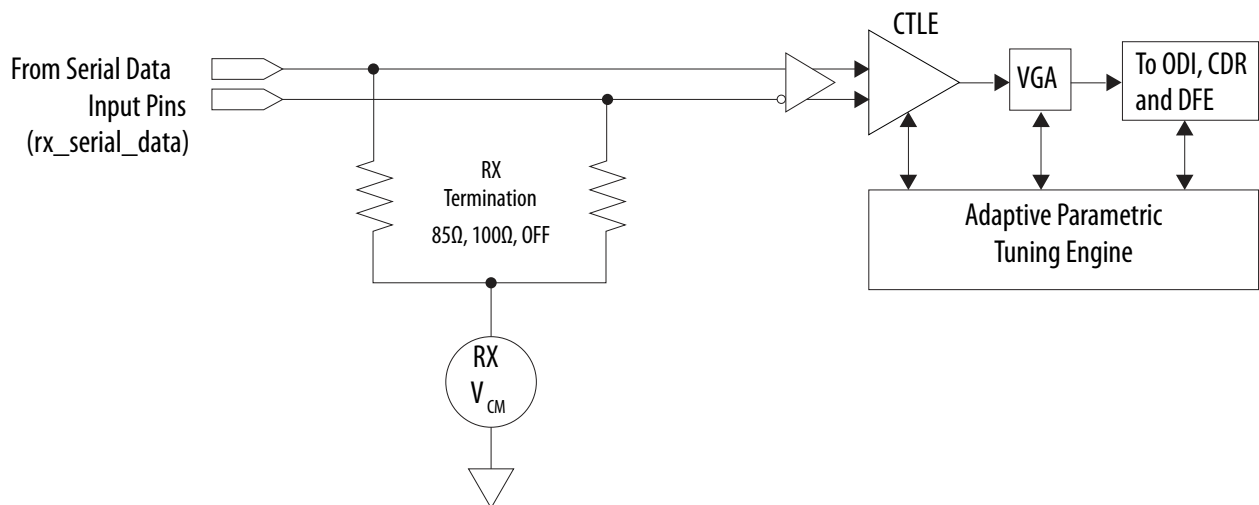

The receiver buffer supports the following features:

- Programmable common mode voltage (V_{CM})
- Programmable differential On-Chip Termination (OCT)
- Signal Detector
- Continuous Time Linear Equalization (CTLE)
- Variable Gain Amplifiers (VGA)
- Adaptive Parametric Tuning Engine
- Decision Feedback Equalization (DFE)
- On-Die Instrumentation (ODI)

Programmable Common Mode Voltage (V_{CM})

The receiver buffer has on-chip biasing circuitry to establish the required V_{CM} at the receiver input.

The Quartus II software automatically chooses the optimal setting for RX V_{CM} .

Note: On-chip biasing circuitry is available only if you select OCT. If you select external termination, you must implement off-chip biasing circuitry to establish the V_{CM} at the receiver input buffer.

Programmable Differential On-Chip Termination (OCT)

Receiver buffers include programmable on-chip differential termination of 85 Ω , 100 Ω , or OFF.

You can disable OCT and use external termination. If you select external termination, the receiver common mode is tri-stated. Common mode is based on the external termination connection. You will also need to implement off-chip biasing circuitry to establish the V_{CM} at the receiver buffer.

Signal Detector

You can enable the optional signal threshold detection circuitry. If enabled, this option senses whether the signal level present at the receiver input buffer is above the signal detect threshold voltage that you specified in the assignment editor.

Continuous Time Linear Equalization (CTLE)

The CTLE boosts the signal that is attenuated due to channel characteristics. Each receiver buffer has independently programmable equalization circuits. These equalization circuits amplify the high-frequency component of the incoming signal by compensating for the low-pass characteristics of the physical medium. The CTLE can support both DC and AC gain.

DC gain circuitry provides an equal amplification to the incoming signal across the frequency spectrum. AC gain circuitry provides amplification to the high-frequency spectrum gain of the incoming signal.


Arria 10 transceivers support dual mode CTLE.

High Gain Mode

High gain mode is mainly for backplane application up to 17.4 Gbps. This mode provides both AC and DC gain. There are two bandwidth settings available for this mode.

- Full Bandwidth—This mode has a peaking frequency of 6.25 GHz offering AC gain around 15 dB.
- Medium Bandwidth—This mode has a peaking frequency of 3.125 GHz offering AC gain around 20 dB.

Figure 5-7: CTLE DC and AC Gain Conceptualization

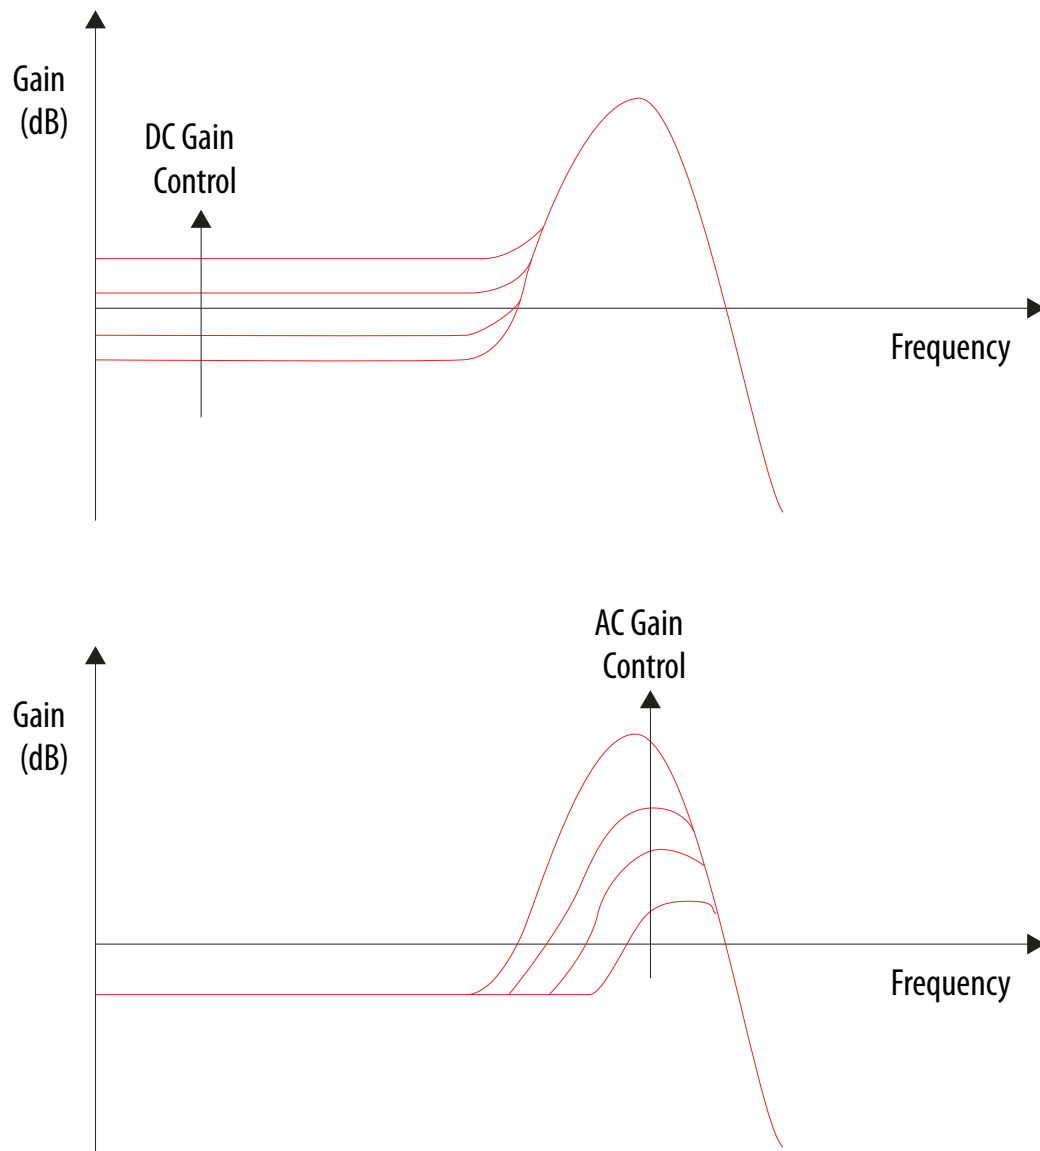


Note: Final equalization curves will be available in the Arria 10 device datasheet.

High Data Rate Mode

High Data Rate Mode is a low power mode that supports data rate up to 28.3 Gbps. This mode provides an alternative path for high gain mode. High Data Rate Mode can be used to compensate for the loss similar to CEI 28G VSR. Full bandwidth mode can provide AC peaking at approximately 8 dB at a peaking frequency of 14 GHz. This mode can also be operated in 3/4th, 1/2 and 1/4th bandwidth with 9 GHz, 5 GHz and 2.5 GHz peaking frequencies.

Figure 5-8: High Data Rate Mode CTLE chart

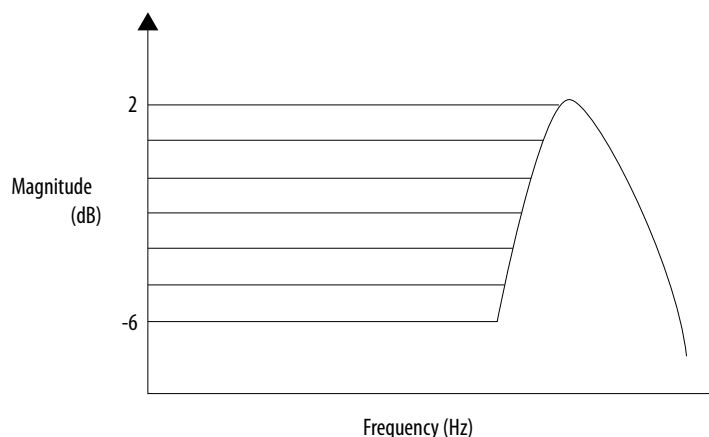

Note: When CTLE adaptation is disabled (manual mode), you can select CTLE mode and set CTLE gain through the Quartus Assignment Editor and the Avalon-MM registers.

Related Information

- [Arria 10 Device Datasheet](#)
- [Arria 10 Register Map](#)

How to Enable CTLE

High gain mode is enabled by default for data rates up to 17.4 Gbps. High data rate mode is enabled for data rates higher than 17.4 Gbps. You can control CTLE in Manual Mode, and Triggered Mode.

Using CTLE in Manual Mode:

1. Enable CTLE in Manual Mode in the RX PMA tab of the Native PHY IP core.
2. Enable the following analog parameters through the assignment editor based on your channel characteristics.
 - XCVR_A10_RX_EQ_DC_GAIN_TRIM—Receiver High Gain Mode Equalizer DC Gain Control.
 - XCVR_A10_RX_ADP_CTLE_ACGAIN_4S—Receiver High Gain Mode Equalizer AC Gain Control.
 - XCVR_A10_RX_ADP_CTLE_EQZ_1S_SEL—Receiver High Data Rate Mode Equalizer AC and DC Gain Control.

Using CTLE in Triggered Mode:

1. Enable CTLE in Triggered Mode in the RX PMA tab of the Native PHY IP core. This is a single write operation to start the adaptation process.
2. After the adaptation is initiated, the adaptive parametric tuning engine converges the CTLE taps to the best possible setting based on channel characteristics. The adaptation process is completed when the CTLE converges to an optimal value. Re-triggering initiates the adaptation process again.

How to start the Adaptation Process:

1. Enable CTLE in the RX PMA tab of the Native PHY IP core.
2. Set the mode of operation to Triggered.
3. Use the following Avalon-MM registers to start the adaptation process:

- a. Write logic high into adapt_reset
- b. Write logic low into adapt_reset
- c. Write logic high into adapt_start
- d. Poll adapt_done for logic high to determine if the adaptation process is done.


Related Information

Analog Parameter Settings on page 8-1

Variable Gain Amplifier (VGA)

Arria 10 channels have a variable gain amplifier to optimize the signal amplitude prior to the CDR sampling. The VGA is controlled by the Adaptive Parametric Tuning Engine. When VGA adaptation is disabled, you can select VGA gain through the Quartus Assignment Editor and the Avalon-MM registers.


Figure 5-9: VGA Frequency Response for Different Gain Settings

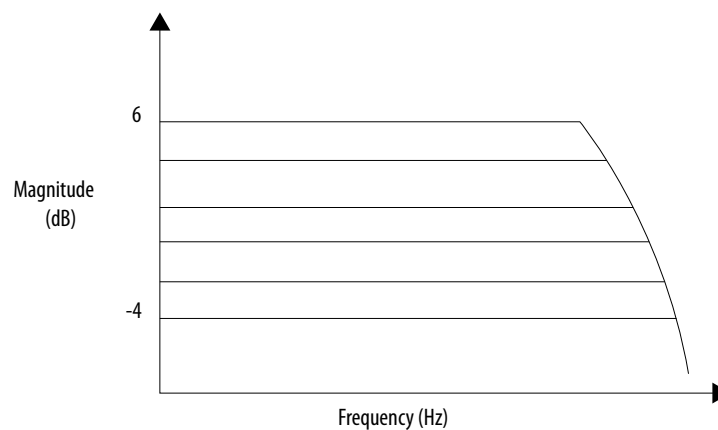**Decision Feedback Equalization (DFE)**

DFE amplifies the high frequency components of a signal without amplifying the noise content. It compensates for inter-symbol interference (ISI). DFE minimizes post-cursor ISI by adding or subtracting weighted versions of the previously received bits from the current bit. DFE works in synchronization with the TX pre-emphasis and downstream RX CTLE. This enables the RX CDR to receive the correct data that was transmitted through a lossy and noisy backplane.

DFE advantage over CTLE is improved Signal to Noise Ratio (SNR): DFE amplifies the power of the high frequency components without amplifying the noise power.

Figure 5-10: Signal ISI

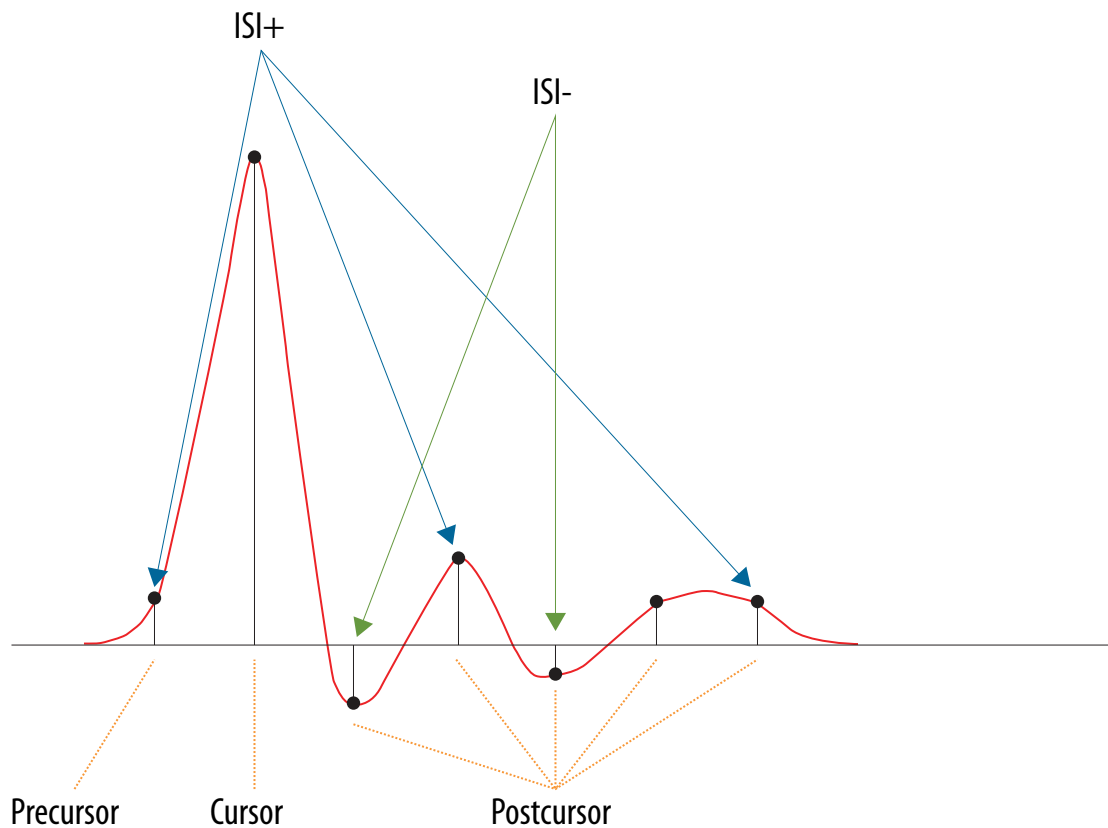

Notes:


- An ideal pulse response is a single data point at the cursor.
- Real world pulse response is non-zero before the cursor (precursor) and after the cursor (postcursor).
- ISI occurs when the data sampled at precursor or postcursor is not zero.

The DFE circuit stores delayed versions of the data. The stored bit is multiplied by a coefficient and then summed with the incoming signal. The polarity of each coefficient is programmable.

The DFE architecture supports seven fixed taps and four floating taps.

The seven fixed taps translate to the DFE capable of removing the ISI from the next 7 bits, beginning from the current bit.

Figure 5-11: Channel Pulse Response

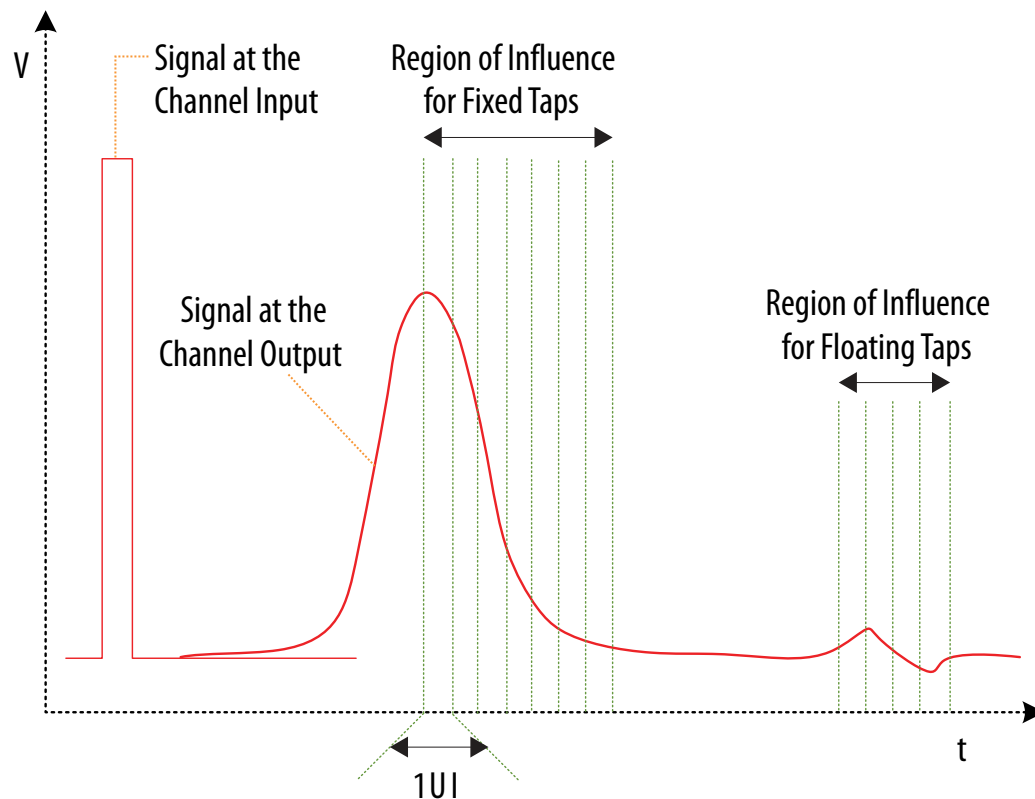


Note: The pulse at the output of the channel shows a long decaying tail. Frequency-dependent losses and quality degradation affects other signals.

Triggered DFE adaptation is a single write operation that starts the adaptation process. After adaptation is initiated, the adaptive parametric tuning engine converges DFE taps to the best possible setting. The adaptation process is complete when the DFE block converges to an adequate value. Re-triggering initiates the adaptation process again.

DFE in Arria 10 transceivers has four floating taps, and their location can be selected anywhere from Bit 8 to Bit 64.

Figure 5-12: DFE Floating and Fixed Taps

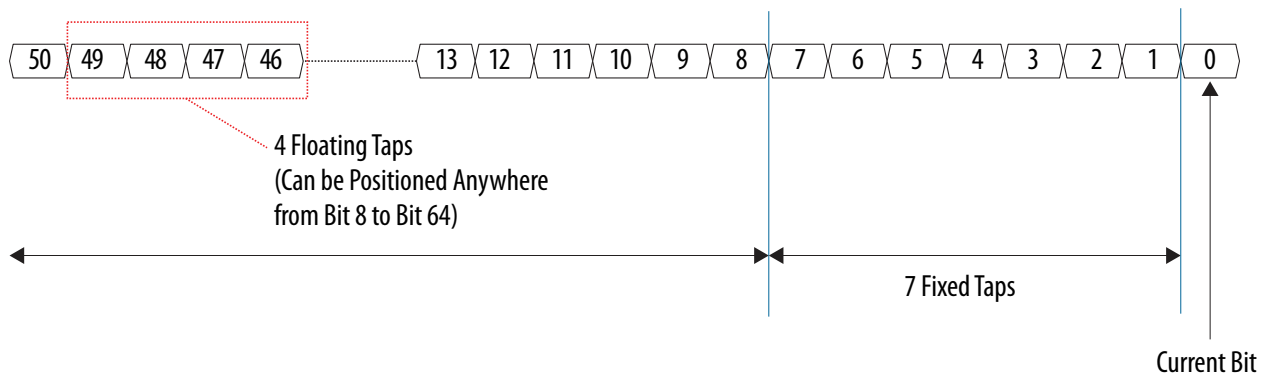

How to Enable DFE

The DFE architecture supports seven fixed taps and four floating taps. You can control the DFE through Manual, Triggered, or Continuous adaptation modes or disable it.

Note: Floating taps are not supported in Quartus II software v14.1.

Using DFE in Manual Mode:

1. Enable DFE in Manual Mode in the RX PMA tab of the Native PHY IP core.
2. Based on your channel characteristics, enable the following analog parameters through the assignment editor:
 - XCVR_A10_RX_ADP_DFE_FXTAP1 — Receiver Decision Feedback Equalizer Fixed Tap One Coefficient
 - XCVR_A10_RX_ADP_DFE_FXTAP2 — Receiver Decision Feedback Equalizer Fixed Tap Two Coefficient
 - XCVR_A10_RX_ADP_DFE_FXTAP3 — Receiver Decision Feedback Equalizer Fixed Tap Three Coefficient
 - XCVR_A10_RX_ADP_DFE_FXTAP4 — Receiver Decision Feedback Equalizer Fixed Tap Four Coefficient
 - XCVR_A10_RX_ADP_DFE_FXTAP5 — Receiver Decision Feedback Equalizer Fixed Tap Five Coefficient
 - XCVR_A10_RX_ADP_DFE_FXTAP6 — Receiver Decision Feedback Equalizer Fixed Tap Six Coefficient

Using DFE in Triggered Mode:

1. Enable DFE in Triggered Mode in the RX PMA tab of the Native PHY IP core. This is a single write operation to start the adaptation process.
2. After adaptation is initiated, the adaptive parametric tuning engine converges the DFE taps to the best possible setting based on channel characteristics. The adaptation process is completed when DFE converges to an optimal value. Re-triggering initiates the adaptation process again.

Using DFE in Continuous Mode:

1. Enable DFE in continuous mode in the RX PMA tab of the Native PHY IP core.
2. The continuous adaptation process continuously monitors the link without disturbing normal traffic. Equalization settings adapt to track link changes as well as the voltage and temperature variations on both sides of the link.

How to Start Triggered or Continuous Adaptation Process:

1. Enable DFE in RX PMA tab of the Native PHY IP core.
2. Set the mode of operation to Triggered / Continuous.
3. Use the Avalon-MM registers to start the adaptation process.
 - a. Write logic high into adapt_reset register
 - b. Write logic low into adapt_reset register
 - c. Write logic high into adapt_start register
 - d. Poll adapt_done for logic high to check if the adaptation process is completed.

Related Information


- [Analog Parameter Settings](#) on page 8-1
- [Arria 10 Transceiver Register Map](#)

On-Die Instrumentation (ODI)

On-Die Instrumentation (ODI) provides on-chip eye monitoring capabilities (EyeQ).

This capability helps to both optimize link equalization parameters during board bring-up and provide in-system link diagnostics.


Figure 5-13: Receiver and ODI Architecture

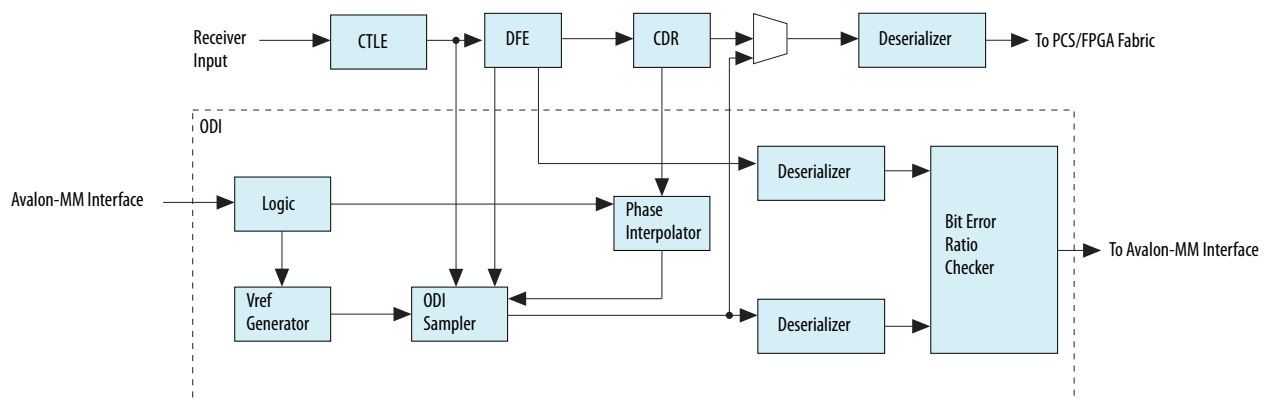

ODI in Arria 10 transceivers uses a phase interpolator to generate a horizontal offset and the voltage reference (Vref) generator to generate a vertical offset to get the ODI sample. By comparing the bit difference between the CDR sample and the ODI sample in the bit error ratio checker, ODI can monitor link margin over live traffic.

ODI in Arria 10 transceivers provides 64 horizontal steps and 127 (0 and +/- 63) vertical steps to monitor eye margin. You can set both horizontal and vertical steps through the Avalon-MM registers.

Figure 5-14: CDR Sample and ODI Sample to Calculate Bit Error Ratio

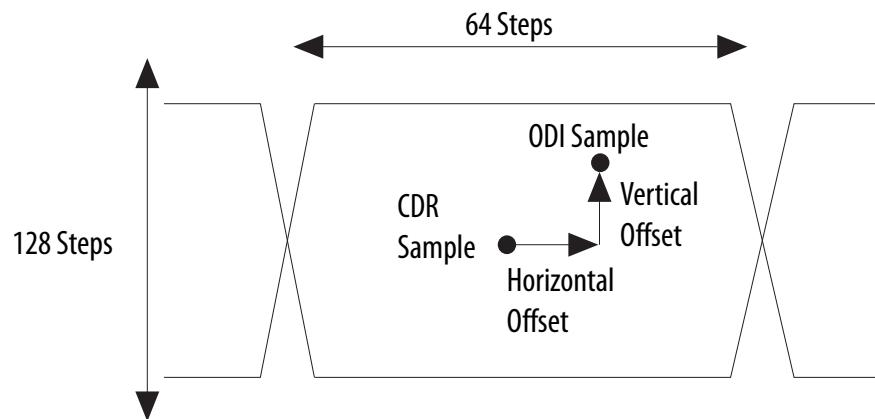
**Related Information**

[Arria 10 Register Map](#)

Clock Data Recovery (CDR) Unit

The PMA of each channel includes a channel PLL that you can configure as a receiver clock data recovery (CDR) for the receiver. You can also configure the channel PLL of channels 1 and 4 as a clock multiplier unit (CMU) PLL for the transmitter.

Figure 5-15: Channel PLL Configured as CDR

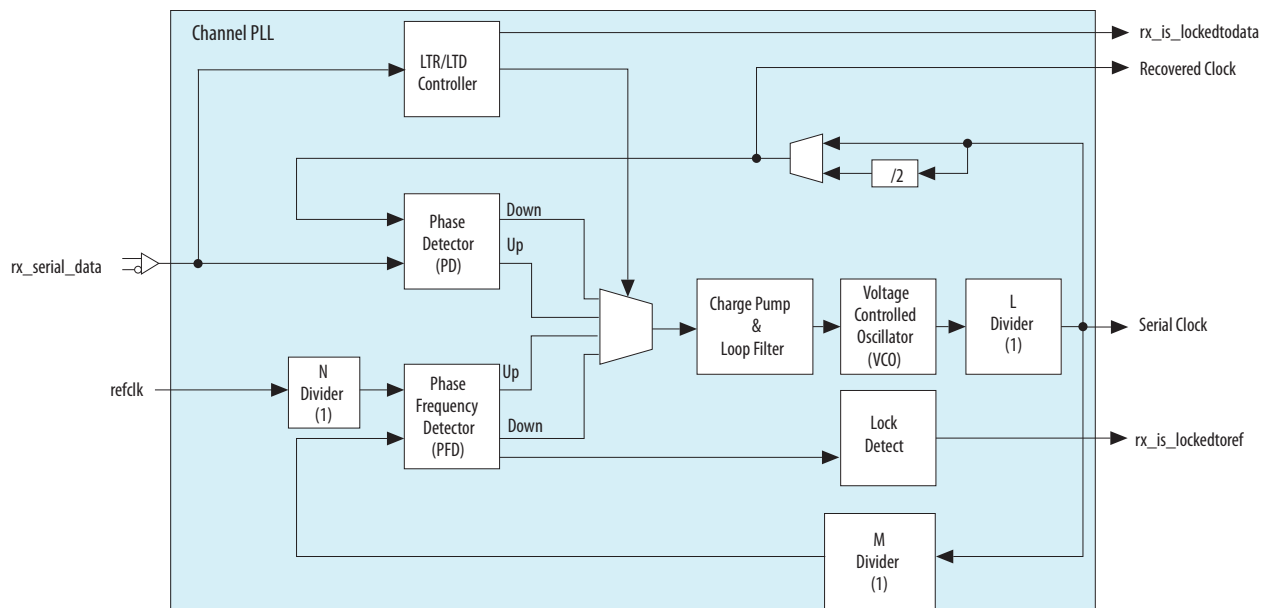

Note:

1. The Quartus II software automatically chooses the optimal values.

Lock-to-Reference Mode

In LTR mode, the phase frequency detector (PFD) in the CDR tracks the receiver input reference clock. The PFD controls the charge pump that tunes the VCO in the CDR. The `rx_is_lockedtoref` status signal is asserted active high to indicate that the CDR has locked to the phase and frequency of the receiver input reference clock.

Note: The phase detector (PD) is inactive in LTR mode.

Lock-to-Data Mode

During normal operation, the CDR must be in LTD mode to recover the clock from the incoming serial data. In LTD mode, the PD in the CDR tracks the incoming serial data at the receiver input. Depending on the phase difference between the incoming data and the CDR output clock, the PD controls the CDR charge pump that tunes the VCO.

Note: The PFD is inactive in LTD mode. The `rx_is_lockedtoref` status signal toggles randomly and is not significant in LTD mode.

After switching to LTD mode, the `rx_is_lockedtodata` status signal is asserted. The actual lock time depends on the transition density of the incoming data and the parts per million (ppm) difference between the receiver input reference clock and the upstream transmitter reference clock. The `rx_is_lockedtodata` signal toggles until the CDR sees valid data; therefore, you should hold receiver PCS logic in reset (`rx_digitalreset`) for a minimum of 4 μ s after `rx_is_lockedtodata` remains continuously asserted.

CDR Lock Modes

You can configure the CDR in either automatic lock mode or manual lock mode. By default, the Quartus II software configures the CDR in automatic lock mode.

Automatic Lock Mode

In automatic lock mode, the CDR initially locks to the input reference clock (LTR mode). After the CDR locks to the input reference clock, the CDR locks to the incoming serial data (LTD mode) when the following conditions are met:

- The signal threshold detection circuitry indicates the presence of valid signal levels at the receiver input buffer when `rx_std_signaldetect` is enabled.
- The CDR output clock is within the configured ppm frequency threshold setting with respect to the input reference clock (frequency locked).
- The CDR output clock and the input reference clock are phase matched within approximately 0.08 unit interval (UI) (phase locked).

If the CDR does not stay locked to data because of frequency drift or severe amplitude attenuation, the CDR switches back to LTR mode.

Manual Lock Mode

The PPM detector and phase relationship detector reaction times can be too long for some applications that require faster CDR lock time. You can manually control the CDR to reduce its lock time using two optional input ports (`rx_set_locktoref` and `rx_set_locktodata`).

Table 5-2: Relationship Between Optional Input Ports and the CDR Lock Mode

rx_set_locktoref	rx_set_locktodata	CDR Lock Mode
0	0	Automatic
1	0	Manual-RX CDR LTR
X	1	Manual-RX CDR LTD


Deserializer

The deserializer block clocks in serial input data from the receiver buffer using the high-speed serial recovered clock and deserializes the data using the low-speed parallel recovered clock. The deserializer forwards the deserialized data to the receiver PCS or FPGA fabric.

The deserializer supports the following deserialization factors: 8, 10, 16, 20, 32, 40, and 64.

Figure 5-16: Deserializer Block Diagram

The deserializer block sends out the LSB of the input data first.

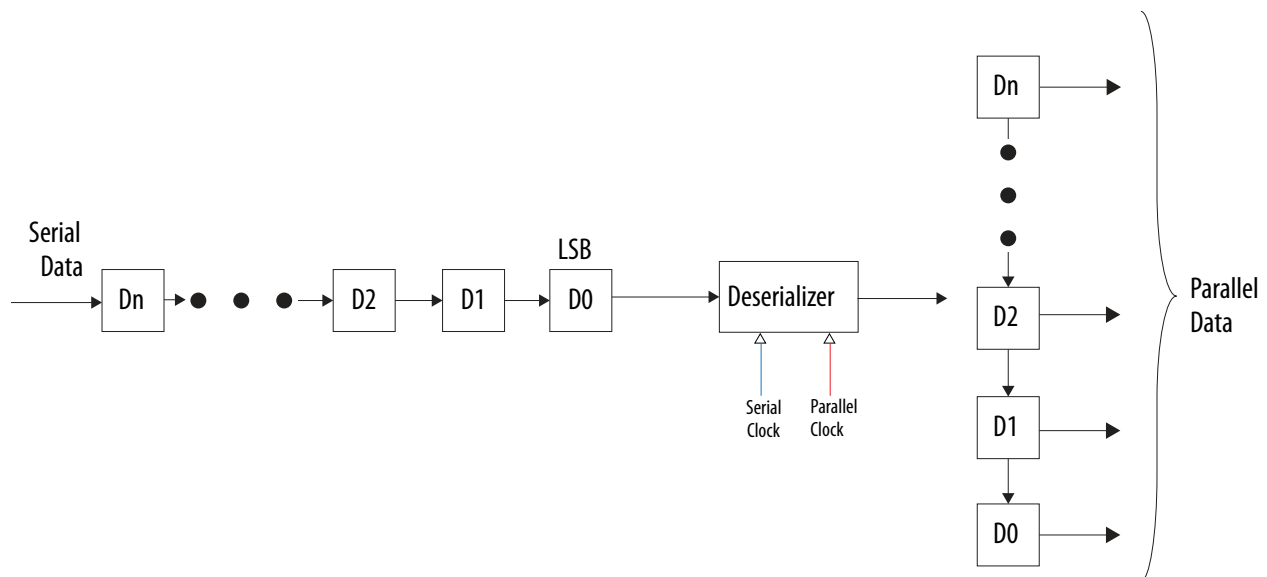

Loopback

The PMA supports serial, diagnostic, and reverse loopback paths.

Figure 5-17: Serial Loopback Path

The serial loopback path sets the CDR to recover the data from serializer while data from receiver serial input pin is ignored by CDR. The transmitter buffer sends data normally.



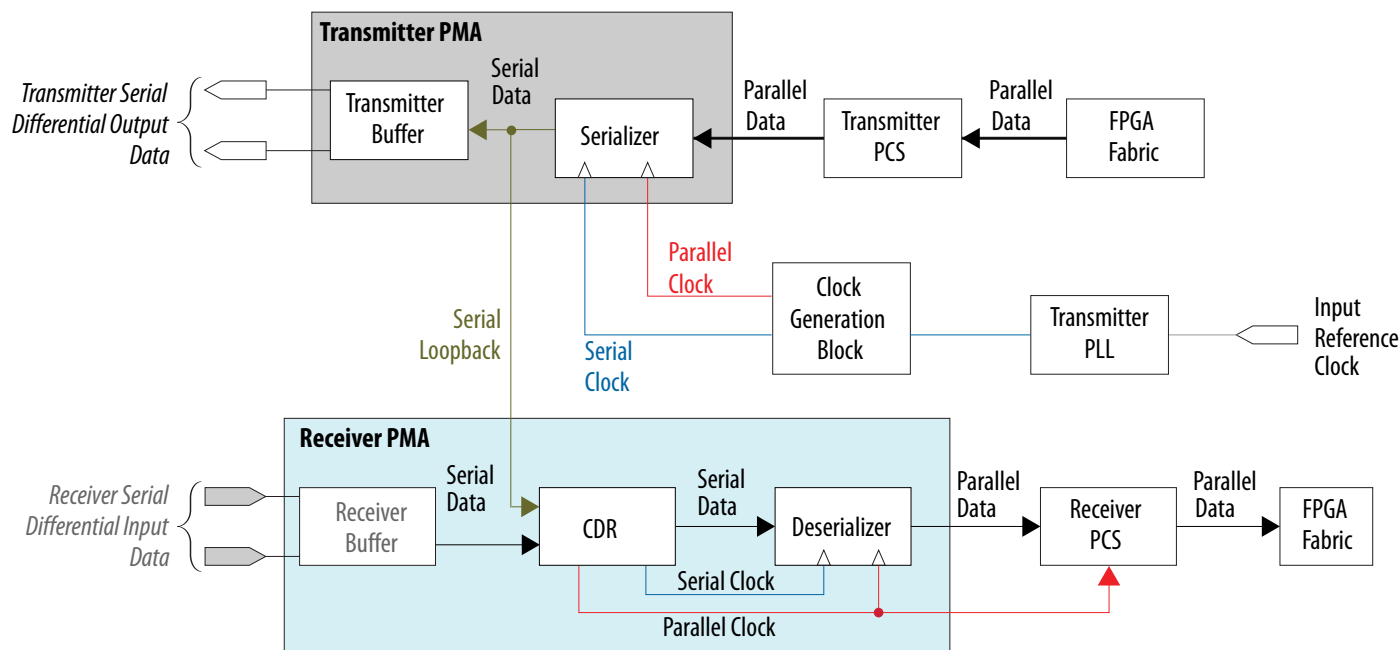
**Figure 5-18: Diagnostic Loopback Path**

Figure 5-19: Reverse Loopback Path

The reverse loopback path sets the transmitter buffer to transmit data fed directly from the CDR recovered data. Data from the serializer is ignored by the transmitter buffer.

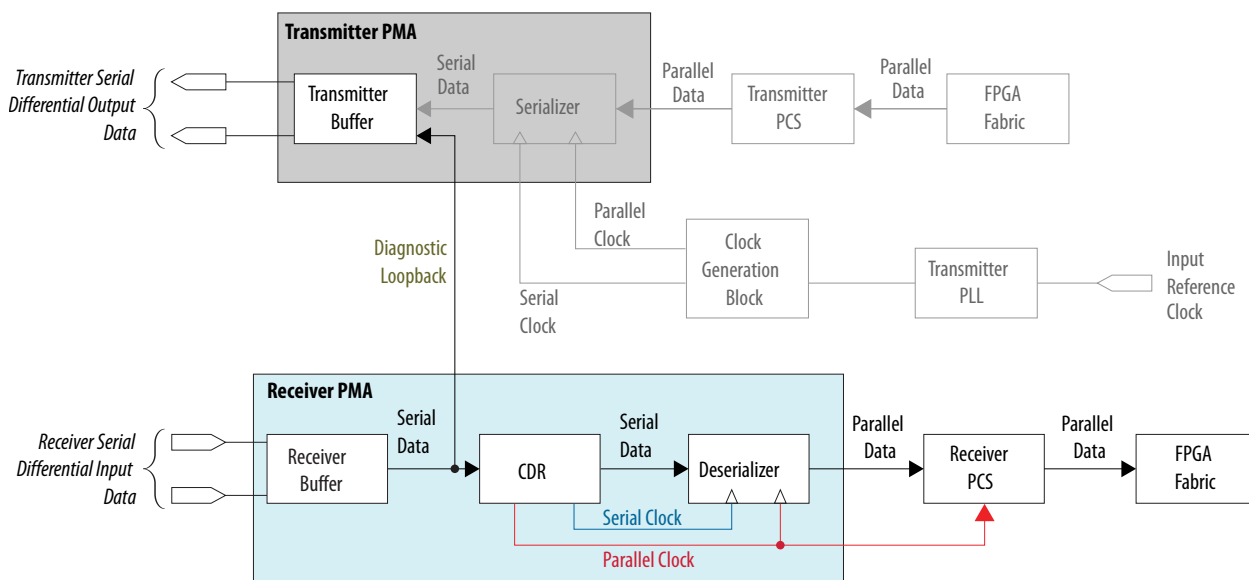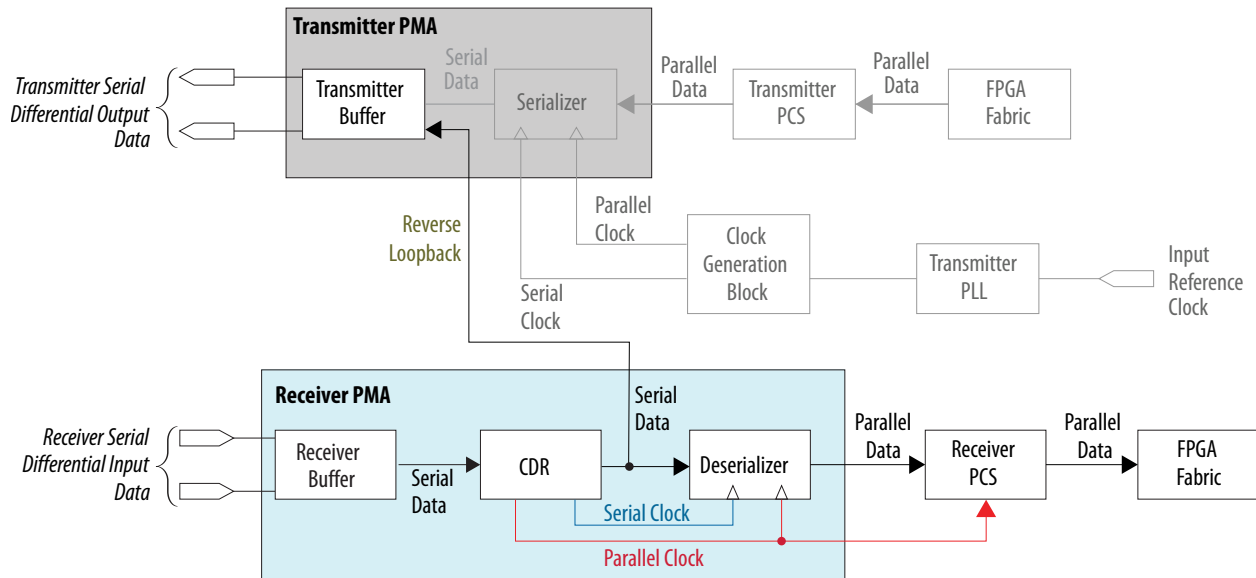


Arria 10 Enhanced PCS Architecture

You can use the Enhanced PCS to implement multiple protocols that operate at around 10 Gbps or higher line rates.

The Enhanced PCS provides the following functions:

- Performs functions common to most serial data industry standards, such as word alignment, encoding/decoding, and framing, before data is sent or received off-chip through the PMA
- Handles data transfer to and from the FPGA fabric
- Internally handles data transfer to and from the PMA
- Provides frequency compensation
- Performs channel bonding for multi-channel low skew applications

Figure 5-20: Enhanced PCS Datapath Diagram

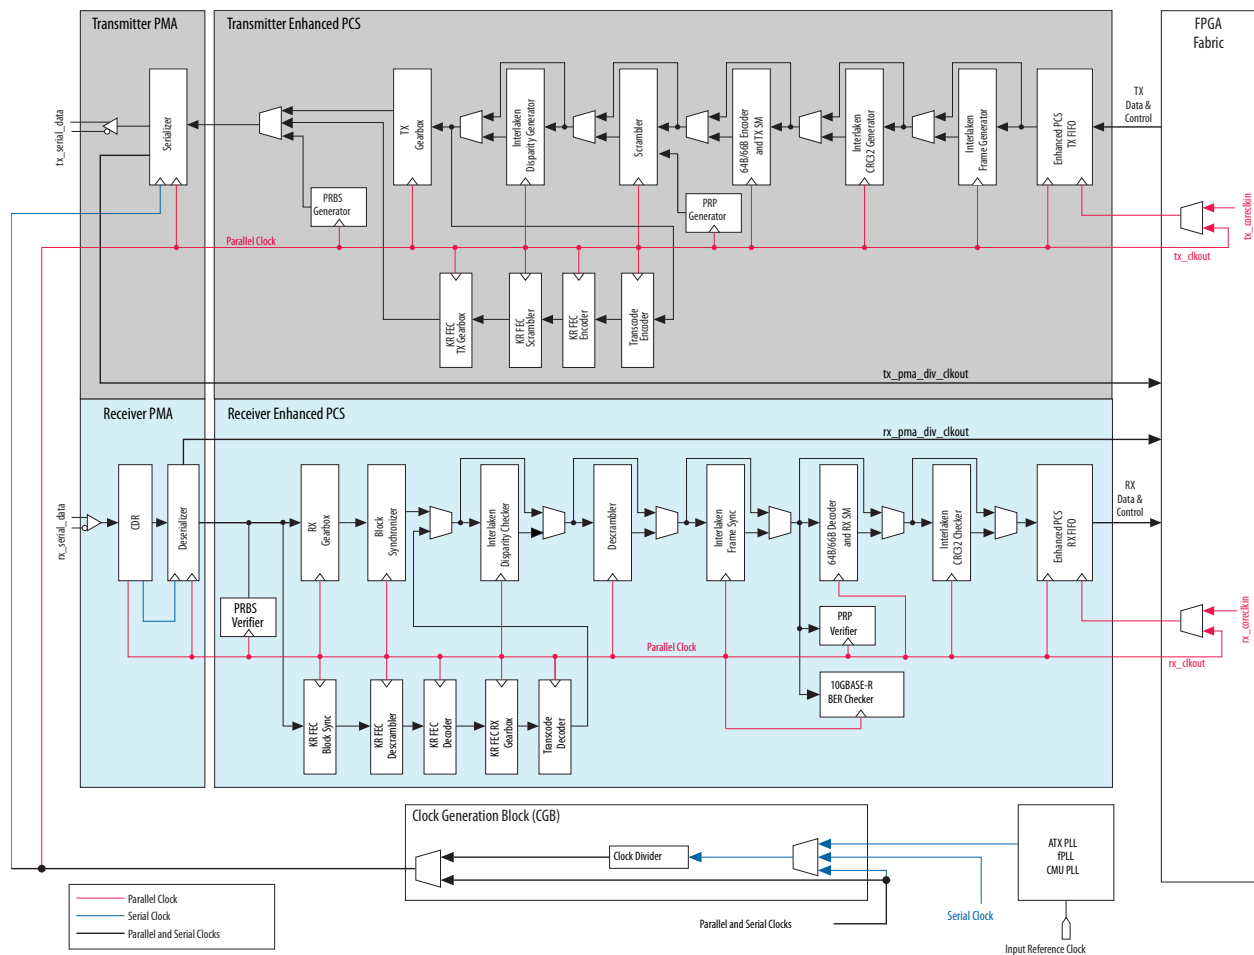

Related Information

[Implementing Protocols in Arria 10 Transceivers](#) on page 2-1

Transmitter Datapath

Enhanced PCS TX FIFO (Shared with Standard PCS and PCIe Gen3 PCS)

The Enhanced PCS TX FIFO provides an interface between the transmitter channel PCS and the FPGA fabric. The TX FIFO can operate for phase compensation between the channel PCS and FPGA fabric. You can also use the TX FIFO as an elastic buffer to control the input data flow, using `tx_enh_data_valid`. The TX FIFO also allows channel bonding. The TX FIFO has a width of 73 bits and a depth of 16 words.

The TX FIFO partially full and empty thresholds can also be set through the Transceiver and PLL Address Map. Refer to the *Reconfiguration Interface and Dynamic Reconfiguration* chapter for more details.

The TX FIFO supports the following operating modes:

- Phase Compensation mode
- Register mode
- Interlaken mode
- Basic mode

Related Information

[Reconfiguration Interface and Dynamic Reconfiguration](#) on page 6-1

Phase Compensation Mode

In Phase Compensation mode, the TX FIFO decouples phase variations between the FPGA fabric and transceiver clock domains. In this mode, the TX FIFO compensates for the phase difference between the read and write clocks. You can use `tx_coreclk` (FPGA fabric clock) or `tx_clkout` (TX parallel low-speed clock) to clock the write side of the TX FIFO. `tx_clkout` clocks the read side of the TX FIFO.

Note: The TX FIFO write clock frequency and read clock frequency depend on the gearbox ratio, `tx_enh_data_valid` control signal. When TX FIFO is used in phase compensation mode, TX FIFO write clock frequency and read clock frequency depends on uneven gear ratios (like 64:40, 64:32 etc.), `tx_enh_data_valid` control signal. For the even gear ratios (like 64:64, 40:40 etc.), tie `tx_enh_data_valid` to one.

For example, when using the 40:40 gearbox ratio and a data rate of 10 Gbps, the `tx_clkout` frequency is 250 MHz and the `tx_coreclk` frequency is 250 MHz. The `tx_clkout` frequency is 257.8125 MHz in 10GBASE-R mode when using the 66:40 gearbox ratio. `tx_coreclk` must run at 156.25 MHz.

Note: Phase Compensation can also be used in double-width mode, where the FPGA fabric data width is doubled to allow the FPGA fabric clock to run at half rate. The single/double width mode is set in the Native PHY Parameter Editor. Refer to the *PLLs and Clock Networks* chapter for details about the clock frequencies when using FIFO single and double width modes.

Register Mode

In Register mode, `tx_parallel_data` (data), `tx_control` (indicates whether `tx_parallel_data` is a data or control word), and `tx_enh_data_valid` (data valid) are registered at the FIFO output. The FIFO in register mode has one register stage or one parallel clock latency.

Note: You must control the `tx_enh_data_valid` signal based on the gearbox ratio to avoid overflow or underflow in the gearbox.

Interlaken Mode

In Interlaken mode, the TX FIFO operates as an elastic buffer. In this mode, there are additional signals to control the data flow into the FIFO. Therefore, the FIFO write clock frequency does not have to be the same as the read clock frequency. You control the writing to the TX FIFO with `tx_enh_data_valid` by monitoring the FIFO flags. The goal is to prevent the FIFO from becoming full or empty. On the read side, read enable is controlled by the Interlaken frame generator.

Basic Mode

In Basic mode, the TX FIFO operates as an elastic buffer, where you control the FIFO `tx_enh_data_valid` based on FIFO flags. The FIFO read enable is controlled by gearbox data valid, which is a function of gearbox input and output data width.


Interlaken Frame Generator

The Interlaken frame generator block takes the data from the TX FIFO and encapsulates the payload and burst/idle control words from the FPGA fabric with the framing layer's control words (synchronization word, scrambler state word, skip word, and diagnostic word) to form a metaframe. The Native PHY IP Parameter Editor allows you to set the metaframe length from five 8-byte words to a maximum value of 8192 (64Kbyte words).

Program the same value for the metaframe length for the transmitter and receiver.

Figure 5-21: Interlaken Frame Generator

The Interlaken frame generator implements the Interlaken protocol.

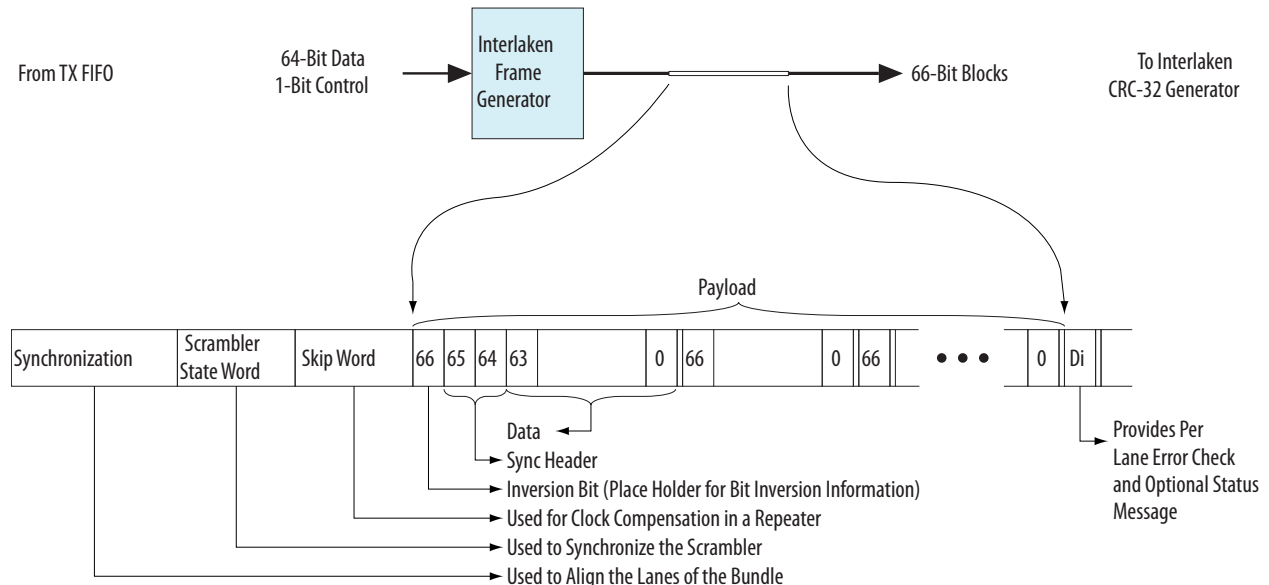

Interlaken CRC-32 Generator


The Interlaken CRC-32 generator block receives data from the Interlaken frame generator and calculates the cyclic redundancy check (CRC) code for each block of data. This CRC code value is stored in the CRC32 field of the diagnostic word. CRC-32 provides a diagnostic tool for each lane. This helps to trace the errors on the interface back to an individual lane.

The CRC-32 calculation covers most of the metaframe, including the diagnostic word, except the following:

- Bits [66:64] of each word
- 58-bit scrambler state within the scrambler state word
- 32-bit CRC-32 field within the diagnostic word

Figure 5-22: Interlaken CRC-32 Generator

The Interlaken CRC-32 generator implements the Interlaken protocol.

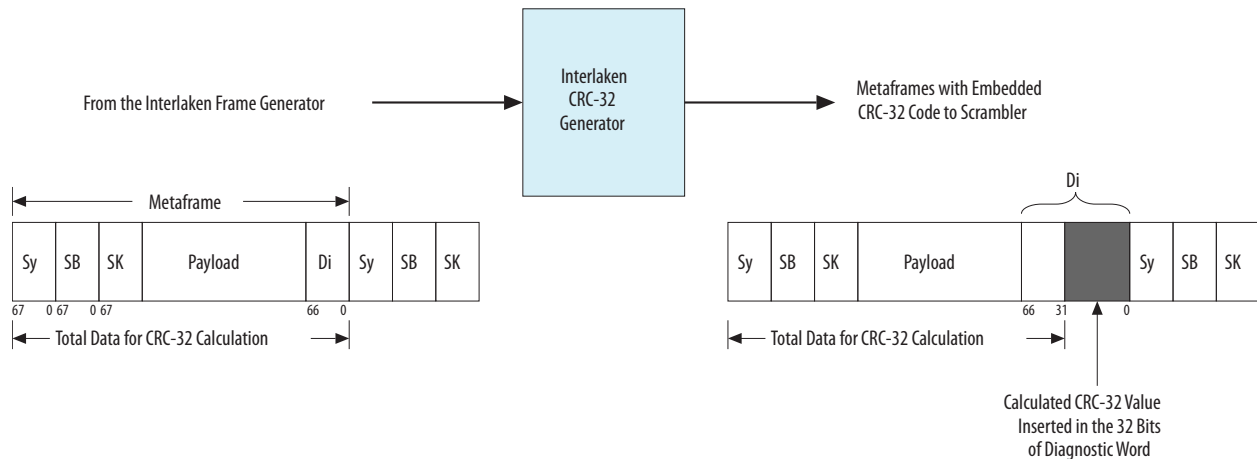

64B/66B Encoder and Transmitter State Machine


The 64B/66B encoder is used to achieve DC-balance and sufficient data transitions for clock recovery. It encodes 64-bit XGMII data and 8-bit XGMII control into 10GBASE-R 66-bit control or data blocks in accordance with Clause 49 of the IEEE802.3-2008 specification.

The 66-bit encoded data contains two overhead sync header bits that the receiver PCS uses for block synchronization and bit-error rate (BER) monitoring. The sync header is 01 for data blocks and 10 for control blocks. Sync headers are not scrambled and are used for block synchronization. (The sync headers 00 and 11 are not used, and generate an error if seen.) The remainder of the block contains the payload. The payload is scrambled and the sync header bypasses the scrambler.

The encoder block also has a state machine (TX SM) designed in accordance with the IEEE802.3-2008 specification. The TX SM ensures valid packet construction on data sent from the MAC layer. It also performs functions such as transmitting local faults under reset, as well as transmitting error codes when the 10GBASE-R PCS rules are violated.

Note: The 64B/66B encoder is available to implement the 10GBASE-R protocol.

Figure 5-23: Example Data Pattern for 64B/66B Encoding

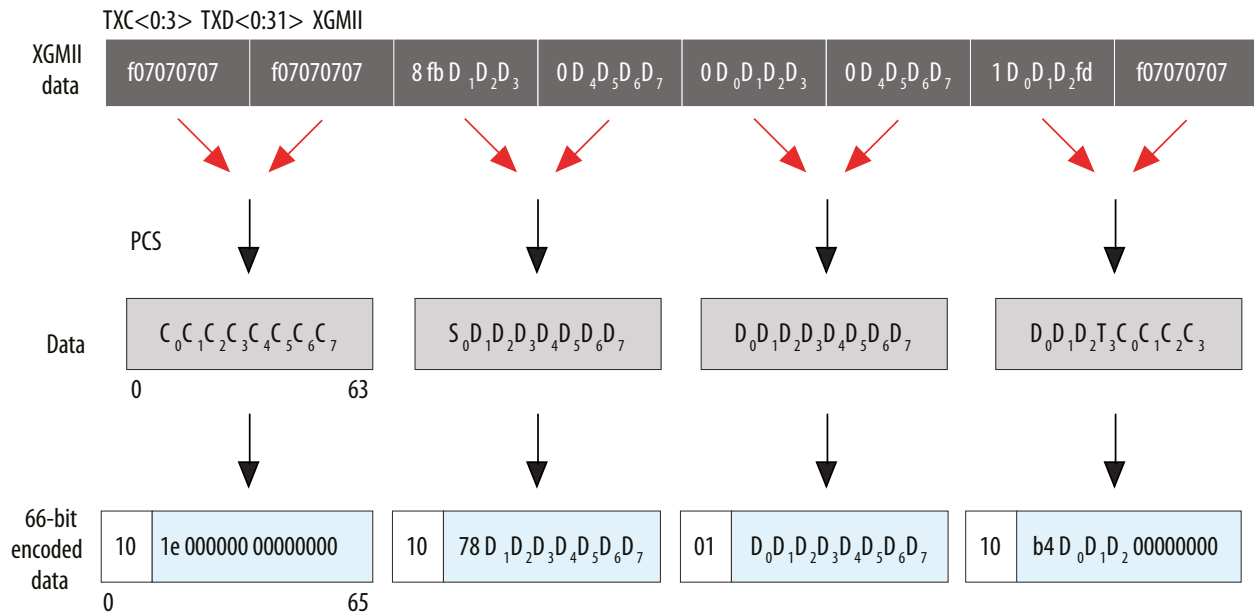

Enhanced PCS Pattern Generators

The Enhanced PCS supports pseudo-random bit sequence (PRBS) pattern and square wave pattern generators. The pattern generators or verifiers in the Enhanced PCS are enabled by writing to the respective register bits of the Transceiver and PLL Address Map.

Refer to the Transceiver and PLL Address Map for configuration details.

PRBS Generator

The PRBS generator block generates PRBS patterns and square wave patterns.

PRBS test patterns may be considered equivalent to "noise." Use these pattern generators to test the transceiver link with a noisy signal (using the test patterns listed below) by placing the transceiver in loopback mode.

The PRBS generator supports a 64-bit PCS-PMA interface. PRBS7 supports 64-bit width only. PRBS9 supports 64-bit and 10-bit PCS-PMA interface widths to allow testing at lower data rates.

The following PRBS test patterns are supported:

- PRBS7: $x^7 + x^6 + 1$
- PRBS9: $x^9 + x^5 + 1$
- PRBS15: $x^{15} + x^{14} + 1$
- PRBS23: $x^{23} + x^{18} + 1$
- PRBS31: $x^{31} + x^{28} + 1$


Enable the PRBS generator and select a test pattern through the reconfiguration interface.

Use PRBS9 to test transceiver links with linear impairments, and with 8B/10B.

Use PRBS15 for jitter evaluation.

Use PRBS23 or PRBS31 for jitter evaluation (data-dependent jitter) of non-8B/10B links, such as SDH/SONET/OTN jitter testers. Most 40G, 100G, and 10G applications use PRBS31 for link evaluation.


Figure 5-24: PRBS Generator for Serial Implementation of PRBS9 Pattern

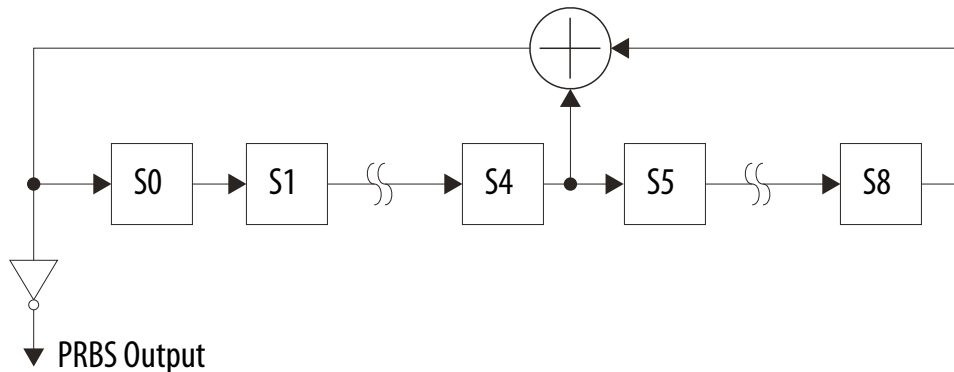

Note: All supported PRBS generators are similar to the PRBS9 generator.

The square-wave generator supports 64-bit PCS-PMA interface widths. It has a programmable n -number of consecutive serial bit 1s and 0s, where n is 4, 6, or 8 (n defaults to 4).

Figure 5-25: Generator for Square Wave Pattern

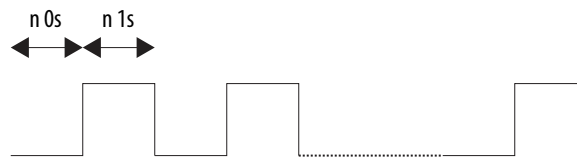

Program the value of n through the Transceiver and PLL Address Map.

Pseudo-Random Pattern Generator

The pseudo-random pattern (PRP) generator is specifically designed for the 10GBASE-R and 1588 protocols. The PRP generator block operates in conjunction with the scrambler to generate pseudo-random patterns for the TX and RX tests in the 10G Ethernet mode. It generates various test patterns from various seeds loaded to the scrambler and select data patterns.

Set the following PRP generator options through the Transceiver and PLL Address Map:

- The data pattern select bit switch can be toggled between two data patterns
- The value of Seed A and Seed B can be changed

Note: You cannot enable the PRP and PRBS generators at the same time.


Refer to the Transceiver and PLL Address Map for configuration details.

Scrambler

The scrambler randomizes data to create transitions to DC-balance the signal and help CDR circuits. The scrambler uses a $x^{58} + x^{39} + 1$ polynomial and supports both synchronous scrambling used for Interlaken and asynchronous (also called self-synchronized) scrambling used for the 10GBASE-R protocol.


The asynchronous (self-synchronizing) mode does not require an initialization seed. Except for the two sync header bits in each 66-bit data block, the entire 64-bit payload is scrambled by feeding it into a linear feedback shift register (LFSR) continuously to generate scrambled data while the sync-header bits bypass the scrambler. The initial seed is set to all 1s. You can change the seed for the 10GBASE-R protocol using the Native PHY IP Parameter Editor.

Figure 5-26: Asynchronous Scrambler in Serial Implementation

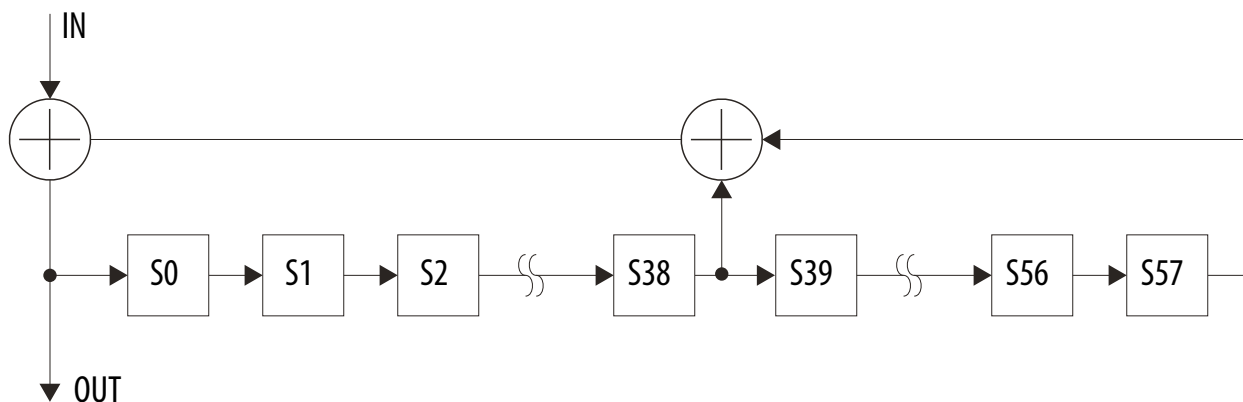

In synchronous mode, the scrambler is initially reset to different programmable seeds on each lane. The scrambler then runs by itself. Its current state is XOR'd with the data to generate scrambled data. A data checker in the scrambler monitors the data to determine if it should be scrambled or not. If a synchronization word is found, it is transmitted without scrambling. If a Scrambler State Word is detected, the current scramble state is written into the 58-bit scramble state field in the Scrambler State Word and sent over the link. The receiver uses this scramble state to synchronize the descrambler. The seed is automatically set for Interlaken protocol.

Figure 5-27: Synchronous Scrambler Showing Different Programmable Seeds

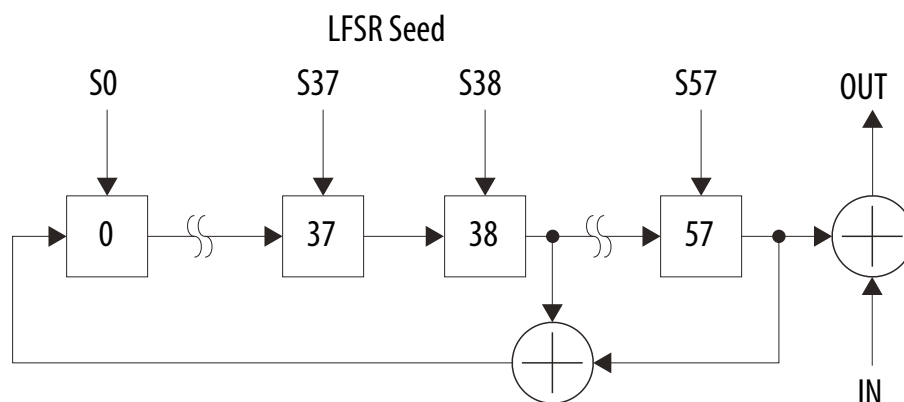

Interlaken Disparity Generator

The Interlaken disparity generator block is in accordance with the Interlaken protocol specification and provides a DC-balanced data output.

The Interlaken protocol solves the unbounded baseline wander, or DC imbalance, of the 64B/66B coding scheme used in 10Gb Ethernet by inverting the transmitted data. The disparity generator monitors the

transmitted data and makes sure that the running disparity always stays within a ± 96 -bit bound. It adds the 67th bit (bit 66) to signal the receiver whether the data is inverted or not.

Table 5-3: Inversion Bit Definition

Bit 66	Interpretation
0	Bits [63:0] are not inverted; the receiver processes this word without modification
1	Bits [63:0] are inverted; the receiver inverts the bits before processing this word


Note: The Interlaken disparity generator is available to implement the Interlaken protocol.

TX Gearbox, TX Bitflip and Polarity Inversion

The TX gearbox adapts the PCS data width to the smaller bus width of the PCS-PMA interface (Gearbox Reduction). It supports different ratios (FPGA fabric-PCS Interface Width: PCS-PMA Interface Width) such as 66:32, 66:40, 67:32, 67:40, 50:40, 64:32, 64:40, 40:40, 32:32, 64:64, 67:64, and 66:64. The gearbox mux selects a group of consecutive bits from the input data bus depending on the gearbox ratio and the data valid control signals.

Data valid generation logic is essential for gearbox operation. Each block of data is accompanied by `tx_enh_data_valid` (data valid signal) which “qualifies” the block as valid or not. The data valid toggling pattern is dependent on the data width conversion ratio. For example, if the ratio is 66:40, the data valid signal is high in 20 out of 33 cycles or approximately 2 out of 3 cycles and the pattern repeats every 33 `tx_clkout` (TX low-speed parallel clock) cycles.

Figure 5-28: 66:40 Data Valid Pattern

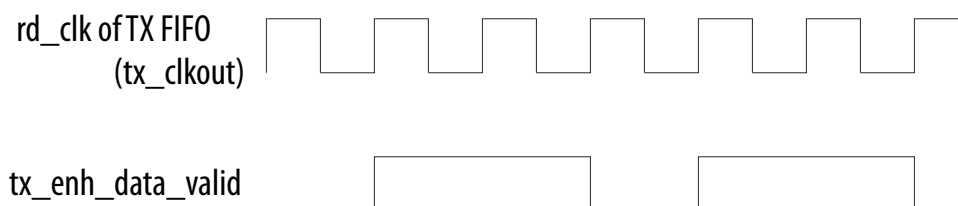

The TX gearbox also has a bit slipping feature to adjust the data skew between channels. The TX parallel data is slipped on the rising edge of `tx_enh_bitslip` before it is passed to the PMA. The maximum number of the supported bitlips is PCS data width-1 and the slip direction is from MSB to LSB and from current to previous word.

Figure 5-29: TX Bitflip

`tx_enh_bitslip` = 2 and PCS width of gearbox is 67

	Current Word							Previous Word						
Bit Index	66	65	64	...	2	1	0	66	65	64	...	2	1	0

You can use transmitter data polarity inversion to invert the polarity of every bit of the input data word to the serializer in the transmitter path. The inversion has the same effect as swapping the positive and negative signals of the differential TX buffer. This is useful if these signals are reversed on the board or backplane layout. Enable polarity inversion through the Native PHY IP Parameter Editor.

KR FEC Blocks

The KR FEC blocks in the Enhanced PCS are designed in accordance with the 10G-KR FEC and 40G-KR FEC of the IEEE 802.3 specification. The KR FEC implements the Forward Error Correction (FEC) sublayer, a sublayer between the PCS and PMA sublayers.

Most data transmission systems, such as Ethernet, have minimum requirements for the bit error rate (BER). However, due to channel distortion or noise in the channel, the required BER may not be achievable. In these cases, adding a forward error control correction can improve the BER performance of the system.

The FEC sublayer is optional and can be bypassed. When used, it can provide additional margin to allow for variations in manufacturing and environmental conditions. FEC can achieve the following objectives:


- Support a forward error correction mechanism for the 10GBASE-R/KR and 40GBASE-R/KR protocols
- Support the full duplex mode of operation of the Ethernet MAC
- Support the PCS, PMA, and Physical Medium Dependent (PMD) sublayers defined for the 10GBASE-R/KR and 40GBASE-R/KR protocols

With KR FEC, the BER performance of the system can be improved.

Transcode Encoder

The KR forward error correction (KR FEC) transcode encoder block performs the 64B/66B to 65-bit transcoder function by generating the transcode bit. The transcode bit is generated from a combination of 66 bits after the 64B/66B encoder which consists of a 2-bit synchronization header (S0 and S1) and a 64-bit payload (D0, D1,..., D63). To ensure a DC-balanced pattern, the transcode word is generated by performing an XOR function on the second synchronization bit S1 and payload bit D8. The transcode bit becomes the LSB of the 65-bit pattern output of the transcode encoder.

Figure 5-30: Transcode Encoder

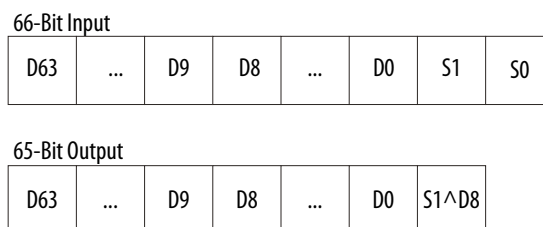

KR FEC Encoder

FEC (2112,2080) is an FEC code specified in Clause 74 of the IEEE 802.3 specification. The code is a shortened cyclic code (2112, 2080). For each block of 2080 message bits, another 32 parity checks are generated by the encoder to form a total of 2112 bits. The generator polynomial is:

$$g(x) = x^{32} + x^{23} + x^{21} + x^{11} + x^2 + 1$$

KR FEC Scrambler

The KR FEC scrambler block performs scrambling based on the generation polynomial $x^{58} + x^{39} + 1$, which is necessary for establishing FEC block synchronization in the receiver and to ensure DC balance.

KR FEC TX Gearbox

The KR FEC TX gearbox converts 65-bit input words to 64-bit output words to interface the KR FEC encoder with the PMA. This gearbox is different from the TX gearbox used in the Enhanced PCS. The KR FEC TX gearbox aligns with the FEC block. Because the encoder output (also the scrambler output) has its unique word size pattern, the gearbox is specially designed to handle that pattern.


Receiver Datapath

RX Gearbox, RX Bitflip, and Polarity Inversion

The RX gearbox adapts the PMA data width to the larger bus width of the PCS channel (Gearbox Expansion). It supports different ratios (PCS-PMA interface width : FPGA fabric-PCS interface width) such as 32:66, 40:66, 32:67, 40:67, 40:50, 32:64, 40:64, 40:40, 32:32, 64:64, 67:64, and 66:64 and a bit slipping feature.

RX bitflip is engaged when the RX block synchronizer or `rx_bitflip` is enabled to shift the word boundary. On the rising edge of the bitflip signal of the RX block synchronizer or `rx_bitflip` from the FPGA fabric, the word boundary is shifted by 1 bit. Each bit slip removes the earliest received bit from the received data.

Figure 5-31: RX Bitflip

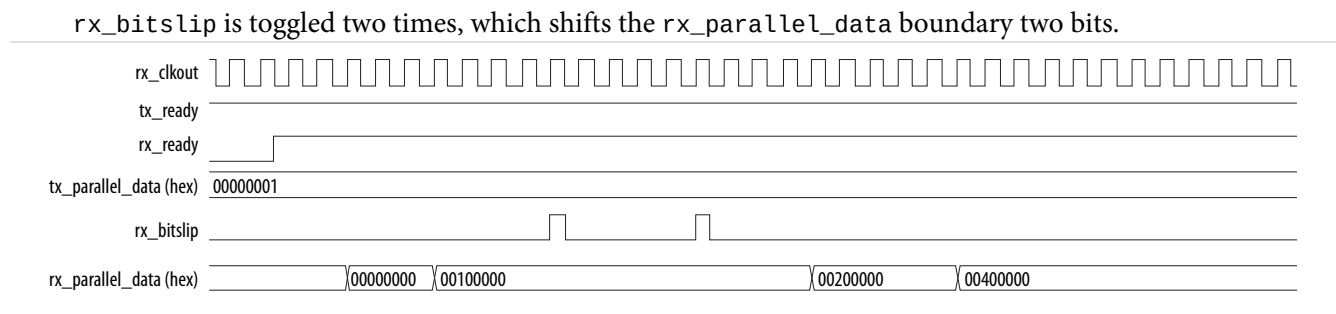

The receiver gearbox can invert the polarity of the incoming data. This is useful if the receiver signals are reversed on the board or backplane layout. Enable polarity inversion through the Native PHY IP Parameter Editor.

Block Synchronizer

The block synchronizer determines the block boundary of a 66-bit word in the case of the 10GBASE-R protocol or a 67-bit word in the case of the Interlaken protocol. The incoming data stream is slipped one bit at a time until a valid synchronization header (bits 65 and 66) is detected in the received data stream. After the predefined number of synchronization headers (as required by the protocol specification) is detected, the block synchronizer asserts `rx_enh_blk_lock` (block lock status signal) to other receiver PCS blocks down the receiver datapath and to the FPGA fabric.

Note: The block synchronizer is designed in accordance with Interlaken Protocol specification (as described in Figure 13 of Interlaken Protocol Definition v1.2) and 10GBASE-R protocol specification (as described in IEEE 802.3-2008 clause-49).

Interlaken Disparity Checker

The Interlaken disparity checker examines the received inversion bit inserted by the far end disparity generator, to determine whether to reverse the inversion process of the Interlaken disparity generation.

Note: The Interlaken disparity checker is available to implement the Interlaken protocol.

Descrambler

The descrambler block descrambles received data to regenerate unscrambled data using the $x^{58} + x^{39} + 1$ polynomial. Like the scrambler, it operates in asynchronous mode or synchronous mode.

Related Information

[Scrambler](#) on page 5-24

Interlaken Frame Synchronizer

The Interlaken frame synchronizer delineates the metaframe boundaries and searches for each of the framing layer control words: Synchronization, Scrambler State, Skip, and Diagnostic. When four consecutive synchronization words have been identified, the frame synchronizer achieves the frame locked state. Subsequent metaframes are then checked for valid synchronization and scrambler state words. If four consecutive invalid synchronization words or three consecutive mismatched scrambler state words are received, the frame synchronizer loses frame lock. In addition, the frame synchronizer provides `rx_enh_frame_lock` (receiver metaframe lock status) to the FPGA fabric.

Note: The Interlaken frame synchronizer is available to implement the Interlaken protocol.

64B/66B Decoder and Receiver State Machine

The 64B/66B decoder reverses the 64B/66B encoding process. The decoder block also contains a state machine (RX SM) designed in accordance with the IEEE802.3-2008 specification. The RX SM checks for a valid packet structure in the data sent from the remote side. It also performs functions such as sending local faults to the Media Access Control (MAC)/Reconciliation Sublayer (RS) under reset and substituting error codes when the 10GBASE-R and 10GBASE-KR PCS rules are violated.


Note: The 64B/66B decoder is available to implement the 10GBASE-R protocol.

PRBS Verifier

The pseudo-random bit stream (PRBS) block verifies the pattern generated by the PRBS generator. The verifier supports the 64-bit PCS-PMA interface. PRBS7 supports 64-bit width only. PRBS9 supports 10-bit PMA data width to allow testing at a lower data rate.

The following PRBS verifiers are supported:

- PRBS7: $x^7 + x^6 + 1$
- PRBS9: $x^9 + x^5 + 1$
- PRBS15: $x^{15} + x^{14} + 1$
- PRBS23: $x^{23} + x^{18} + 1$
- PRBS31: $x^{31} + x^{28} + 1$

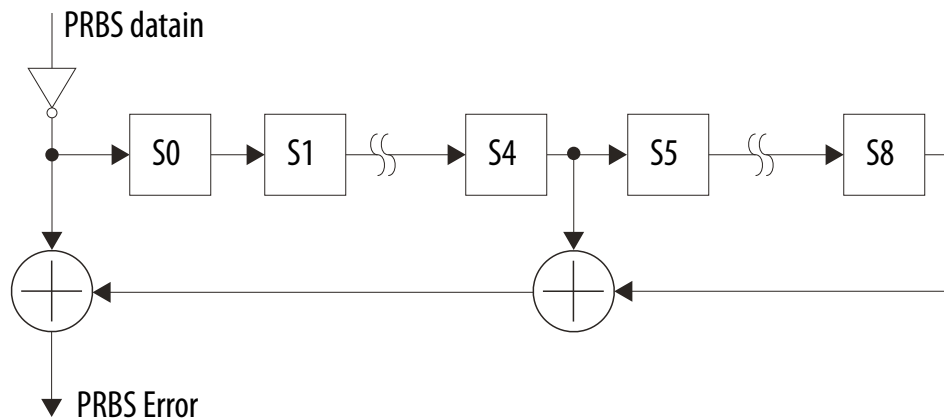Figure 5-32: PRBS9 Verify Serial Implementation

The PRBS verifier has the following control and status signals available to the FPGA fabric:

- `rx_prbs_done`—Indicates the PRBS sequence has completed one full cycle. It stays high until you reset it with `rx_prbs_err_clr`.
- `rx_prbs_err`—Goes high if an error occurs. This signal is pulse-extended to allow you to capture it in the RX FPGA CLK domain.
- `rx_prbs_err_clr`—Used to reset the `rx_prbs_err` signal.

The Enhanced RX datapath does not include a verifier for the square wave.


Enable the PRBS verifier control and status ports through the Native PHY IP Parameter Editor in the Quartus II software. The PRBS pattern is automatically selected to match the PRBS generator pattern that you selected. The Transceiver and PLL Address Map can be used to enable or disable PRBS verifier.

PRP Verifier

The Pseudo Random Pattern (PRP) verifier is available for 10GBASE-R and 10GBASE-R 1588 protocol modes. The PRP verifier monitors the output of the descrambler when block synchronization is achieved.

The PRP verifier:

- Searches for a test pattern (two local faults, or all 0s) or its inverse
- Tracks the number of mismatches with a 16-bit error counter

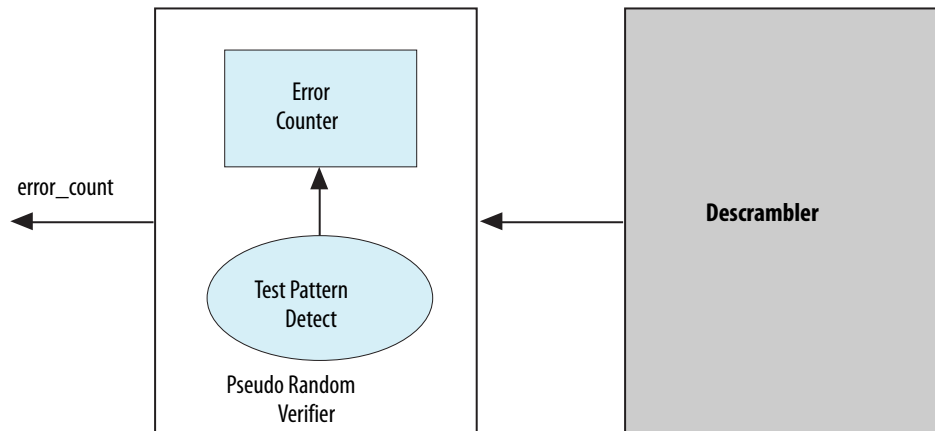Figure 5-33: PRP Verifier

Note: You cannot enable the PRP and PRBS verifiers at the same time.

Enable the PRP verifier through the Transceiver and PLL Address Map. The PRP pattern is automatically selected to match the PRP generator pattern that you selected.

10GBASE-R Bit-Error Rate (BER) Checker

The 10GBASE-R BER checker block is designed in accordance with the 10GBASE-R protocol specification as described in IEEE 802.3-2008 clause-49. After block lock synchronization is achieved, the BER checker starts to count the number of invalid synchronization headers within a 125- μ s period. If more than 16 invalid synchronization headers are observed in a 125- μ s period, the BER checker provides the status signal `rx_enh_highber` to the FPGA fabric, indicating a high bit error rate condition.

When the optional control input `rx_enh_highber_clr_cnt` is asserted, the internal counter for the number of times the BER state machine has entered the "BER_BAD_SH" state is cleared.

When the optional control input `rx_enh_clr_errblk_count` is asserted, the internal counter for the number of times the RX state machine has entered the "RX_E" state for the 10GBASE-R protocol is cleared. In modes where the FEC block is enabled, the assertion of this signal resets the status counters within the RX FEC block.

Note: The 10GBASE-R BER checker is available to implement the 10GBASE-R protocol.

Interlaken CRC-32 Checker

The Interlaken CRC-32 checker verifies that the data transmitted has not been corrupted between the transmit PCS and the receive PCS. The CRC-32 checker calculates the 32-bit CRC for the received data and compares it against the CRC value that is transmitted within the diagnostic word. `rx_enh_crc32_err` (CRC error signal) is sent to the FPGA fabric.

Enhanced PCS RX FIFO

The Enhanced PCS RX FIFO is designed to compensate for the phase and/or clock difference between the receiver channel PCS and the FPGA fabric. It can operate as a phase-compensation, clock-compensation, elastic buffer, or a deskew FIFO in Interlaken mode. The RX FIFO has a width of 74 bits and a depth of 32 words for all protocols.

The RX FIFO supports the following modes:

- Phase Compensation mode
- Register mode
- Interlaken mode (deskew FIFO)
- 10GBASE-R mode (clock compensation FIFO)
- Basic mode (elastic buffer FIFO)

Phase Compensation Mode

The RX FIFO compensates for the phase difference between the read clock and write clocks. `rx_clkout` (RX parallel low-speed clock) clocks the write side of the RX FIFO. `rx_coreclk`in (FPGA fabric clock) or `rx_clkout` clocks the read side of the RX FIFO.

When phase compensation is used in double-width mode, the FPGA data width is doubled to allow the FPGA fabric clock to run at half rate, similar to the TX FIFO phase compensation in double-width mode.

Register Mode


In Register mode, `rx_parallel_data` (data), `rx_control` (indicates whether `rx_parallel_data` is a data or control word), and `rx_enh_data_valid` (data valid) are registered at the FIFO output. The RX FIFO in register mode has one register stage or one parallel clock latency.

Interlaken Mode

In Interlaken mode, the RX FIFO operates as an Interlaken deskew FIFO. To implement the deskew process, implement an FSM that controls the FIFO operation based on available FPGA input and output flags.

For example, after frame lock is achieved, data is written after the first alignment word (SYNC word) is found on that channel. As a result, `rx_enh_fifo_pempty` (FIFO partially empty flag) of that channel goes low. You must monitor the `rx_enh_fifo_pempty` and `rx_enh_fifo_pfull` flags of all channels. If `rx_enh_fifo_pempty` flags from all channels deassert before any `rx_enh_fifo_pfull` flag asserts, which implies alignment word has been found on all lanes of the link, you start reading from all the FIFOs by asserting `rx_enh_fifo_rd_en`. Otherwise, if a `rx_enh_fifo_pfull` flag from any channel goes high before a `rx_enh_fifo_pempty` flag deassertion on all channels, you must reset the FIFO by toggling the `rx_enh_fifo_align_clr` signal and repeating the process.

Figure 5-34: RX FIFO as Interlaken Deskew FIFO

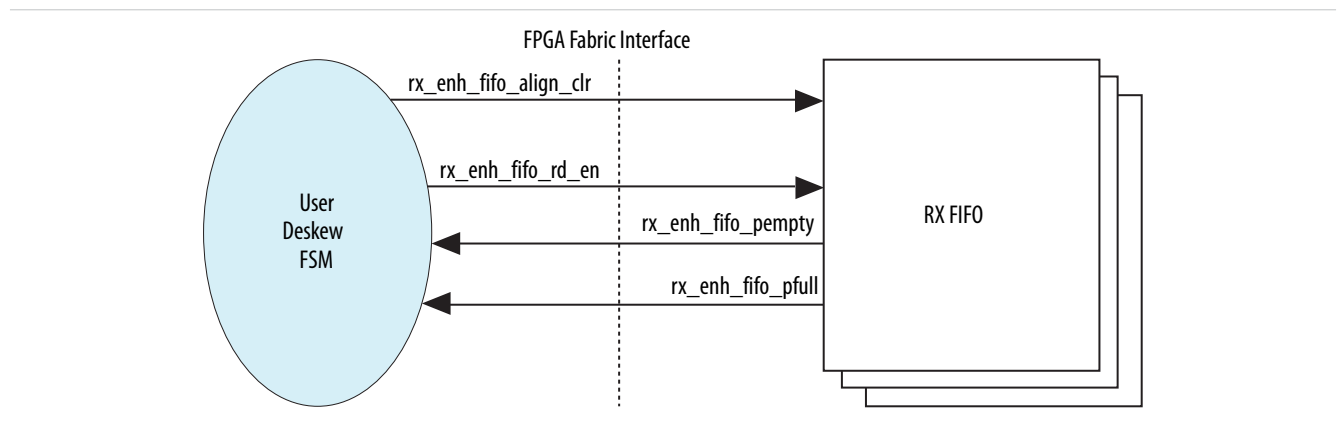

10GBASE-R Mode

In 10GBASE-R mode, the RX FIFO operates as a clock compensation FIFO. When the block synchronizer achieves block lock, data is sent through the FIFO. Idle ordered sets (OS) are deleted and Idles are inserted to compensate for the clock difference between the RX low-speed parallel clock and the FPGA fabric clock (± 100 ppm for a maximum packet length of 64,000 bytes).

Idle OS Deletion

Deletion of Idles occurs in groups of four OS (when there are two consecutive OS) until the rx_enh_fifo_rd_pempty flag deasserts. Every word—consisting of a lower word (LW) and an upper word (UW)—is checked for whether it can be deleted by looking at both the current and previous words.

For example, the current LW can be deleted if it is Idle and the previous UW is not a Terminate.

Table 5-4: Conditions Under Which a Word Can be Deleted

In this table X=don't care, T=Terminate, I=Idle, and OS=order set.

Deletable	Case	Word	Previous	Current	Output	
Lower Word	1	UW	!T	X	!T	X
		LW	X	I	X	X
	2	UW	OS	X	OS	X
		LW	X	OS	X	X
Upper Word	1	UW	X	I	X	X
		LW	X	!T	X	!T
	2	UW	X	OS	X	X
		LW	X	OS	X	OS

If only one word is deleted, data shifting is necessary because the datapath is two words wide. After two words have been deleted, the FIFO stops writing for one cycle and a synchronous flag (rx_control[8]) appears on the next block of 8-byte data. There is also an asynchronous status signal rx_enh_fifo_del, which does not go through the FIFO.

Figure 5-35: IDLE Word Deletion

This figure shows the deletion of IDLE words from the receiver data stream.


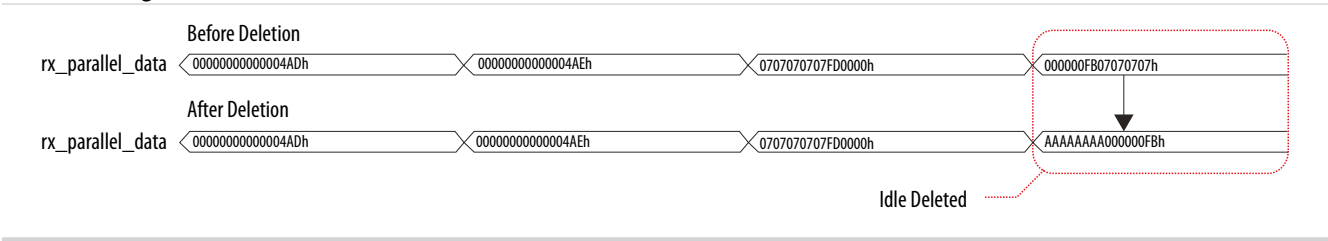


Figure 5-36: OS Word Deletion

This figure shows the deletion of Ordered set words in the receiver data stream.

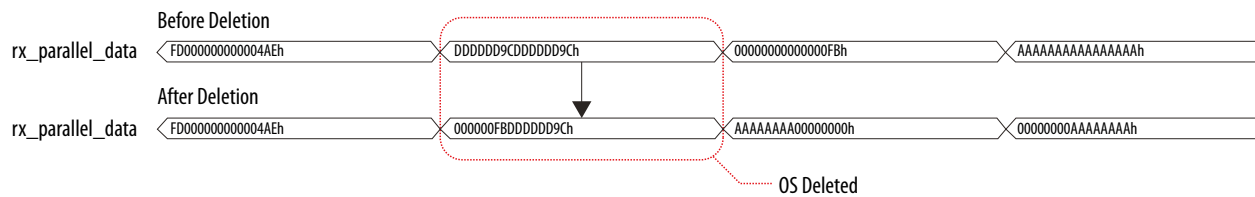

Idle Insertion

Idle insertion occurs in groups of 8 Idles when the rx_enh_fifo_pempty flag is deasserted. Idles can be inserted following Idles or OS. Idles are inserted in groups of 8 bytes. Data shifting is not necessary. There is a synchronous status rx_enh_fifo_insert signal that is attached to the 8-byte Idles being inserted.


Table 5-5: Cases Where Two Idle Words are Inserted

In this table X=don't care, S=start, OS=order set, I-DS=idle in data stream, and I-In=idle inserted. In cases 3 and 4, the Idles are inserted between the LW and UW.

Case	Word	Input	Output	
1	UW	I-DS	I-DS	I-In
	LW	X	X	I-In
2	UW	OS	OS	I-In
	LW	X	X	I-In
3	UW	S	I-In	S
	LW	I-DS	I-DS	I-In
4	UW	S	I-In	S
	LW	OS	OS	I-In

Figure 5-37: IDLE Word Insertion

This figure shows the insertion of IDLE words in the receiver data stream.

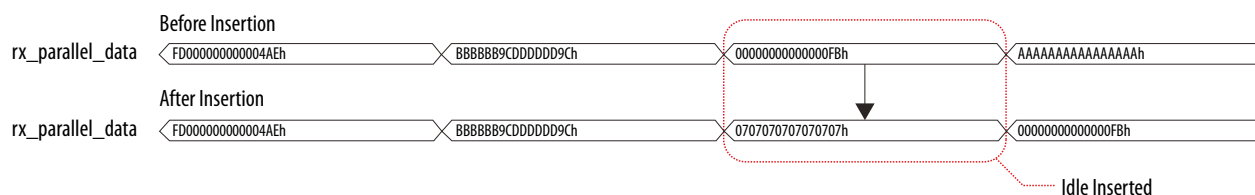

Basic Mode

In Basic mode, the RX FIFO operates as an elastic buffer. The FIFO write enable is controlled by gearbox data valid, which is a function of gearbox input and output data width. You can monitor the rx_enh_fifo_pempty and rx_enh_fifo_pfull flags to determine whether to read from the FIFO or not.

RX KR FEC Blocks

KR FEC Block Synchronization

You can obtain FEC block delineation for the RX KR FEC by locking onto correctly received FEC blocks with the KR FEC block synchronization.

Note: The KR FEC block synchronization is available to implement the 10GBASE-KR protocol.

KR FEC Descrambler

The KR FEC descrambler block descrambles received data to regenerate unscrambled data using the $x^{58} + x^{39} + 1$ polynomial. Before the block boundary in the KR FEC sync block is detected, the data at the input of the descrambler is sent directly to the KR FEC decoder. When the boundary is detected, the aligned word from the KR FEC sync block is descrambled with the Psuedo Noise (PN) sequence and then sent to the KR FEC decoder.

KR FEC Decoder

The KR FEC decoder block performs the FEC (2112, 2080) decoding function by analyzing the received 32 65-bit blocks for errors. It can correct burst errors of 11 bits or less per FEC block.

KR FEC RX Gearbox

The KR FEC RX gearbox block adapts the PMA data width to the larger bus width of the PCS channel. It supports a 64:65 ratio.


Transcode Decoder

The transcode decoder block performs the 65-bit to 64B/66B reconstruction function by regenerating the 64B/66B synchronization header.

Arria 10 Standard PCS Architecture

The standard PCS can operate at a data rate up to 12 Gbps. Protocols such as PCI-Express, CPRI 4.2+, GigE, IEEE 1588 are supported in Hard PCS while the other protocols can be implemented using Basic/Custom (Standard PCS) transceiver configuration rules.


Figure 5-38: Standard PCS Datapath Diagram

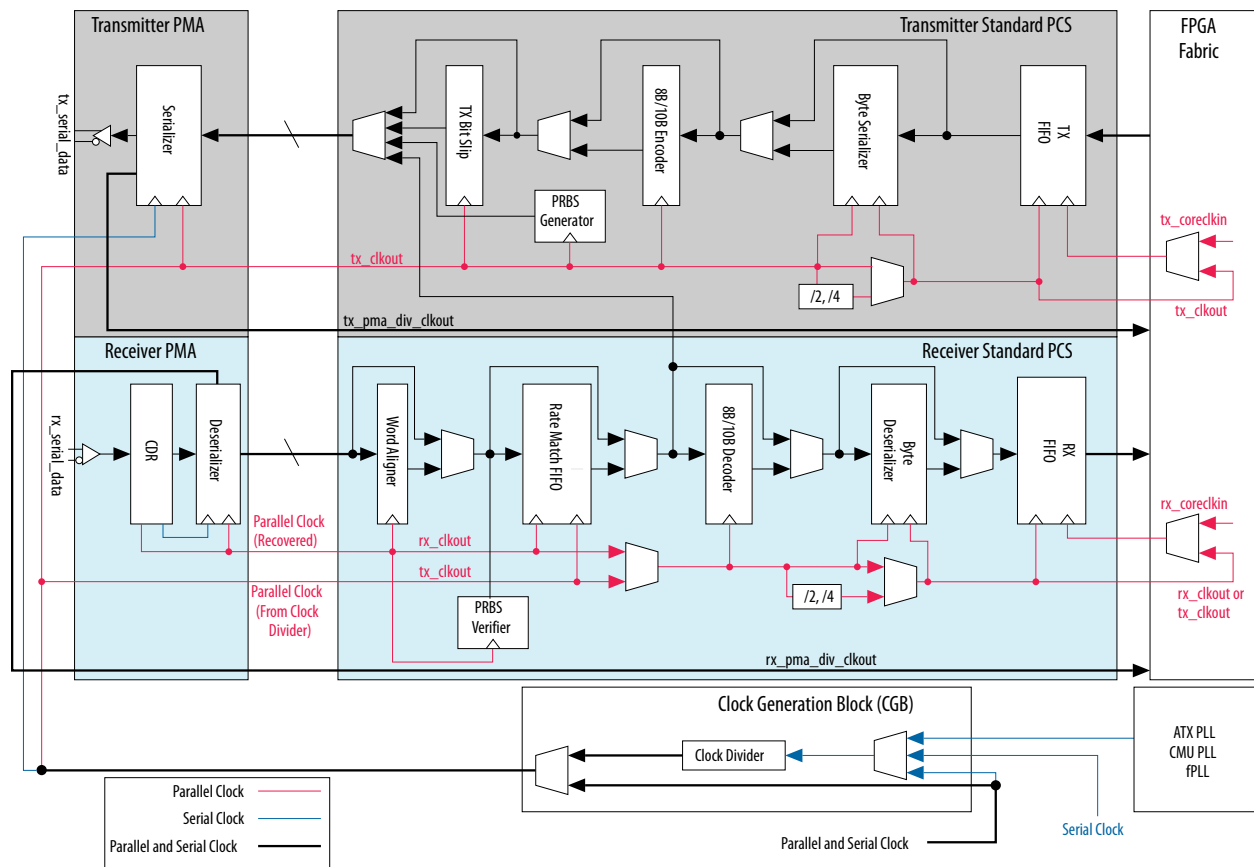

Transmitter Datapath

TX FIFO (Shared with Enhanced PCS and PCIe Gen3 PCS)

The TX FIFO interfaces between the transmitter PCS and the FPGA fabric and ensures reliable transfer of data and status signals. It compensates for the phase difference between the FPGA fabric clock and `tx_clkout` (the low-speed parallel clock). The TX FIFO has a depth of 8 and operates in low latency mode, register mode, and fast register mode.

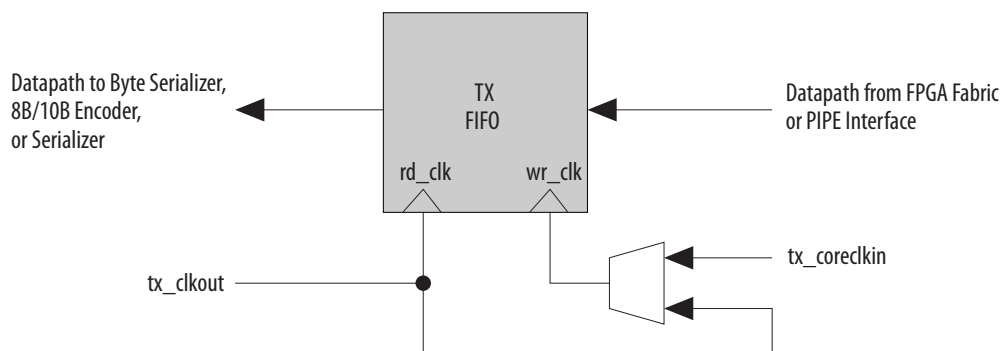Figure 5-39: TX FIFO Block Diagram

The TX FIFO read port is clocked by the low speed parallel clock and its write port is clocked by either `tx_clkout` or `tx_coreclk`. The `tx_clkout` signal is used when only one channel is being used. The `tx_coreclk` signal is used when using multiple channels. The TX FIFO is shared with PCIe Gen3 and Enhanced PCS data paths.

TX FIFO Low Latency Mode

The low latency mode incurs two to three cycles of latency (latency uncertainty) when connecting it with the FPGA fabric. The FIFO empty and the FIFO full threshold values are made closer so that the depth of the FIFO decreases, which in turn decreases the latency.

TX FIFO Register Mode

The register mode bypasses the FIFO functionality to eliminate the FIFO latency uncertainty for applications with stringent latency requirements. This is accomplished by tying the read clock of the FIFO with its write clock. The register mode incurs only one clock cycle of latency when interfacing to the FPGA fabric.


TX FIFO Fast Register Mode

This mode allows a higher maximum frequency (f_{MAX}) between the FPGA fabric and the TX PCS at the expense of higher latency.

Byte Serializer

In certain applications, the FPGA fabric interface cannot operate at the same clock rate as the transmitter channel (PCS) because the transmitter channel is capable of operating at higher clock rates compared to the FPGA fabric. The byte serializer allows the transmitter channel to operate at higher data rates while keeping the FPGA fabric interface clock rate below its maximum limit. This is accomplished by decreasing the channel width two or four times (FPGA fabric-to-PCS interface width) and doubling/quadrupling the clock rate. The byte serializer is disabled, or operates in Serialize x2 or Serialize x4 modes.

Figure 5-40: Byte Serializer Block Diagram

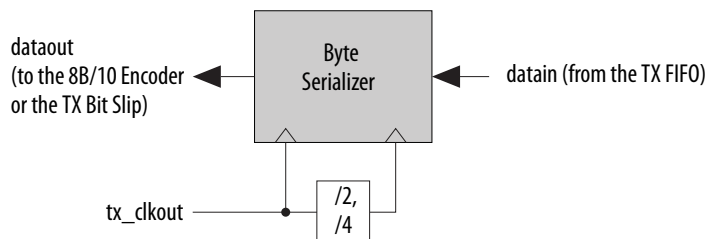**Related Information**

- [Implementing Protocols in Arria 10 Transceivers](#) on page 2-1
- [Resetting Transceiver Channels](#) on page 4-1

Bonded Byte Serializer

The bonded byte serializer is available in Arria 10 devices, and is used in applications such as PIPE, CPRI, and custom applications where multiple channels are grouped together. The bonded byte serializer is implemented by bonding all the control signals to prevent skew induction between channels during byte serialization. In this configuration, one of the channels acts as master and the remaining channels act as slaves.

Byte Serializer Disabled Mode

In disabled mode, the byte serializer is bypassed. The data from the TX FIFO is directly transmitted to the 8B/10B encoder, TX Bit Slip, or Serializer, depending on whether or not the 8B/10B encoder and TX Bit Slip are enabled. Disabled mode is used in low speed applications such as GigE, where the FPGA fabric and the TX standard PCS can operate at the same clock rate.

Byte Serializer Serialize x2 Mode

The serialize x2 mode is used in high-speed applications such as the PCIe Gen1 or Gen2 protocol implementation, where the FPGA fabric cannot operate as fast as the TX PCS.

In serialize x2 mode, the byte serializer serializes 16-bit, 20-bit (when 8B/10B encoder is not enabled), 32-bit, and 40-bit (when 8B/10B encoder is not enabled) input data into 8-bit, 10-bit, 16-bit, and 20-bit data, respectively. As the parallel data width from the TX FIFO is halved, the clock rate is doubled.

After byte serialization, the byte serializer forwards the least significant word first followed by the most significant word. For example, if the FPGA fabric-to-PCS Interface width is 32, the byte serializer forwards `tx_parallel_data[15:0]` first, followed by `tx_parallel_data[31:16]`.

Related Information

[PCI Express \(PIPE\)](#) on page 2-231

For more information about using the Serialize x2 mode in the PCIe protocol.

Byte Serializer Serialize x4 Mode

The serialize x4 mode is used in high-speed applications such as the PCIe Gen3 protocol mode, where the FPGA fabric cannot operate as fast as the TX PCS.

In serialize x4 mode, the byte serializer serializes 32-bit data into 8-bit data. As the parallel data width from the TX FIFO is divided four times, the clock rate is quadrupled.

After byte serialization, the byte serializer forwards the least significant word first followed by the most significant word. For example, if the FPGA fabric-to-PCS Interface width is 32, the byte serializer forwards `tx_parallel_data[7:0]` first, followed by `tx_parallel_data[15:8]`, `tx_parallel_data[23:16]` and `tx_parallel_data[31:24]`.

Related Information


PCI Express (PIPE) on page 2-231

For more information about using the Serialize x4 mode in the PCIe protocol.

8B/10B Encoder

The 8B/10B encoder takes in 8-bit data and 1-bit control as input and converts them into a 10-bit output. The 8B/10B encoder automatically performs running disparity check for the 10-bit output. Additionally, the 8B/10B encoder can control the running disparity manually using the `tx_forcedisp` and `tx_dispv` ports.

Figure 5-41: 8B/10B Encoder Block Diagrams

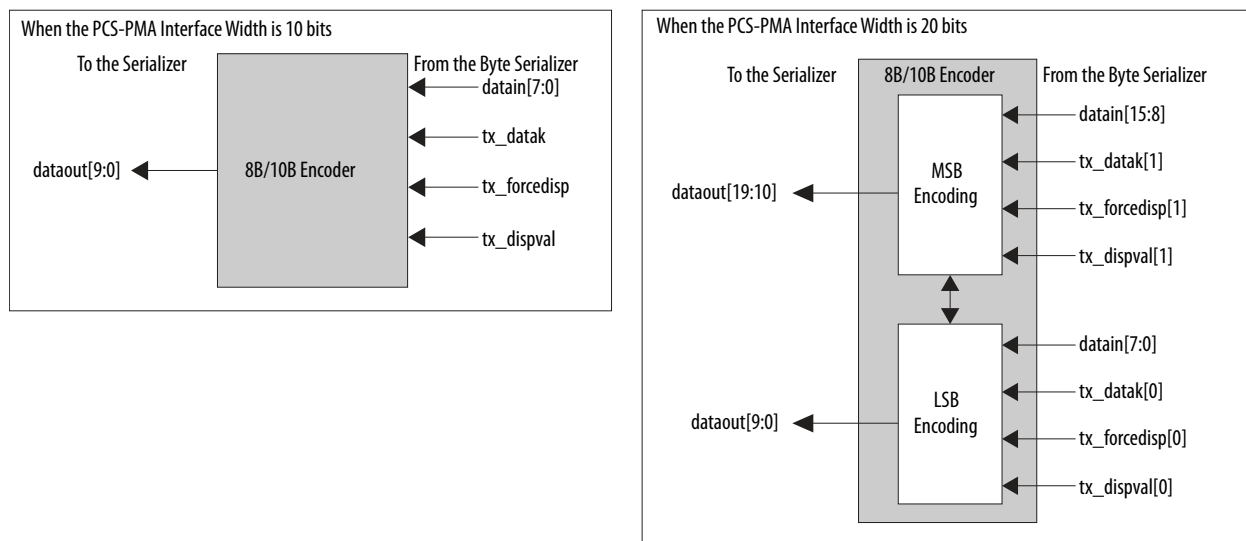


When the PCS-PMA interface width is 10 bits, one 8B/10B encoder is used to convert the 8-bit data into a 10-bit output. When the PCS-PMA interface width is 20 bits, two cascaded 8B/10B encoders are used to convert the 16-bit data into a 20-bit output. The first eight bits (LSByte) is encoded by the first 8B/10B encoder and the next eight bits (MSByte) is encoded by the second 8B/10B encoder. The running disparity of the LSByte is calculated first and passed on to the second encoder to calculate the running disparity of the MSByte.

Note: You cannot enable the 8B/10B encoder when the PCS-PMA interface width is 8 bits or 16 bits.

8B/10B Encoder Control Code Encoding

Figure 5-42: Control Code Encoding Diagram

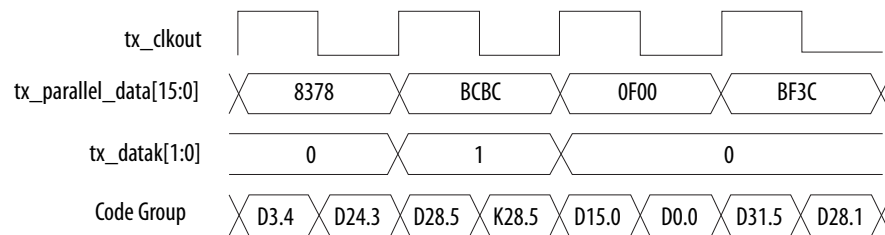

The tx_dataak signal is used to indicate whether the 8-bit data being sent at the tx_parallel_data port should be a control word or a data word. When tx_dataak is high, the 8-bit data is encoded as a control word (Kx.y). When tx_dataak is low, the 8-bit data is encoded as a data word (Dx.y). Depending upon the PCS-PMA interface width, the width of tx_dataak is either 1 bit or 2 bits. When the PCS-PMA interface width is 10 bits, tx_dataak is a 1-bit word. When the PCS-PMA interface width is 20 bits, tx_dataak is a 2-bit word. The LSB of tx_dataak corresponds to the LSByte of the input data sent to the 8B/10B encoder and the MSB corresponds to the MSByte of the input data sent to the 8B/10B encoder.

Related Information

[Refer to Specifications & Additional Information for more information about 8B/10B encoder codes.](#)

8B/10B Encoder Reset Condition

The tx_digitalreset signal resets the 8B/10B encoder. During the reset condition, the 8B/10B encoder outputs K28.5 continuously until tx_digitalreset goes low.

8B/10B Encoder Idle Character Replacement Feature

The idle character replacement feature is used in protocols such as Gigabit Ethernet, which requires the running disparity to be maintained during idle sequences. During these idle sequences, the running disparity has to be maintained such that the first byte of the next packet always starts when the running disparity of the current packet is negative.

When an ordered set, which consists of two code-groups, is received by the 8B/10B encoder, the second code group will be converted into /I1/ or /I2/ so that the final running disparity of the data code-group is negative. The first code group is /K28.5/ and the second code group is a data code-group other than /D21.5/ or /D2.2/. The ordered set /I1/ (/K28.5/D5.6/) is used to flip the running disparity and /I2/ (/K28.5/D16.2/) is used to preserve the running disparity.

8B/10B Encoder Current Running Disparity Control Feature

The 8B/10B encoder performs a running disparity check on the 10-bit output data. The running disparity can also be controlled using tx_forcedisp and tx_dispval. When the PCS-PMA interface width is 10 bits, tx_forcedisp and tx_dispval are one bit each. When the PCS-PMA interface width is 20 bits, tx_forcedisp and tx_dispval are two bits each. The LSB of tx_forcedisp and tx_dispval corresponds to the LSByte of the input data and the MSB corresponds to the MSByte of the input data.

8B/10B Encoder Bit Reversal Feature

The bit reversal feature reverses the order of the bits of the input data. Bit reversal is performed at the output of the 8B/10B Encoder and is available even when the 8B/10B Encoder is disabled. For example, if the input data is 20-bits wide, bit reversal switches bit [0] with bit [19], bit [1] with bit [18] and so on.

8B/10B Encoder Byte Reversal Feature

The byte reversal feature is available only when the PCS-PMA interface width is 16 bits or 20 bits. Byte reversal is performed at the output of the 8B/10B Encoder and is available even when the 8B/10B Encoder is disabled. This feature swaps the LSByte with the MSByte and vice-versa. For example, when the PCS-PMA interface width is 16-bits, [7:0] bits (LSByte) gets swapped with [15:8] bits (MSByte) and [15:8] bits (MSByte) gets swapped with [7:0] bits (LSByte). As a result, the 16-bit bus becomes MSB to LSB, bits[7:0] to bits[15:8].

Polarity Inversion Feature

The polarity inversion feature is used in situations where the positive and the negative signals of a serial differential link are erroneously swapped during board layout. This feature can be controlled by the `tx_pol_inv` port after enabling "Enable TX Polarity Inversion" option under Standard PCS. The polarity inversion feature inverts the value of each bit of the input data. For example, if the input data is 00101001, then the data gets changed to 11010110 after polarity inversion.

Pseudo-Random Binary Sequence (PRBS) Generator

The PRBS generator block generates PRBS patterns and square wave patterns.

PRBS test patterns may be considered equivalent to "noise." Use these pattern generators to test the transceiver link with a noisy signal (using the test patterns listed below) by placing the transceiver in loopback mode.

The PRBS generator supports the 10-bit and 64-bit PCS-PMA interfaces. The PRBS 15, 23 and 31 support the 64-bit PCS-PMA interface widths. The PRBS9 supports the 10-bit PCS-PMA interface width to allow testing at lower data rates.

The following PRBS test patterns are supported:

- PRBS9: $x^9 + x^5 + 1$
- PRBS15: $x^{15} + x^{14} + 1$
- PRBS23: $x^{23} + x^{18} + 1$
- PRBS31: $x^{31} + x^{28} + 1$


Enable the PRBS generator and select a test pattern through the reconfiguration interface.

Use PRBS9 to test transceiver links with linear impairments, and with 8B/10B.

Use PRBS15 for jitter evaluation.

Use PRBS23 or PRBS31 for jitter evaluation (data-dependent jitter) of non-8B/10B links, such as SDH/SONET/OTN jitter testers. Most 40G, 100G, and 10G applications use PRBS31 for link evaluation.


Figure 5-43: PRBS Generator for Serial Implementation of PRBS9 Pattern

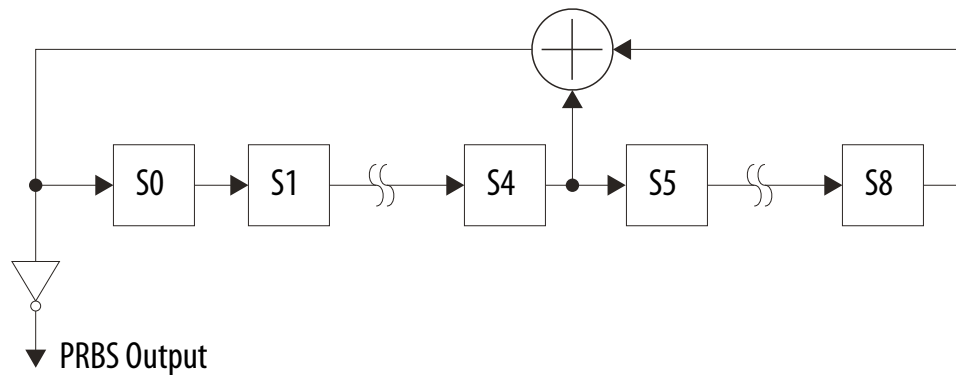

Note: All supported PRBS generators are similar to the PRBS9 generator.

The square-wave generator supports 64-bit PCS-PMA interface widths. It has a programmable n -number of consecutive serial bit 1s and 0s, where n is 4, 6, or 8 (n defaults to 4).

Figure 5-44: Generator for Square Wave Pattern

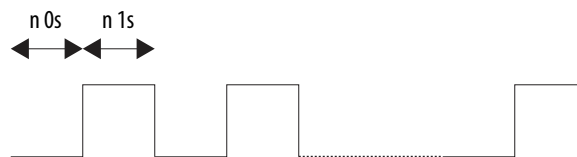

Program the value of n through the Transceiver and PLL Address Map.

TX Bit Slip

The TX bit slip allows the word boundary to be controlled by `tx_std_bitslipboundarysel`. The TX bit slip feature is used in applications, such as CPRI, which has a data rate greater than 6 Gbps. The maximum number of the supported bit slips is PCS data width-1 and the slip direction is from MSB to LSB and from current to previous word.

Receiver Datapath


Word Aligner

The word aligner receives the serial data from the PMA and realigns the serial data to have the correct word boundary according to the word alignment pattern configured. This word alignment pattern can be 7, 8, 10, 16, 20, 32 and 40 bits in length.

Depending on your PCS-PMA interface width, the word aligner can be configured in one of the following modes:

- Bit slip
- Manual alignment
- Synchronous state machine
- Deterministic latency

Figure 5-45: Word Aligner Conditions and Modes

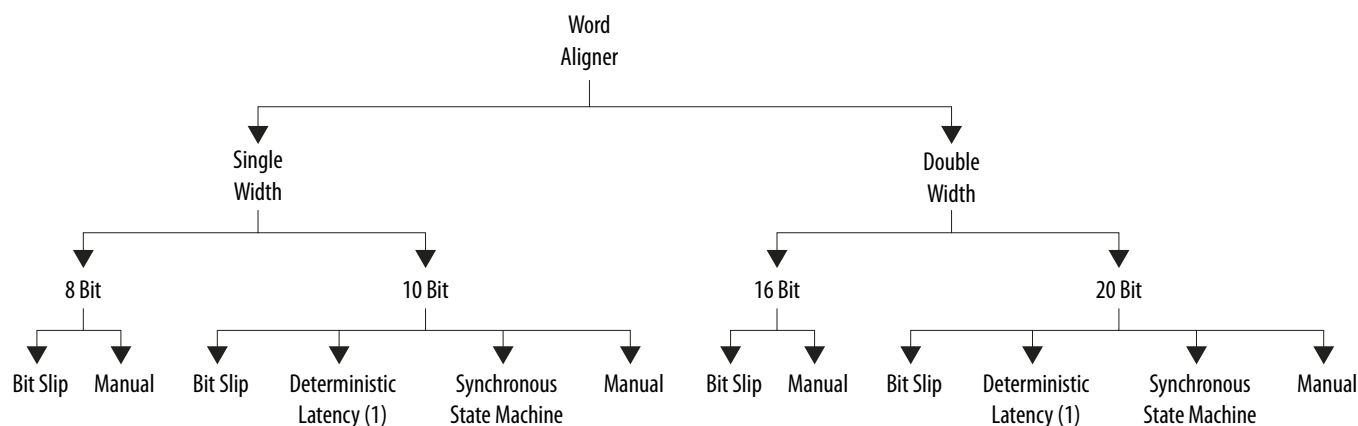

Note:

1. This option is available in CPRI mode.

Word Aligner Bit Slip Mode

In bit slip mode, the word aligner operation is controlled by `rx_bitslip`, which has to be held for two parallel clock cycles. At every rising edge of `rx_bitslip`, the bit slip circuitry slips one bit into the received data stream, effectively shifting the word boundary by one bit. Pattern detection is not used in bit slipping mode; therefore, `rx_syncstatus` is not valid in this mode.

Word Aligner Manual Mode

In manual alignment mode, the word aligner operation is controlled by `rx_std_wa_patternalign`. The word aligner operation is edge-sensitive or level-sensitive to `rx_std_wa_patternalign`, depending upon the PCS-PMA interface width selected.

Table 5-6: Word Aligner `rx_std_wa_patternalign` Behavior

PCS-PMA Interface Width	<code>rx_std_wa_patternalign</code> Behavior
8	Rising edge sensitive
10	Level sensitive
16	Rising edge sensitive
20	Rising edge sensitive

If `rx_std_wa_patternalign` is asserted, the word aligner looks for the programmed word alignment pattern in the received data stream. It updates the word boundary if it finds the word alignment pattern in

a new word boundary. If `rx_std_wa_patternalign` is deasserted, the word aligner maintains the current word boundary even when it sees the word alignment pattern in a new word boundary.

The `rx_syncstatus` and `rx_patterndetect` signals, with the same latency as the datapath, are forwarded to the FPGA fabric to indicate the word aligner status.

After receiving the first word alignment pattern after `rx_std_wa_patternalign` is asserted, both `rx_syncstatus` and `rx_patterndetect` are driven high for one parallel clock cycle. Any word alignment pattern received thereafter in the same word boundary causes only `rx_patterndetect` to go high for one clock cycle. Any word alignment pattern received thereafter in a different word boundary causes the word aligner to re-align to the new word boundary only if `rx_std_wa_patternalign` is asserted. The word aligner asserts `rx_syncstatus` for one parallel clock cycle whenever it re-aligns to the new word boundary.

Word Aligner Synchronous State Machine Mode

In synchronous state machine mode, when the programmed number of valid synchronization code groups or ordered sets is received, `rx_syncstatus` is driven high to indicate that synchronization is acquired. The `rx_syncstatus` signal is constantly driven high until the programmed number of erroneous code groups is received without receiving intermediate good groups, after which `rx_syncstatus` is driven low.

The word aligner indicates loss of synchronization (`rx_syncstatus` remains low) until the programmed number of valid synchronization code groups are received again.

Word Aligner Deterministic Latency Mode

In deterministic latency mode, the state machine removes the bit level latency uncertainty. The deserializer of the PMA creates the bit level latency uncertainty as it comes out of reset.

The PCS performs pattern detection on the incoming data from the PMA. The PCS aligns the data, after it indicates to the PMA the number of serial bits to clock slip the boundary.

If the incoming data has to be realigned, `rx_std_wa_patternalign` must be reasserted to initiate another pattern alignment. Asserting `rx_std_wa_patternalign` can cause the word align to lose synchronization if already achieved. This may cause `rx_syncstatus` to go low.

Table 5-7: PCS-PMA Interface Widths and Protocol Implementations

PCS-PMA Interface Width	Protocol Implementations
8	Basic
10	• Basic • Basic rate match • CPRI • PCIe Gen1 and Gen2 • GigE
16	Basic

PCS-PMA Interface Width	Protocol Implementations
20	• CPRI • Basic • Basic rate match

Word Aligner Pattern Length for Various Word Aligner Modes

Table 5-8: Word Aligner Pattern Length for Various Word Aligner Modes

PCS-PMA Interface Width	Supported Word Aligner Modes	Supported Word Aligner Pattern Lengths	rx_std_wa_patternalign behavior	rx_syncstatus behavior	rx_patterndetect behavior
8	Bit slip	8	Rx_std_wa_patternalign has no effect on word alignment. The single width word aligner updates the word boundary, only when the FPGA fabric-asserted BITSPLIT signal toggles.	N/A	N/A
	Manual	8, 16	Word alignment is controlled by Rx_std_wa_patternalign and is edge-sensitive to this signal.	Asserted high for one parallel clock cycle when the word aligner aligns to a new boundary.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.
10	Bit slip	7	Rx_std_wa_patternalign has no effect on word alignment. The single width word aligner updates the word boundary, only when the FPGA fabric-asserted	N/A	N/A

PCS-PMA Interface Width	Supported Word Aligner Modes	Supported Word Aligner Pattern Lengths	rx_std_wa_patternalign behavior	rx_syncstatus behavior	rx_patterndetect behavior
16			BITSLIP signal toggles.		
	Manual	7, 10	Word alignment is controlled by Rx_std_wa_patternalign and is level-sensitive to this signal.	Asserted high for one parallel clock cycle when the word aligner aligns to a new boundary.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.
	Deterministic latency (CPRI mode only)	10	Word alignment is controlled by Rx_std_wa_patternalign (edge-sensitive to this signal) and the state machine works in conjunction with PMA to achieve deterministic latency on the RX path for CPRI and OBSAI applications.	—	—
	Synchronous State Machine	7, 10	Rx_std_wa_patternalign has no effect on word alignment.	Stays high as long as the synchronization conditions are satisfied.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.
	Bit slip	16	Rx_std_wa_patternalign has no effect on word alignment. The double width word aligner updates the word boundary, only	N/A	N/A

PCS-PMA Interface Width	Supported Word Aligner Modes	Supported Word Aligner Pattern Lengths	rx_std_wa_patternalign behavior	rx_syncstatus behavior	rx_patterndetect behavior
20			when the FPGA fabric-asserted BITSLLIP signal toggles.		
	Manual	8, 16, 32	Word alignment is controlled by rising-edge of Rx_std_wa_patternalign.	Stays high after the word aligner aligns to the word alignment pattern. Goes low on receiving a rising edge on rx_std_wa_patternalign until a new word alignment pattern is received.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.
	Bit slip	7	Rx_std_wa_patternalign has no effect on word alignment. The double width word aligner updates the word boundary, only when the FPGA fabric-asserted BITSLLIP signal toggles.	N/A	N/A

PCS-PMA Interface Width	Supported Word Aligner Modes	Supported Word Aligner Pattern Lengths	rx_std_wa_patternalign behavior	rx_syncstatus behavior	rx_patterndetect behavior
	Manual	7, 10, 20, 40	Word alignment is controlled by rising edge of Rx_std_wa_patternalign.	Stays high after the word aligner aligns to the word alignment pattern. Goes low on receiving a rising edge on rx_std_wa_patternalign until a new word alignment pattern is received.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.
	Deterministic latency (CPRI mode only)	10	Word alignment is controlled by Rx_std_wa_patternalign (edge-sensitive to this signal) and the deterministic latency state machine which controls the PMA to achieve deterministic latency on the RX path for CPRI and OBSAI applications.	—	—
	Synchronous State Machine	7, 10, 20	FPGA fabric-driven Rx_std_wa_patternalign signal has no effect on word alignment.	Stays high as long as the synchronization conditions are satisfied.	Asserted high for one parallel clock cycle when the word alignment pattern appears in the current word boundary.

Word Aligner RX Bit Reversal Feature

The RX bit reversal feature reverses the order of the data received from the PMA. It is performed at the output of the Word Aligner and is available even when the Word Aligner is disabled. If the data received

from the PMA is a 10-bit data width, the bit reversal feature switches bit [0] with bit [9], bit [1] with bit [8], and so on. For example, if the 10-bit data is 1000010011, the bit reversal feature, when enabled, changes the data to 1100100001.

Word Aligner RX Byte Reversal Feature

The RX byte reversal feature is available only when the PCS-PMA interface width is 16 bits or 20 bits. This feature reverses the order of the data received from the PMA. RX byte reversal reverses the LSByte of the received data with its MSByte and vice versa. If the data received is 20-bits, bits[0..9] are swapped with bits[10..20] so that the resulting 20-bit data is [[10..20],[0..9]]. For example, if the 20-bit data is 11001100001000011111, the byte reversal feature changes the data to 10000111111100110000.

RX Polarity Inversion Feature

The RX polarity inversion feature inverts each bit of the data received from the PMA. If the data received is a 10-bit data. Bit[0] content is inverted to its complement, $\sim$ bit[0], bit[1] is inverted to its complement, $\sim$ bit[1], bit[2] is inverted to its complement, $\sim$ bit[2], and so on. For example, if the 10-bit data is 1111100000, the polarity inversion feature inverts it to 0000011111.

Rate Match FIFO

The rate match FIFO compensates for the frequency differences between the local clock and the recovered clock up to ± 300 ppm by inserting and deleting skip/idle characters in the data stream. The rate match FIFO has several different protocol specific modes of operation. All of the protocol specific modes depend upon the following parameters:

- Rate match deletion—occurs when the distance between the write and read pointers exceeds a certain value due to write clock having a higher frequency than the read clock.
- Rate match insertion—occurs when the distance between the write and the read pointers becomes less than a certain value due to the read clock having a higher frequency than the write clock.
- Rate match full—occurs when the write pointer wraps around and catches up to the slower-advancing read pointer.
- Rate match empty—occurs when the read pointer catches up to the slower-advancing write pointer.

Rate match FIFO operates in six modes:

- Basic single width
- Basic double width
- GigE
- PIPE
- PIPE 0 ppm
- PCIe

Related Information

- [How to Implement the Basic Rate Match Protocol Using the Arria 10 Transceiver Native PHY IP Core](#)
For more information about implementing rate match FIFO for each mode.
- [Rate Match FIFO in Basic \(Single Width\) Mode](#) on page 2-299
For more information about implementing rate match FIFO in basic single width mode.


- **Rate Match FIFO Basic (Double Width) Mode** on page 2-301
For more information about implementing rate match FIFO in basic double width mode.
- **How to Implement GbE, GbE with IEEE 1588v2 in Arria 10 Transceivers** on page 2-104
For more information about implementing rate match FIFO in GigE mode.
- **PCI Express (PIPE)** on page 2-231
For more information about implementing rate match FIFO in PCIe mode.
- **How to Implement PCI Express (PIPE) in Arria 10 Transceivers** on page 2-248
For more information about implementing rate match FIFO in PIPE mode.
- **Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS** on page 2-292

8B/10B Decoder

The general functionality for the 8B/10B decoder is to take a 10-bit encoded value as input and produce an 8-bit data value and a 1-bit control value as output. In configurations with the rate match FIFO enabled, the 8B/10B decoder receives data from the rate match FIFO. In configurations with the rate match FIFO disabled, the 8B/10B decoder receives data from the word aligner. The 8B/10B decoder operates in two conditions:

- When the PCS-PMA interface width is 10 bits and FPGA fabric-PCS interface width is 8 bits
- When the PCS-PMA interface width is 20 bits and FPGA fabric-PCS interface width is 16 bits

Figure 5-46: 8B/10B Decoder in Single-Width and Double-Width Mode

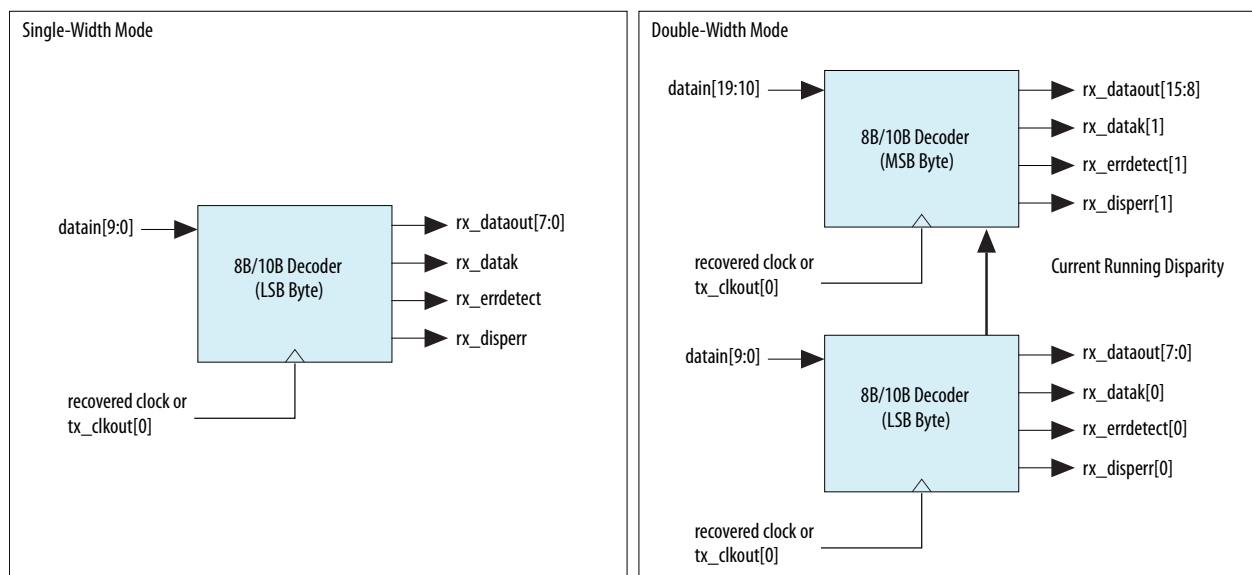


When the PCS-PMA interface width is 10 bits, only one 8B/10B decoder is used to perform the conversion. When the PCS-PMA interface width is 20 bits, two cascaded 8B/10B decoders are used. The 10-bit LSByte of the received 20-bit encoded data is decoded first and the ending running disparity is forwarded to the 8B/10B decoder responsible for decoding the 10-bit MSByte. The cascaded 8B/10B decoder decodes the 20-bit encoded data into 16-bit data + 2-bit control identifier. The MSB and LSB of the 2-bit control identifier correspond to the MSByte and LSByte of the 16-bit decoded data code group. The decoded data is fed to the byte deserializer or the RX FIFO.


8B/10B Decoder Control Code Encoding

Figure 5-47: 8B/10B Decoder in Control Code Group Detection

When the PCS-PMA Interface Width is 10 Bits

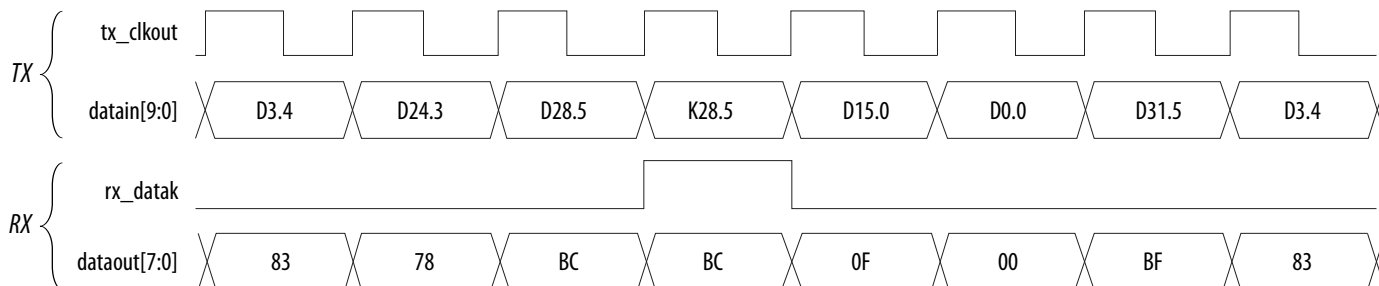

When the PCS-PMA Interface Width is 20 Bits

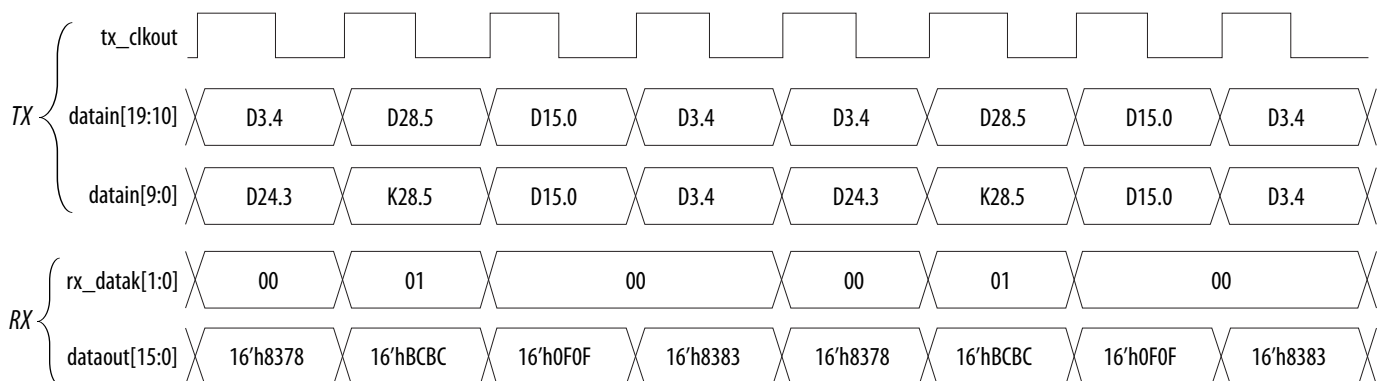

The 8B/10B decoder indicates whether the decoded 8-bit code group is a data or control code group on `rx_dataak`. If the received 10-bit code group is one of the 12 control code groups (/Kx.y/) specified in the IEEE 802.3 specification, `rx_dataak` is driven high. If the received 10-bit code group is a data code group (/Dx.y/), `rx_dataak` is driven low.

8B/10B Decoder Running Disparity Checker Feature

Running disparity checker resides in 8B/10B decoder module. This checker checks the current running disparity value and error based on the rate match output. `rx_runningdisp` and `rx_disperr` indicate positive or negative disparity and disparity errors, respectively.

Pseudo-Random Binary Sequence (PRBS) Verifier

The PRBS verifier checks the pseudo-random patterns generated by the PRBS generator. An error flag is asserted when an error occurs.


The PRBS_DONE signal is asserted when the PRBS sequence has completed one full cycle. The PRBS verifier supports the following modes:

- PRBS 9 $G(x) = 1 + x^5 + x^9$
- PRBS 15 $G(x) = 1 + x^{14} + x^{15}$
- PRBS 23 $G(x) = 1 + x^{18} + x^{23}$
- PRBS 31 $G(x) = 1 + x^{28} + x^{31}$

Byte Deserializer

The byte deserializer allows the transceiver to operate at data rates higher than those supported by the FPGA fabric. It deserializes the recovered data by multiplying the data width two or four times, depending upon the deserialization mode selected. The byte deserializer is optional in designs that do not exceed the FPGA fabric interface frequency upper limit. You can bypass the byte deserializer by disabling it in the Quartus II Transceiver Native PHY. The byte deserializer operates in disabled, deserialize x2, or deserialize x4 modes.

Figure 5-48: Byte Deserializer Block Diagram

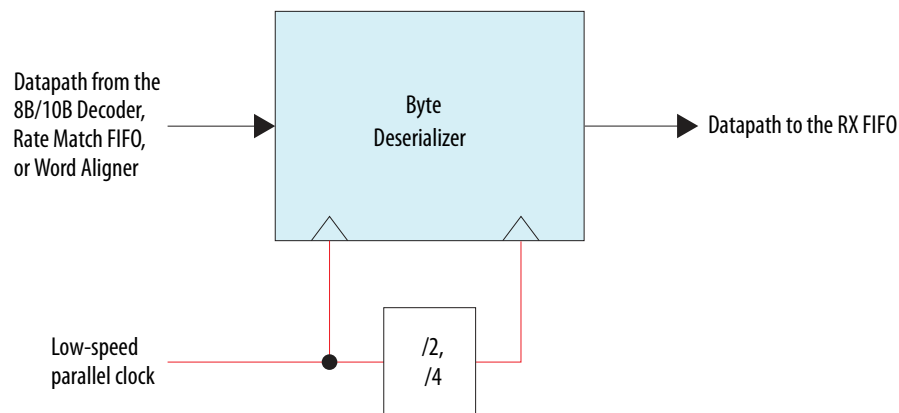

Byte Deserializer Disabled Mode

In disabled mode, the byte deserializer is bypassed. The data from the 8B/10B decoder, rate match FIFO, or word aligner is directly transmitted to the RX FIFO, depending on whether or not the 8B/10B decoder and rate match FIFO are enabled. Disabled mode is used in low speed applications such as GigE, where the FPGA fabric and the PCS can operate at the same clock rate.

Byte Deserializer Deserialize x2 Mode

The deserialize x2 mode is used in high-speed applications such as the PCIe Gen1 or Gen2 protocol implementation, where the FPGA fabric cannot operate as fast as the TX PCS.

In deserialize x2 mode, the byte deserializer deserializes 8-bit, 10-bit (when the 8B/10B encoder is not enabled), 16-bit, and 20-bit (when the 8B/10B encoder is not enabled) input data into 16-bit, 20-bit, 32-bit, and 40-bit data, respectively. As the parallel data width from the word aligner is doubled, the clock rate is halved.

Byte Deserializer Deserialize x4 Mode

The deserialize x4 mode is used in high-speed applications where the FPGA fabric cannot operate as fast as the TX PCS.

In deserialize x4 mode, the byte deserializer deserializes 8-bit data into 32-bit data. As the parallel data width from the word aligner is quadrupled, the clock rate is divided four times.


Bonded Byte Deserializer

The bonded byte deserializer is also available for channel-bundled applications such as PIPE. In this configuration, the control signals of the byte deserializers of all the channels are bonded together. A master channel controls all the other channels to prevent skew between the channels.

RX FIFO (Shared with Enhanced PCS and PCIe Gen3 PCS)

The RX FIFO interfaces between the PCS on the receiver side and the FPGA fabric and ensures reliable transfer of data and status signals. It compensates for the phase difference between the FPGA fabric and the PCS on the receiver side. The RX FIFO has a depth of 8. It operates in register FIFO and low latency modes.

Figure 5-49: RX FIFO Block Diagram

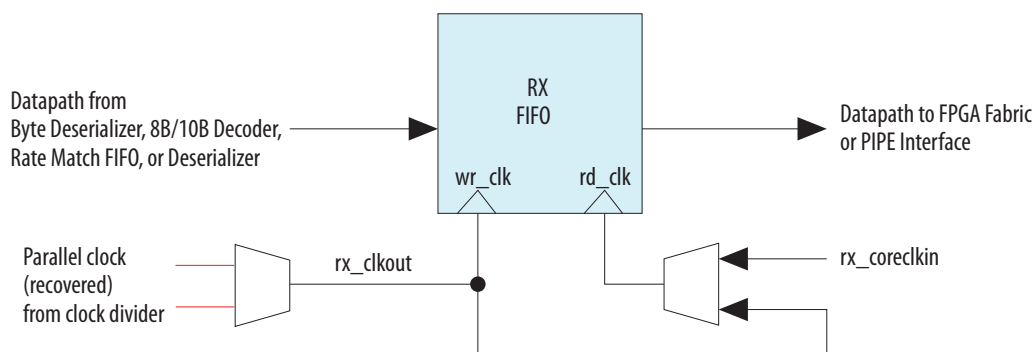

RX FIFO Low Latency Mode

The low latency mode incurs two to three cycles of latency when connecting it with the FPGA fabric. The FIFO empty and the FIFO full threshold values are made closer so that the depth of the FIFO decreases, which in turn decreases the latency.

RX FIFO Register Mode

The register mode bypasses the FIFO functionality to eliminate the FIFO latency uncertainty for applications with stringent latency requirements. This is accomplished by tying the read clock of the FIFO with its write clock. The register mode incurs only one clock cycle of latency when interfacing to the FPGA fabric.


Arria 10 PCI Express Gen3 PCS Architecture

Arria 10 architecture supports the PCIe Gen3 specification. Altera provides two options to implement the PCI Express solution:

- You can use the Altera Hard IP solution. This complete package provides both the MAC layer and the physical (PHY) layer functionality.
- You can implement the MAC in the FPGA core and connect this MAC to the transceiver PHY through the PIPE interface.

This section will focus on the basic blocks of PIPE 3.0-based Gen3 PCS architecture. The PIPE 3.0-based Gen3 PCS uses a 128b/130b block encoding/decoding scheme, which is different from the 8B/10B scheme used in Gen1 and Gen2. The 130-bit block contains a 2-bit sync header and a 128-bit data payload. For this reason, Arria 10 devices include a separate Gen3 PCS that supports functionality at Gen3 speeds. This PIPE interface supports the seamless switching of Data and Clock between the Gen1, Gen2, and Gen3 data rates, and provides support for PIPE 3.0 features. The PCIe Gen3 PCS will support the PIPE interface with the Hard IP enabled, as well as with the Hard IP bypassed.

Figure 5-50: Gen3 PCS Block Diagram

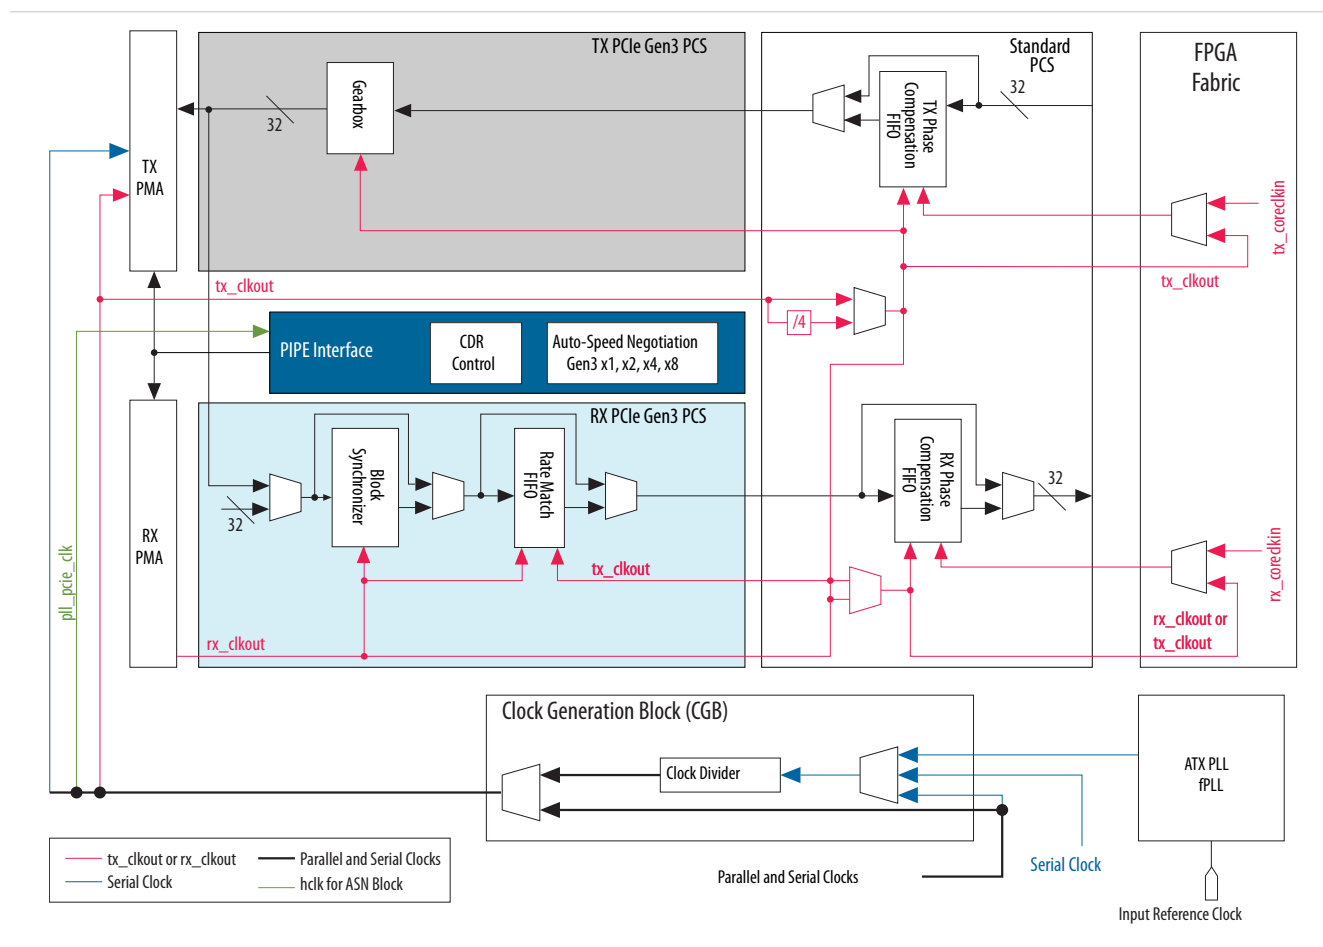

Related Information

[PCI Express \(PIPE\)](#) on page 2-231

For more information about PCIe Gen1, Gen2, and Gen3 implementation and configuration, refer to "Supported PIPE Features."

[Altera Hard IP for PCIe Users Guide](#)

Transmitter Datapath

This section describes the TX FIFO and the Gearbox of the Gen3 PCS transmitter.

TX FIFO (Shared with Standard and Enhanced PCS)

The TX FIFO in each channel ensures a reliable transfer of data and status signals between the PCS channel and the FPGA fabric. The TX FIFO compensates for the phase difference between the low speed parallel PCS clock and the FPGA fabric clock. The RX and TX FIFOs are shared with standard and enhanced PCS. In Hard IP mode, the TX FIFO works in register mode. In PIPE mode, the TX FIFO works in low latency mode.

The TX FIFO operates in low latency mode in PIPE Gen1, Gen2, and Gen3 configurations. The Low Latency mode incurs 3-4 cycles of latency when connecting with the FPGA Fabric. The FIFO empty and the FIFO full threshold values are made closer so that the depth of the FIFO decreases, which decreases the latency.

Related Information

[Arria 10 Standard PCS Architecture](#) on page 5-35

For more information about TX FIFO.

Gearbox

The PCIe 3.0 base specification specifies a block size of 130 bits, with the exception of the SKP Ordered Sets, which can be of variable length. An implementation of a 130-bit data path takes significant resources, so the PCIe Gen3 PCS data path is implemented as 32-bits wide. Because the TX PMA data width is fixed to 32 bits, and the block size is 130 bits with variations, a gearbox is needed to convert 130 bits to 32 bits.

The gearbox block in the TX PCS converts the 130-bit data (`tx_parallel_data[127:0] + pipe_tx_sync_hdr[1:0]`) to 32-bit data required by the TX PMA as the datapath implementation is 32 bits to reduce usage of resources. The 130-bit data is received as follows in the 32-bit datapath: 34 (32 + 2-bit sync header), 32, 32, 32. During the first cycle the gearbox converts the 34-bit input data to 32-bit data. During the next 3 clock cycles the gearbox will merge bits from adjacent cycles to form the 32-bit data. In order for the gearbox to work correctly, a gap must be provided in the data for every 16 shifts as each shift is 2 bits for converting the initial 34-bit to 32-bit in the gearbox. After 16 shifts the gearbox will have an extra 32-bit data that was transmitted out, and thus a gap is required in the input data stream. This gap is achieved by driving `pipe_tx_data_valid` low for one cycle after every 16 blocks of input data(`tx_parallel_data`).

Related Information

[Gearbox](#) on page 2-241

Receiver Datapath

This section describes the Block Synchronizer, Rate Match FIFO, and RX FIFO of the Gen3 PCS receiver.

Block Synchronizer

PMA parallelization occurs at arbitrary word boundaries. Consequently, the parallel data from the RX PMA CDR must be realigned to meaningful character boundaries. The PCI-Express 3.0 base specification outlines that the data is formed using 130-bit blocks, with the exception of SKP blocks.


The SKP Ordered Set can be 66, 98, 130, 162, or 194 bits long. The block synchronizer searches for the Electrical Idle Exit Sequence Ordered Set (or the last number of fast training sequences (NFTS) Ordered Set) or skip (SKP) Ordered Set to identify the correct boundary for the incoming stream and to achieve the block alignment. The block is realigned to the new block boundary following the receipt of a SKP Ordered Set, as it can be of variable length.

Rate Match FIFO

In asynchronous systems, the upstream transmitter and local receiver can be clocked with independent reference clocks. Frequency differences in the order of a few hundred PPM can corrupt the data when latching from the recovered clock domain to the local receiver reference clock domain. The rate match FIFO compensates for small clock frequency differences between these two clock domains by inserting or removing SKP symbols in the data stream to keep the FIFO from going empty or full respectively.

The PCI-Express 3.0 base specification defines that the SKP Ordered Set (OS) can be 66, 98, 130, 162, or 194 bits long. The SKP OS has the following fixed bits: 2-bit Sync, 8-bit SKP END, and a 24-bit LFSR = 34 Bits. The Rate Match/Clock compensation block adds or deletes the 4 SKP characters (32-bit) to keep the FIFO from going empty or full, respectively. If the FIFO is nearly full, it deletes the 4 SKP characters (32-bit) by disabling write whenever a SKP is found. If the FIFO is nearly empty, the design waits for a SKP Ordered Set to start and then stops reading the data from the FIFO, and inserts a SKP in the outgoing data. The actual FIFO core (memory element) is in the Shared Memory block in the PCS channel.

Figure 5-51: Rate Match FIFO

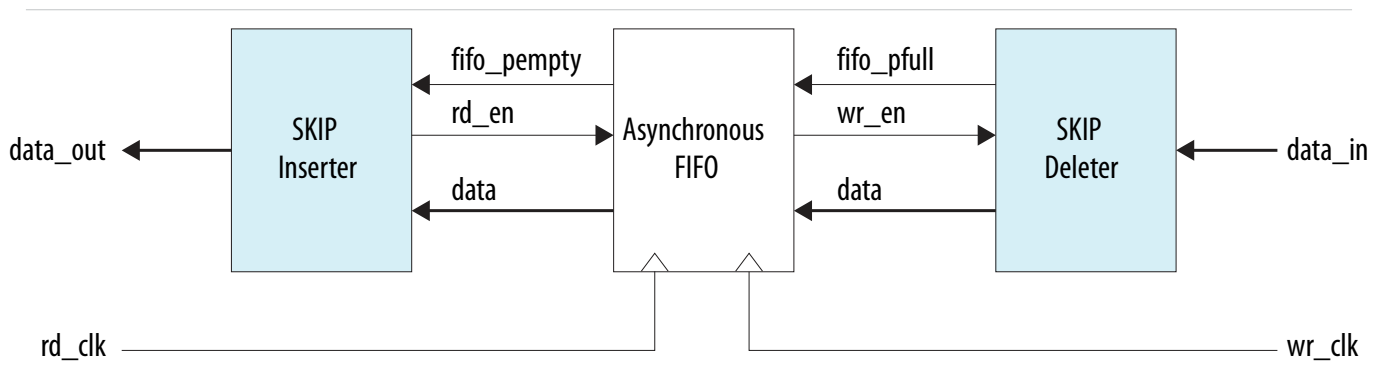

RX FIFO (Shared with Standard and Enhanced PCS)

The RX FIFO in each channel ensures a reliable transfer of data and status signals between the PCS channel and the FPGA fabric. The RX FIFO compensates for the phase difference between the parallel PCS clock and the FPGA fabric clock. In PIPE mode, the RX FIFO works in low latency mode.

Related Information

[Arria 10 Standard PCS Architecture](#) on page 5-35

For more information about RX FIFO.

PIPE Interface

This section describes the Auto Speed Negotiation and the Clock Data Recovery Control of the PIPE interface.

Auto Speed Negotiation

Auto speed negotiation controls the operating speed of the transceiver when operating under PIPE 3.0 modes. By monitoring the `pipe_rate` signal from the PHY-MAC, this feature changes the transceiver from PIPE Gen1 operation mode to Gen2 operation mode, or from PIPE Gen1 operation mode to Gen2 operation mode to Gen3 operation mode, or vice versa. The switches among the Gen1, Gen2, and Gen3 data rates involve a reconfiguration of the PMA and PCS settings. The PMA must re-lock and provide a TX PLL clock, and its CDR will also lock at a new incoming data rate. The PIPE interface clock rate will also be adjusted to match the data throughput.

Related Information

[Rate Switch](#) on page 2-238

Clock Data Recovery Control

The CDR control feature is used for the L0s fast exit when operating in PIPE Gen3 mode. Upon detecting an Electrical Idle Ordered Set (EIOS), this feature takes manual control of the CDR by forcing it into a lock-to-reference mode. When an exit from electrical idle is detected, this feature moves the CDR into lock-to-data mode to achieve fast data lock.

Reconfiguration Interface and Dynamic Reconfiguration

6

2014.12.15

UG-01143



Subscribe



Send Feedback

This chapter explains the purpose and the use of the Arria 10 reconfiguration interface that is part of the Transceiver Native PHY IP core and the Transceiver PLL IP core. You can use the reconfiguration interface to perform dynamic reconfiguration and to communicate with hard IP blocks in the transceiver channel, such as the DFE and EyeQ blocks.

Dynamic reconfiguration is the process of dynamically modifying transceiver channels and PLLs to meet changing requirements during device operation. Arria 10 transceiver channels and PLLs are fully customizable, allowing a system to adapt to its operating environment. You can customize channels and PLLs by dynamically triggering reconfiguration during device operation or following power-up. Dynamic reconfiguration is available for Arria 10 Transceiver Native PHY, fPLL, ATX PLL, and CMU PLL IP cores.

Use the reconfiguration interface to dynamically change the transceiver channel or PLL settings for the following applications:

- Fine tuning signal integrity by adjusting TX and RX analog settings
- Enabling or disabling transceiver channel blocks; e.g 8B/10B Encoder / Decoder
- Changing data rates to perform auto negotiation in CPRI, SATA, or SAS applications
- Changing data rates in Ethernet (1G/10G) applications by switching between standard and enhanced PCS datapaths
- Changing TX PLL settings for multi-data rate support protocols such as CPRI
- Changing RX CDR settings from one data rate to another
- Switching between multiple TX PLLs for multi-data rate support

Each transceiver channel and PLL contains an Avalon Memory-Mapped (Avalon-MM) reconfiguration interface. The reconfiguration interface provides direct access to the programmable space of each channel and PLL. Because each channel and PLL has its own dedicated Avalon-MM interface, you can dynamically modify channels either concurrently or sequentially, depending on how the Avalon master is connected to the Avalon-MM. Communication with the channel and PLL reconfiguration interface requires an Avalon compliant master.

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Figure 6-1: Reconfiguration Interface in Arria 10 Transceiver IP Cores

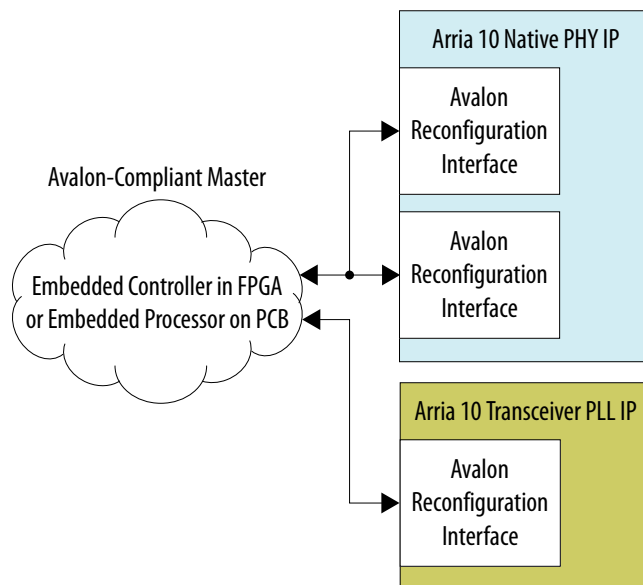
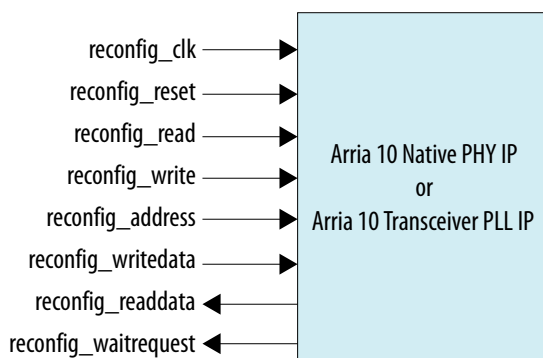


Figure 6-2: Top Level Signals of the Reconfiguration Interface

**Related Information**

- [Interacting with the Reconfiguration Interface](#) on page 6-3
- [Reconfiguring Channel and PLL Blocks](#) on page 6-4
- [Switching Reference Clocks](#) on page 6-12
- [Switching Transmitter PLL](#) on page 6-11
- [Changing PMA Analog Parameters](#) on page 6-8
- [Using Data Pattern Generators and Checkers](#) on page 6-23

Interacting with the Reconfiguration Interface

This section describes how to interact with the reconfiguration interface by performing Avalon read and write operations to initiate dynamic reconfiguration of specific transceiver parameters. All read and write operations must comply with Avalon-MM specification.

To perform either a read or write operation through Avalon-MM interface, request access to Avalon-MM interface by writing 0x2 to address 0x0 of the channel or the PLL. The access is granted once the `reconfig_waitrequest` goes low. After you have access to the Avalon-MM interface, you can start with all reconfiguration and recalibration requests. You must release the calibration bus, after you have completed all the requests to the Avalon-MM interface. To release the calibration bus, write a 0x3 to address 0x0 of the channel or the PLL.

Related Information

- [Avalon Interface Specifications](#)


Performing a Read to the Reconfiguration Interface

Reading to the reconfiguration interface prompts the Avalon master to determine the current value at a specific address. The read operation involves the following steps:

1. Write a 0x2 to address 0x0 of the channel or the PLL.
2. Place a 10-bit feature address on the `reconfig_address` bus.
3. Assert the `reconfig_read` signal.
4. Write a 0x3 to address 0x0 of the channel or the PLL.

After the `reconfig_read` signal asserts, the `reconfig_waitrequest` signal always asserts for a number of `reconfig_clock` cycles, then deasserts. This deassertion indicates the `reconfig_readdata` bus contains valid data.

Figure 6-3: Read Operation

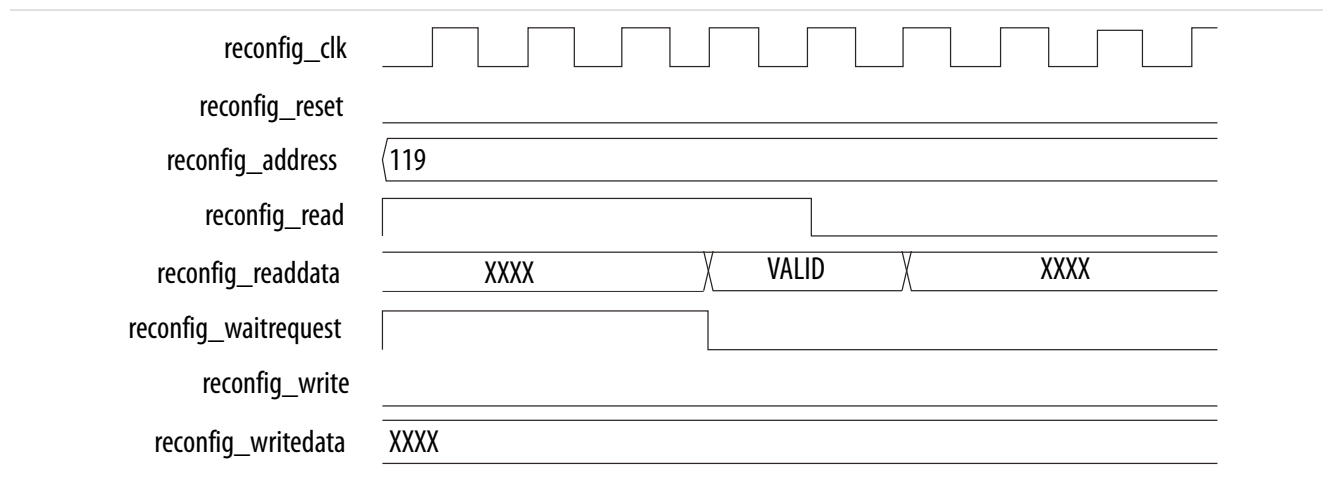

Performing a Write to the Reconfiguration Interface


Writing to the reconfiguration interface of either the Transceiver Native PHY IP core or TX PLL IP core allows an Avalon master to change the value at a specific address. All writes to the reconfiguration interface must be read-modify-write, because two or more features may share the same reconfiguration

address. When two or more features share the same reconfiguration address, one feature's data bits are interleaved with another feature's data bits. Therefore, you must always use read-modify-write and the correct address and data bits.

A read-modify-write operation involves the following steps:

1. Write a 0x2 to address 0x0 of the channel or the PLL.
2. Place a 10-bit feature address on the `reconfig_address` bus.
3. Assert the `reconfig_read` signal and store the read value. Wait for `reconfig_waitrequest` to transition from 1 to 0 before reading the value on the `reconfig_readdata` bus.
4. From the read value, modify only the necessary bits by masking out the non-relevant bits. Store this new value internally using the additional steps below.
5. Place the same 10-bit feature address from step 1 on the `reconfig_address` bus and place the new 32-bit value on the `reconfig_writedata` bus.
6. Assert the `reconfig_write` signal.
7. Reset the transceiver channel or the TX PLL as appropriate.
8. Write a 0x3 to address 0x0 of the channel or the PLL.

Figure 6-4: Write Operation

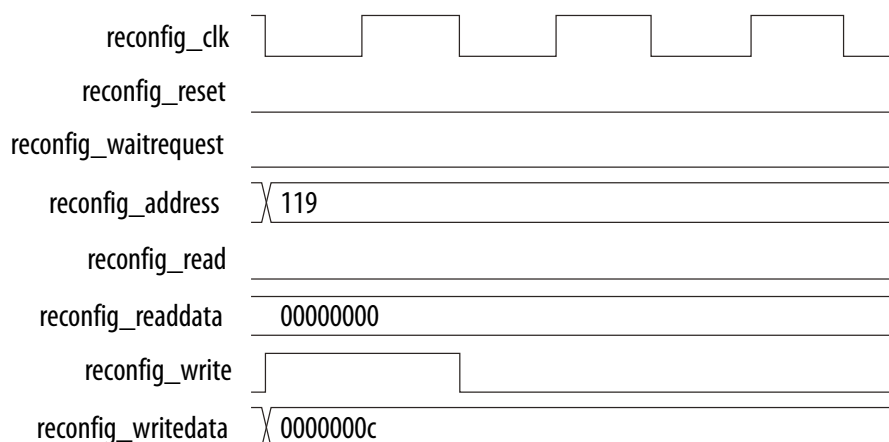

Reconfiguring Channel and PLL Blocks

Certain systems may require that your transceiver channels or PLLs take on a different data rate or protocol specification. For example, the 8B/10B encoder may be enabled under one mode of operation, and disabled in another mode of operation. The following examples require channel and PLL block reconfiguration:

- Switching between the Standard and Enhanced PCS blocks
- Changing the transmit PLL frequency
- Enabling and disabling blocks within a PCS block

You can dynamically reconfigure blocks in the transceiver channel or PLL through the reconfiguration interface. Reconfiguration of the channel and PLL blocks requires the following steps:

1. Generate required configuration files
2. Determine address offsets and differences
3. Perform read-modify-writes
4. Reset transceiver channels and PLLs as appropriate

Related Information

Step 4: Reset Transceiver Channels or Transceiver PLLs on page 6-6

Step 1: Generate Required Configuration Files

Dynamic reconfiguration requires two instances of the Altera Transceiver Native PHY IP or PLL: one instance defines the base transceiver or PLL configuration, and the second instance defines the modified configuration. Use the **IP Catalog** to create base and modified instances of the Transceiver Native PHY or PLL IP core, according to the following:

Table 6-1: Transceiver Native PHY or PLL IP Parameters (Base and Modified Instances)

Native PHY Instance	Required Parameter Settings	Saved In
Base Configuration	• Click Interfaces > Transceiver PHY > Arria 10 Transceiver Native PHY for the Native PHY IP core. Or, select one of the supported transmit PLL IP cores under PLL. Enable all options required for the base configuration, such as data rate, PCS options, and PMA options. • Enable all ports to be used by the modified configuration. For example, if the bitslip feature is not required in the base configuration, but required in modified configuration, then you must enable the tx_std_bitslipboundarysel port. Reconfiguring between Standard PCS, Enhanced PCS, and PCS Direct requires that you turn on Enable datapath and interface reconfiguration. The Transceiver configuration rules define the initial mode of the PHY instance. • On the Dynamic Reconfiguration tab, turn on Enable dynamic reconfiguration and specify the Configuration Options. This flow requires that you turn on Generate SystemVerilog package file option.	• <i><Native PHY Base Instance Name>/reconfig/altera_xcvr_native_a10_reconfig_parameters.sv</i> contains all transceiver register addresses and their bit value for that transceiver configuration. Or • <i><PLL Base Instance Name>/reconfig/altera_xcvr_<type>_pll_a10_reconfig_parameters.sv</i> contains all PLL register addresses and their bit value for that PLL configuration.

Native PHY Instance	Required Parameter Settings	Saved In
Modified Configuration	- Click Interfaces > Transceiver PHY > Arria 10 Transceiver Native PHY. Or, select one of the supported transmit PLL IP cores under PLL. Enable all options required for the modified configuration, such as data rate, PCS options, and PMA options. - Enable all ports that are used by the modified configuration. Reconfiguring between Standard PCS, Enhanced PCS, and PCS Direct requires Enable datapath and interface reconfiguration be enabled. The Transceiver configuration rules define the initial mode of the PHY instance. - On the Dynamic Reconfiguration tab, turn on Enable dynamic reconfiguration and specify the same Configuration Options as the base instance.	<i><Native PHY Modified Instance Name>/reconfig/altera_xcvr_native_a10_reconfig_parameters.sv</i> contains all transceiver register addresses and their bit value for that transceiver configuration. Or <i><PLL Modified Instance Name>/reconfig/altera_xcvr_<type>_pll_a10_reconfig_parameters.sv</i> contains all PLL register addresses and their bit value for that PLL configuration.

Note: You can generate the base and modified instance files in the same or different folders. If you use the same folder then each configuration instance name must be unique.

Related Information

[Using Configuration Files](#) on page 6-7

Step 2: Determine Address Offsets and Differences

Use a text editor to compare the differences between the base and modified Transceiver Native PHY or PLL instance files. The differences between these two files indicate the address offsets and bit values that must change to switch from one configuration to another. Some features span multiple addresses in the configuration file. Therefore, enabling or disabling a single feature can result in multiple address reads and writes to the reconfiguration interface.

Step 3: Perform Read-Modify-Writes

After programming the device with the base configuration, you can reconfigure the transceiver with the modified configuration. You must issue a read-modify-write to the reconfiguration interface for each address and bit difference between the base and modified Transceiver Native PHY or PLL. Write both the address and bit differences to the reconfiguration interface.

Step 4: Reset Transceiver Channels or Transceiver PLLs

After performing all read-modify-write operations, you must implement the required reset sequence. Refer to the required reset sequence to determine which blocks require reset.

Using Configuration Files

You can save the parameters you specify for the Transceiver Native PHY and transmit PLL IP instances as configuration files.

To perform dynamic reconfiguration to switch the TX PLL or reference clocks, the bit values that must be changed in order to obtain the new configuration span across few addresses. Use a text editor to find the differences between the base and the modified configuration. Perform read-modify-writes for the bit values that are different from the base configuration.

To perform dynamic reconfiguration to switch from one PCS data path to the other, the bit values to be changed span across many addresses. It is difficult to manually compare these values for the base and modified configurations and then perform read-modify-write. Instead, you can use a memory to store the .mif files of the configurations and then build a logic to stream those values that are different in the modified configuration.

The contents of the configuration files can be used to reconfigure from one transceiver configuration to another. For example, the MIF configuration file type can be stored in memory. With the configuration content saved, you can read from the memory and write the content to the target channel for reconfiguration.

The configuration files store offsets along with the data values required for a particular transceiver instance. You can use the configuration files as part of the dynamic reconfiguration flow.

Specify the file type of the configuration file on the **Dynamic Reconfiguration** tab of either the Transceiver Native PHY or transmit PLL parameter editor. Select one or more of **SystemVerilog package file**, **C header file**, or **MIF** file types. All configuration files are stored in <IP instance name>/reconfig/. All configuration files generated for a particular IP instance contain the same configuration data.

The configuration file generates in the format you select. For example, the SystemVerilog package file type generates a SystemVerilog (.sv) file type that contains a two dimension data array. The data array stores either channel or PLL offsets, depending on the configuration file generated, including bitmasks and bit values.

Typical SystemVerilog Configuration File Line

```

        26'h008FF04,
// [25:16]-DPRIO address=0x008;
// [15:8]-bit mask=0xFF;
// [7:7]- hssi_tx_pcs_pma_interface_pldif_datawidth_mode=pldif_data_10bit(1'h0);
// [6:5]-hssi_tx_pcs_pma_interface_tx_pma_data_sel=ten_g_pcs(2'h0);
// [4:4]-hssi_tx_pcs_pma_interface_prbs_gen_pat=prbs_gen_dis(1'h0);
// [3:0]-hssi_tx_pcs_pma_interface_sq_wave_num=sq_wave_default(4'h4);
...

localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_VALUE = "pldif_data_10bit";
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_OFST = 8;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_OFST = 7;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_HIGH = 7;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_SIZE = 1;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_BITMASK =
    32'h00000080;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_VALMASK =
    32'h00000000;
localparam HSSI_TX_PCS_PMA_INTERFACE_PLDIF_DATAWIDTH_MODE_ADDR_FIELD_VALUE = 1'h0;

```

The SystemVerilog configuration files are separated into two parts that represent the same data using two formats. The first part of the configuration file consists of a data array of 26-bit hexadecimal values, and

the second part consists of parameter values. For the data array, each 26-bit hexadecimal value contains an associated comment describing the various bit positions.

Table 6-2: 26-bit Value of Typical SystemVerilog Configuration File Line

Bit Position	Description
[25:16]	The channel or PLL offset.
[15:8]	The channel or PLL bit mask. The bit mask exposes the bits that are configured by either the Transceiver Native PHY or the transmit PLL IP cores.
[7:0]	Feature bit values. Multiple features may reside at the same offset or span multiple offsets.

Using the value of 26'h008FF04, the offset value is 0x008 and the bit mask is 0xFF. The four features that reside at offset 0x008 are:

- hssi_tx_pcs_pma_interface_pldif_datawidth_mode with a value of 1'h0
- hssi_tx_pcs_pma_interface_tx_pma_data_sel with a value of 2'h0
- hssi_tx_pcs_pma_interface_prbs_gen_pat with a value of 1'h0
- hssi_tx_pcs_pma_interface_sq_wave_num with a value of 4'h4

Writing to bit[7] of offset 0x008 changes the hssi_tx_pcs_pma_interface_pldif_datawidth_mode feature. The same data array information is also represented using the SystemVerilog parameter keyword, localparam. The C header file is setup similar to the SystemVerilog package file. They consist of an unsigned data array of 26-bit hexadecimal values and the second part consists of constant values. Both the data array and the constant values represent the same values. The MIF is setup similar to the data array in the SystemVerilog package file and the C header file.

Altera recommends following the flow described in section *Reconfiguring Transceiver and PLL Blocks* when performing dynamic reconfiguration of either the Native PHY IP core or transmit PLL IP core.

Related Information

[Reconfiguring Channel and PLL Blocks](#) on page 6-4

Changing PMA Analog Parameters

You can use the reconfiguration interface on the Transceiver Native PHY IP to change the value of PMA analog features. Transceiver Native PHY IP configuration files do not contain analog settings. Set analog parameters using Quartus II Settings File (.qsf) variables or these steps.

To change any of the PMA analog features:

1. Write 0x2 to address 0x0 of the channel.
2. Read from the PMA analog feature offset of the channel you want to change. For example, change pre-emphasis 1st post-tap read and store the value of offset 0x105.
3. Select a valid value for the feature according to the Arria 10 register map. For example, a valid setting for pre-emphasis 1st post-tap has a bit encoding of 5'b00001.
4. Perform a read-modify-write to the offset of the PMA analog feature using the valid value. For example, to change the pre-emphasis 1st post-tap, you must write 5'b00001 to offset 0x105.
5. Write 0x3 to address 0x0 of the channel.

Table 6-3: PMA Analog Feature Offsets

PMA Analog Feature	Offset	Bit	Values
Pre-emphasis 1 st post-tap	0x105	[4:0]	5'b00000 - 5'b11001
Pre-emphasis 1 st post-tap polarity	0x105	[6]	1'b0 = positive 1'b1 = negative
Pre-emphasis 2 nd post-tap	0x106	[3:0]	4'b0000 - 4'b1100
Pre-emphasis 2 nd post-tap polarity	0x106	[5]	1'b0 = positive 1'b1 = negative
Pre-emphasis 1 st pre-tap	0x107	[4:0]	5'b00000 - 5'b10000
Pre-emphasis 1 st pre-tap polarity	0x107	[5]	1'b0 = positive 1'b1 = negative
Pre-emphasis 2 nd pre-tap	0x108	[2:0]	3'b000 - 3'b111
Pre-emphasis 2 nd pre-tap polarity	0x108	[4]	1'b0 = positive 1'b1 = negative
Differential output voltage (Vod)	0x109	[4:0]	5'b00000 - 5'b11111

The PMA analog settings are governed by a set of rules. Not all combinations of Vod and pre-emphasis are valid. The following table lists the valid maximum pre-emphasis settings for the corresponding Vod settings.

Table 6-4: Valid Maximum Pre-Emphasis Settings

Vod	Maximum Pre-Emphasis Settings			
	1st Post-Tap	1st Pre-Tap	2nd Post-Tap	2nd Pre-Tap
31	25	16	12	7
30	25	16	11	6
29	25	16	10	5
28	25	16	9	4
27	25	16	8	3
26	25	16	7	2
25	25	16	6	1
24	25	16	5	0
23	24	16	4	0

Vod	Maximum Pre-Emphasis Settings			
	1st Post-Tap	1st Pre-Tap	2nd Post-Tap	2nd Pre-Tap
22	23	16	3	0
21	22	16	2	0
20	21	16	1	0
19	20	16	0	0
18	19	15	0	0
17	18	14	0	0
16	17	13	0	0
15	16	12	0	0
14	15	11	0	0
13	14	10	0	0
12	13	9	0	0

Changing CTLE Settings in Manual Mode

To change the CTLE Settings in Manual mode, you can either update the Quartus II Settings File (.qsf) with a known assignment, or follow the instructions below to perform read-modify-write to the configuration registers using the Avalon Memory-Mapped interface. The following table shows the configuration registers.

1. Read from the CTLE feature offset of the channel you want to change. For example, to change CTLE AC gain, read and store the value of offset 0x167.
2. Select a valid value for the feature according to the Arria 10 register map. For example, a valid setting for CTLE AC Gain has a bit encoding of 5'b00000.
3. Perform a read-modify-write to the offset of the CTLE feature using the valid value. For example, to change the CTLE AC gain, write 5'b00000 to offset 0x105.

Note: To set the CTLE in manual mode, select "Manual" option in the **CTLE adaptation mode** parameter in the **RX PMA** tab of the Arria 10 Native PHY IP core.

Table 6-5: Configuration Registers for Changing CTLE Settings

CTLE Feature	Offset	Bit	Values	Description
One Stage Enable	11B	[3]	1'b0- Selects 4s 1'b1- Selects 1s	Selects the equalizer path as either One stage or Four stage mode.
DC Gain	11C, 11A	[3:0], [7:0]	12'b000000000000 12'b111000000000 12'b111111000000 12'b111111110000 12'b111111111111	Sets the DC gain values.

CTLE Feature	Offset	Bit	Values	Description
CTLE AC Gain One Stage	166	[4:1]	4'b0000- 4'b1111	Sets the AC gain values when one stage mode is selected. Higher values mean higher peaking by suppressing DC gain.
CTLE AC Gain Four Stage	167	[5:1]	5'b00000 – 5'b11111	Sets the AC gain values when four stage mode is selected.
VGA SEL	160	[3:1]	3'b000 – 3'b111	Sets the VGA Gain value

Switching Transmitter PLL

Dynamically switching data rates increases system flexibility to support multiple protocols. You can change the transceiver channel data rate by switching the PLL. You can clock transceiver channels with up to four different transmitter PLLs. You can use the reconfiguration interface to specify which PLL drives the transceiver channel. The PLL switching method remains the same, regardless of the number of transmitter PLLs involved.

Before initiating the PLL switch procedure, ensure that your Transceiver Native PHY instance defines more than one transmitter PLL input. Specify the **Number of TX PLL clock inputs per channel** parameter on the **TX PMA** tab during Transceiver Native PHY parameterization.

The following table shows mapping of the Native PHY serial clock inputs to their respective logical mapping. The reconfiguration process requires this logical mapping. The number of exposed tx_serial_clk bits varies according to the number of transmitter PLLs you specify. The following table shows the logical mapping and the selection MUX offsets. Use the Native PHY reconfiguration interface for this operation.

Table 6-6: Logical Mapping of Native PHY Serial Clock Inputs

Transceiver Native PHY Port	Description	Logical PLL Offset	4-bit Logical PLL Offset Bits
tx_serial_clk0	Represents logical PLL0	0x117	[3:0]
tx_serial_clk1	Represents logical PLL1	0x117	[7:4]
tx_serial_clk2	Represents logical PLL2	0x118	[3:0]
tx_serial_clk3	Represents logical PLL3	0x118	[7:4]
N/A	PLL selection MUX	0x111	[7:0]

When performing a PLL switch, you must specify the replacement logical PLL offset and respective bits. The following procedure describes selection of a specific transmitter PLL when more than one PLL is connected to a channel. To change the data rate of the CDR, follow the detailed steps for reconfiguring

channel and PLL blocks. After determining the logical PLL to switch to, follow this procedure to switch to the selected transmitter PLL:

1. Write 0x2 to address 0x0 of the PLL.
2. Read from the selected logical PLL offset (for example, offset 0x117 or 0x118) and save the required 4-bit pattern. For example, switching to logical PLL1 requires saving bits [7:4] of offset 0x117.
3. Encode the 4-bit value read in the previous step into an 8-bit value according to the following table:

Table 6-7: Logical PLL Encoding

4-bit Logical PLL Offset Bits	8-bit Mapping to Offset 0x111
[3..0]	{~logical_PLL_offset_readdata[3], logical_PLL_offset_readdata[1:0], logical_PLL_offset_readdata[3], logical_PLL_offset_readdata[3:0]}
[7..4]	{~logical_PLL_offset_readdata[7], logical_PLL_offset_readdata[5:4], logical_PLL_offset_readdata[7], logical_PLL_offset_readdata[7:4]}

Note: For example, if reconfiguring to logical PLL1 then bits [7:4] is encoded to an 8-bit value {~bit[7], bit[5:4], bit[7], bit[7:4]}.

4. Perform a read-modify-write to bits[7:0] of offset 0x111 using the encoded 8-bit value.
5. Complete the required reset sequence.
6. Write 0x3 to address 0x5 of the PLL.

Related Information

[Reconfiguring Channel and PLL Blocks](#) on page 6-4

Switching Reference Clocks

You can dynamically switch the input clock source to any of the ATX PLL, the fPLL, the CMU, and the CDR.

ATX Reference Clock Switching

You can use the reconfiguration interface on the ATX PLL instance to specify which reference clock source drives the ATX PLL. The ATX PLL supports clocking by up to five different reference clock sources. The flow to select between the different reference clock sources is independent of the number of transmitter PLLs specified in the reconfiguration interface.

Before initiating a reference clock switch, ensure that your ATX PLL instance defines more than one reference clock source. Specify the **Number of PLL reference clocks** parameter on the **PLL** tab during ATX PLL parameterization.

The following table shows the mapping of the ATX PLL reference clock inputs to their respective logical mapping. The reconfiguration process requires this logical mapping. The number of exposed pll_refclk ports varies according to the number of reference clocks you specify. The following table shows the logical mapping and the selection MUX offsets. Use the ATX PLL reconfiguration interface for this operation.

Table 6-8: Logical Mapping of ATX PLL Reference Clock Inputs

Transceiver ATX PLL Port	Description	Logical Reference Clock Offset	Bits
pll_refclk0	Represents logical refclk0	0x113	[7:0]
pll_refclk1	Represents logical refclk1	0x114	[7:0]
pll_refclk2	Represents logical refclk2	0x115	[7:0]
pll_refclk3	Represents logical refclk3	0x116	[7:0]
pll_refclk4	Represents logical refclk4	0x117	[7:0]
N/A	ATX Refclk selection MUX	0x112	[7:0]

When performing a reference clock switch, you must specify the logical reference clock and respective offset and bits of the replacement clock. After determining the ATX PLL, follow this procedure to switch to the selected reference clock:

1. Write 0x2 to address 0x0 of the PLL.
2. Read from the logical reference clock offset and save the required 8-bit pattern. For example, switching to logical refclk2 requires use of bits [7:0] at offset 0x115.
3. Perform a read-modify-write to bits [7:0] at offset 0x112 using the 8-bit value obtained from the logical refclk offset.
4. Complete the required reset sequence.
5. Write 0x3 to address 0x0 of the PLL.

fPLL Reference Clock Switching

You can use the reconfiguration interface on the fPLL instance to specify which reference clock source drives the fPLL. The fPLL supports clocking by up to five different reference clock sources. The flow to select between the different reference clock sources is independent of the number of transmitter PLLs specified in the reconfiguration interface.

Before initiating a reference clock switch, ensure that your fPLL instance defines more than one reference clock source. Specify the **Number of PLL reference clocks** parameter on the **PLL** tab during fPLL parameterization.

The following table shows the mapping of the fPLL reference clock inputs to their respective logical mapping. The reconfiguration process requires this logical mapping. The number of exposed pll_refclk ports varies according to the number of reference clocks you specify. Use the fPLL reconfiguration interface for this operation.

Table 6-9: Logical Mapping of fPLL Reference Clock Inputs

Transceiver fPLL Port	Description	Logical Reference Clock Offset	Bits
pll_refclk0	Represents logical refclk0 for MUX_0	0x117	[4:0]

Transceiver fPLL Port	Description	Logical Reference Clock Offset	Bits
pll_refclk1	Represents logical refclk1 for MUX_0	0x118	[4:0]
pll_refclk2	Represents logical refclk2 for MUX_0	0x119	[4:0]
pll_refclk3	Represents logical refclk3 for MUX_0	0x11A	[4:0]
pll_refclk4	Represents logical refclk4 for MUX_0	0x11B	[4:0]
N/A	fPLL Refclk selection MUX_0	0x114	[4:0]
pll_refclk0	Represents logical refclk0 for MUX_1	0x11D	[4:0]
pll_refclk1	Represents logical refclk1 for MUX_1	0x11E	[4:0]
pll_refclk2	Represents logical refclk2 for MUX_1	0x11F	[4:0]
pll_refclk3	Represents logical refclk3 for MUX_1	0x120	[4:0]
pll_refclk4	Represents logical refclk4 for MUX_1	0x121	[4:0]
N/A	fPLL Refclk selection MUX_1	0x11C	[4:0]

Specify the logical reference clock and respective offset and bits of the replacement clock when performing a reference clock switch. Follow this procedure to switch to the selected reference clock:

1. Write 0x2 to address 0x0 of the PLL.
2. Read from the logical reference clock offset for MUX 0 and save the required 5-bit pattern. For example, switching to logical refclk3 requires use of bits[4:0] at offset 0x11A.
3. Perform a read-modify-write to bits [4:0] at offset 0x114 using the 5-bit value obtained from the logical refclk offset.
4. Read from the logical reference clock offset for MUX 1 and save the required 5-bit pattern. For example, switching to logical refclk3 requires use of bits[4:0] at offset 0x120.
5. Perform a read-modify-write to bits [4:0] at offset 0x11C using the 5-bit value obtained from the logical refclk offset.
6. Complete the required reset sequence.
7. Write 0x3 to address 0x0 of the PLL.

CDR and CMU Reference Clock Switching

You can use the reconfiguration interface to specify which reference clock source drives the CDR and CMU PLL. The CDR supports clocking by up to five different reference clock sources.

Before initiating a reference clock switch, ensure that your Transceiver Native PHY instance defines more than one reference clock source. Specify the **Number of CDR reference clocks** under the **RX PMA** tab when parameterizing the Native PHY.

Before initiating a reference clock switch, ensure that your CDR and CMU defines more than one reference clock source. For the CDR, specify the parameter on the **RX PMA** tab during the Native PHY IP parameterization. For the CMU, specify the **Number of PLL reference clocks** under the **PLL** tab when parameterizing the CMU PLL.

The following table describes the mapping of the CDR reference clock inputs to their respective logical mapping. The reconfiguration process requires the logical mapping. The number of exposed `rx_cdr_refclk` (CDR) or `pll_refclk` (CMU) varies according to the number of reference clocks you specify. The following table shows the logical mapping and the selection MUX offsets. Use the Native PHY reconfiguration interface for switching the CDR reference clock. Use the CMU reconfiguration interface for switching the CMU reference clock.

Table 6-10: Logical Mapping of CDR Reference Clock Inputs

Native PHY Port	Description	Logical Reference Clock Offset	Bits
<code>cdr_refclk0</code>	Represents logical <code>refclk0</code>	0x16A	[7:0]
<code>cdr_refclk1</code>	Represents logical <code>refclk1</code>	0x16B	[7:0]
<code>cdr_refclk2</code>	Represents logical <code>refclk2</code>	0x16C	[7:0]
<code>cdr_refclk3</code>	Represents logical <code>refclk3</code>	0x16D	[7:0]
<code>cdr_refclk4</code>	Represents logical <code>refclk4</code>	0x16E	[7:0]
N/A	CDR Refclk selection MUX	0x141	[7:0]

When performing a reference clock switch, note the logical reference clock to switch to and the respective offset and bits. After determining the logical reference clock, follow this procedure to switch to the selected CDR reference clock:

1. Write 0x2 to address 0x0 of the channel.
2. Read from the logical reference clock offset and save the required 8-bit pattern. For example, switching to logical `refclk3` requires saving bits [7:0] at offset 0x16D.
3. Perform a read-modify-write to bits [7:0] at offset 0x141 using the 8-bit value obtained from the logical `refclk` offset.
4. Complete the required reset sequence.
5. Write 0x3 to address 0x0 of the channel.

Ports and Parameters

The reconfiguration interface is integrated in the Native PHY instance and the TX PLL instances. Instantiate the Native PHY and the TX PLL IP cores by clicking **Tools > IP Catalog**. You can define parameters for IP cores by using the IP core specific Parameter Editor. To expose the reconfiguration interface ports, select the **Enable dynamic reconfiguration** option when parameterizing the IP core.

Each transmit PLL and channel has a dedicated reconfiguration interface. The transmit PLL instance has a maximum of one reconfiguration interface. Unlike the PLL instance, the Native PHY instance can specify multiple channels.

You can also share the reconfiguration interface by selecting the **Share reconfiguration interface** option when parameterizing the IP core. In this case, the IP core presents a single Avalon-MM slave interface for dynamic reconfiguration of all channels.

The channel number is added as a suffix to `reconfig_writedata` and `reconfig_clk` signals. The 32-bit ports are grouped into 32-bit groups. The 1-bit ports are grouped into 1-bit groups. For example, when reconfiguration interface is not shared, for a two channel Native PHY IP instance, the two writedata buses are represented as `reconfig_writedata_ch0[31:0]` and `reconfig_writedata_ch1[31:0]`. Similarly, the reconfiguration clocks are represented as `reconfig_clk_ch0[1:0]` and `reconfig_clk_ch1[1:0]`.

The channel 1 reconfiguration address is `reconfig_address [63:32]` and channel 2 reconfiguration address is `reconfig_address [31:0]`. Channel 0's reconfiguration clock is `reconfig_clk_ch0` and channel 1's reconfiguration clock is `reconfig_clk_ch1`. The same bundling pattern applies to channel counts greater than two.

Table 6-11: Reconfiguration Interface Ports with Share Reconfiguration Interface Disabled

The following table lists the reconfiguration interface ports when **Shared reconfiguration interface** option is disabled. *N* equals the number of channels in the following table.

Port Name ⁽³³⁾	Direction	Clock Domain	Description
<code>reconfig_clk_ch#</code>	Input	N/A	Avalon clock. The clock frequency is 100 MHz.
<code>reconfig_reset_ch#</code>	Input	<code>reconfig_clk</code>	Resets the Avalon interface.
<code>reconfig_write_ch#</code>	Input	<code>reconfig_clk</code>	Write enable signal. Signal is active high.
<code>reconfig_read_ch#</code>	Input	<code>reconfig_clk</code>	Read enable signal. Signal is active high.
<code>reconfig_address_ch#</code>	Input	<code>reconfig_clk</code>	A 10-bit address bus for each channel.
<code>reconfig_writedata_ch#</code>	Input	<code>reconfig_clk</code>	A 32-bit data write bus. Data to be written into the address indicated by <code>reconfig_address</code> .
<code>reconfig_readdata_ch#</code>	Output	<code>reconfig_clk</code>	A 32-bit data read bus. Valid data is placed on this bus after a read operation. Signal is valid after <code>waitrequest</code> goes high and then low.
<code>reconfig_waitrequest_ch#</code>	Output	<code>reconfig_clk</code>	A one-bit signal that indicates the Avalon interface is busy. Keep the Avalon commands asserted until this signal goes low.

If you enable **Share reconfiguration interface** for a two channel instance, then there is only one `reconfig_writedata` bus represented as `reconfig_writedata_ch0 [31:0]`. The reconfiguration clock for this interface is represented as `reconfig_clk_ch0 [31:0]`. All ports used for reconfiguration interface are same for single channel and multi channels except for `reconfig_address`. The `reconfig_address` bus becomes an 11-bit bus `reconfig_address[10:0]`. The lower 10 bits, `[9:0]`, is the reconfiguration address. The uppermost bit, `[10]`, indicates the active channel. A value of 0 indicates channel 0 and a value of 1 indicates channel 1.

Table 6-12: Reconfiguration Interface Ports with Share Reconfiguration Interface Enabled

The following table lists the reconfiguration interface ports when **Share reconfiguration interface** option is enabled. *N* equals the number of channels in the following table.

Port Name	Direction	Clock Domain	Description
<code>reconfig_clk</code>	Input	N/A	Avalon clock. The clock frequency is 100 MHz.

⁽³³⁾ 'ch#' indicates channel number.

Port Name	Direction	Clock Domain	Description
reconfig_reset	Input	reconfig_clk	Resets the Avalon interface.
reconfig_write	Input	reconfig_clk	Write enable signal. Signal is active high.
reconfig_read	Input	reconfig_clk	Read enable signal. Signal is active high.
reconfig_address[log2<N>+9:0]	Input	reconfig_clk	Address bus. The lower 10-bits specify address and the upper bits specify the channel.
reconfig_writedata[31:0]	Input	reconfig_clk	A 32-bit data write bus. Data to be written into the address indicated by reconfig_address.
reconfig_readdata[31:0]	Output	reconfig_clk	A 32-bit data read bus. Valid data is placed on this bus after a read operation. Signal is valid after waitrequest goes high and then low.
reconfig_waitrequest	Output	reconfig_clk	A one-bit signal that indicates the Avalon interface is busy. Keep the Avalon commands asserted until this signal does low.

Table 6-13: Avalon Interface Parameters

Specify values for the following parameters in the **Dynamic Reconfiguration** tab of the Transceiver Native PHY and TX PLL parameter editors.

Parameter	Value	Description
Enable dynamic reconfiguration	On / Off	Enables the reconfiguration interface. Disabled by default. The reconfiguration interface is exposed when this option is enabled.
Share reconfiguration interface	On / Off	Use a single reconfiguration interface to control all channels. Disabled by default. If enabled, the upper most bits of the reconfig_address identifies the active channel. The lower 10-bits specify the reconfiguration address. Binary encoding is used to identify the active channel (available only for Transceiver Native PHY). Enable this option if the Native PHY is configured with more than one channel.
Enable Altera Debug Master Endpoint	On / Off	When enabled, the Altera Debug Master Endpoint (ADME) is instantiated and has access to the Avalon-MM interface of the Native PHY. You can access certain test and debug functions using both System Console and the ADME.
Enable embedded debug	On / Off	Enables the embedded debug logic in the transceiver channel and grants access to capability registers, soft PRBS accumulators, and control and status registers.
Enable capability registers	On / Off	Enables capability registers. These registers provide high level information about the transceiver channel's configuration.

Parameter	Value	Description
Set user-defined IP identifier	User-specified	Sets a user-defined numeric identifier that can be read from the <code>user_identifier</code> offset when the capability registers are enabled.
Enable control and status registers	On / Off	Enables soft registers for reading status signals and writing control signals on the PHY interface through the embedded debug reconfiguration interface.
Enable PRBS soft accumulators	On / Off	Enables soft logic to perform PRBS bit and error accumulation when using the hard PRBS generator and checker.
Configuration file prefix	User-specified	Specifies the file prefix used for generating configuration files. Use a unique prefix for configuration files for each variant of the Native PHY.
Generate SystemVerilog package file	On / Off	Creates a SystemVerilog package file that contains the current configuration data values for all reconfiguration addresses. Disabled by default.
Generate C header file	On / Off	Creates a C header file that contains the current configuration data values for all reconfiguration addresses. Disabled by default.
Generate MIF (Memory Initialize File)	On / Off	Creates a MIF file that contains the current configuration data values for all reconfiguration addresses. Disabled by default.

Channel Merging Requirements

Channel merging in Arria 10 provides the ability to maximize transceiver channel utilization. The Native PHY provides the ability to create channels that are either simplex or duplex instances. However, each physical transceiver channel in Arria 10 is fully duplex. To maximize channel utilization, you can merge a transmitter only instance with a receiver only instance into one physical channel. Also, a CMU PLL instance can be merged with a transmitter only instance into one physical channel.

Steps to Merge Transceiver Channels

To merge either a transmitter only instance with a receiver only instance, or a CMU PLL instance with a transmitter only instance into a single channel perform the following steps:

1. Use **XCVR_RECONFIG_GROUP** analog parameter assignment.
2. Set the **To** field of the assignment to either the reconfiguration interfaces of the instances to be merged or to the pin names. The reconfiguration interface has the string `twentynm_hssi_avmm_if_inst`.
3. Assign the two instances to be merged to the same reconfiguration group.

Example 6-1: Using reconfiguration interface names

This example shows how to merge a transmitter only instance with a receiver only instance using the reconfiguration interface names. These instances are assigned to reconfiguration group 0.

For Native PHY 0 - transmit only instance:

```
set_instance_assignment -name XCVR_RECONFIG_GROUP 0 -to  
topdesign:topdesign_inst | <TX only instance name> *twentynm_hssi_avmm_if_inst*
```

For Native PHY 1 - receive only instance that is to be merged with Native PHY 0 (tx only instance):

```
set_instance_assignment -name XCVR_RECONFIG_GROUP 0 -to  
topdesign:topdesign_inst | <RX only instance name> *twentynm_hssi_avmm_if_inst*
```

Example 6-2: Using pin names

This example shows how to merge a transmitter only instance with a receiver only instance using pin names. These instances are assigned to reconfiguration group 1.

For Native PHY 0 - transmit only instance:

```
set_instance_assignment -name XCVR_RECONFIG_GROUP 1 -to tx[0]
```

For Native PHY 1 - receive only instance that is to be merged with Native PHY 0 (tx only instance):

```
set_instance_assignment -name XCVR_RECONFIG_GROUP 1 -to rx[0]
```

Notes:

- You cannot perform channel merging if embedded debug logic has been enabled. When embedded debug logic is enabled, the source of the Avalon-MM registers is not the same. Additionally, the Avalon-MM signals such as `reconfig_clk`, `reconfig_reset`, `reconfig_address`, `reconfig_read`, `reconfig_write`, and `reconfig_writedata` in the IP instances to be merged such as Native PHY TX and RX, must have the same source.
- You cannot merge the TX and RX channels when the **Shared reconfiguration interface** parameter is enabled in the Native PHY IP core Parameter Editor. You can merge channels only if the reconfiguration interface is independent.

Embedded Debug

The Arria 10 Transceiver Native PHY, the ATX PLL, the fPLL, and the CMU PLL IP cores contain soft logic for embedded debug. The Embedded Debug soft logic provides a set of features that enable you to debug and determine the state of the Native PHY IP core, the ATX PLL IP core, and the fPLL IP core. This soft logic also contains the Altera Debug Master Endpoint (ADME).

The ADME is a JTAG interface that provides access to the Avalon Memory-Mapped (AVMM) interface registers and the embedded debug registers through the system-console. You can use the ADME to perform test and debug functions.

The Embedded Debug options are available under the **Dynamic Reconfiguration** tab in the transceiver Native PHY IP core, the ATX PLL IP core, and the fPLL IP core. You must select **Enable dynamic**

reconfiguration option to access the embedded debug and ADME options. Select the parameters **Enable Altera Debug Master Endpoint** and **Enable embedded debug** to use the ADME and embedded debug features respectively. Select the **Share reconfiguration interface** parameter when the Native PHY IP instance has more than one channel.

Note: When Embedded Debug is enabled, the transmit-only and receive-only channels cannot be merged.

Native PHY IP Core Embedded Debug

The Native PHY IP core embedded debug features provides access to capability registers. The capability registers provide high level information about the transceiver channel's configuration. Three types of capability registers are available in the Native PHY IP core:

- General Purpose Registers
- Status Registers
- Control Registers

Table 6-14: General Purpose Registers

The general purpose registers provide information about the configuration of the Native PHY IP core.

Register	Description
IP Identifier	Unique identifier for the Native PHY IP instance.
Status Register Enabled	Indicates if the status registers have been enabled or not. 1'b1 indicates that the status registers have been enabled.
Control Register Enabled	Indicates if the control registers have been enabled or not. 1'b1 indicates that the control registers have been enabled.
Number of Channels	Indicates the number of channels specified for the Native PHY IP instance.
Channel Number	Indicates the unique channel number.
Duplex	Indicates the transceiver mode: • 2'b00 = Unused • 2'b01 = TX • 2'b10 = RX • 2'b11 = Duplex
PRBS Soft Enabled	Indicates if the soft PRBS logic is enabled or not. 1'b1 indicates that soft PRBS logic is enabled.

Table 6-15: Status Registers

The status registers provide information on the current status of the Native PHY IP core.

Register	Description
rx_is_lockedtodata	Indicates if the current channel's receiver is locked to data. 1'b1 indicates that the receiver is locked to the incoming data.
rx_is_lockedtoref	Indicates if the current channel's receiver is locked to reference. 1'b1 indicates that the receiver is locked to the reference clock.

Register	Description
tx_cal_busy	Indicates the transmitter calibration status. 1'b1 indicates that the calibration is in progress.
rx_cal_busy	Indicates the receiver calibration status. 1'b1 indicates that the calibration is in progress.

Table 6-16: Control Registers

The control registers provide access to enable or disable specific features within the transceiver channel.

Register	Description
set_rx_locktodata	Asserts the set_rx_locktodata signal to the receiver. 1'b1 sets the ADME set_rx_locktodata register.
set_rx_locktoref	Asserts the set_rx_locktoref signal to the receiver. 1'b1 sets the ADME set_rx_locktoref register.
override_set_rx_locktodata	Selects if the receiver is controlled by the ADME set_rx_locktodata register or the rx_set_locktodata port. 1'b1 indicates that the receiver is controlled by the ADME set_rx_locktodata register.
override_set_rx_locktoref	Selects if the receiver is controlled by the ADME set_rx_locktoref register or the rx_set_locktoref port. 1'b1 indicates that the receiver is controlled by the ADME set_rx_locktoref register.
rx_digitalreset	Drives rx_digitalreset to the transceiver PHY when used in tandem with the override bit.
tx_digitalreset	Drives tx_digitalreset to the transceiver PHY when used in tandem with the override bit.
rx_analogreset	Drives rx_analogreset to the transceiver PHY when used in tandem with the override bit.
tx_analogreset	Drives tx_analogreset to the transceiver PHY when used in tandem with the override bit.
override_rx_digitalreset	Selects if the rx_digitalreset is an input port or an embedded debug port. 1'b1 indicates that rx_digitalreset is an embedded debug port. By default, rx_digitalreset is an input port.
override_tx_digitalreset	Selects if the tx_digitalreset is an input port or an embedded debug port. 1'b1 indicates that tx_digitalreset is an embedded debug port. By default, tx_digitalreset is an input port.
override_rx_analogreset	Selects if rx_analogreset is an input port of an embedded debug port. 1'b1 indicates that rx_analogreset is an embedded debug port. By default, rx_analogreset is an input port.
override_tx_analogreset	Selects if tx_analogreset is an input port of an embedded debug port. 1'b1 indicates that tx_analogreset is an embedded debug port. By default, tx_analogreset is an input port.
rx_serialpbken	Enables the RX serial loopback feature in the transceiver. 1'b1 enables the reverse serial loopback.

PRBS Soft Accumulators

The Psuedo Random Binary Sequence (PRBS) soft accumulators are used in conjunction with the hard PRBS blocks in the transceiver channel. This section describes the soft logic that is added to the Native PHY IP core to access the hard PRBS blocks.

The Psuedo Random Binary Sequence (PRBS) has three control bits and one status bit. Bits Enable, Reset, and Snapshot are the three control bits, and PRBS Locked is the status bit.

The Enable bit is used to turn ON the accumulation logic. This bit is also used for selective error accumulation and to pause the sequence.

The Reset bit resets the PRBS polynomial and the bit and error accumulators. It also resets the snapshot registers if independent channel snapshots are used.

The Snapshot bit captures the current value of the accumulated bits and the errors at the same time. This neutralizes the impact of the added read time when the Avalon interface is used. The Snapshot bit provides an accurate error count with respect to the bit count at time instance n.

The PRBS Locked bit indicates that PRBS Done is asserted. It implies that the PRBS checker has locked to the incoming data pattern.

PLL IP Core Embedded Debug

The PLL IP core embedded debug feature provides access to the capability registers. Three types of capability registers are available in the PLL IP core:

- General Purpose Registers
- Status Registers
- Control Registers

Table 6-17: General Purpose Registers

The general purpose registers provide information about the configuration of the Native PHY IP core.

Register	Description
IP Identifier	Unique identifier for the for the PLL IP instance.
Status Register Enabled	Indicates if the status registers have been enabled or not. 1'b1 indicates that the status registers have been enabled.
Control Register Enabled	Indicates if the control registers have been enabled or not. 1'b1 indicates that the control registers have been enabled.
MCGB Enabled	Indicates if the MCGB has been enabled and configured in the PLL IP instance or not.

Table 6-18: Status Registers

The status registers provide information on the current status of the PLL IP core.

Register	Description
IP Identifier	Unique identifier for the PLL IP instance.
pll_locked	Indicates the PLL lock status.
pll_cal_busy	Indicates the PLL calibration status.

Table 6-19: Control Registers

The control registers provide access to enable or disable specific features within the transceiver channel.

Control Registers	Description
pll_powerdown	Powers down the PLL.
override_pll_powerdown	Selects if the pll_powerdown is an input port or an embedded debug port. 1'b1 indicates that pll_powerdown is an embedded debug port. By default, pll_powerdown is an input port.

Using Data Pattern Generators and Checkers

The Arria 10 transceivers contain hardened data generators and checkers to provide a simple and easy way to verify and characterize high speed links. Hardening the data generators and verifiers saves FPGA core logic resources. The pattern generator block supports the following patterns:

- Pseudo Random Binary Sequence (PRBS)
- Pseudo Random Pattern (PRP)
- Square wave

Note: The pattern generators and verifiers are supported only for non-bonded channels.

Using PRBS and Square Wave Data Pattern Generator and Checker

You can use PRBS to simulate traffic and easily characterize high-speed links without developing or fully implementing any upper layer of a protocol stack.

The PRBS generator generates a self-aligning pattern that doesn't require bit slipping or word alignment for a pattern lock. Because the PRBS pattern is generated by an LFSR, the next pattern can be determined based upon the previous pattern. This is important for the PRBS checker because a portion of the received pattern can be used to generate the next sequence of bits to verify the next data sequence received is correct.

The PRBS generator and checker support two data width configurations: 64-bit and 10-bit. The PRBS generator, PRBS checker, and square wave must be configured to a supported bus width (that is, 64-bit or 10-bit, independent of the FPGA-PCS fabric width used). For example, if your FPGA-PCS fabric width is set to a 40-bit width, then you must configure the PRBS or square wave to a valid 64-bit or 10-bit width data generator.

Table 6-20: PRBS and Square Wave Supported Polynomials and Data Widths

Pattern	Polynomial	64-Bit	10-Bit
PRBS 9	$G(x) = 1 + x^5 + x^9$	X	X
PRBS 15	$G(x) = 1 + x^{14} + x^{15}$	X	
PRBS 23	$G(x) = 1 + x^{18} + x^{23}$	X	
PRBS 31	$G(x) = 1 + x^{28} + x^{31}$	X	
Square Wave	Number of consecutive 1's and 0's: 4,6,8	X	

Enabling the PRBS and Square Wave Data Generator

You must perform a sequence of read-modify-writes to the Native PHY reconfiguration interface to enable either the PRBS or square wave data generator. You must perform the read-modify-writes to offsets: 0x6, 0x7, 0x8, and 0x110. To enable either the PRBS or the square wave data generator, follow these steps:

1. Write 0x2 to address 0x0 of the channel.
2. Perform a read-modify-write to offset 0x6 according to the [Table 6-21](#).
3. Perform a read-modify-write to either offset 0x7 or offset 0x8 to enable the type of PRBS or square wave pattern:
 - a. Perform a read-modify-write to offset 0x7 by writing a 1'b1 to either bit[7], bit[6], or bit[5] to enable PRBS9, PRBS15, or PRBS23, respectively. Write other bits with 1'b0.
 - b. Perform a read-modify-write to offset 0x8 by writing to bit[3:0], or bit[4] to enable the square wave or PRBS31, respectively. Write bit[6:5] with the type pattern generator.
4. Perform a read-modify-write to offset 0x110 with the specified width. This data width is either 64-bit or 10-bit.
5. Perform a reset.
6. Write a 0x3 to address 0x0 oc tWrite 0x3 to address 0x0 of the channel.
To disable the PRBS or square wave generator, write the original values back into the read-modify-write offsets in [Table 6-21](#).

Table 6-21: PRBS Generator and Square Wave Offsets

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Other Offsets	Attribute Encoding	Bit Encoding	Description
0x6	[2:0]	tx_pma_data_sel	0x8	prbs_pat	3'b100	Enable PRBS generator
				sq_wave_pat	3'b101	Enable square wave generator
	[3]	prbs9_dwidth		prbs9_10b	1'b1	Enable PRBS9 in 10-bit mode
				prbs9_64b	1'b0	Enable PRBS9 in 64-bit mode
	[6]	prbs_clken		prbs_clk_dis	1'b0	Disable PRBS clock
				prbs_clk_en	1'b1	Enable PRBS clock
	[7]	sqwgen_clken		sqwgen_clk_dis	1'b0	Disable square wave clock
				sqwgen_clk_en	1'b1	Enable square wave clock
0x7	[7:4]	prbs_gen_pat	0x8	prbs_7	4'b1000	Enable PRBS7 in 64-bit mode
				prbs_15	4'b0100	Enable PRBS15 in 64-bit mode
				prbs_23	4'b1000	Enable PRBS23 in 64-bit mode
				prbs_31	4'b0001	Enable PRBS31 in 64-bit mode
				prbs_9	4'b0010	Enable PRBS9 in 64-bit mode
				prbs_dis	4'b0000	Disable PRBS in 64-bit mode

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Other Offsets	Attribute Encoding	Bit Encoding	Description
0x8	[3:0]	sq_wave_num		sq_wave_1	4'b0001	Enable square wave. One "1" followed by one "0"
				sq_wave_4	4'b0100	Enable square wave. Four "1" followed by four "0"
				sq_wave_8	4'b1000	Enable square wave. Eight "1" followed by eight "0"
				sq_wave_default	4'b0100	
	[4]	prbs_gen_pat	0x7	prbs_15	1'b0	Enable PRBS15 in 64-bit mode
				prbs_23	1'b0	Enable PRBS23 in 64-bit mode
				prbs_31	1'b1	Enable PRBS31 in 64-bit mode
				prbs_9	1'b0	Enable PRBS9 in 64-bit mode
				prbs_dis	1'b0	Disable PRBS in 64-bit mode
	[6:5]	tx_pma_data_sel	0x6	prbs_pat	2'b00	Enable PRBS generator
				sq_wave_pat	2'b00	Enable square wave generator
0x110	[2:0]	ser_mode		sixty_four_bit	3'b011	64-bit mode
				ten_bit	3'b100	10-bit mode

Enabling the PRBS Data Checker

You must perform a sequence of read-modify-writes to the Transceiver Native PHY reconfiguration interface to enable the PRBS checker. You must perform read-modify-writes to offsets: 0xA, 0xB, 0xC, and 0x13F. To enable the PRBS checker, follow these steps:

1. Perform a read-modify-write to offset 0xA with a value of 1'b1 to bit[7].
2. Perform a read-modify-write to offset 0xB according to the PRBS Generator and Square Wave Offsets table. For PRBS9, PRBS15, or PRBS23, write a one to either bit[7], bit[6], or bit[5], respectively. Write to bit[3:2] with the counter threshold before the rx_prbs_done signal goes high.
3. Perform a read-modify-write to offset 0xC with a value of 1'b1 to bit[0] for PRBS31, otherwise 1'b0 of other PRBS patterns. Write the other bits according to [Table 6-22](#).
4. Perform a read-modify-write to offset 0x13F according to [Table 6-22](#).
5. Perform a reset.

To disable the PRBS verifier write the original values back into the read-modify-write offsets listed above.

Table 6-22: PRBS Checker Offsets

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Other Offsets	Attribute Encoding	Bit Encoding	Description
0xA	[7]	prbs_clken		prbs_clk_dis	1'b0	Disable PRBS checker
				prbs_clk_en	1'b1	Enable PRBS checker
0xB	[3:2]	rx_prbs_mask		prbsmask10 24	2'b11	1023
				prbsmask12 8	2'b00	Counter threshold to 127
				prbsmask25 6	2'b01	255
				prbsmask51 2	2'b10	511
	[7:4]	prbs_ver	0xC	prbs_7	4'b1000	Enable PRBS7 in 64-bit mode
				prbs_15	4'b0100	Enable PRBS15 in 64-bit mode
				prbs_23	4'b1000	Enable PRBS23 in 64-bit mode
				prbs_31	4'b0001	Enable PRBS31 in 64-bit mode
				prbs_9	4'b0010	Enable PRBS9 in 64-bit or 10-bit mode
				prbs_off	4'b0000	Disable PRBS in 64-bit mode

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Other Offsets	Attribute Encoding	Bit Encoding	Description
0xC	[0]	prbs_ver	0xB	prbs_15	1'b0	Enable PRBS15 in 64-bit mode
				prbs_23	1'b0	Enable PRBS23 in 64-bit mode
				prbs_31	1'b1	Enable PRBS31 in 64-bit mode
				prbs_9	1'b0	Enable PRBS9 in 64-bit mode
				prbs_off	1'b0	Disable PRBS in 64-bit mode
	[1]	rx_signalok_signaldet_sel		force_sig_ok	1'b1	
				unforce_sig_ok	1'b0	
	[2]	prbs9_dwidth		sel_sig_ok	1'b1	
	[3]	deser_factor		prbs9_10b	1'b1	PRBS9 10-bit
				prbs9_64b	1'b0	PRBS9 64-bit
0x13F	[3:0]	deser_factor		10	4'b0001	10-bit mode
				64	4'b1110	64-bit mode

Enabling Pseudo Random Pattern Test Mode

Pseudo Random Pattern is a test mode of the scrambler. You can select two seeds of the Pseudo Random Pattern. The seed produces the pattern in the scrambler, and the `r_tx_data_pat_sel` is the data pattern the scrambler scrambles. There are two choices: all 0's or two local fault ordered sets. The Pseudo Random Pattern shares the error signal with PRBS. There is also an error count available. Pseudo Random Pattern is only available when the scrambler is enabled. You must perform a sequence of read-modify-writes to the reconfiguration interface to enable the Pseudo Random Pattern. The read-modify-writes are required to offsets 0x82, 0x97, and 0xAC. To enable the Pseudo Random Pattern, complete the following steps:

1. Write 0x2 to address 0x0 of the channel.
2. Perform a read-modify-write to offset 0x82.
3. Perform a read-modify-write to offset 0x97.
4. Perform a read-modify-write to offset 0xAC.
5. Perform a reset.
6. Write 0x3 to address 0x0 of the channel.
To disable the PRBS verifier write the original values back to the read-modify-write offsets listed above.

Table 6-23: Pseudo Random Pattern Test Mode Offsets

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Bit Encoding	Description
0x72	[7:0]	r_tx_seed_a[7:0]		Seed A value bit[7:0]
0x73	[7:0]	r_tx_seed_a[15:8]		Seed A value bit[15:8]
0x74	[7:0]	r_tx_seed_a[23:16]		Seed A value bit[23:16]
0x75	[7:0]	r_tx_seed_a[31:24]		Seed A value bit[31:24]
0x76	[7:0]	r_tx_seed_a[39:32]		Seed A value bit[39:32]
0x77	[7:0]	r_tx_seed_a[47:40]		Seed A value bit[47:40]
0x78	[7:0]	r_tx_seed_a[55:48]		Seed A value bit[55:48]
0x79	[1:0]	r_tx_seed_a[57:56]		Seed A value bit[57:56]
0x7A	[7:0]	r_tx_seed_b[7:0]		Seed B value bit[7:0]
0x7B	[7:0]	r_tx_seed_b[15:8]		Seed B value bit[15:8]
0x7C	[7:0]	r_tx_seed_b[23:16]		Seed B value bit[23:16]
0x7D	[7:0]	r_tx_seed_b[31:24]		Seed B value bit[31:24]
0x7E	[7:0]	r_tx_seed_b[39:32]		Seed B value bit[39:32]
0x7F	[7:0]	r_tx_seed_b[47:40]		Seed B value bit[47:40]
0x80	[7:0]	r_tx_seed_b[55:48]		Seed B value bit[55:48]
0x81	[1:0]	r_tx_seed_b[57:56]		Seed B value bit[57:56]
0x82	[0]	r_tx_data_pat_sel	1'b0	2 local faults
			1'b1	0's
	[1]	r_tx_test_pat_sel	1'b0	Pseudo Random
			1'b1	Square Wave
	[3]	r_tx_test_en	1'b1	
0x97	[2]	r_rx_test_en	1'b1	
0xAC	[0]	r_rx_test_pat_sel	1'b0	Pseudo random
			1'b1	Square wave
0xD7	[7:0]	random_err_cnt[7:0]		Error count
0xD8	[7:0]	random_err_cnt[7:0]		

Enabling PRBS Pattern Inversion

You can enable pattern inversion for PRBS data leaving or entering the PRBS data pattern generator and checker, respectively. The following table shows the offsets to invert either the generator or checker. To invert the PRBS pattern for the PRBS generator or checker, follow these steps:

- To invert the PRBS pattern leaving the PRBS generator, perform a read-modify-write to bit[2] with a value of 1'b1 to offset 0x7.
- To invert the PRBS pattern entering the PRBS checker, perform a read-modify-write to bit[4] with a value of 1'b1 to offset 0xA.

Table 6-24: PRBS Pattern Inversion Offsets

Reconfiguration Address (HEX)	Reconfiguration Bit	Attribute Name	Bit Encoding	Description
0x7	[2]	tx_static_polarity_inversion	1'b0	Disables static polarity inversion
			1'b1	Enables static polarity inversion
0xA	[4]	rx_static_polarity_inversion	1'b0	Disables static polarity inversion
			1'b1	Enables static polarity inversion

Note: Disable the inversion bit on the TX and RX to prevent normal data traffic from being inverted while entering or leaving the PCS.

Timing Closure Recommendations

While performing dynamic reconfiguration, you must include clock uncertainties on some HSSI output clocks in order to close timing. These clock uncertainties are specified below.

Condition	Uncertainty to be added	Uncertainty Type
While changing the PCS FIFO mode from phase compensation to low latency mode or vice versa	Apply 50 ps uncertainty on the TX clock feeding the write side of the TX PCS FIFO.	Apply on Set-up
While changing the PCS FIFO mode from register to fast register or vice versa	Apply 175 ps uncertainty on the TX clock feeding the write side of the TX PCS FIFO	Apply on Set-up
	Apply 75 ps uncertainty on the RX clock feeding the write side of the PCS FIFO	Apply on Hold (same clock edge)

Unsupported Features

The following features are not supported by either the Transceiver Native PHY IP or the PLL IP reconfiguration interface:

- Reconfiguration from a bonded configuration to a non-bonded configuration, or vice versa
- Reconfiguration from a bonded protocol to another bonded protocol
- Reconfiguration from PCIe (with Hard IP) to PCIe (without Hard IP) or non-PCIe bonded protocol switching
- Switching between bonding schemes, such as xN to feedback compensation
- Master CGB reconfiguration
- Switching between two master CGBs
- Serialization factor changes on bonded channels
- TX PLL switching on bonded channels

Note: Transceiver Native PHY IP non-bonded configuration to another Transceiver Native PHY IP non-bonded configuration is supported.

Arria 10 Transceiver Register Map

The transceiver register map provides a list of available PCS, PMA, and PLL addresses that are used in the reconfiguration process.

Use the register map in conjunction with a transceiver configuration file generated by the Arria 10 Native PHY IP core. This configuration file includes details about the registers that are set for a specific transceiver configuration. Do not use the register map to locate and modify specific registers within the transceiver. Doing so may result in an illegal configuration. Refer to a valid transceiver configuration file for legal register values and combinations.

The register map is provided as an Excel spreadsheet for easy search and filtering.

Related Information

[Arria 10 Transceiver Register Map](#)

2014.12.15

UG-01143



Subscribe



Send Feedback

Transceivers include both analog and digital blocks that require calibration to compensate for process, voltage, and temperature (PVT) variations. Arria 10 transceiver uses hardened Precision Signal Integrity Calibration Engine (PreSICE) to perform calibration routines.

Power-up Calibration and User Recalibration are the main types of calibration.

- Power-up calibration occurs automatically at device power-up. It runs during device configuration.
- If you perform dynamic reconfiguration, then you must perform User Recalibration. In this case, you are responsible for enabling the required calibration sequence.

To successfully complete the calibration process, CLKUSR clocks must be stable and free running at device power-up. Also, all reference clocks driving the PLLs (ATX PLL, fPLL, CMU or CDR PLL) must be stable and free running at device power-up.

Reconfiguration Interface and Arbitration with PreSICE Calibration Engine

Arria 10 transceiver channels and PLLs include an Avalon-MM interface. It is used to access the dynamic reconfiguration registers and to interact with the calibration engine. The Avalon-MM interface includes a communication mechanism to enable you to request specific calibration sequences from the calibration controller.

In Arria 10 devices, calibration is performed using the Precision Signal Integrity Calibration Engine (PreSICE). The PreSICE includes an Avalon-MM interface to access the transceiver channel and the PLL registers. The user Avalon-MM and PreSICE Avalon-MM interface share a single calibration bus. This bus is arbitrated to get access to the channel and PLL registers.

When PreSICE controls the Avalon-MM interface, the waitrequest signal is high. To request access to the Avalon-MM interface, you can write 0x2h to address 0x0h of the channel or the PLL. When the access is granted to you, the waitrequest signal goes low.

Note: When you have access to the Avalon-MM interface, the continuous calibration routine is not running. After all your Avalon-MM requests are complete, you must pass the calibration bus back to the PreSICE. To release the calibration bus, write 0x3h to the Avalon-MM interface. At this point, the continuous calibration routine starts running.

To check if the calibration process is on, monitor pll_cal_busy, tx_cal_busy, and rx_cal_busy signals. The *_cal_busy signals remain asserted as long as the calibration process is running. Also,

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



reconfig_waitrequest signal is asserted when the PreSICE controls the Avalon-MM interface for calibration.

Related Information

- [Avalon Interface Specifications](#)

Calibration Registers

The transceiver PMA and PLLs include the following types of registers for calibration:

- Avalon-MM interface arbitration registers
- Calibration enable registers
- Calibration status registers.

The calibration enable registers for the transceiver PMA and PLLs enable one or more calibration algorithms be run upon your request. These enable bits are mapped to offset address 0x100h. All calibration enable registers are self-cleared after the calibration process is completed.

The calibration status registers for the transceiver PMA and PLLs capture the status of a particular calibration algorithm that was run at power-up or subsequently requested by you. These status bits are mapped to offset address 0x101h. All calibration status registers remain active high when the calibration algorithm is running and are self-cleared after calibration is completed. Set all reserved bits to 0 when you write to these registers.

Avalon-MM Interface Arbitration Registers

Table 7-1: Avalon-MM Interface Arbitration Registers

Bit	Offset Address	Description
[1:0]	0x0h ⁽³⁴⁾	This bit arbitrates the control of Avalon-MM interface. • Write 0x02h to control the Avalon-MM interface. • Write 0x03h to pass the Avalon-MM interface control to PreSICE.

Transceiver Channel Calibration Registers

Table 7-2: Transceiver Channel PMA Calibration Registers

Bit	PMA Calibration Enable Register Offset Address 0x100h	PMA Calibration Status Register Offset Address 0x101h
0	Reserved	Reserved

⁽³⁴⁾ The transceiver channel, ATX PLL, and fPLL use the same offset address.

Bit	PMA Calibration Enable Register Offset Address 0x100h	PMA Calibration Status Register Offset Address 0x101h
1	CMU or CDR PLL calibration enable	CMU or CDR PLL calibration status
2	Receiver DFE calibration enable	Receiver DFE calibration status
3	Reserved	Reserved
4	Reserved	Reserved
5	Transmitter Vod calibration enable	Transmitter Vod calibration status
6	Reserved	Reserved
7	Reserved	Reserved

Fractional Calibration Registers

Table 7-3: Fractional PLL Calibration Registers

Bit	fPLL Calibration Enable Register Offset Address 0x100h	fPLL Calibration Status Register Offset Address 0x101h
0	Reserved	Reserved
1	fPLL calibration enable	fPLL calibration status

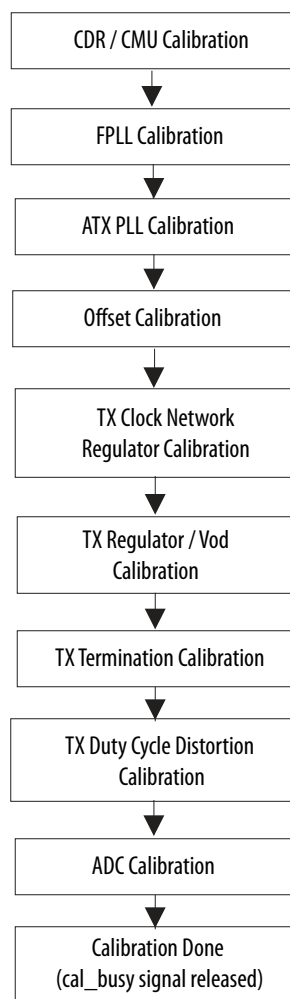
ATX PLL Calibration Registers

Table 7-4: ATX PLL Calibration Registers

Bit	ATX PLL Calibration Enable Register Offset Address 0x100h	ATX PLL Calibration Status Register Offset Address 0x101h
0	ATX PLL calibration enable	ATX PLL calibration status
1	Reserved	Reserved

Power-up Calibration

After device power-up, PreSICE automatically initiates the calibration process. The calibration process can continue during device programming. The time required after device power-up to complete the calibration process can vary by device. The total time taken can extend into the user-mode. The `cal_busy` signals deassert to indicate the completion of the calibration process. You must ensure that the transceiver reset sequence in your design waits for the calibration to complete before resetting the PLL and the transceiver channel.

Figure 7-1: Power-up Calibration Sequence

Initially, the `cal_busy` signal deasserts to indicate that power-up calibration is complete. The `reconfig_waitrequest` signal is still asserted, indicating that PreSICE controls the Avalon-MM interface even after power-up calibration. You can request access to the Avalon-MM interface whenever required. Altera recommends that you return the Avalon-MM interface back to PreSICE after you are done using it.

User Recalibration

You need to recalibrate the transceivers after reconfiguring the transceiver channel or the PLLs.

You can initiate the recalibration process by writing to the specific recalibration registers. Also, you need to reset the transceivers after performing user recalibration. For example, if you perform data rate auto-negotiation that involves PLL reconfiguration, and PLL and channel interface switching, then you need to reset the transceivers.

Follow these steps to perform user recalibration:

1. Request Avalon-MM interface access to calibration registers by writing 0x2h to offset address 0x0h.
2. Wait for `reconfig_waitrequest` signal to be deasserted (logic low)
3. Set the required calibration enable bits by writing proper value to offset address 0x100
4. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. The `reconfig_waitrequest` signal is active high after PreSICE regains access to Avalon-MM interface. Recalibration is in progress until the `cal_busy` signals are deasserted (logic low).
5. Request access to calibration registers by writing 0x2h to offset address 0x0h
6. Wait for `reconfig_waitrequest` signal to be deasserted (logic low)
7. Check calibration status (pass or fail) by reading offset address 0x101h. You can also check if calibration enable bits are cleared by PreSICE by reading offset address 0x100h.
8. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. After this step, the recalibration process is said to be complete.

Note: If you do not intend to check calibration status (pass or fail), you can skip steps 5 through 8.

Calibration Example

ATX PLL Recalibration

When you use ATX PLL in your application, and it requires line rate or clock frequency change, you need to recalibrate the ATX PLL after you have made the changes.

Follow the steps below to recalibrate the ATX PLL:

1. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h
2. Wait for `reconfig_waitrequest` signal to be deasserted (logic low)
3. To calibrate the ATX PLL, write 0x1h to bit[0] of address 0x100h of the ATX PLL.
4. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. Calibration is completed when `cal_busy` signal is deasserted (logic low).
5. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h
6. Wait for `reconfig_waitrequest` signal to be deasserted (logic low)
7. Read address 0x101h to check the calibration status (pass or fail)
8. Release the Avalon-MM interface to PreSICE by writing 0x3h to offset address 0x0h. The ATX PLL calibration is said to be complete at this stage.

Note: If you do not intend to check calibration status (pass or fail), you can skip steps 5 through 8.

Fractional PLL Recalibration

Follow the steps below to recalibrate the Fraction PLL (fPLL):

1. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h
2. Wait for reconfig_waitrequest signal to be deasserted (logic low)
3. To calibrate the fPLL, write 0x1h to bit[0] of address 0x100h of the fPLL.
4. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. Calibration is completed when cal_busy signal is deasserted (logic low).
5. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h.
6. Wait for reconfig_waitrequest signal to be deasserted (logic low).
7. Read address 0x101h to check the calibration status (pass or fail).
8. Release the Avalon-MM interface to PreSICE by writing 0x3h to offset address 0x0h. The fPLL calibration is said to be complete at this stage.

Note: If you do not intend to check calibration status (pass or fail), you can skip steps 5 through 8.

CMU or CDR PLL Recalibration

Follow the steps below to recalibrate the CMU or CDR PLL:

1. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h.
2. Wait for reconfig_waitrequest signal to be deasserted (logic low).
3. To recalibrate the CMU PLL, write 0x1h to bit[1] of address 0x100h of the CMU PLL.
4. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. Calibration is completed when cal_busy signal is deasserted (logic low).
5. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h.
6. Wait for reconfig_waitrequest signal to be deasserted (logic low).
7. Read address 0x101h to check the calibration status (pass or fail).
8. Release the Avalon-MM interface to PreSICE by writing 0x3h to offset address 0x0h. The CMU PLL calibration is said to be complete at this stage.

Note: If you do not intend to check calibration status (pass or fail), you can skip steps 5 through 8.

PMA Recalibration

Follow the steps below to recalibrate the PMA:

1. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h.
2. Wait for reconfig_waitrequest signal to be deasserted (logic low)
3. To recalibrate the PMA, write 0x1h to bit[1] of address 0x100h of the PMA.
4. Release the Avalon-MM interface to PreSICE to perform recalibration by writing 0x3h to offset address 0x0h. Calibration is completed when cal_busy signal is deasserted (logic low).
5. Request access to Avalon-MM interface by writing 0x2h to offset address 0x0h.
6. Wait for reconfig_waitrequest signal to be deasserted (logic low)
7. Read address 0x101h to check the calibration status (pass or fail).
8. Release the Avalon-MM interface to PreSICE by writing 0x3h to offset address 0x0h. The PMA calibration is said to be complete at this stage.

Note: If you do not intend to check calibration status (pass or fail), you can skip steps 5 through 8.

Related Information

[Transceiver Channel Calibration Registers](#) on page 7-2
For more details about PMA recalibration



2014.12.15

UG-01143



Subscribe



Send Feedback

Transceiver analog parameter settings are used to tune the analog functions in the physical medium attachment (PMA) and the PLL blocks while designing high-speed serial protocol solutions. You can use this feature to compensate for signal losses for high data rate communication.

Most transceiver parameters can be set using the **Parameter Editor** before generating the transceiver PHY IP. The parameters that depend on place and route decision, device constraints, and tunable analog settings that cannot be set before IP generation are controlled in the following ways:

- Making analog parameter settings to I/O pins using the Assignment Editor.
- Updating the Quartus II Settings File (.qsf) with the known assignment.

Making Analog Parameter Settings using the Assignment Editor

To make assignments using the **Assignment Editor**, complete the following steps:

1. On the **Assignments** menu, select **Assignment Editor**. The **Assignment Editor** appears.
2. Click inside the **Assignment Name** column and select the appropriate assignment. Refer to the *PMA Analog Settings* section for the list of available assignments for PMA analog settings.
3. Click inside the **Value** column and select the appropriate value for your assignment.
The Quartus II software adds these instance assignments to the .qsf file for your project.

Related Information

[Analog Parameter Settings List](#) on page 8-2

Updating Quartus Settings File with the Known Assignment

The Quartus II Settings File (.qsf) contains all the entity-level assignments and settings for the current revision of the project. The Quartus Settings File is based on Tcl script syntax.

When you create assignments and settings using the **Parameter Editor** wizards and dialog boxes or Tcl commands, the Quartus II software automatically places the assignments at the end of the Quartus II Settings File. To control the analog parameters, you can directly add or modify the appropriate assignment in the Quartus II Settings File. The assignments you create are recognized, regardless of where you place them in the file.

Related Information**Quartus II Settings File (.qsf)**

Describes the commands and options available to modify the assignments in the qsf file.

Analog Parameter Settings List

Table 8-1: Receiver Analog Parameter Settings

Analog Parameter Setting	Pin Planner or Assignment Editor Name	Assignment Destination	Usage Guideline
XCVR_A10_RX_LINK	Receiver Link Type	RX serial data pin	Chip-to-chip or backplane
XCVR_A10_RX_TERM_SEL	Receiver On-Chip-Termination	RX serial data pin	On chip termination
XCVR_A10_RX_ONE_STAGE_ENABLE	Receiver High Data Rate Mode Equalizer	RX serial data pin	Continuous time-linear equalization (CTLE)
XCVR_A10_RX_EQ_DC_GAIN_TRIM	Receiver High Gain Mode Equalizer DC Gain Control	RX serial data pin	CTLE
XCVR_A10_RX_ADP_CTLE_ACGAIN_4S	Receiver High Gain Mode Equalizer AC Gain Control	RX serial data pin	CTLE
XCVR_A10_RX_ADP_CTLE_EQZ_1S_SEL	Receiver High Data Rate Mode Equalizer AC and DC Gain Control	RX serial data pin	CTLE
XCVR_A10_RX_ADP_VGA_SEL	Receiver Variable Gain Amplifier Voltage Swing Select	RX serial data pin	VGA
XCVR_A10_RX_ADP_DFE_FXTAP1	Receiver Decision Feedback Equalizer Fixed Tap One Coefficient	RX serial data pin	Decision feedback equalization (DFE)
XCVR_A10_RX_ADP_DFE_FXTAP2	Receiver Decision Feedback Equalizer Fixed Tap Two Coefficient	RX serial data pin	DFE

Analog Parameter Setting	Pin Planner or Assignment Editor Name	Assignment Destination	Usage Guideline
XCVR_A10_RX_ADP_DFE_FXTAP3	Receiver Decision Feedback Equalizer Fixed Tap Three Coefficient	RX serial data pin	DFE
XCVR_A10_RX_ADP_DFE_FXTAP4	Receiver Decision Feedback Equalizer Fixed Tap Four Coefficient	RX serial data pin	DFE
XCVR_A10_RX_ADP_DFE_FXTAP5	Receiver Decision Feedback Equalizer Fixed Tap Five Coefficient	RX serial data pin	DFE
XCVR_A10_RX_ADP_DFE_FXTAP6	Receiver Decision Feedback Equalizer Fixed Tap Six Coefficient	RX serial data pin	DFE
XCVR_A10_RX_ADP_DFE_FXTAP7	Receiver Decision Feedback Equalizer Fixed Tap Seven Coefficient	RX serial data pin	DFE

Table 8-2: Transmitter Analog Parameter Settings

Analog Parameter Setting	Pin Planner or Assignment Editor Name	Assignment Destination	Usage Guideline
XCVR_A10_TX_LINK	Transmitter Link Type	TX serial data pin	Chip-to-chip or backplane
XCVR_A10_TX_COMPENSATION_EN	Transmitter High-Speed Compensation	TX serial data pin	PDN ISI compensation
XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_1T	Transmitter Pre-Emphasis First Pre-Tap Polarity	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_2T	Transmitter Pre-Emphasis Second Pre-Tap Polarity	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SIGN_1ST_POST_TAP	Transmitter Pre-Emphasis First Post-Tap Polarity	TX serial data pin	Pre-emphasis

Analog Parameter Setting	Pin Planner or Assignment Editor Name	Assignment Destination	Usage Guideline
XCVR_A10_TX_PRE_EMP_SIGN_2ND_POST_TAP	Transmitter Pre-Emphasis Second Post-Tap Polarity	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_1T	Transmitter Pre-Emphasis First Pre-Tap Magnitude	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_2T	Transmitter Pre-Emphasis Second Pre-Tap Magnitude	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_1ST_POST_TAP	Transmitter Pre-Emphasis First Post-Tap Magnitude	TX serial data pin	Pre-emphasis
XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_2ND_POST_TAP	Transmitter Pre-Emphasis Second Post-Tap Magnitude	TX serial data pin	Pre-emphasis
XCVR_A10_TX_VOD_OUTPUT_SWING_CTRL	Transmitter Output Swing Level	TX serial data pin	Differential output voltage

Table 8-3: Reference Clock Analog Parameter Settings

Analog Parameter Setting	Pin Planner or Assignment Editor Name	Assignment Destination	Usage Guideline
XCVR_A10_REFCLK_TERM_TRISTATE	Dedicated Reference Clock Pin Termination	Reference clock pin	On-chip termination

Note: You must set all the required analog settings according to your protocol configuration. If you do not set the appropriate settings, then the Quartus II software selects the default values which may not be appropriate for your protocol implementation.

Receiver General Analog Settings

XCVR_A10_RX_LINK

Pin planner or Assignment Editor Name

Receiver Link Type

Description

Specifies the type of receiver link.

Table 8-4: Available Options

Value	Description
SR	Chip-to-chip communication
LR	Backplane communication

Note: The maximum data rate supported by transceiver channels depends on the device speed grade, power mode, and the type of channel used. Refer to *Arria 10 Device Datasheet* for more details.

Assign To

RX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_LINK_<value> -to <rx_serial_data pin name>
```

Related Information

[Arria 10 Device Datasheet](#)

XCVR_A10_RX_TERM_SEL**Pin planner or Assignment Editor Name**

Receiver On-Chip Termination

Description

Controls the on-chip RX differential termination. For data rate higher than 25 Gbps, set the termination resistance to 85 Ohm.

Table 8-5: Available Options

Value	Description
R_EXT0	Tristate
R_R1	100 Ohm
R_R2	85 Ohm

Assign To

RX serial data pins.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_TERM_SEL_<value> -to <rx_serial_data pin name>
```

XCVR_VCCR_VCCT_VOLTAGE - RX**Pin planner or Assignment Editor Name**

VCCR_GXB and VCCT_GXB voltages

Description

Configures the VCCR_GXB and VCCT_GXB voltage for a GXB I/O pin by specifying the intended supply Voltages for a GXB I/O pin.

Value	Description
1.1V	VCCR_GXB or VCCT_GXB voltage
1.0V	VCCR_GXB or VCCT_GXB voltage
0.9V	VCCR_GXB or VCCT_GXB voltage

Assign To

RX serial data pins.

Receiver Equalization Settings**XCVR_A10_RX_EQ_DC_GAIN_TRIM****Pin planner or Assignment Editor Name**

Receiver High Gain Mode Equalizer DC Gain Control

Description

Controls the DC gain of the continuous time linear equalizer (CTLE) in high gain mode. Higher gain setting results in larger DC gain.

Arria 10 transceivers support the following two CTLE modes:

- High gain mode
- High data rate mode.

High gain mode is enabled by default for data rates up to 17.4 Gbps. High data rate mode is enabled for data rates higher than 17.4 Gbps.

Table 8-6: Available Options

Value	Description
NO_DC_GAIN	No DC gain

Value	Description
STG1_GAIN<1 to 7>	Equalizer DC gain setting <0 to 6>
STG2_GAIN<1 to 7>	Equalizer DC gain setting <7 to 13>
STG3_GAIN<1 to 7>	Equalizer DC gain setting <14 to 20>
STG4_GAIN<1 to 7>	Equalizer DC gain setting <21 to 27>

Assign To

RX Serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_EQ_DC_GAIN_TRIM_<value> -to <rx_serial_data  
pin name>
```

XCVR_A10_RX_ADP_CTLE_ACGAIN_4S

Pin planner or Assignment Editor Name**Receiver High Gain Mode Equalizer AC Gain Control****Description**

Controls the AC gain of the continuous time linear equalizer (CTLE) in high gain mode.

Arria 10 transceivers support two CTLE modes, high gain mode and high data rate mode. High gain mode is enabled by default for data rates up to 17.4 Gbps. High data rate mode is enabled for data rates higher than 17.4 Gbps.

This assignment is available only when CTLE is in manual mode (adaptation is disabled). Higher gain setting results in larger AC gain. The default value is set to **RADP_CTLE_ACGAIN_4S_0** for CTLE AC gain setting 0.

Table 8-7: Available Options

Value	Description
RADP_CTLE_ACGAIN_4S_<0 to 28>	CTLE AC gain setting <0 to 28>

Assign To

RX serial data pins.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_ADP_CTLE_ACGAIN_4S_<value> -to  
<rx_serial_data pin name>
```

XCVR_A10_RX_ADP_CTLE_EQZ_1S_SEL

Pin planner or Assignment Editor Name

Receiver High Data Rate Mode Equalizer AC Gain Control

Description

Controls the AC gain of the continuous time linear equalizer (CTLE) in high data rate mode and when adaptation is disabled (manual mode).

High data rate mode is enabled for data rates above 17.4 Gbps. In high data rate mode, there is one CTLE stage, and there are 16 AC gain settings. Higher gain setting results in larger AC gain. The default value is set to **RADP_CTLE_EQZ_1S_SEL_3** for CTLE AC Gain Setting 4.

Table 8-8: Available Options

Value	Description
RADP_CTLE_EQZ_1S_SEL_<0 to 15>	CTLE AC Gain Setting < 0 to 15>

Assign To

RX serial data.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_ADP_CTLE_EQZ_1S_SEL_<value> -to
<rx_serial_data pin name>
```

XCVR_A10_RX_ADP_VGA_SEL

Pin planner or Assignment Editor Name

Receiver Variable Gain Amplifier Voltage Swing Select

Description

The variable gain amplifier (VGA) amplifies the signal amplitude and ensures a constant voltage swing before the data is fed to the CDR for sampling. This assignment controls the VGA output voltage swing when adaptation is disabled for both continuous time linear equalizer (CTLE) and decision feedback equalizer (DFE) blocks (in manual mode). There are eight DC gain settings and higher gain settings result in lower DC gain. DC gain is subject to peaking frequencies. The default value is set to **RADP_VGA_SEL_0** for VGA Output Voltage Swing Setting 0.

Table 8-9: Available Options

Value	Description
RADP_VGA_SEL_<0 to 7>	VGA Output Voltage Swing Setting <0 to 7>



Assign To

RX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_ADP_VGA_SEL_<value> -to <rx_serial_data pin name>
```

XCVR_A10_RX_ONE_STAGE_ENABLE**Pin planner or Assignment Editor Name**

Receiver High Data Rate Mode Equalizer

Description

Selects between the RX high gain mode or RX high data rate mode for the equalizer

Table 8-10: Available Options

Value	Description
NON_S1_MODE	Selects high gain mode. Selects high gain mode for data rates up to 17.4 Gbps.
S1_MODE	Selects all data rate modes. For data rates up to 28 Gbps, you can either select high gain mode or high data rate mode. Power consumption is reduced in high data rate mode.

Assign To

RX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_ONE_STAGE_ENABLE_<value> -to <rx_serial_data pin name>
```

Decision Feedback Equalizer (DFE) Settings

The decision feedback equalizer (DFE) amplifies the high frequency component of a signal without amplifying the noise content. The DFE removes the post-cursor Inter Symbol Interference (ISI) of the bits received previously from the current bit and improves the Bit Error Rate (BER). The DFE architecture supports seven fixed taps and four floating taps. The fixed taps in DFE remove the ISI of the previous 7 bits from the current bit.

The DFE circuit stores delayed versions of the data. The stored bit is multiplied by a coefficient and then summed with the incoming signal. The polarity of each coefficient is programmable.

Note: The DFE fixed tap assignments are described in the following section. The DFE floating tap assignments are not available for 14.1 Arria 10 release of the Quartus II software.

XCVR_A10_RX_ADP_DFE_FXTAP

Description

The following assignments specify the coefficient of DFE fixed taps 1 through 7. Use these assignments only when the DFE is enabled and adaptation is disabled for the DFE (DFE operates in manual mode). The default value for all assignments is set to **RADP_DFE_FXTAP<1 to 7>_0** for DFE fixed tap<1 to 7> coefficient setting 0.

Table 8-11: DFE Fixed Tap Assignments

Assignment	Pin Planner or Assignment Editor Name	Value	Description
XCVR_A10_RX_ADP_DFE_FXTAP1	Receiver Decision Feedback Equalizer Fixed Tap One Coefficient.	RADP_DFE_FXTAP1_<0 to 127>	DFE fixed tap 1 Coefficient Setting <0 to 127>
XCVR_A10_RX_ADP_DFE_FXTAP2	Receiver Decision Feedback Equalizer Fixed Tap Two Coefficient.	RADP_DFE_FXTAP2_<0 to 127>	DFE fixed tap 2 Coefficient Setting <0 to 127>
XCVR_A10_RX_ADP_DFE_FXTAP3	Receiver Decision Feedback Equalizer Fixed Tap Three Coefficient.	RADP_DFE_FXTAP3_<0 to 127>	DFE fixed tap 3 Coefficient Setting <0 to 127>
XCVR_A10_RX_ADP_DFE_FXTAP4	Receiver Decision Feedback Equalizer Fixed Tap Four Coefficient.	RADP_DFE_FXTAP4_<0 to 63>	DFE fixed tap 4 Coefficient Setting <0 to 63>
XCVR_A10_RX_ADP_DFE_FXTAP5	Receiver Decision Feedback Equalizer Fixed Tap Five Coefficient.	RADP_DFE_FXTAP5_<0 to 63>	DFE fixed tap 5 Coefficient Setting <0 to 63>
XCVR_A10_RX_ADP_DFE_FXTAP6	Receiver Decision Feedback Equalizer Fixed Tap Six Coefficient.	RADP_DFE_FXTAP6_<0 to 31>	DFE fixed tap 6 Coefficient Setting <0 to 31>

Assignment	Pin Planner or Assignment Editor Name	Value	Description
XCVR_A10_RX_ADP_DFE_FXTAP7	Receiver Decision Feedback Equalizer Fixed Tap Seven Coefficient.	RADP_DFE_FXTAP7_<0 to 31>	DFE fixed tap 7 Coefficient Setting <0 to 31>

Example DFE Fixed Tap Assignment

Assignment: XCVR_A10_RX_ADP_DFE_FXTAP1

Value: RADP_DFE_FXTAP1_2

Description: DFE fixed tap 1 Coefficient Setting 2

Assign To

RX serial data pins.

Syntax

```
set_instance_assignment-name XCVR_A10_RX_ADP_DFE_FXTAP1_<value> -to <rx_serial_data  
pin name>
```

Transmitter General Analog Settings

XCVR_A10_TX_LINK

Pin planner or Assignment Editor Name

Transmitter Link Type

Description

Specifies the type of transmitter link.

Table 8-12: Available Options

Value	Description
SR	Chip-to-chip communication
LR	Backplane communication

Note: The maximum data rate supported by transceiver channels depends on the device speed grade, power mode, and the type of transceiver channel. Refer to *Arria 10 Device Datasheet* for more details.

Assign To

TX serial data pins.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_LINK_<value> -to <tx_serial_data pin name>
```

Related Information

[Arria 10 Device Datasheet](#)

XCVR_A10_TX_COMPENSATION_EN**Pin planner or Assignment Editor Name**

Transmitter High-Speed Compensation

Description

Specifies if the power distribution network (PDN) induced inter-symbol interference (ISI) compensation is enabled or disabled in the TX driver. When enabled, it reduces the PDN induced ISI jitter, but increases the power consumption. Use this feature for high speed applications.

Table 8-13: Available Options

Value	Description
ENABLE	Compensation ON
DISABLE	Compensation OFF

Table 8-14: Rules

Data Rate	Value
PCIe Gen1, Gen2	Disable
PCIe Gen3	Enable
Others	Enable/Disable

Syntax

```
set_instance_assignment-name XCVR_A10_TX_COMPENSATION_EN_<value> -to <tx_serial_data pin name>
```

XCVR_VCCR_VCCT_VOLTAGE - TX**Pin planner or Assignment Editor Name**

VCCR_GXB and VCCT_GXB voltages

Description

Configures the VCCR_GXB and VCCT_GXB voltage for a GXB I/O pin by specifying the intended supply Voltages for a GXB I/O pin.

Value	Description
1.1V	VCCR_GXB or VCCT_GXB voltage
1.0V	VCCR_GXB or VCCT_GXB voltage
0.9V	VCCR_GXB or VCCT_GXB voltage

Assign To

TX serial data pins.

Transmitter Pre-Emphasis Settings

The programable pre-emphasis block in the transmit buffer amplifies the high frequencies in the transmit data to compensate for attenuation in the transmission media.

XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_1T

Pin planner or Assignment Editor Name

Transmitter Pre-Emphasis First Pre-Tap Polarity

Description

Controls the polarity of the first pre-tap for pre-emphasis.

Table 8-15: Available Options

Value	Description
FIR_PRE_1T_POS	Positive pre-tap 1
FIR_PRE_1T_NEG	Negative pre-tap 1

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_1T<value> -to  
<tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_2T

Pin Planner or Assignment Editor Name

Transmitter Pre-Emphasis Second Pre-Tap Polarity

Description

Controls the polarity of the second pre-tap for pre-emphasis.

Table 8-16: Available Options

Value	Description
FIR_PRE_2T_POS	Positive pre-tap 2
FIR_PRE_2T_NEG	Negative pre-tap 2

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SIGN_PRE_TAP_2T_<value> -to  
<tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SIGN_1ST_POST_TAP

Pin planner or Assignment Editor Name

Transmitter Pre-Emphasis First Post-Tap Polarity

Description

Controls the polarity of the first post-tap for pre-emphasis.

Table 8-17: Available Options

Value	Description
FIR_POST_1T_POS	Positive post-tap 1
FIR_POST_1T_NEG	Negative post-tap1

Assign To

TX serial data pin.



Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SIGN_1ST_POST_TAP_<value> -to  
<tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SIGN_2ND_POST_TAP**Pin planner or Assignment Editor Name****Transmitter Pre-Emphasis Second Post-Tap Polarity****Description**

Controls the polarity of the second post-tap for pre-emphasis.

Table 8-18: Available Options

Value	Description
FIR_POST_2T_POS	Positive post-tap 2
FIR_POST_2T_NEG	Negative post-tap 2

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SIGN_2ND_POST_TAP_<value> -to  
<tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_1T**Pin planner or Assignment Editor Name****Transmitter Pre-Emphasis First Pre-Tap Magnitude****Description**

Controls the magnitude of the first pre-tap for pre-emphasis.

Table 8-19: Available Options

Value	Description
0 – 31	Magnitude 0 - 31

Note: Refer to *Arria 10 Pre-Emphasis and Output Swing Settings* spreadsheet for selecting legal pre-emphasis and differential output voltage settings.

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_1T_<value> -to  
<tx_serial_data pin name>
```

Related Information

[Arria 10 Pre-Emphasis and Output Swing Settings](#)

XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_2T

Pin planner or Assignment Editor Name

Transmitter Pre-Emphasis Second Pre-Tap Magnitude

Description

Controls the magnitude of the second pre-tap for pre-emphasis.

Table 8-20: Available Options

Value	Description
0 – 7	Magnitude 0 - 7

Note: Refer to *Arria 10 Pre-Emphasis and Output Swing Settings* spreadsheet for selecting legal pre-emphasis and differential output voltage settings.

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_PRE_TAP_2T_<value> -to  
<tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_1ST_POST_TAP

Pin planner or Assignment Editor Name

Transmitter Pre-Emphasis First Post-Tap Magnitude

Description

Controls the magnitude of the first post-tap for pre-emphasis.

Table 8-21: Available Options

Value	Description
0 – 63	Magnitude 0 - 63

Note: Refer to *Arria 10 Pre-Emphasis and Output Swing Settings* spreadsheet for selecting legal pre-emphasis and differential output voltage settings.

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_1ST_POST_TAP_<value> -  
to <tx_serial_data pin name>
```

XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_2ND_POST_TAP**Pin planner or Assignment Editor Name**

Transmitter Pre-Emphasis Second Post-Tap Magnitude

Description

Controls the magnitude of the second post-tap for pre-emphasis.

Table 8-22: Available Options

Value	Description
0 – 15	Magnitude 0 – 15

Note: Refer to *Arria 10 Pre-Emphasis and Output Swing Settings* spreadsheet for selecting legal pre-emphasis and differential output voltage settings.

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment-name XCVR_A10_TX_PRE_EMP_SWITCHING_CTRL_2ND_POST_TAP_<value> -  
to <tx_serial_data pin name>
```

XCVR_A10_TX_VOD_OUTPUT_SWING_CTRL**Pin planner or Assignment Editor Name**

Transmitter Output Swing Level

Description

Controls the transmitter programmable output differential voltage swing.

Table 8-23: Available Options

Value	Description
0 – 31	Magnitude 0 – 31

Note: Refer to *Arria 10 Pre-Emphasis and Output Swing Settings* spreadsheet for selecting legal pre-emphasis and differential output voltage settings.

Assign To

TX serial data pin.

Syntax

```
set_instance_assignment -name XCVR_A10_TX_VOD_OUTPUT_SWING_CTRL_<value> -to
<tx_serial_data pin name>
```

Related Information

[Arria 10 PRe-Emphasis and Output Swing Settings spreadsheet.](#)

Dedicated Reference Clock Settings

XCVR_A10_REFCLK_TERM_TRISTATE

Pin planner or Assignment Editor Name

Dedicated Reference Clock Pin Termination

Description

Specifies if the termination for dedicated reference clock pin is tri-stated.

Table 8-24: Available Options

Value	Description
TRISTATE_OFF	Internal termination enabled
TRISTATE_ON	Internal termination tri-stated

Table 8-25: Rules

I/O Standard	Value
HCSL	TRISTATE_ON
CML	TRISTATE_ON/TRISTATE_OFF
LVPECL	TRISTATE_ON/TRISTATE_OFF
LVDS	TRISTATE_ON/TRISTATE_OFF

Assign To

Reference clock pin.

Syntax

```
set_instance_assignment-name XCVR_A10_REFCLK_TERM_TRISTATE_<value> -to <dedicated  
refclk pin name>
```

Document Revision History for Current Release

9

2014.12.15

UG-01143



Subscribe



Send Feedback

This section provides the revision history for the chapters in this user guide.

Chapter	Document Version	Changes Made
Arria 10 Transceiver PHY Overview	2014.12.15	Made the following changes: • Added statement that a 125-Mbps data rate is possible with oversampling in the "Arria 10 Transceiver PHY Overview" section. • Changed the data rate ranges for Standard PCS and Enhanced PCS in the "PCS Types Supported by GX Transceiver Channels" table. • Changed the note in "The GX Transceiver Channel" section. • Changed the data rate ranges for Standard PCS and Enhanced PCS in the "PCS Types and Data Rates Supported by GT Channel Configurations" table. • Added a legend entry to the "Arria 10 GT Devices with 96 Transceiver Channels and Four PCIe Hard IP Blocks" figure. • Added a legend entry to the "Arria 10 GT Devices with 72 Transceiver Channels and Four PCIe Hard IP Blocks" figure. • Added a legend entry to the "Arria 10 GT Devices with 48 Transceiver Channels and Two PCIe Hard IP Blocks" figure. • Changed the note to the "PCS Types and Data Rates Supported by GT Channel Configurations" table. • Changed the Data Rates Supported for GT channel Standard PCS and PCIe Gen3 PCS types in the "PCS Types and Data Rates Supported by GT Channel Configurations" table. • Added a related link to the <i>Arria 10 GX, GT, and SX Device Family Pin Connection Guidelines</i> in the "Calibration" section.

© 2014 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Chapter	Document Version	Changes Made
Using the Arria 10 Transceiver Native PHY IP Core	2014.12.15	Made the following changes: - Updated the description of tx_cal_busy and rx_cal_busy signals in the <i>PMA Ports</i> section. - Added a new section <i>Enhanced PCS TX and RX Control Ports</i> to better describe the tx_control and rx_control bit encodings used for different protocols. Removed the bit encodings for tx_control and rx_control signals from <i>Enhanced PCS Ports</i> section. - Updated the clock domain information about signals mentioned in <i>Enhanced PCS Ports</i> section. - Updated the description of rx_std_wa_patternalign signal in <i>Standard PCS Ports</i> section. - Updated the parameter descriptions in <i>General Datapath Parameters</i> and <i>PMA Parameters</i> sections. - Updated the port descriptions in <i>PMA Ports</i> section.
Interlaken	2014.12.15	Made the following changes to the parameter tables: - Added another value to the "TX channel bonding mode" parameter in the "TX PMA Parameters" table. - Added values to the "PCS TX channel bonding master" and "Actual PCS TX channel bonding master" parameters in the "TX PMA Parameters" table. - Corrected the values to the "CTLE adaptation mode" parameter in the "RX PMA Parameters" table. - Added the "Enable Interlaken TX random disparity bit" parameter to the "Interlaken Disparity Generator and Checker Parameters" table. - Changed the values to four parameters to "Off" in the "Gearbox Parameters" table. - Removed the "Enable embedded debug" parameter from the "Dynamic Reconfiguration Parameters" table.
Gigabit Ethernet (GbE) and GvE with IEEE 1588v2	2014.12.15	Made the following changes: Added a figure description to the "Signals and Ports for Native PHY IP Configured for GbE or GbE with IEEE 1588v2" figure.
10GBASE-R	2014.12.15	Made the following changes: Added a figure description to the "Signals and Ports of Native PHY IP Core for the 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC" figure.

Chapter	Document Version	Changes Made
1G/10 Gbps Ethernet PHY IP Core	2014.12.15	Made the following changes: Changed the descriptions for 0x494 and 0x495, and added 0x4a4 bit 4 to the "GMII PCS Registers" section.
10GBASE-KR PHY IP with FEC Option	2014.12.15	Made the following changes: - Changed the "10GBASE-KR PHY IP Core Block Diagram" figure to activate the Standard TX PCS, Standard RX PCS, and GbE PCS blocks. - Added a note to the "10GBASE-KR Functional Description" section. - Added new parameters to the "General Options" table. - Changed the default values for VPOSTRULE, VPRERULE, INITPOSTVAL, and INITPREVAL in the "Optional Parameters" table. "10GBASE-KR PHY Register Definitions" table: - Changed the default value for register address 0x4D0[7:4] - Changed the default value for register address 0x4D0[17]. - Changed the descriptions for register address 0x4B2. - Changed the descriptions for register addresses 0x4D5 and 0x4D6. - Changed the descriptions for the following signals in the in the "Clock and Reset Signals" table. - tx_pma_clkout - rx_pma_clkout - tx_pma_div_clkout - rx_pma_div_clkout - Changed the descriptions for the following signals in the in the "XGMII Signals" table. - xgmii_tx_clk - xgmii_rx_clk - Removed the 1588 Soft FIFOs block from the "PHY-Only Design Example with Two Backplane Ethernet and Two Line-Side (1G/10G) Ethernet Channels" figure

Chapter	Document Version	Changes Made
1G/10 Gbps Ethernet PHY IP Core	2014.12.15	Made the following changes: • Changed the descriptions for register address 0x4D5 in the "1G/10GbE Register Definitions" table. • Removed the Daisy Chain and uP I/F lines from the Link Training block in the "1G/10GbE PHY Block Diagram" figure.



Chapter	Document Version	Changes Made
XAUI PHY IP Core	2014.12.15	Made the following changes: - Added a PMA width requirement in the "Transceiver Clocking and Channel Placement Guidelines in XAUI Configuration" section. - Changed the figure description for the "Transceiver Clocking for XAUI Configuration" figure. - Changed the note in the "Transceiver Clocking and Channel Placement Guidelines in XAUI Configuration" section. - Added a note to the "Transceiver Clocking for XAUI Configuration With Phase Compensation FIFO Enabled" figure. - Added the "Transceiver Clocking for XAUI Configuration With Phase Compensation FIFO Enabled" figure. - Removed the Data rate parameter from the "General Options" table. - Removed the tx_digitalreset signal from the "Clock and Reset Signals" table. - Changed the available signals in the "PMA Channel Controller Signals" table. - Added the Enable phase compensation FIFO parameter to the "Advanced Options" table. - Added the pll_cal_busy_i signal to the "XAUI Top-Level Signals—Soft PCS and PMA" figure. - Added the xgmii_rx_inclk port to the "XAUI Top-Level Signals—Soft PCS and PMA" figure. - Changed the description in the "Clock and Reset Signals" table. - Removed the following signals from the "PMA Channel Controller Signals" table: - tx_bonding_clocks[5:0] - pll_cal_busy_i - pll_powerdown_o - pll_locked_i - Made the following changes to the "XAUI PHY IP Core Registers" table. - Removed cal_blk_powerdown - Removed pma_tx_pll_is_locked - Removed Word Addresses 0x082, 0x083, 0x086, 0x087, 0x088, 0x089 - Removed patterndetect[7:0] - Changed the description for syncstatus [7:0] - Added the xgmii_rx_inclk port to the "SDR RX XGMII Interface" table. - Added the pll_cal_busy_i port to the "PMA Channel Controller Signals" table.

Chapter	Document Version	Changes Made
PCI Express	2014.12.15	- Added PIPE Gen3 32 bit PCS Clock Rates table in the <i>Gen3 Rate Switch</i> section. - Updated the <i>Rate Switch Change</i> figure. - Updated the <i>Bit Mappings When the Simplified Interface Is Disabled</i> table. - Updated the figures in <i>How to Place Channels for PIPE Configurations</i>. - Updated the <i>Parameters for Arria 10 Native PHY IP in PIPE Gen1, Gen2, Gen3 Modes - TX PMA</i> table. - Updated the clock domains in <i>Signals and Ports of Native PHY IP for PIPE</i> figure. - Updated the <i>Ports for Arria 10 Transceiver Native PHY in PIPE Mode</i> table. - Updated <i>Logical PCS Master Channel for PIPE Configuration</i> table. - Updated the PCIe Reverse Parallel Loopback in Gen1/Gen2 features with input signal name. - Updated the <i>Rate Switch Change</i> figure. - Updated the Gearbox Gen3 Transmission signals in the <i>Gen3 Data Transmission</i> figure. - Updated the PIPE Design Example section. - Updated the <i>Gen3 Power State Management P1 to P0 Transition</i> signals. - Updated the <i>Supported Features for PIPE Configurations</i> table. - Updated the <i>Gen1/Gen2 Features</i> section.
CPRI	2014.12.15	- Updated the parameter values for “RX word aligner mode”. - Added a new option for Interlaken in the GUI “Enable Interlaken TX random disparity bit”. - For PMA configuration rules changed the option “SATA” to “SATA/SAS”. - Changed the GUI option “CTLE adaptation mode” to “DFE adaptation mode”.

Chapter	Document Version	Changes Made
Other Protocols	2014.12.15	Made the following changes: Using the "Basic (Enhanced PCS)" and "Basic with KR FEC" Configurations of Enhanced PCS - Added four new sections: "TX Bit Slip", "TX Polarity Inversion", "RX Bit Slip", and "RX Polarity Inversion". Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS - Changed the initial value of <code>tx_parallel_data</code> in the "Manual Mode when the PCS-PMA Interface Width is 10 Bits" and "Manual Mode when the PCS-PMA Interface Width is 16 Bits" figures. - Changed the minimum value for the "Data rate" parameter to 1 Gbps in the "General and Datapath Options Parameters" table.
Simulating the Transceiver Native PHY IP Core	2014.12.15	Made the following changes: - In the introductory section, removed the third bullet in the list of netlists you can simulate because gate-level timing simulation is no longer supported. - Removed mention of the ModelSim DE simulator in the "How to Use NativeLink to Specify a ModelSim-Altera Simulation" section.
PLLs and Clock Networks	2014.12.15	Made the following changes: - Added a note about PLL cascading support in ACDS 14.1 version of Quartus II software. - Corrected the minimum data rate supported by ATX PLL in Table: Transmit PLLs in Arria 10 Devices. - Corrected the error in PLL output frequency range for ATX PLL and CMU PLL IP cores. - Corrected the PLL reference clock frequency range for ATX PLL IP core. - Added a note about jitter performance in <i>Input Reference Clock Sources</i> section. - Updated the <i>Mix and Match Design Example</i> figure to indicate that MCGB is used in the example. - Changed the minimum data rate supported by the PLLs to 1 Gbps.

Chapter	Document Version	Changes Made
Resetting Transceiver Channels	2014.12.15	Made the following changes: - Updated the "Transmitter Reset Sequence After Power-Up" and "Transmitter Reset Sequence During Device Operation" figures. - Improved formatting in the "Transceiver PHY Reset Controller IP Core Top-Level Signals" figure. - Updated the description of the reset, tx_analogreset, and rx_analogreset parameters in the "Top-Level Signals" table.
Arria 10 Transceiver PHY Architecture	2014.12.15	Made the following changes: Arria 10 PMA Architecture - Added High Speed Differential I/O and Power Distribution Network to the <i>Transmitter Buffer</i> circuitry. - Added Power Distribution Network induced Inter-Symbol Interference compensation. - Replaced the figures related to Programmable Pre Emphasis with a link to Pre Emphasis and Output Swing Settings Estimator. Arria 10 Standard PCS Architecture - Changed the Standard PCS data rate from 12.5 Gbps to 12 Gbps. Arria 10 PCI Express Gen3 PCS Architecture - Updated TX FIFO in Transmitter Datapath. - Changed the Standard PCS data rate from 12.5 Gbps to 12 Gbps. Arria 10 Enhanced PCS Architecture - Added PRBS7 Generator to support 64-bit width only. - Updated the rule for <i>tx_enh_data_valid</i> control signal when TX FIFO is used in phase compensation mode.

Chapter	Document Version	Changes Made
Reconfiguration Interface and Dynamic Reconfiguration	2014.12.15	Made the following changes: • Re-organized the chapter outline to better match the reconfiguration flow. • Updated the introduction section of the chapter to better explain dynamic reconfiguration use cases. • Added figures <i>Reconfiguration Interface in Arria 10 Transceiver IP Cores</i> and <i>Top Level Signals of the Reconfiguration Interface</i>. • Added <i>Timing Closure Recommendations</i> section. • Changed Max Vod Value in Table: <i>PMA Analog Feature Offsets</i>. • Updated Table: Valid Maximum Pre-Emphasis Settings. • Updated the Ports and Parameters section: • Updated the description to better indicate the difference between "Shared" and "Not Shared" reconfiguration interface. • Updated Avalon clock frequency to 100 MHz. • Updated the signal names in Table: <i>Reconfiguration Interface Ports with Shared Reconfiguration Interface Enabled</i> and <i>Reconfiguration Interface Ports with Shared Reconfiguration Interface Disabled</i>. • Added a description in <i>Interfacing with Reconfiguration Interface</i> section to indicate the steps to request access of the Avalon-MM interface. • Updated steps in <i>Performing a Read to the Reconfiguration Interface</i> and <i>Performing a Write to the Reconfiguration Interface</i> sections. • Updated <i>Using Configuration Files</i> section to with a detailed description of when to use configuration files. • Updated the steps in <i>Switching Transmitter PLL</i>, <i>Switching Reference Clocks</i>, and <i>Changing PMA Analog Parameters</i> sections.
Calibration	2014.12.15	Initial release.
Analog Parameter Settings	2014.12.15	Made the following changes: • Modified the Rules section for XCVR_A10_TX_COMPENSATION_EN. • Changed Available Options for XCVR_A10_RX_ONE_STAGE_ENABLE parameter settings table. • Changed the "XCVR_A10_RX_ADP_CTLE_ACGAIN_4S" parameter setting. • Added "XCVR_VCCR_VCCT_VOLTAGE" parameter setting.

Document Revision History for Previous Releases

Table 9-1: Document Revision History

Chapter	Document Version	Changes Made
Ethernet	2014.10.08	Changed the frequency for <code>mgmt_clk</code> in the "Avalon-MM Interface Signals" table for <i>10GBASE-KR PHY IP Core with FEC Option</i> and for <i>1G/10 Gbps Ethernet PHY IP Core</i> .
Other Protocols	2014.10.08	Removed an erroneous note regarding Quartus II software legality check restrictions.
Reconfiguration Interface and Dynamic Reconfiguration	2014.10.08	Made the following changes: - Minor editorial changes. Corrected typographical errors in <i>Ports and Parameters</i> and <i>Native PHY IP Core Embedded Debug</i> sections. - Corrected an error in "Example 6-1: Steps to Merge Transceiver Channels" in <i>Channel Merging Requirements</i> section.
Arria 10 Transceiver PHY Overview	2014.08.15	Made the following changes: - Changed the maximum data rate for GT channels to 28.3 Gbps. - Changed minimum data rate supported by GT transceiver channels to 1 Gbps from 611 Mbps. - Changed the figure "Arria 10 GX Devices with Six Transceiver Channels and One PCIe Hard IP Block" to add a clarification about PCIe Hard IP block. - Updated the legend for all figures in "Arria 10 GT Device Transceiver Layout" section. - Changed the device package names in Table 1-3 and Table 1-4 in "Arria 10 GX and GT Device Package Details Section." - Updated figure "Arria 10 SX Device with 48,36, and 24 Transceiver Channels and Two PCIe Hard IP Blocks." - Updated figure "Arria 10 SX Devices with Six Transceiver Channels and One PCIe Hard IP Block" to add a clarification about PCIe Hard IP. - Updated the device package names in Table 1-5 in "Arria 10 SX Device Package Details" section. - Removed all references of the note about PCS-Direct support available in future release.
Transceiver Design IP Blocks	2014.08.15	No changes made.

Chapter	Document Version	Changes Made
Transceiver Design Flow	2014.08.15	Made the following changes: - Added "Make Pin Assignments Using Pin Planner and Assignment Editor" block to figure "Transceiver Design Flow" - Updated <i>Select and Instantiate PHY IP</i>, <i>Generate PHY IP</i>, <i>Select and Instantiate PLL IP</i>, and <i>Generate PLL IP</i> sections to indicate the new IP instantiation flow per ACDS 14.0A10 release. - Added a new section for <i>Make Pin Assignments Using Pin Planner and Assignment Editor</i>
Arria 10 Transceiver Protocols and PHY IP Support	2014.08.15	Made the following changes: - Updated table "Arria 10 Transceiver Protocols and PHY IP Support" - Removed SFIS and 10G SDI from the table. - Updated Protocol Preset, Transceiver Configuration Rule, and PCS Support for protocols in the table.

Chapter	Document Version	Changes Made
Using the Arria 10 Transceiver Native PHY IP	2014.08.15	Made the following changes: - Updated references of MegaWizard Plug-In Manager to IP Catalog and Parameter Editor. - Added PCS Direct block in figure "Transceiver Native PHY IP Top Level Interfaces and Functional Blocks". - Updated figure "Transceiver Native PHY IP GUI" for 14.0A10 release IP GUI. - Updated <i>General and Datapath Parameters</i> section - Updated parameter descriptions in table "General and Datapath Options". - Updated parameter descriptions in table "Transceiver Configuration Rule Parameters". - Updated PMA Parameters section - Updated parameter descriptions in tables "TX PMA Bonding options", "TX PLL Options", "RX PMA Parameters". - Added description for CTLE adaptation mode and updated description for DFE adaptation mode. - Enhanced PCS Parameters section - Added a new table "Enhanced PCS Parameters" - Updated the parameter descriptions in tables "Enhanced PCS TX FIFO Parameters", "Enhanced PCS RX FIFO Parameters", "Interlaken Frame Generator Parameters", "Interlaken Frame Synchronizer Parameters", "10GBASE-R BER Checker Parameters", "Scrambler-Descrambler Parameters", "Block Synchronizer Parameters", "Gearbox Parameters". - Added descriptions in "KR-FEC Parameters" table. - Standard PCS Parameters - Updated the descriptions in tables "TX and RX FIFO Parameters", "Rate Match FIFO Parameters", "Word Aligner and Bitflip Parameters", and "PCIe Ports". - Dynamic Reconfiguration Parameters - Removed Enable Embedded JTAG Avalon-MM Master parameter and added Altera Debug Master Endpoint parameter and updated its description. - Added a table for "Embedded Debug Parameters". - Updated the figure "Directory Structure for Generated Files" in <i>IP Core File Locations</i> section. - Changed "one-time" to "triggered" adaptation mode for DFE and CTLE.

Chapter	Document Version	Changes Made
Interlaken	2014.08.15	Made the following changes: • Changed parameter name in the "Signals and Ports of Native PHY IP for Interlaken" figure from tx_bonding_clock to tx_bonding_clock[5:0]. • Updated tables in the "Native PHY IP Parameter Settings for Interlaken" section: • Added new tables: "10GBASE-R BER Checker Parameters", "KR-FEC Parameters". • Deleted table: "Configuration Profiles Parameters". • Added new parameters and updated existing ones to tables: "General and Datapath Parameters", "TX PMA Parameters", "RX PMA Parameters", "Enhanced PCS Parameters", "Dynamic Reconfiguration Parameters". • Updated existing parameters to tables: "Interlaken Frame Generator Parameters", "Interlaken CRC-32 Generator and Checker Parameters".
Ethernet	2014.08.15	Made the following changes: • Initial release of the XAUI PHY IP Core section. • Changed the bus width between the FPGA fabric and PCS, and added notes 3 and 4 to the "Transceiver Channel Datapath and Clocking at 1250 Mbps for GbE, GbE with IEEE 1588v2" figure. • Provided the full hexadecimal values for rx_parallel_data, rx_patterndetect, and rx_runningdisp in the "Decoding for GbE" figure description. • Changed the note in the <i>Rate Match FIFO for GbE</i> section to clarify the case where 200 ppm total is valid. • Added the pll_cal_busy circuitry, updated signals, and added a note to the "Connection Guidelines for a GbE/ GbE with IEEE 1588v2 PHY Design" figure. • Removed the Device and speed grade parameter from the "General and Datapath Options" table. • Changed the values for the PPM detector threshold parameter and removed the Decision feedback equalization parameter in the "RX PMA Parameters" table. • Changed the 10GBASE-R PHY grouping in the "10GBASE-R PHY as Part of the IEEE802.3-2008 Open System Interconnection (OSI)" figure. • Added that 10GBASE-R is compatible with the Altera 10-Gbps Ethernet MAC Megacore Function in the <i>10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC Variants</i> section. • Added the "Transceiver Channel Datapath and Clocking for 10GBASE-R with IEEE 1588v2" figure.

Chapter	Document Version	Changes Made
		- Changed steps 1 and 4 in the <i>How to Implement 10GBASE-R, 10GBASE-R with IEEE 1588v2, and 10GBASE-R with FEC in Arria 10 Transceivers</i> section to match the GUI. - Specified the target BER of 10^{-12} in the <i>10GBASE-KR PHY IP Core</i> section. - Removed the "Top Level Modules of the 1G/10GbE PHY MegaCore Function" figure. - Removed the 10GBASE-KR PHY with 1588 variant from the "10GBASE-KR PHY Performance and Resource Utilization" table. This is not supported. - Replaced the "10GBASE-KR PHY IP Block Diagram" figure. - Added the <i>Auto Negotiation, IEEE 802.3 Clause 73</i> section. - Substantially rewrote the <i>Link Training (LT), IEEE 802.3 Clause 72</i> section. - Removed the "TX Equalization for Link Partners" figure. - Removed the "TX Equalization in Daisy Chain Mode" figure. Daisy chain is not supported. - Removed the <i>Auto Negotiation</i> section. - Replaced the "Reconfiguration Block Details" figure. - Removed the Initial Datapath, Enable internal PCS reconfiguration logic, and Enable IEEE 1588 Precision time Protocol parameters from the "General Options Parameters" table. - Added the Reference clock frequency, Enable additional control and status pins, Include FEC sublayer, Set FEC_ability bit on power up and reset, and Set FEC_Enable bit on power up and reset parameters to the "General Options Parameters" table. - Removed the <i>10GBASE-R Parameters</i> section. - Removed the <i>10M/100M/1Gb Ethernet Parameters</i> section. - Removed the <i>Speed Detection Parameters</i> section. - Substantially changed the "Auto Negotiation and Link Training Settings" table, adding the AN_PAUSE Pause Ability, CAPABLE_FEC ENABLE_FEC (request), AN_TECH Technology Ability, AN_SELECTOR Selector Field, and Width of the Training Wait Counter parameters. - Updated all parameter names, values, and descriptions in the "Optional Parameters" table. - Updated the signals in the "10GBASE-KR Top-Level Signals" figure.

Chapter	Document Version	Changes Made
		- Removed the rx_serial_clk_1g and tx_serial_clk_1g signals, and removed all references to "1G" from all descriptions in the "Clock and Reset Signals" table. - Removed references to GMII and MII interfaces from the <i>Data Interfaces</i> section. - Removed GMII and MII signals from the "XGMII Signals" table. - Updated the list of signals in the "Control and Status Signals" table. - Removed the <i>Daisy-Chain Interface Signals</i> section. - Removed the <i>Embedded Processor Interface Signals</i> section. - Updated the list of signals in the "Dynamic Reconfiguration Interface Signals" table. - Added new registers and updated descriptions of existing registers in the "10GBASE-KR Register Definitions" table. - Updated the 0x482 registers in the "PCS Registers" table. - Updated and removed some addresses in the "PMA Registers" table. - Added the <i>Speed Change Summary</i> section. - Removed the <i>10GBASE-KR, Backplane, FEC, GMII PCS Registers</i> section. - Removed the <i>1588 Delay Requirement</i> section. - Removed the <i>Channel Placement Guidelines</i> section. - Removed the introductory paragraph from the <i>Design Example</i> section. - Removed the 1588 FIFO block from the "Top Level Modules of the 1G/10GbE PHY MegaCore Function" figure. - Updated all values for ALMs, ALUTs, Registers, and M20K in the "1G/10GbE PHY Performance and Resource Utilization" table. - Updated the blocks in the "Reconfiguration Block Details" figure. - Changed the blocks and clock connections in the "Clocks for Standard and 10G PCS and TX PLLs" figure. - Changed signal names and descriptions in the "Clock and Reset Signals" table. - Changed the parameter name for 10GbE Reference Clock frequency and added the 1G Reference clock frequency parameter in the "10GBASE-R Parameters" table. - Removed the Set FEC_ability bit on power up and reset and Set FEC_enable bit on power up and reset parameters from the "FEC Options" table.

Chapter	Document Version	Changes Made
		- Updated the list of available signals in the "1G/10GbE PHY Top-Level Signals" figure. - Added new registers and updated descriptions of existing registers in the "10GBASE-KR Register Definitions" table. - Added the 0x4A8 and 0x4A9 addresses and updated the name for address 0x4A2 and 0x4A3 in the "10GBASE-KR, Backplane, FEC GMII PCS Registers" table. - Added the <i>Speed Change Summary</i> section.
PCI Express	2014.08.15	Made the following changes: - Added a new topic Pipe link equalization for Gen 3 data rate. - Changed "MegaWizard Plugin Manager" to "Parameter Editor"/"IP Catalog" in the <i>How to Connect TX PLLs for PIPE Gen1, Gen2 and Gen3 Mode</i> section. - Changed "MegaWizard Plugin Manager" to "Parameter Editor"/"IP Catalog" in the <i>How to Implement PCI Express in Arria 10 Transceivers</i> section. - Changed "MegaWizard Plugin Manager" to "Parameter Editor"/"IP Catalog" in the <i>Supported Pipe Features</i> section.
CPRI	2014.08.15	Added new values to each row in the "TX PLL Supported Data Rates" table.

Chapter	Document Version	Changes Made
Other Protocols	2014.08.15	Made the following changes: • Changed references from MegaWizard to IP Catalog or Parameters Editor. • Using the Basic and Basic with KR FEC Configurations of Enhanced PCS • Updated the "Transceiver Channel Datapath and Clocking for Basic (Enhanced PCS) Configuration" figure and added footnote 3. • Updated the "General and Datapath Parameters", "TX PMA Parameters", "RX PMA Parameters", and "Enhanced PCS Parameters" tables. • Added the "Equalization" table. • Added the "How to Enable Low Latency in Basic Enhanced PCS" section. • Using the Basic/Custom, Basic/Custom with Rate Match Configurations of Standard PCS • Updated the values in the "Manual Mode when the PCS-PMA Interface is 8 Bits", "Manual Mode when the PCS-PMA Interface is 10 Bits", and "Manual Mode when the PCS-PMA Interface is 16 Bits" figures. • Added the "8B/10B Encoder and Decoder" and "8B/10B TX Disparity Control" sections. • Updated the "Connection Guidelines for a Basic/Custom Design" figure. • Updated the "General and Datapath Options Parameters", "TX PMA Parameters", "RX PMA Parameters", and "Standard PCS Parameters" tables. • Design Considerations for Data Rates Above 17.4 Gbps Using Arria 10 GT Channels • Updated the maximum data rate for GT channels to 28.3 Gbps. • Added information about PCS Direct mode. • Updated "ATX PLL IP with GT Clock Lines Enabled" figure. • Updated the <i>How to Implement the Basic, Basic with Rate Match Transceiver Configuration Rules in Arria 10 Transceivers</i> section.
Simulating the Transceiver Native PHY IP Core	2014.08.15	Made the following changes: • Updated the "How to Use NativeLink to Specify a ModelSim-Altera Simulation" section. • Updated the "NativeLink Generated Scripts for Third-Party RTL Simulation" table.
PLLs and Clock Networks	2014.08.15	Made the following changes:

Chapter	Document Version	Changes Made
		• Changed the maximum data rate for GT channels to 28.3 Gbps. • Changed figure "Arria 10 PLLs and Clock Networks" to indicate channel 0,1,3, and 5 have only the CDR PLL. • Updated figure "x1 Clock Lines" to indicate that the channel PLL of channel 1 and channel 4 can be used as CMU PLL or as a CDR. • Updated <i>ATX PLL</i>, <i>fPLL</i>, and <i>CMU PLL</i> section with a clarification about input reference clock frequency stability at device power-up. • Updated <i>Instantiating ATX PLL</i>, <i>fPLL</i>, and <i>CMU PLL</i> topics with new IP instantiation flow. • Updated ATX PLL and fPLL architecture block diagrams to show global clock or core clock as an input reference clock. • Updated <i>ATX PLL IP</i> section with 14.0 A10 release changes • Added fractional mode support. • Added embedded debug parameters in table ATX PLL Dynamic Reconfiguration. • Updated <i>fPLL IP</i> section with 14.0A10 release changes • Removed "fPLL -Clock Switch over Parameter and Settings" table. • Updated table "fPLL Parameter and Settings". • Added embedded debug parameters in table "fPLL - Dynamic Reconfiguration Parameters and Settings". • Removed Number of auxiliary MCGB clock input ports from fPLL IP parameters. • Added global clock or core clock as an input reference clock source. • Added a new section for <i>Global Clock or Core Clock as an Input Reference Clock</i>. • Updated figure "Input Reference Clock Sources". • Updated <i>Dedicated Reference Clock Pins</i> section "Dedicated Reference Clock Pins". • Added a connection to indicate that dedicated refclk pins can drive the reference clock network. • Removed a wrong connection from the diagram. • Updated <i>xN Clock Lines</i> section with maximum channel span limitations and added an exception for QPI protocols. • Added a new image in the <i>FPGA Fabric-Transceiver Interface Clocking</i> section. • Added a new section for <i>Channel Bonding</i> describing PMA bonding, PMA and PCS bonding in detail.

Chapter	Document Version	Changes Made
		- Removed xN Clock Network Data Rate Restrictions table. - Updated chapter to indicate Arria 10 Transceivers support fPLL to fPLL, fPLL to ATX PLL, and fPLL to CMU PLL cascading. - Updated <i>Using PLLs and Clock Networks</i> section - Changed MegaWizard references to IP Catalog and Parameter Editor. - Updated the valid configurations for PLL IP and Native PHY IP per 14.0A10 release change. - Removed Table "xN Clock Network Data Rate Restrictions". - Updated the chapter to indicate Arria 10 transceivers support to fPLL to fPLL, fPLL to ATX PLL, and fPLL to CMU PLL cascading.
Resetting Transceiver Channels	2014.08.15	Made the following changes: - Updated the "Transmitter Reset Sequence After Power-Up" and "Receiver Reset Sequence Following Power-Up" figures. - Updated the "Resetting the Receiver During Device Operation" procedure and associated figure. - Updated the "Reset Sequence Timing Diagram for Transceiver when CDR is in Manual Lock Mode" figure.

Chapter	Document Version	Changes Made
Arria 10 Transceiver PHY Architecture	2014.08.15	Made the following changes • Arria 10 PMA Architecture • Added <i>2nd post-tap and pre-tap Pre-Emphasis signals</i>. • Updated <i>DFE</i> and <i>CTLE</i> modes of operation and Use Models. • Added new sections on <i>How to Enable CTLE</i> and <i>How to Enable DFE</i>. • Changed max data rate for GT channels to 28.3 Gbps in the <i>Receiver Buffer CTLE</i> section. • Updated Receiver Buffer figure by adding and modifying <i>Adaptive Parametric Tuning Engine</i> to include CDR and DFE. • Updated VGA section that includes <i>VGA Frequency</i> response for different gain settings. • Arria 10 Enhanced PCS Architecture • Changed references from MegaWizard to Parameters Editor. • Arria 10 Standard PCS Architecture • Removed the features not supported by <i>8B/10B Decoder</i>. • Changed the description of TX FIFO to include the depth of the TX FIFO. • Updated the description of Polarity Inversion feature to include how to enable Polarity Inversion. • Updated the description of Pseudo-Random Binary Sequence (PRBS) Generator on the supported PCS-PMA interface widths. • Changed the value for Supported Word Aligner Pattern Lengths for Bit-slip Mode when the PCS-PMA Interface Width is 8 in Table 5-8 Word Aligner Pattern Length for Various Word Aligner Modes. • Changed the description of RX FIFO to include the depth of the RX FIFO. • Changed the RX Word Aligner pattern length for PCS-PMA interface width 8 in Bit-slip Mode. • Arria 10 PCI Express Gen3 PCS Architecture • Corrected the low latency mode cycles of latency in the TX FIFO (Shared with Standard and Enhanced PCS).

Chapter	Document Version	Changes Made
Reconfiguration Interface and Dynamic Reconfiguration	2014.08.15	Made the following changes: - Updated MegaWizard references to IP Catalog or Parameter Editor. - Updated table "Avalon Interface Parameters" - Added description for Altera Debug Master Endpoint. - Added Embedded Debug Parameters. - Corrected typos and updated values in table "PMA Analog Feature Offsets". - Added a new table "Valid Maximum Pre-Emphasis Settings" in <i>Changing Analog Parameters Section</i>. - Updated the description for 0xB reconfiguration address bit[7:5] in table "PRBS Checker Offsets". - Updated the <i>Unsupported Features</i> section and removed some unsupported features. - Changed the name of <i>Transceiver and PLL Address Map</i> to <i>Arria 10 Transceiver Register Map</i>. Updated the description to better explain the scope of the register map. - Added a new section for Embedded Debug feature.
Analog Parameter Settings	2014.08.15	Initial release.

Date	Version	Changes
December 2013	2013.12.02	Initial release.