

Simple Fiber Amplifier E3X-SD/-NA

The Highest Level of Power and Precision in the Industry with "GIGA RAY" **Giga Power Lighting Element**

- Stable detection of minute objects even when the Sensor is covered with dust and oil in severe environments.
- · Quick-tuning to automatically adjust light level and set threshold value.
- Use the one-key one-function feature for quick, easy operation.
- · Reasonable price.



CE

Ordering Information

Amplifier Units [Refer to Dimensions on page 13.] **Digital Display and Direct Key Setting**

Item	Appearance	Connection	Ratings and	Model	
iteiii	Appearance	method	Specifications	NPN output	PNP output
Standard models	17.0	Pre-wired (2 m)		E3X-SD21 2M	E3X-SD51 2M
		Wire-saving connector *		E3X-SD7	E3X-SD9

^{*}An Amplifier Unit Connector (sold separately) is required.

Bar Display and Adjuster Setting

Item	Appearance	Connection	Ratings and	Model		
item	Appearance	method	Specifications	NPN output	PNP output	
Standard models	to said the	Pre-wired (2 m)		E3X-NA11 2M	E3X-NA41 2M	
		Wire-saving connector *1		E3X-NA6	E3X-NA8	
High-speed detection models	23,411 27	Pre-wired (2 m)	Response time: 20 μs	E3X-NA11F 2M	E3X-NA41F 2M	
Water-resistant models	H	Pre-wired (2 m)	Degree of protection:	E3X-NA11V 2M	E3X-NA41V 2M	
		Connector (M8) *2	IP66	E3X-NA14V	E3X-NA44V	

^{*1.} An Amplifier Unit Connector (sold separately) is required.
*2. A Sensor I/O Connector (sold separately) is required.

Amplifier Unit Connectors (sold separately) Note: Protective seals provided. [Refer to Dimensions on page 17.]

Item	Appearance	Cable length	No. of conductors	Model
Master Connector		2 m	3	E3X-CN11
Slave Connector		2 111	1	E3X-CN12

Ordering Precautions for Amplifier Units Connectors

A Connector is not provided with the Amplifier Unit. Refer to the tables at the right when placing an order.

Amplifier Units					
Туре	NPN	PNP			
Standard	E3X-SD7	E3X-SD9			
models	E3X-NA6	E3X-NA8			

	Applicable Connectors (sold separately)			
+	Master Connector	Slave Connector		
	E3X-CN11 (3-wire)	E3X-CN12 (1-wire)		

When Using 5 Amplifier Units

5 Amplifier Units

1 Master Connector + 4 Slave Connectors

Sensor I/O Connectors (Models for Connectors: A Connector is not provided with the Amplifier Unit. Be sure to order a Connector separately.)
[Refer to *Dimensions* on XS3.]

Size	Cable specifications	Appearance		Cable type		Model	
		Straight		2 m		XS3F-M421-402-A	
MO	M8 Standard cable	connector		5 m	Four- conductor	XS3F-M421-405-A	
IVIO		L-shaped		2 m	cable	XS3F-M422-402-A	
		connector		5 m		XS3F-M422-405-A	

Accessories (sold separately)

Mounting Brackets

A Mounting Bracket is not provided with the Amplifier Unit. Order a Mounting Bracket separately if required.

[Refer to Dimensions on page 17.]

Appearance	Applicable models	Model	Quantity
	E3X-SD□ E3X-NA□ E3X-NA□F	E39-L143	1
	E3X-NA□V	E39-L148	•

End Plate

End Plates are not provided with the Amplifier Unit. Order End Plates separately if required. [Refer to *Dimensions* on page 17.]

Appearance	Model	Quantity
	PFP-M	1

Ratings and Specifications

Amplifier Units

		Digital display and direct key setting	key setting Bar display and adjuster setting				
	Туре	Standard models	Standard models	High-speed detection models	Water-resistant models		
Item	Model	E3X-SD□	E3X-NA□	E3X-NA□F	E3X-NA□V		
Light source	(wavelength)	Red, 4-element LED (625 nm)	Red LED (680 nm)				
Power suppl	ly voltage	12 to 24 VDC ±10%, ripple (p-p): 10% max.					
Power consu Current cons		960 mW max. (Power supply voltage: 24 V, Current consumption: 40 mA max.) (Power supply voltage: 12 V, Current consumption: 80 mA max.)	960 mW max. (Current cor	nsumption: 40 mA max.)			
Control outp	out	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 mA max. (Residual voltage: 1.5 V max.) Light-ON/Dark-ON mode selector	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 mA max. (Residual voltage: 1 V max.) Light-ON/Dark-ON mode selector.				
Response time		Operate or reset: 200 μs max. (*1)		Operate: 20 μs max. Reset: 30 μs max.	Operate or reset: 200 μs max. (*1)		
Sensitivity a	djustment	UP/DOWN direct key setting, teaching with/without a workpiece, automatic teaching	8-turn sensitivity adjuster (with indicator)				
Protection ci	ircuits	Power supply reverse polarity protection, output short-circuit protection, output reverse polarity protection	protection, output short-circuit protection,				
Timer function	on		No timer, OFF-delay timer; or Timer selector (timer time: 40 ms (fixed))				
Mutual interf prevention	ference	Up to 5 Amplifiers (optically synchronized) (*2)		None	Up to 5 Amplifiers (optically synchronized) (*2)		
Ambient illur	mination	Receiver side Incandescent lamp: 10,000 lux max. Sunlight: 20,000 lux max.					
Number of ga Amplifiers	ang-mounted	16 max. (The ambient temperature specification	depends on the number of ga	ang-mounted Amplifiers.)			
Ambient tem range	nperature						
Ambient hun	midity range	Operating and storage: 35% to 85% (with no cor	ndensation)				
Insulation re	esistance	20 MΩ. min. (at 500 VDC)					
Dielectric str	rength	1,000 VAC at 50/60 Hz for 1 minute (*3)					
Vibration res	sistance	Destruction: 10 to 55 Hz with a 1.5-mm double a	mplitude for 2 hours each in 2	X, Y and Z directions			
Shock resist	tance	Destruction: 500 m/s², for 3 times each in X, Y at	nd Z directions				
Degree of protection		IEC 60529 IP50 (with Protective Cover attached) IEC 60529 IP66 (with Protective Cover attached) IEC 60529 IP60 (with Protective Cover attached)					
Connection	method	Pre-wired (standard cable length: 2 m), or connector					
Weight (pack	ked state) (*4)	Pre-wired model: Approx. 100 g, Model with con	nector: Approx. 55 g				
Material	Case	Polybutylene terephthalate (PBT)					
water iai	Cover	Polycarbonate (PC)			Polyethersulfone (PES)		
Accessories		Instruction manual					
*1 When then	re are 8 or more	E3X-NA Amplifiers mounted side-by-side the res	snonse time will be 350 us ma	27			

Amplifier Unit Connectors (Wire-saving Connectors)

Item	Model	E3X-CN11	E3X-CN12			
Rated cu	rrent	2.5 A				
Rated voltage 50 V						
Contact r	20 mΩ max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Amplifier Unit and the adjacent Connector. It does not include the conductor resistance cable.)					
Number of	of insertions	Destruction: 50 times (for connection to the Amplifier Unit and the a	djacent Connector)			
Material	Housing	Polybutylene terephthalate (PBT)				
Material	Contact	Phosphor bronze/gold-plated nickel				
Weight (p	packed state)	Approx. 55 g Approx. 25 g				

^{*1.} When there are 8 or more E3X-NA Amplifiers mounted side-by-side, the response time will be 350 μs max.
*2. Mutual interference prevention is effective when E3X-SD/-NA-series Amplifiers are gang-mounted without other E3X-series Amplifiers.
*3. Water-resistant models and models with connectors have a dielectric strength of 500 VAC.
*4. Add 10 g for water-resistant models.

Sensing distance

			Amplifier Unit	Sens	Sensing distance (Unit: mm)		
Fiber Unit Screw-shap	ed model			E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V	
Sensing method	Size	Sensing direction	Model	Standard models	High-speed detection models	Water-resistance models	
	M3	Straight	E32-T21R 2M	120	36	60	
Through-		Right angle	E32-T11N 2M	530	160	280	
beam	M4	Straight	E32-T11R 2M	560	160	280	
models	IVI4		E32-TC200 2M	800	240	400	
			E32-T11L 2M	1,400	420	700	
	М3	Right angle	E32-C31N 2M	25	7.5	13	
		Straight	E32-D21R 2M	30	10	15	
			E32-C31 2M	80	26	40	
	M4		E32-D211R 2M	30	10	15	
Reflective		Dight angle	E32-D11N 2M	170	50	90	
models		Right angle	E32-C11N 2M	170	50	85	
	M6		E32-D11R 2M	180	60	90	
	IVIO	01	E32-DC200 2M	300	100	150	
		Straight	E32-CC200 2M	300	100	150	
			E32-D11L 2M	400	130	200	

			Amplifier Unit	Sens	ing distance (Unit	: mm)
Fiber Unit Flat model				E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V
Sensing method	Sensing direction	Size	Model	Standard models	High-speed detection models	Water-resistance models
	Top view	Standard	E32-T15XR 2M	560	160	280
Thurstell	rop view	Small	E32-T25XR 2M	120	36	60
Through- beam	Side view	Standard	E32-T15YR 2M	220	66	110
models		Small	E32-T25YR 2M	60	18	30
modele	Flat view	Standard	E32-T15ZR 2M	220	66	110
		Small	E32-T25ZR 2M	60	18	30
	Top view	Standard	E32-D15XR 2M	180	60	90
	TOP VIEW	Small	E32-D25XR 2M	30	10	15
Reflective	Side view	Standard	E32-D15YR 2M	40	10	20
models	Side view	Small	E32-D25YR 2M	8	2.4	4
	Flat view	Standard	E32-D15ZR 2M	40	10	20
	rial view	Small	E32-D25ZR 2M	8	2.4	4

			Amplifier Unit	Sens	ing distance (Unit	: mm)
Fiber Unit Cylindrical	model		E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V	
Sensing method	Sensing direction	Size	Model	Standard models	High-speed detection models	Water-resistance models
TI	Top view	φ1	E32-T223R 2M	120	36	60
Through- beam	Top view	фЗ	E32-T12R 2M	560	160	280
models	Side view	φ1	E32-T24R 2M	60	18	30
modelo		фЗ	E32-T14LR 2M	220	66	110
		φ1.5	E32-D22B 2M	30	10	15
	Top view	φ2	E32-D32 2M	80	26	40
Reflective	rop view	* 2	E32-D22R 2M	30	10	15
models		фЗ	E32-D32L 2M	160	50	80
	Side view -	ф2	E32-D24R 2M	14	4.6	7
		ф6	E32-D14LR 2M	32	10	16

			Amplifier Unit	Sens	sing distance (Unit: mm)		
Fiber Unit	pped with sleev	·	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V		
Sensing method	Sleeve size	Mounting size	Standard models	High-speed detection models	Water-resistance models		
	φ0.25 × 5	• 63	E32-T333-S5 1M	10	3	5	
Through- beam	φ0.5 × 40		E32-T33 1M	40	13.5	20	
models	φ0.9 × 40	МЗ	E32-TC200F4R 2M	120	36	60	
models	φ1.2 × 90	M4	E32-TC200BR 2M	560	160	280	
	φ0.5 × 15	ф2	E32-D331 2M	3	1	1.5	
Reflective	ф0.8 × 15	фЗ	E32-D33 2M	16	4	10	
models	φ1.2 × 40	M3	E32-DC200F4R 2M	30	10	15	
	φ2.5 × 90	M6	E32-DC200BR 2M	180	60	90	

			Amplifier Unit	Sens	ing distance (Unit	: mm)
Fiber Unit Movable se	ection (Flexibility	()	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V	
Sensing method	Shape	Size Model	Standard models	High-speed detection models	Water-resistance models	
	Screw-shaped	М3	E32-T21 2M	200	60	100
-	model	M4	E32-T11 2M	720	200	360
Through-	Cylindrical model	φ1.5	E32-T22B 2M	200	60	100
beam models		фЗ	E32-T12B 2M	720	200	360
models	Flat model	Standard	E32-T15XB 2M	720	200	360
		Small	E32-T25XB 2M	150	40	75
	0	М3	E32-D21 2M	30	10	15
	Screw-shaped model	M4	E32-D21B 2M	70	20	35
Deflective	model	M6	E32-D11 2M	180	60	90
Reflective models	Cylindrical	φ1.5	E32-D22B 2M	30	10	15
models	model	фЗ	E32-D221B 2M	70	20	35
		Standard	E32-D15XB 2M	180	60	90
	Flat model	Small	E32-D25XB 2M	50	16	25

			Amplifier Unit	Sens	sing distance (Unit	: mm)
Fiber Unit Heat-resist	ance model			E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V
Sensing method	Operating temperature	Lens	Model	Standard models	High-speed detection models	Water-resistance models
			E32-T51R 2M	400	120	225
	100°C	Lens	E32-T51R 2M + E39-F1	2,000	720	1,650
		High-power lens	E32-T51R 2M + E39-F16	4,000 *	1,560	2,900
	150°C		E32-T51 2M	800	240	400
Through-		Lens	E32-T51 2M + E39-F1-33	2,400	720	1,400
beam		High-power lens	E32-T51 2M + E39-F16	4,000 *	3,120	4,000 *
models			E32-T54 2M	260	70	130
	200°C		E32-T81R-S 2M	360	100	180
	200 C	Lens	E32-T61-S 2M + E39-F1	4,000 *	1,800	3,000
	350°C		E32-T61-S 2M	600	180	300
	350 C	High-power lens	E32-T61-S 2M + E39-F16	4,000 *	2,340	3,900
	100°C		E32-D51R 2M	140	42	70
Deflective	150°C		E32-D51 2M	240	80	120
Reflective models	200°C	†	E32-D81R 2M	90	27	45
	350°C		E32-D61 2M	90	27	45
	400°C		E32-D73 2M	60	18	30

 $[\]ensuremath{\bigstar}$ The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

		Amplifier Unit	Sens	ing distance (Unit	: mm)
Fiber Unit	a sistema a / Oil ma sistema a ma de		E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V
Sensing method	IVNE		Standard models	High-speed detection models	Water-resistance models
	ф5	E32-T12F 2M	3,200	960	1,600
	φ7.2	E32-T11F 2M	2,100	760	1,050
	φ5 Heat-resistance	E32-T51F 2M	1,400	400	700
Through- beam	φ5 Side view	E32-T14F 2M	400	120	200
models	M4 Chemical-resistance cable	E32-T11U 2M	720	200	360
•	M4 Right angle Chemical-resistance cable	E32-T11NU 2M	400	120	210
	ф6	E32-D12F 2M	100	32	50
Reflective models	φ7 Side view	E32-D14F 2M	40	13	20
	M6 Chemical-resistance cable	E32-D11U 2M	180	60	90

			Sens	ing distance (Unit	: mm)	
Fiber Unit			E3X-SD□	E3X-NA□F	E3X-NA□V	
Vacuum-re:	sistance model			E3X-NA		
Sensing ambient direction Model				Standard models	High-speed detection models	Water-resistance models
Through		0°C Top view	E32-T51V 1M	200		100
Through- beam models	120°C		E32-T51V 1M + E39-F1V	1,200		600
		Right angle	E32-T54V 1M	130		65
	200°C		E32-T84SV 1M	500		250

			Amplifier Unit	Sensing distance (Unit: mm)		
iber Unit ong dista Narrow vi		nce (High-powe	r), Detection through gaps	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V
Sensing method	Туре	Sensing direction/ Lens type	Model	Standard models	High-speed detection models	Water-resistanc models
	High-power	Top view	E32-T17L 10M	20,000 *1	8,400	14,000
	(integrated unit)	Side view	E32-T14 2M	3,600	1,080	1,800
		High-power	E32-T11N 2M + E39-F1	3,700	1,110	2,100
		Ultrahigh-power	E32-T11N 2M + E39-F16	4,000 *2	2,000	3,600
		High-power	E32-T11R 2M + E39-F1	4,000 *2	1,260	2,100
		Ultrahigh-power	E32-T11R 2M + E39-F16	4,000 *2	2,000	3,600
	High-power (with lens unit)	Side view	E32-T11R 2M + E39-F2	440	130	220
		High-power	E32-TC200 2M + E39-F1	4,000 *2	1,800	3,000
		Ultrahigh-power	E32-TC200 2M + E39-F16	4,000 *2	3,000	4,000 *2
		Side view	E32-TC200 2M + E39-F2	700	210	350
		High-power	E32-T11 2M + E39-F1	4,000 *2	1,200	2,000
		Ultrahigh-power	E32-T11 2M + E39-F16	4,000 *2	2,600	4,000 *2
Through-		Side view	E32-T11 2M + E39-F2	720	200	360
beam		High-power	E32-T11U 2M + E39-F1	3,600	1,080	2,000
models		Ultrahigh-power	E32-T11U 2M + E39-F16	4,000 *2	2,600	4,000 *2
		Side view	E32-T11U 2M + E39-F2	660	198	330
		High-power	E32-T11NU 2M + E39-F1	1,800	700	1,500
		Ultrahigh-power	E32-T11NU 2M + E39-F16	4,000 *2	1,500	2,700
		High-power	E32-T81R-S 2M + E39-F1	1,800	630	1,100
		Ultrahigh-power	E32-T81R-S 2M + E39-F16	4,000 *2	1,300	2,300
		Side view	E32-T81R-S 2M + E39-F2	280	84	140
		High-power	E32-T61-S 2M + E39-F1	4,000 *2	1,800	3,000
		Ultrahigh-power	E32-T61-S 2M + E39-F16	4,000 *2	2,340	3,900
		Side view	E32-T61-S 2M + E39-F2	780	260	390
	Narrow vision	Top view	E32-T22S 2M	2,000	600	1,000
	field (aperture angle: 4°)	Side view	E32-T24S 2M	1,400	420	700
Reflective models	High-power	Top view	E32-D16 2M	800	140	40 to 400

^{*1.} The fiber length is 10 m on each side, so the sensing distance is given as 20,000 mm. *2. The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

			Amplifier Unit	Sensing distance (Unit: mm)		
Fiber Unit	act dataction (Sr	nall-snot model	1	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V
Minute object detection (Small-spot model) Sensing Spot diameter Focal length Model method (mm) (mm)				Standard models	High-speed detection models	Water-resistance models
	φ0.1 to 0.6 (Variable)	6 to 15	E32-C42 1M + E39-F3A	Spot diameter of 0.1 to 0.6 mm at 6 to 15 mm		
	ф0.1	5	E32-C42S 1M	Spot diameter of 0.1 mm at 5 mm		
		7	E32-C41 1M + E39-F3A-5	Spot diameter of 0.1 mm at 7 mm		
	φ0.2	17	E32-C41 1M + E39-F3B	Spot diameter of 0.2 mm at 17 mm		
Reflective	+0.5	7	E32-C31 2M + E39-F3A-5	Spot diameter of 0.5 mm at 7 mm		at 7 mm
models	ф0.5	17	E32-C31 2M + E39-F3B	Spot diameter of 0.5 mm at 17 mm		
	φ6	50	E32-L15 2M	Spot di	ameter of 6 mm at	50 mm
	φ4 Parallel light	0 to 20	E32-C31 2M + E39-F3C	Spot diameter of 4 mm max. at 0 to 20 mm		
	ф3	0 50	E32-C11N 2M + E39-F18	Spot di	Spot diameter of 3 mm at 50 mm	
		E32-CC200 2M + E39		Spot diameter of 3 mm at 50 mm		

			Sens	ing distance (Unit	: mm)	
Fiber Unit				E3X-SD□	E3X-NA□F	E3X-NA□V
Area-sensii	ng (Area beam)		E3X-NA□	L3X-NA	L3X-NA_V	
Sensing method	Area range	Sensing direction	Model	Standard models	High-speed detection models	Water-resistance models
Through-	11 mm	Side view	E32-T16PR 2M	800	260	450
beam	11111111	Flat view	E32-T16JR 2M	700	220	390
models	30 mm		E32-T16WR 2M	1,380	400	690
Reflective models	11 mm	Side view	E32-D36P1 2M	150	50	75

			Sens	ing distance (Unit	: mm)	
Fiber Unit			E3X-SD□	E3X-NA∏F	E3X-NA□V	
Detection w	vithout backgro	und interference	E3X-NA□	LJX-IVA	LJX-IVA_V	
Sensing method	Sensing detection	Size	Model	Standard models	High-speed detection models	Water-resistance models
	Flat view	Standard	E32-L16-N 2M	0 to 15	0 to 12	0 to 15
Reflective	rial view	Small	E32-L24S 2M	0 to 4		
models	Top view		E32-L25L 2M	5.4 to 9 (Center 7.2)	5.4 to 8 (Center 7.2)	5.4 to 9 (Center 7.2)
•	Flat view		E32-L24L 2M	2 to 6 (Center 4)		


		Amplifier Unit	Sens	ing distance (Unit: mm)		
Fiber Unit Detection of	transparent objects (Ret	ro-reflective)	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V	
Sensing method	Туре	Model	Standard models	High-speed detection models	Water-resistance models	
	Square	E32-R16 5M + E39-R1 (Attached)	1,500	1,000	150 to 1,500	
Retro-	Small	E32-R21 2M + E39-R3 (Attached)	10 to 250	250	10 to 250	
reflective models	Film detection *2	E32-C31 2M + E39-F3R + E39-RP1	450	135	225	
*1	Film detection *2	E32-C31 2M + E39-F3R + E39-RSP1	220	65	110	

^{*1.} When using a highly reflective object, light reflected from the object may affect the Sensor. *2. Film detection may not be effective for some types of film. Confirm operation in advance.


			Amplifier Unit	Sens	ing distance (Unit	: mm)	
Fiber Unit FPD / Semi	conductor / Sola	ar battery indus	try	E3X-SD□ E3X-NA□	E3X-NA□F	E3X-NA□V	
Sensing method	Application	Operating temperature	Model	Standard models	High-speed detection models	Water-resistance models	
	Glass	ate 70°C	E32-L16-N 2M	0 to 15			
	substrate		E32-A08 2M		10 to 20		
	alignment	300°C	E32-A08H2 3M		10 to 20		
	Glass detection	70°C	E32-L16-N 2M	0 to 15			
	Glass	70°C	E32-A09 2M	,	15 to 38 (Center 25)	
	substrate	150°C	E32-A09H 2M	15 to 38 (Center 25)			
	mapping	300°C	E32-A09H2 2M	20 to 30 (Center 25)			
Reflective models	WET process	60°C	E32-L11FP 5M	8 to 20 mm from end of lens (recommended: 11 mm) 19 to 31 mm from center point A of mounting hole (recommended: 22 mm)			
		WET process 70°C	E32-L12FS 5M	8 to 20 mm from end of lens (recommended: 11 mm) 32 to 44 mm from center point A of mounting hole (recommended: 35 mm)			
			E32-L11FS 5M	8 to 20 mm from end of lens (recommended: 11 mm) 32 to 44 mm from center point A of mounting hole (recommended: 35 mm)			
-			E32-A03 2M	890	267	445	
Through-	Wafer	70°C	E32-A03-1 2M	890	267	445	
beam models	mapping	70°C	E32-A04 2M	340	102	170	
11100619			E32-A04-1 2M	340	102	170	

Amplifier Unit			Sensing distance (Unit: mm)			
Fiber Unit			E3X-SD□	E3X-NA□F	E3X-NA□V	
Liquid-leve	I detection mod	lel	E3X-NA□	E3X-NAUF		
Sensing method	Sensing direction	Pipe diameter	Model	Standard models	High-speed detection models	Water-resistance models
Reflective models	Mounted to pipe	No limit	E32-D36T 5M	Applicable pipe: Transparent (no restriction on diameter)		
		φ8 to 10 mm	E32-L25T 2M	Applicable pipe: Transparent pipe with diameter of 8 to 10 mm, recommended pipe wall thickness: 1 mm		
	Wet		E32-D82F1 4M	Wet model		


I/O Circuit Diagrams

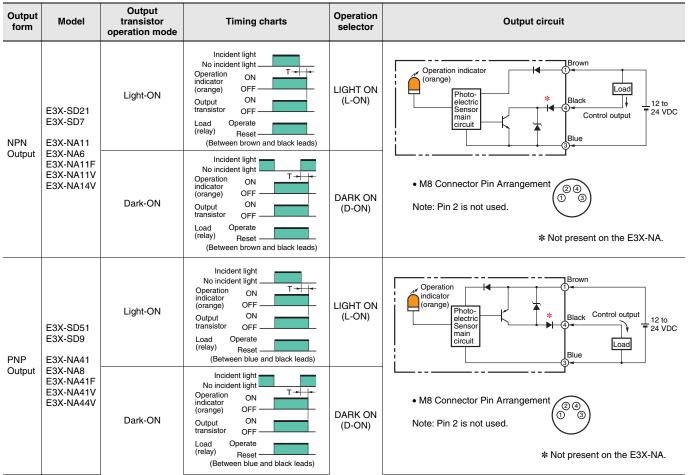

Note: Timing Charts for Timer Settings (T: Set Time)



Plug (Sensor I/O Connector)



Classification	Wire color	Connection pin	Application
	Brown	1	Power supply (+V)
DC	White	2	
ьс	Blue	3	Power supply (0 V)
	Black	4	Output

Note: Pin 2 is not used.

Safety Precautions

WARNING

This product is not designed or rated for ensuring safety of persons either directly or indirectly.



Do not use it for such purposes.

⚠ Caution

Do not exceed the rated voltage. Excess voltage may result in malfunction or fire.



Do not use an AC power supply.
Using an AC power supply may result in rupturing.



High-temperature environments may result in burn injury.



Precautions for Safe Use

The following precautions must be observed to ensure safety.

- Do not use the product in locations where flammable or explosive gas is present.
- 2. Do not use the product in locations subject to splashing water, oil, or chemicals, or in locations subject to steam.
- Do not attempt to disassemble, repair, or modify the product.
- 4. Do not apply voltage or current in excess of the rated ranges.
- 5. Do not use the product in atmospheres or environments that exceed product ratings.
- 6. Do not wire the product incorrectly, such as using incorrect power supply polarity.
- 7. Connect the load properly.
- 8. Do not short-circuit both ends of the load.
- 9. Do not use the product if the case is damaged.
- 10. When disposing of the product, dispose of it as industrial waste.
- 11. Do not use the product in locations subject to direct sunlight.
- 12. The surface temperature of the product may rise as a result of the ambient temperature, power supply, or other usage conditions. Use caution when performing maintenance and washing. Failure to do so may result in burn injury.

Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

Amplifier Units

Designing

Communications Hole

The hole on the side of the Amplifier Unit is a communications hole for preventing mutual interference when Amplifier Units are mounted side-by-side. The E3X-MC11 Mobile Console (sold separately) cannot be used.

If an excessive amount of light is received via the Sensor, the mutual interference prevention function may not work. In this case, make the appropriate adjustments using the sensitivity adjuster.


Mutual interference prevention is effective when E3X-SD/-NA-series Amplifiers are gang-mounted without other E3Xseries Amplifiers.

Mounting


DIN Track Mounting/Removal

Mounting Amplifier Units

1. Mount the Amplifier Units one at a time onto the DIN track.



2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.



Removing Amplifier Units

Slide Amplifier Units away from each other, and remove from the DIN track one at a time. (Do not attempt to remove Amplifier Units from the DIN track without separating them first.)


- Note 1. The specifications for ambient temperature will vary according to the number of Amplifier Units used together. For details, refer to *Ratings* and *Specifications*.
 - Always turn OFF the power supply before mounting or removing Amplifier Units.

Fiber Connection and Disconnection

The E3X Amplifier Unit has a lock lever. Connect or disconnect the fibers to or from the E3X Amplifier Unit using the following procedures:

1. Connection


Open the Protective Cover, insert the fibers according to the fiber insertion marks on the side of the Amplifier Unit, and lower the lock lever.



Note: If one of the fibers from the Fiber Unit has a white line, such as with a Coaxial Sensor, that fiber is for the Emitter. Insert it into the Emitter section. Refer to Dimensions for the Fiber Unit to see if there is an Emitter fiber.

2. Disconnection

Remove the Protective Cover and raise the lock lever to pull out the fiber.

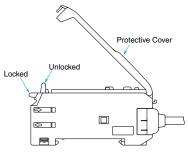

Note:To maintain the fiber properties, confirm that the lock is released before removing the fiber.

3. Precautions for Fiber Connection/Disconnection

Be sure to lock or unlock the lock lever within an ambient temperature range between –10°C and 40°C.

Operating Environment

Ambient Conditions

If dust or dirt adhere to the hole for optical communications, it may prevent normal communications. Be sure to remove any dust or dirt before using the Units.

Other

Protective Cover


Be sure to mount the Protective Cover before use.

Amplifier Units with Connectors


Mounting

Mounting Connectors

 Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.




- Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- Attach the stickers (provided as accessories) to the sides of Master and Slave Connectors that are not connected to other Connectors.



Note: Attach the stickers to the sides with grooves.

Removing Connectors

- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)




Mounting End Plate (PFP-M)

Depending on how it is mounted, an Amplifier Unit may move during operation. In this case, use an End Plate. Before mounting an End Plate, remove the clip from the master Amplifier Unit using a nipper or similar tool.




The clip can also be removed using the following mechanism, which is incorporated in the construction of the section underneath the clip.

1. Insert the clip to be removed into the slit underneath the clip on another Amplifier Unit.

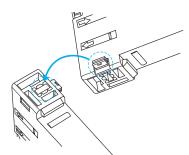

2. Remove the clip by rotating the Amplifier Unit.

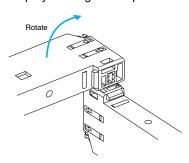


Pull Strengths for Connectors (Including Cables)

E3X-CN11: 30 N max. E3X-CN12: 12 N max.




Dimensions


Amplifier Units

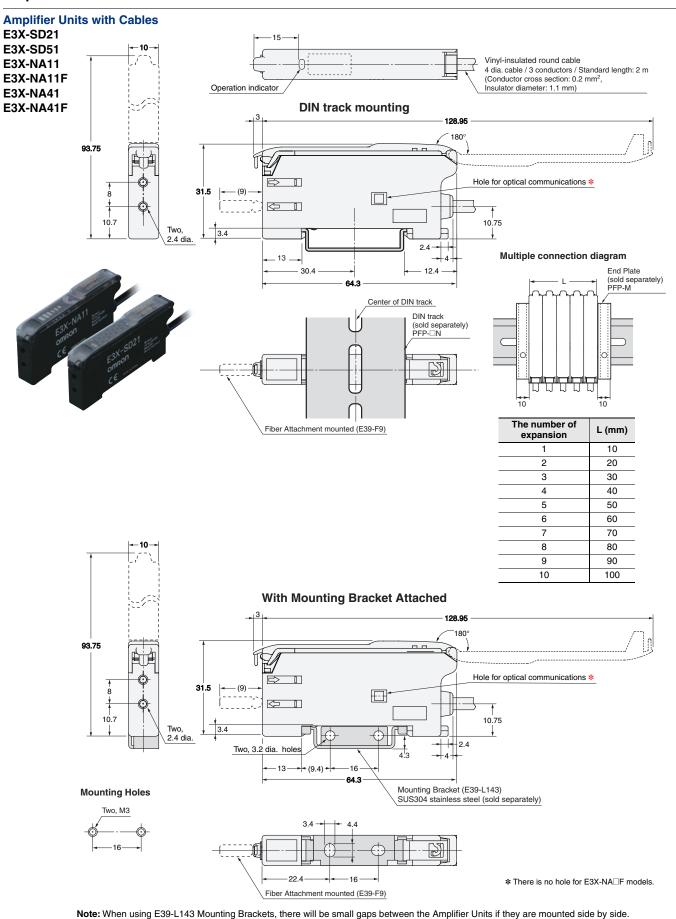


13

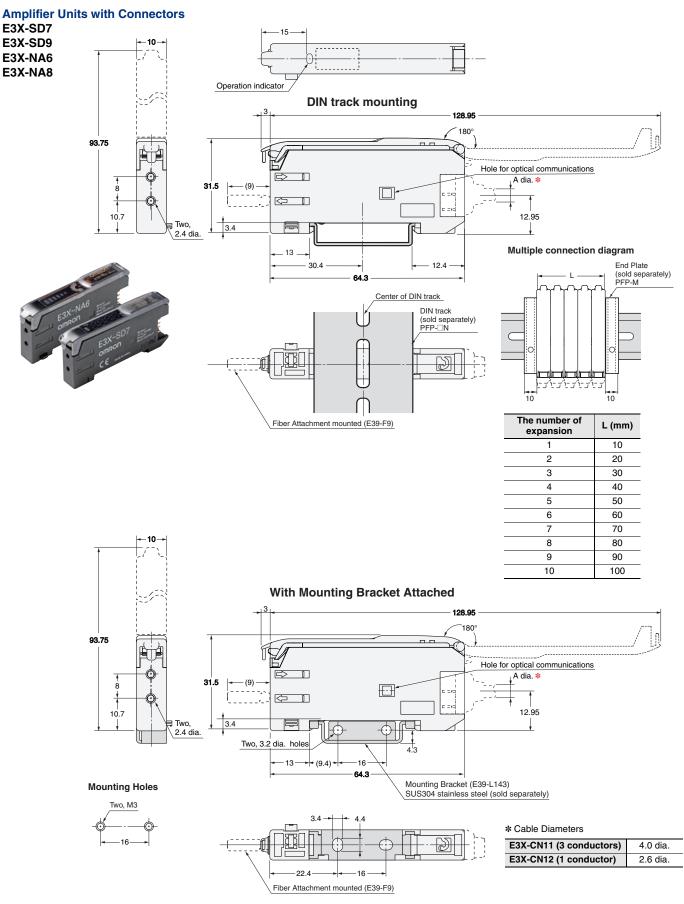

Note: When using E39-L143 Mounting Brackets, there will be small gaps between the Amplifier Units if they are mounted side by side.

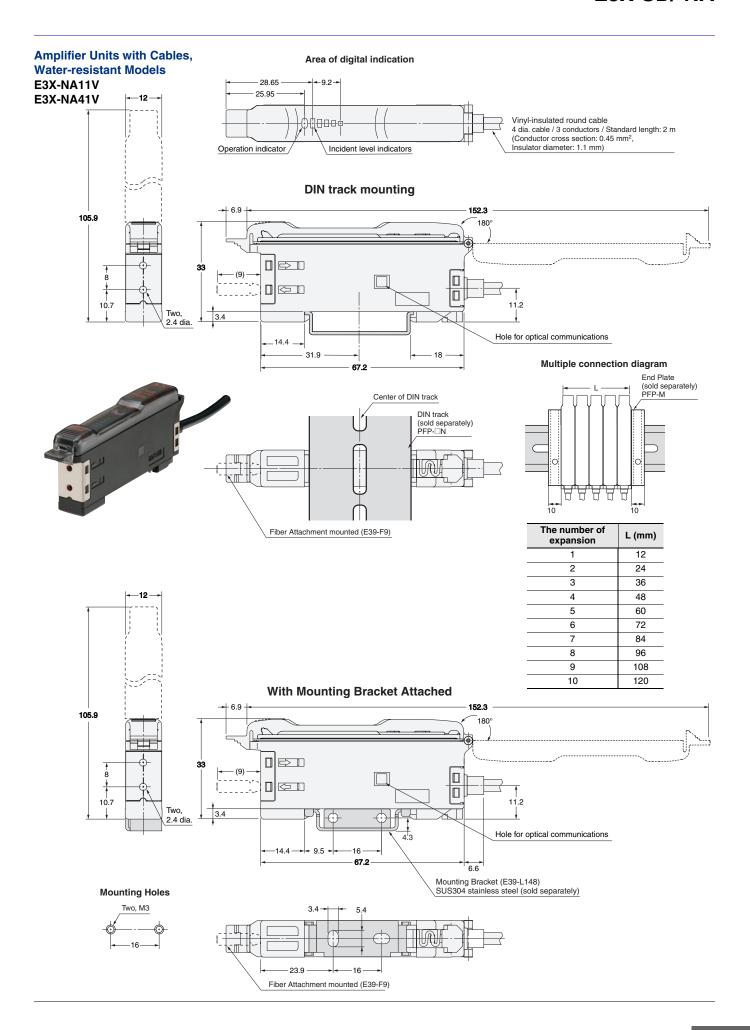


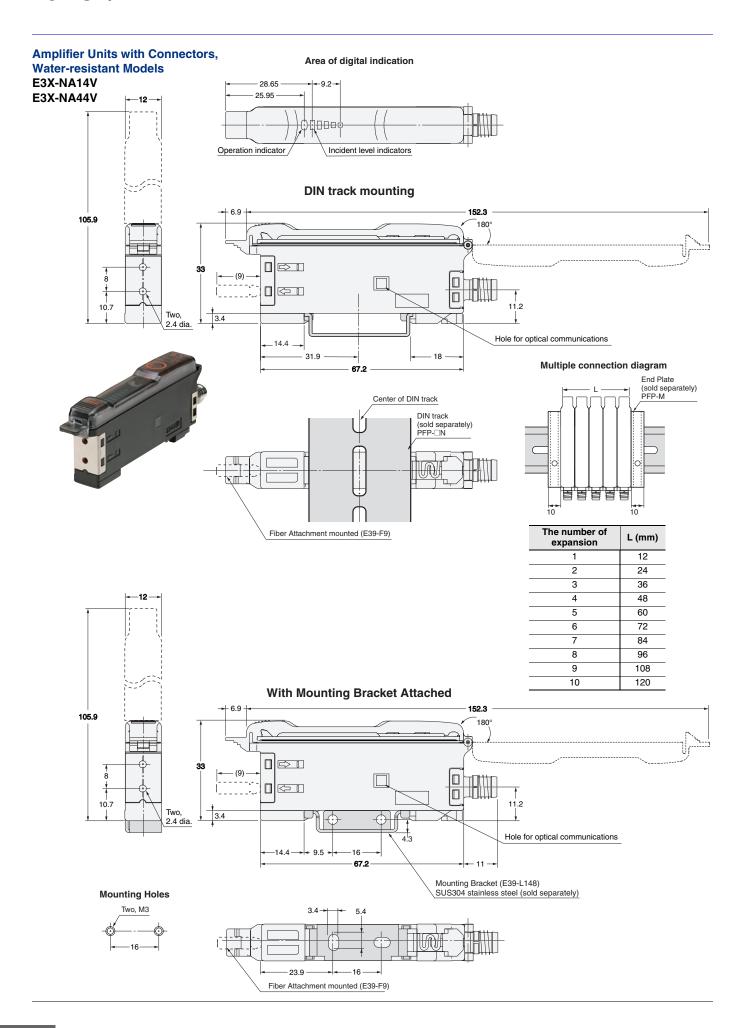

Amplifier Unit Connectors (Wire-saving Connectors)

Master Connector E3X-CN11




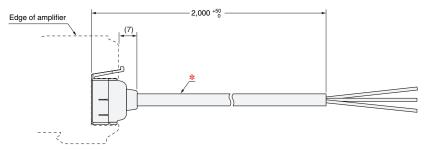

* E3X-CN11: 4 dia, cable / 3 conductors / Standard length: 2 m (Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

Slave Connector E3X-CN12



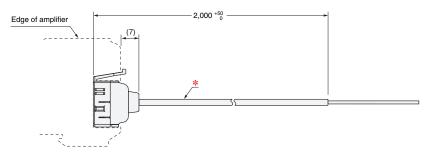


* E3X-CN12: 2.6 dia. cable / 1 conductor / Standard length: 2 m (Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

Accessories (sold separately)

Mounting Brackets E39-L143



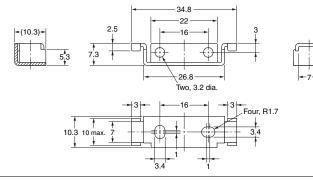





Material: Stainless steel (SUS304)

End Plates

PFP-M









Nomenclature

Amplifier Units

E3X-SD

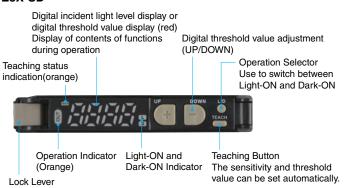

E3X-NA

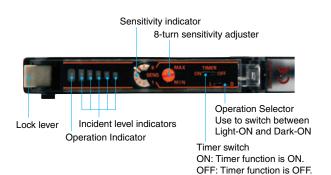

Operating Procedure

E3X-SD

1 Sensitivity Setting

The sensitivity can be set with the UP and DOWN Keys similar to using an adjuster knob. The sensitivity can also be easily set by using the following two teaching functions.

2-1. Teaching with/without a Workpiece

Two points (one with the workpiece and the other without) are detected, and the operating level is set to the midpoint. Light level is also automatically set to the optimal value.

Operation description	Button/Key	
Press the TEACH button with the workpiece.	TEACH	
Press the TEACH button without the workpiece.	TEACH	

2-2. Automatic Teaching

Changes within a time are detected, and the operating level is set to the midpoint between the maximum and the minimum values of the changes. This setting is optimal for when the workpieces cannot be stopped. Execute automatic teaching again if the incident light level is not automatically set to the optimal value.

Operation description	Button/Key	
Press the TEACH button for 3 s min. Let the workpiece pass while the button is pressed.	TEACH	

E3X-NA

1 Displays

A bar display (with four green and one red) showing excess gain is provided in addition to the orange operation indicator. Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain level	Description	
Operation indicator Excess gain level display	Approx. 120% min.	Stable incident	
	Approx. 110% to 120%		
	Approx. 90% to 110%	Unstable incident light or Unstable interrupted light	
	Approx. 80% to 90%	Stable	
	Approx. 80% max.	interrupted light	

READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

COPYRIGHT AND COPY PERMISSION

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

This document provides information mainly for selecting suitable models. Please read the Instruction sheet carefully for information that the user must understand and accept before purchase, including information on warranty, limitations of liability, and precautions.

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. **Sensor Business Unit**

Carl-Benz-Str. 4, D-71154 Nufringen, Germany Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC One Commerce Drive Schaumburg,

IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 **Authorized Distributor:**

© OMRON Corporation 2010 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM_3_1_1010

Cat. No. E401-E1-01

0110