


SE-330, SE-330HV SERIES

Neutral-Grounding-Resistor Monitor - New Revision





Simplified Circuit Diagram

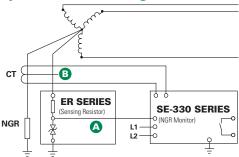

For detailed wiring diagram, see adjacent page.

Ordering Information

ORDERING NUMBER		POWER SUPPLY	СОММ		CERTIFICATION	K4 UNIT HEALTHY CONTACT		
SE-330	-	Χ	Χ	-	X	X		
SE-330 for all apps. 35 kV or less SE-330HV for 72 kV apps.		0=120/240 Vac/Vdc 2=48 Vdc ⁽¹⁾	0=USB Only 1=DeviceNet(1) 3=EtherNet (Dual RJ45) 4=EtherNet (SC Fiber & RJ45)(1) 5=EtherNet (Dual SC Fiber)(1) 6=IEC61850 (Dual RJ45)(1) 7=IEC61850 (SC Fiber & RJ45)(1) 8=IEC61850 (Dual SC Fiber)(1)		0=CSA, UL 1=CSA, UL, CE ⁽¹⁾ , C-Tick ⁽¹⁾	0=Normally Open 1=Normally Closed		

NOTE: For Australian applications, see the SE-330AU.

ACCESSORIES	REQUIREMENT		
ER Series Sensing Resistor	Required		
Current Transformer	Required		
SE-IP65CVR-G	Optional		
SE-MRE-600	Optional		
RK-332	Optional		
NGRM-ENC	Optional		
PGA-0520	Optional		
SE-330-SMA	Optional		

Description

The SE-330 is an advanced ground-fault and neutral-groundingresistor monitoring relay. It measures neutral current, neutral-toground voltage, and neutral-to-ground resistance. It provides continuous monitoring of the neutral-to-ground path to verify that the neutral-grounding resistor (NGR) is intact. This is of utmost importance—an open NGR renders current-sensing ground-fault protection inoperative and could result in a false belief that the system is functioning properly. The SE-330 can be used with low- and medium-voltage transformers and generators with low- or high-resistance grounding used in processing, manufacturing, chemical, pulp and paper, petroleum, and water-treatment facilities. For high-voltage applications, use the SE-330HV. For applications that require conformance to Australian standard AS/NZS 2081.3:2002, use the SE-330AU.

Resistor Monitoring

The SE-330 combines the measured values of resistance, current, and voltage to continuously determine that an NGR is intact. It is able to detect a resistor failure with or without a ground fault present. Sensing resistors are matched to the system voltage and are used to monitor NGRs on systems up

Ground-Fault Monitoring

The SE-330 uses an application-appropriate current transformer to reliably detect ground-fault currents as small as 100 mA. DFT filtering ensures that false trips due to harmonic noise from adjustable-speed drives do not occur. Should the resistor open and a ground fault subsequently occur, the SE-330 will detect the fault through voltage measurement, while other current-only sensing relays would be ineffective.

Pulsing Ground-Fault Location

The SE-330 is capable of controlling a pulsing contactor, which is used to switch the NGR resistance in a pulsing-compatible NGR package. The resulting ground-fault current is distinguishable from charging currents and noise and will only appear upstream of the ground fault, making fault location fast and easy, even without isolating feeders or interrupting loads.

Accessories



ER Series Sensing Resistor

Required interface between the power system and the SE-330/SE-330HV. Eliminates hazardous voltage levels at the relay.



EFCT Series Ground-Fault Current Transformer

Sensitive ground-fault current detection (5 A primary).



SE-CS30 Series Ground-Fault Current Transformer Sensitive ground-fault current detection (30 A primary).



Other Current Transformer

For low-resistance NGRs choose a CT primary approximately equal to the NGR rating. Inputs are provided for 1- and 5- A- secondary CTs.



SE-IP65CVR-G Hinged Transparent Cover Watertight cover, tamper resistant, IP65 protection.



SE-330, SE-330HV SERIES

Neutral-Grounding-Resistor Monitor - New Revision

Features & Benefits


eatures & Denents				
FEATURES	IEEE#	BENEFITS		
Continuous NGR monitoring	3	Detects resistor failure within seconds, reduces transient-overvoltage risk, removes risk of ground-fault-detection failure		
Ground-fault detection	50G/N, 51G/N, 59N	Main or backup protection to detect a ground fault anywhere on the monitored system		
Adjustable pickup (2-100%)		Select greatest sensitivity without false operation, adjustable in 1% increments (MEM setting)		
Adjustable time delay (0.1-10 s)		Adjustable trip delay allows quick protection and system coordination		
Universal CT compatibility		Allows the use of a CT that gives required ground-fault settings		
Output contacts		Two Form C (Ground Fault, Resistor Fault), Two Form A (Trip/Pulse, Healthy)		
Analog output (4-20 mA)		Connect an optional PGA-0520 meter or control system		
Pulsing output		Control the operation of a pulsing ground-fault-location circuit		
Trip records		On-board 100-event (with date and time) recorder helps with system diagnostics		
Harmonic filtering (DFT)		Eliminate false trips due to harmonic noise from ASDs		
Local communications		Mini USB port to view measured values, configure settings, and check event records		
Data Logging		On-board microSD card (included) can be used for long-term data logging		
Network communications		Remotely view measured values and event records, reset trips, and cause a remote trip Available Protocol Options: IEC 61850 - with dual RJ45, SC Fiber and RJ45, or Dual SC Fiber Interface Modbus TCP and Ethernet/IP - with dual RJ45, SC Fiber and RJ45, or Dual SC Fiber Interface DeviceNet - with CAN interface		
Software		PC-interface software (SE-MON330) is available at Littelfuse.com/RelaySoftware		
Selectable contact operating mode		Selectable fail-safe or non-fail-safe operating modes allows connection to shunt or undervoltage breaker coil or alarm circuit (Trip, Ground Fault, Resistor Fault relays)		
Selectable reset mode		Selectable latching or auto-reset operation		
Calibrate push button		Ensures resistor-failure sensitivity is correct		
Unit-healthy output		Verifies SE-330 is operating correctly		
Conformal coating		Internal circuits are conformally coated to protect against corrosion and moisture		

Typical Values

Wiring Diagram

SYSTEM VOLTAGE (VOLTS)	NEUTRAL-GROUN	IDING RESISTOR	SEN	ISING RESISTOR	GROUND-FAULT	V _N PICKUP LEVEL (VOLTS)
	CURRENT (AMPERES)	RESISTANCE (OHMS)	MODEL	RESISTANCE (SWITCH S5 SETTING)	PICKUP LEVEL (AMPERES)	
480	5	55	ER-600VC	20 kΩ	2.5	170
600	5	69	ER-600VC	20 kΩ	2.5	200
2,400	5	277	ER-5KV	20 kΩ	2.5	800
4,160	5	480	ER-5KV	20 kΩ	3	1,700
7,200	10	416	ER-15KV	100 kΩ	2	170 x 5 = 850
14,400	15	554	ER-15KV	100 kΩ	3	340 x 5 = 1,700

DISCLAIMER: The above table is for illustrative purposes only. Actual values may differ based on a variety of individual system considerations, such as capacitive charging current and coordination study results.

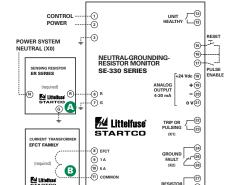

Note (1) - Release is pending.

Specifications

IEEE Device Numbers Ground Fault (50G/N, 51G/N, 59N), Checking Relay (3), Lockout Relay (86) Input Voltage See ordering information **Dimensions H** 213 mm (8.4"); **W** 98 mm (3.9"); **D** 132 mm (5.2") **GF Trip-Level Settings** 2-100% of CT-Primary Rating in 1% increments GF Trip-Time Settings Vn Trip-Level Settings 0.1-10.s20-2,000 Vac (≤5 kV systems) 100-10,000 Vac (>5 kV systems) Contact Operating Mode Selectable fail-safe or non-fail-safe (K1, K2, K3) Harmonic Filtering Standard feature **Reset Button** Standard feature

Output Contacts
Pulsing Circuit
Approvals

Standard feature
Two Form A and two Form C
1.0-3.0 s in 0.2 s increments
CSA certified, UL Listed (E340889),

CE (European Union)⁽¹⁾ optional, C-Tick (Australian)⁽¹⁾ optional

Mini USB (standard); DeviceNet⁽¹⁾ (optional), IEC 61850⁽¹⁾ (optional),

Madhya TCB and Tabachles (IB (antional))

Modbus TCP and EtherNet/IP (optional)

loq Output 4-20 mA, self or loop powered

Analog Output 4-20 mA, self or I Conformally Coated Standard feature

Warranty 5 years Mounting Panel and Surface (optional)

Littelfuse reserves the right to make product changes, without notice. Material in this document is as accurate as known at the time of publication. Visit Littelfuse.com for the most up-to-date information.