Switches & Pilot Lights
Signaling Lights
Relays & Sockets
Timers
Contactors
Terminal Blocks
Circuit Breakers

RTE Series — Analog Timers

Key features:

- 20 time ranges and 10 timing functions
- Time delays up to 600 hours
- Space-saving package
- High repeat accuracy of ± 0.2%
- ON and timing OUT LED indicators
- Standard 8- or 11-pin and 11-blade termination
- 2 form C delayed output contacts
- 10A Contact Rating

Cert. No. E9950913332316 (EMC, RTE)
Cert. No. BL960813332355 (LVD, RTE)

UL Listed
File No. E66043

General Specifications

Operation System		Solid state CMOS Circuit		
Operation Type		Multi-Mode		
Time Range		0.1sec to 600 hours		
Pollution Degree		2 (IE60664-1)		
Over voltage category		III (IE60664-1)		
Rated Operational Voltage	AF20	100-240V AC(50/60Hz)		
	AD24	24V AC(50/60Hz)/24V DC		
	D12	12V DC		
Voltage Tolerance	AF20	85-264V AC(50/60Hz)		
	AD24	20.4-26.4V AC(50/60Hz)/21.6-26.4V DC		
	D12	10.8-13.2V DC		
Input off Voltage		Rated Voltage x10% minimum		
Ambient Operating Temperature		-20 to +65°C (without freezing)		
Ambient Storage and Transport Temperature		-30 to +75°C (without freezing)		
Relative Humidity		35 to 85%RH (without condensation)		
Atmospheric Pressure		80kPa to 110kPa (Operating), 70kPa to 110kPa (Transport)		
Reset Time		100msec maximum		
Repeat Error		±0.2%, ±20msec*		
Voltage Error		±0.2%, ±20msec*		
Temperature Error		±0.5%, ±20msec*		
Setting Error		±10% maximum		
Insulation Resistance		100MΩ minimum (500V DC)		
Dielectric Strength		Between power and output terminals: 2000V AC, 1 minute		
		Between contacts of different poles: 2000V AC, 1 minute		
		Between contacts of the same pole:1000V AC, 1 minute		
Vibration Resistance		10 to 55Hz amplitude 0.5mm² hours in each of 3 axes		
Shock Resistance		Operating extremes: 98m/sec² (10G)		
		Damage limits: 490m/sec² (50G)		
		3 times in each of 3 axes		
Degree of Protection		IP40 (enclosure) (IEC60529)		
Power Consumption (Approx.)	TYPE		RTE-P1, -B1	RTE-P2, -B2
	AF20	120V AC/60Hz	6.5VA	6.6VA
		240V AC/60Hz	11.6VA	11.6VA
	24V AC 60Hz/DC		3.4VA/1.7W	3.5VA/1.7W
	D12		1.6W	1.6W
Mounting Position			Free	
Dimensions	RTE-P1, P2		40Hx 36W x 77.9D mm	
	RTE-B1, B2		40Hx 36W x 74.9D mm	
Weight (Approx.)			RTE-P1	RTE-P2	RTE-B1, -B2
			87g	89g	85g

Contact Ratings

Contact Configuration		2 Form C, DPDT (Delay output)
Allowable Voltage / Allowable Current		240V AC, 30V DC / 10A
Maximum Permissible Operating Frequency		1800 cycles per hour
Rated Load	Resistive	10A 240V AC, 30V DC
	Inductive	7A 240V AC, 30V DC
	Horse Power Rating	1/6 HP 120V AC, 1/3 HP 240V AC
Life	Electrical	500,000 op. minimum (Resistive)
	Mechanical	50,000,000 op. minimum

*For the value of the error against a preset time, whichever the largest, applies.

Downloaded from Arrow.com.

Part Numbering Guide

RTE series part numbers are composed of 4 part number codes. When ordering a RTE series part, select one code from each category.
Example: **RTE-P1AF20**

RTE	–	P	1	AF20
① Series		② Terminal Style	③ Function Group	④ Input Voltage

Part Numbers: RTE Series

	Description	Part Number Code	Remarks
① Series	RTE series	RTE	For internal circuits, see next page.
② Terminal Style	Pin	P	Select one only.
	Blade	B	
③ Function Group	ON-delay, interval, cycle OFF, cycle ON	1	Each function group has different timing functions.
	ON-delay, cycle OFF, cycle ON, signal ON/ OFF delay, OFF-delay, one-shot	2	See page 940.
④ Input Voltage	100 to 240V AC(50/60Hz)	AF20	
	24V AC(50/60Hz)/24V DC	AD24	
	12V DC	D12	

Part Numbers

Voltage	Power Triggered		Start Input Triggered	
	8-Pin	Blade	11-Pin	Blade
12V DC	RTE-P1D12	RTE-B1D12	RTE-P2D12	RTE-B2D12
24V AC/DC	RTE-P1AD24	RTE-B1AD24	RTE-P2AD24	RTE-B2AD24
100-240V AC	RTE-P1AF20	RTE-B1AF20	RTE-P2AF20	RTE-B2AF20

Time Range Determined by Time Range Selector and Dial Selector

	Dial	0 - 1	0 - 3	0 - 10	0 - 30	0 - 60
Range	Second	0.1 sec - 1 sec	0.1 sec - 3 sec	0.2 sec - 10 sec	0.6 sec - 30 sec	1.2 sec - 60 sec
	Minute	1.2 sec - 1 min	3.6 sec - 3 min	12 sec - 10 min	36 sec - 30 min	1.2 min - 60 min
	Hour	1.2 min - 1 hr	3.6 min - 3 hr	12 min - 10 hr	36 min - 30 hr	1.2 hr - 60 hr
	10 Hours	12 min - 10 hr	36 min - 30 hr	2 hr - 100 hr	6 hr - 300 hr	12 hr - 600 hr

Downloaded from Arrow.com.

Timing Diagrams

RTE-P1, -B1

RTE-P1

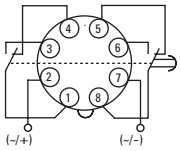

RTE-B1

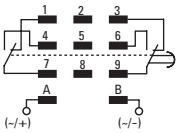

1. RTE-B1: Do not apply voltage to terminals #2, #5 & #8.
2. IDEC sockets are as follows: RTE-P1: SR2P-06* pin type socket, RTE-B1: SR3B-05* blade type socket, (*-may be followed by suffix letter A,B,C or U).

A: ON-Delay 1 (power start)
Set timer for desired delay, apply power to coil. Contacts transfer after preset time has elapsed, and remain in transferred position until timer is reset. Reset occurs with removal of power.

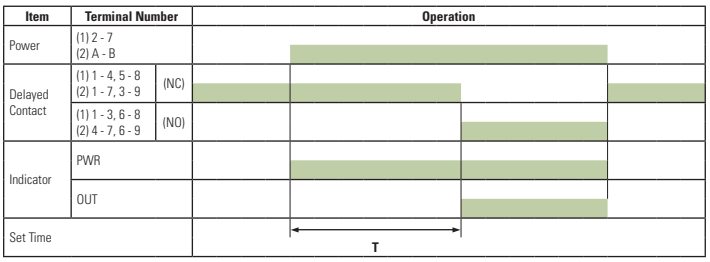

B: Interval (power start)
Set timer for desired delay, apply power to coil. Contacts transfer immediately, and return to original position after preset time has elapsed. Reset occurs with removal of power.

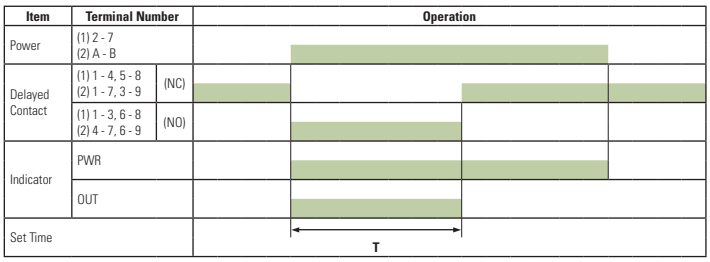

C: Cycle 1 (power start, OFF first)
Set timer for desired delay, apply power to coil. First transfer of contacts occurs after preset delay has elapsed, after the next elapse of preset delay contacts return to original position. The timer now cycles between on and off as long as power is applied (duty ratio 1:1).

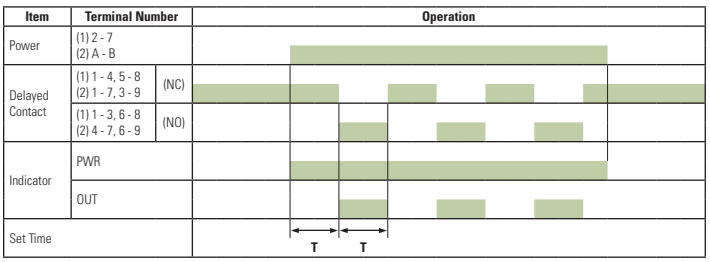

D: Cycle 3 (power start, ON first)
Functions in same manner as Mode C, with the exception that first transfer of contacts occurs as soon as power is applies. The ratio is 1:1. Time On = Time Off

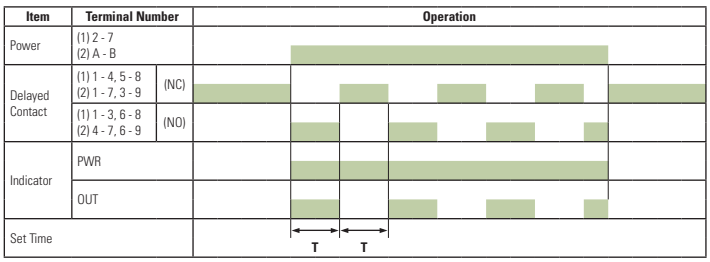

Downloaded from Arrow.com.

Timing Diagrams con't

RTE-P2, -B2

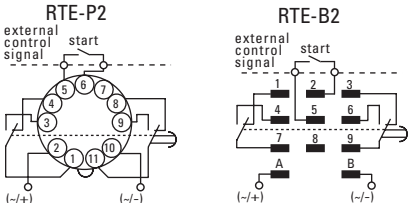

1. RTE-P2: Do not apply voltage to terminals #5, #6 & #7.
2. RTE-B2: Do not apply voltage to terminals #2, #5 & #8.
3. IDEC sockets are as follows: RTE-P2: SR3P-05* pin type socket, RTE-B2: SR3B-05* blade type socket, (*-may be followed by suffix letter A,B,C or U).

A: ON-Delay 2 (signal start)
When a preset time has elapsed after the start input turned on while power is on, the NO output contact goes on.

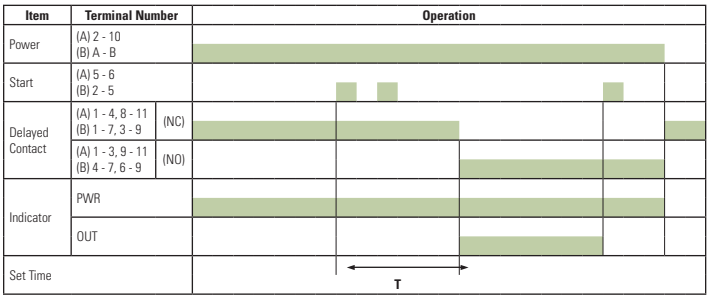

B: Cycle 2 (signal start, OFF first)
When the start input turns on while power is on, the output oscillates at a preset cycle (duty ratio 1:1), starting while the NO contact off.

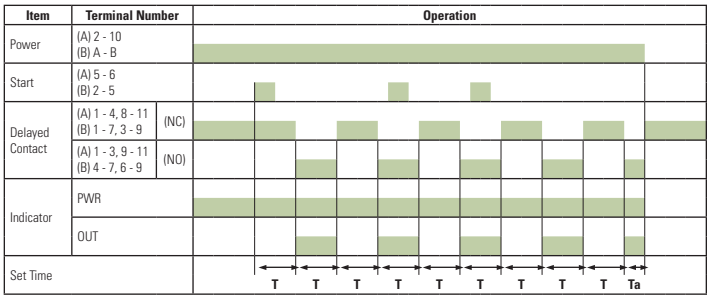

C: Cycle 4 (signal start, ON first)
When the start input turns on while power is on, the NO contact goes on. The output oscillates at a preset cycle (duty ratio 1:1).

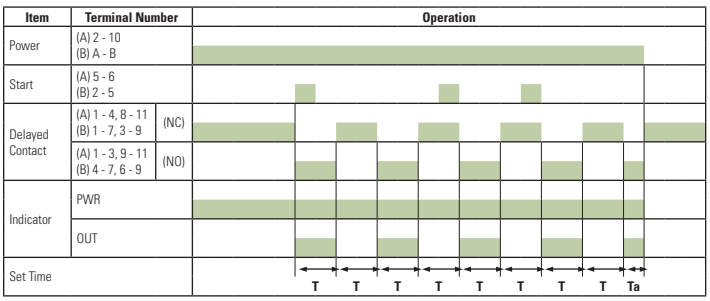

D: Signal ON/OFF-Delay
When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed while the start input remains on, the output contact goes off. When the start input turns off, the NO contact goes on again. When a preset time has elapsed after the start input turned off, the NO contact goes off.

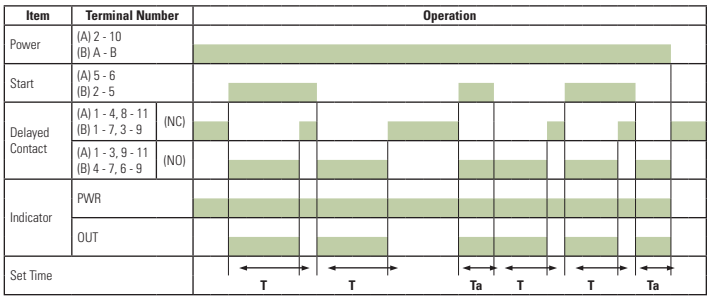

E: Signal OFF-Delay
When power is turned on while the start input is on, the NO output contact goes on. When a preset time has elapsed after the start input turned off, the NO output contact goes off.

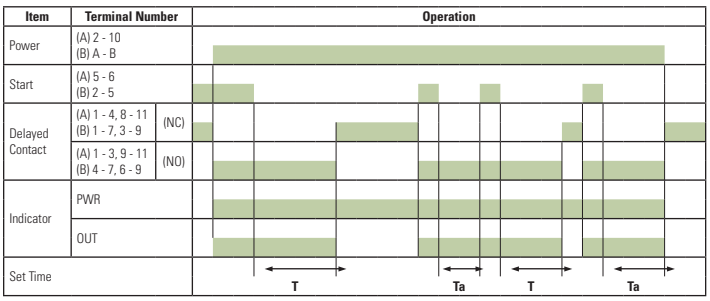

F: One-Shot (signal start)
When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed, the NO output contact goes off.

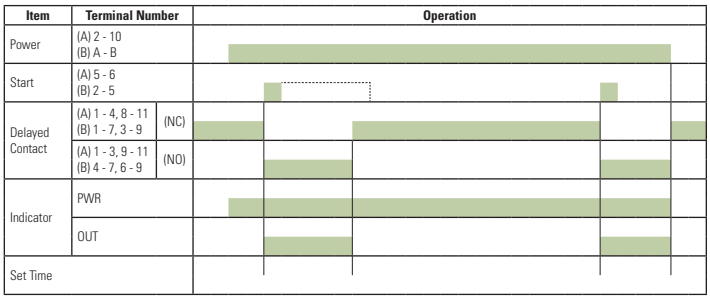

Downloaded from Arrow.com.

Temperature Derating Curves

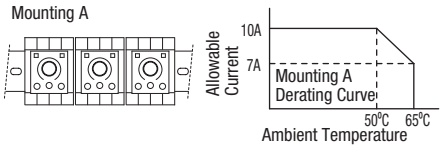

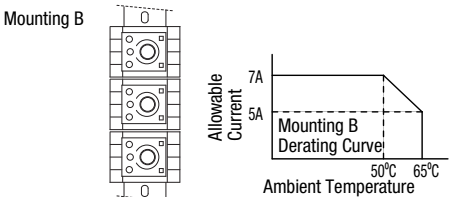

Instructions

Installation of Hold-Down Springs
DIN Rail Mount Socket

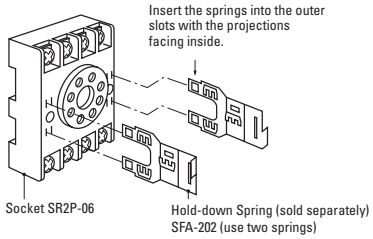

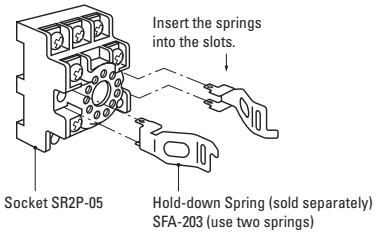

Switch Settings

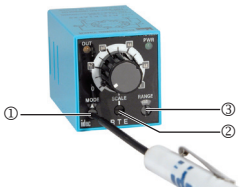

①Operator Mode Selector
②Scale Selector
③Time Range Selector

1. Turn the selectors securely using a flat screwdriver 4mm wide (maximum).
   Note that incorrect setting may cause malfunction. Do not turn the selectors beyond their limits.
2. Since changing the setting during timer operation may cause malfunction, turn power off before changing.

Safety Precautions

Special expertise is required to use Electronic Timers.

- All Electronic Timers are manufactured under IDEC's rigorous quality control system, but users must add a backup or fail safe provision to the control system when using the Electronic Timer in applications where heavy damage or personal injury may occur should the Electronic Timer fail.
- Install the Electronic Timer according to instructions described in this catalog.
- Make sure that the operating conditions are as described in the specifications. If you are uncertain about the specifications, contact IDEC in advance.
- In these directions, safety precautions are categorized in order of importance under Warning and Caution.

Warnings

Warning notices are used to emphasize that improper operation may cause severe personal injury or death.

- Turn power off to the Electronic timer before starting installation, removal, wiring, maintenance, and inspection on the Electronic Timer.
- Failure to turn power off may cause electrical shocks or fire hazard.
- Do not use the Electronic Timer for an **emergency stop circuit** or **interlocking circuit**. If the Electronic Timer should fail, a machine malfunction, breakdown, or accident may occur.

Caution

Caution notices are used where inattention might cause personal injury or damage to equipment.

- The Electronic Timer is designed for installation in equipment. Do not install the Electronic Timer outside equipment.
- Install the Electronic Timer in environments described in the specifications. If the Electronic Timer is used in places where it will be subjected to high-temperature, high-humidity, condensation, corrosive gases, excessive vibrations, or excessive shocks, then electrical shocks, fire hazard, or malfunction could result.
- Use an IEC60127-approved fuse and circuit breaker on the power and output line outside the Electronic Timer.
- Do not disassemble, repair, or modify the Electronic Timer.
- When disposing of the Electronic Timer, do so as industrial waste.

Downloaded from Arrow.com.

Accessories

DIN Rail Mounting Accessories

DIN Rail/Surface Mount Sockets and Hold-Down Springs

DIN Rail Mount Socket				Applicable Hold-Down Springs	
Style	Appearance	Use with Timers	Part Number	Appearance	Part Number
11-Pin Screw Terminal (dual tier)		RTE-P2	SR3P-05		SFA-203
11-Pin FingerSafe Socket			SR3P-05C		
8-Pin Screw Terminal		RTE-P1	SR2P-06		SFA-202
8-Pin Fingersafe Socket			SR2P-05C		
11-Blade Screw Terminal		RTE-B1 RTE-B2	SR3B-05		
DIN Mounting Rail Length 1000mm		—	BNDN1000		

Panel Mounting Accessories

Flush Panel Mount Adapter and Sockets that use an Adapter

Accessory	Description	Appearance	Use with	Part No.
Panel Mount Adapter	Adaptor for flush panel mounting RTE timers		All RTE timers	RTB-G01
Sockets for use with Panel Mount Adapter	8-pin screw terminal	(Shown: SR6P-M08G Wiring Socket Adapter)	RTE-P1	SR6P-M08G
	11-pin screw terminal		RTE-P2	SR6P-M11G
	8-pin solder terminal		RTE-P1	SR6P-S08
	11-pin solder terminal		RTE-P2	SR6P-S11

Downloaded from Arrow.com.

Dimensions

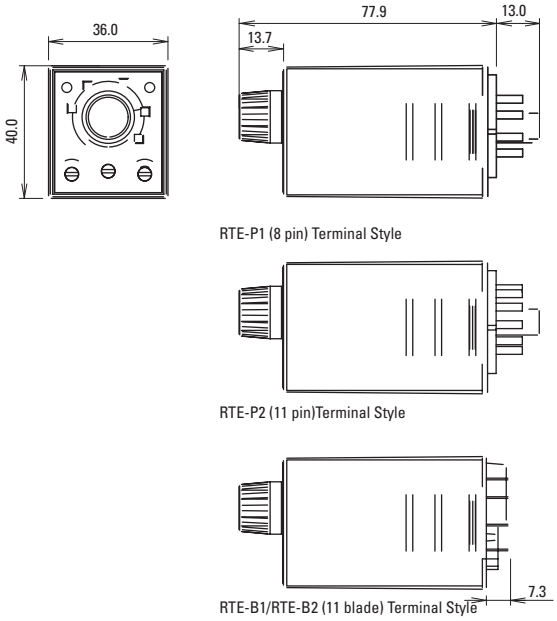

RTE-P1 (8 pin) Terminal Style

RTE-P2 (11 pin)Terminal Style

RTE-B1/RTE-B2 (11 blade) Terminal Style

Panel Mount Adapter

RTE Timer, 8-Pin and 11-Pin with SR6P-S08 or SR6P-S11

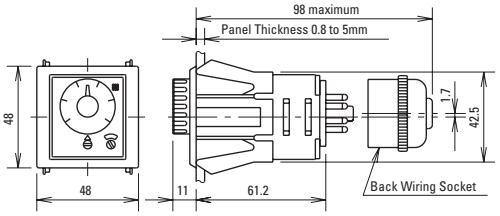

RTE Timer, 8-Pin with SR6P-M08G

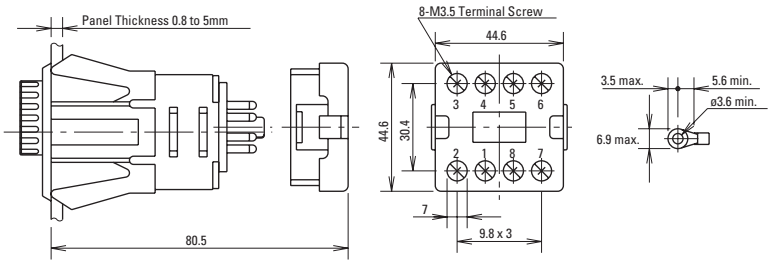

RTE Timer, 11-Pin with SR6P-M11G

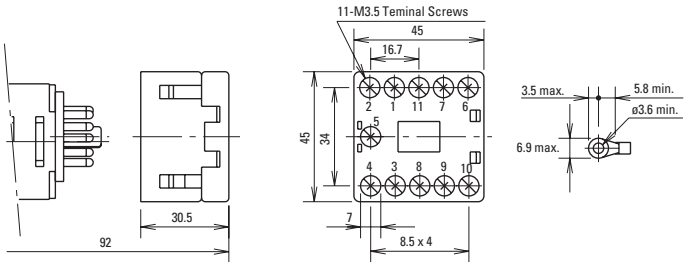

Downloaded from Arrow.com.