

# Smart Laser Sensors E3NC

CSM\_E3NC\_DS\_E\_9\_3

## Ideal for Applications That Cannot Be Handled with Fiber Sensors or Photoelectric Sensors

- The lineup includes E3NC-L Sensors, which are ideal for presence detection, and E3NC-S Sensors, which are ideal for discriminations.
- E3NC-L Sensors are available in Coaxial Retro-reflective Models, Long-distance Variable-spot Diffuse-reflective Models, and Small-spot Limited-reflective Models.
- The E3NC-S Sensors include CMOS and provide stable detection of workpieces with different colors and inclined installation.
- Smart Tuning to achieve stable detection with easy setup.
- White on black display characters for high visibility.
- Flexible robot cables are used for the Sensor Heads.

 Refer to the *Safety Precautions* on page 14.




For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

## Features


### Retro-reflective Models: E3NC-LH03

- Maximum sensing distance of 8 m.
- Stable detection of many types of workpieces.
- Stable detection of highly transparent films.

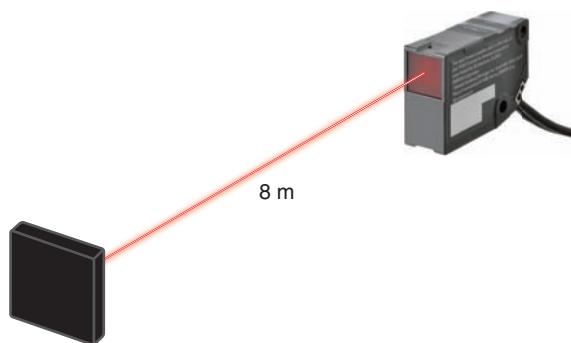


### CMOS Laser, Reflective Models: E3NC-SH250H/SH250/SH100

- Stable detection even for different workpiece colors and materials.
- Stable detection for inclined Head installation and different workpiece shapes.

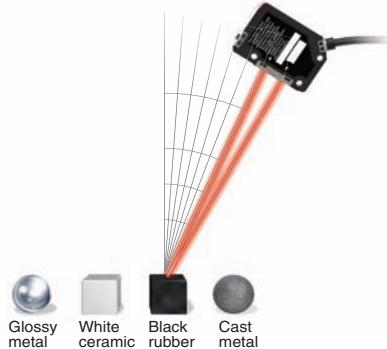

### Diffuse-reflective Models: E3NC-LH02 PAT.P

- Long-distance detection at up to 1.2 m.
- Spot can be adjusted to the workpiece or application.

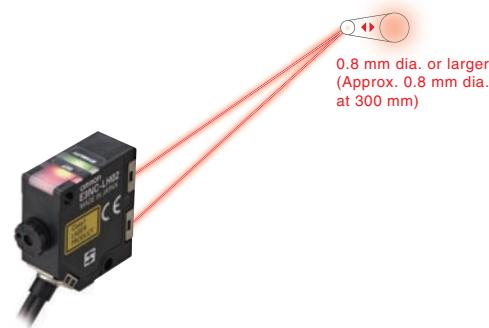

### Amplifier Units

- Same shape as Fiber Amplifier Units plus easy operation.
- Smart Tuning with one button.



## Ordering Information

### Sensor Heads: E3NC-L Compact Laser Sensor Series (Dimensions → page 17)

Sensing method	Appearance	Beam shape	Sensing distance			Laser class	Cable length	Model
Coaxial Retro-reflective with MSR function		Spot	8 m *			Class 1	2 m	E3NC-LH03 2M
							5 m	E3NC-LH03 5M
							2 m	E3NC-LH02 2M
							5 m	E3NC-LH02 5M
							2 m	E3NC-LH01 2M
							5 m	E3NC-LH01 5M

\* These values apply when an E39-R21, E39-R22, E39-RS10, or E39-RS11 Reflector is used. A Reflector is not included. Purchase a Reflector separately to match the intended use of the Sensor.

**Note:** Only an E3NC-LA□□ Amplifier Unit can be connected.

### Amplifier Units: E3NC-L Compact Laser Sensor Series (Dimensions → page 19)

Connecting method	Appearance	Inputs/outputs	Model	
			NPN output	PNP output
Pre-wired (2 m)		2 outputs + 1 input	E3NC-LA21 2M	E3NC-LA51 2M
Wire-saving Connector		1 output + 1 input	E3NC-LA7	E3NC-LA9
M8 Connector		1 output + 1 input	E3NC-LA24	E3NC-LA54
Connector for Sensor Communications Unit *		---	E3NC-LA0	

\* A Sensor Communications Unit is required if you want to use the Amplifier Unit on a network.

**Note:** Only an E3NC-LH□□ Sensor Head can be connected.

### Sensor Heads: E3NC-S Ultra-compact CMOS Laser Sensor Series (Dimensions → page 18)

Sensing method	Appearance	Beam shape	Measurement range			Laser class	Cable length	Model	
Distance-settable		Spot	35 to 250 mm			Class 2	2 m	E3NC-SH250H 2M	
							2 m	E3NC-SH250 2M	
			35 to 100 mm			Class 1	2 m	E3NC-SH100 2M	
							2 m		

**Note:** Only an E3NC-SA□□ Amplifier Unit can be connected.

**Amplifier Units: E3NC-S Ultra-compact CMOS Laser Sensor Series** (Dimensions → page 19)

Connecting method	Appearance	Inputs/outputs	Model	
			NPN output	PNP output
Pre-wired (2 m)		2 outputs + 1 input	E3NC-SA21 2M	E3NC-SA51 2M
Wire-saving Connector		1 output + 1 input	E3NC-SA7	E3NC-SA9
M8 Connector		1 output + 1 input	E3NC-SA24	E3NC-SA54
Connector for Sensor Communications Unit *		---	E3NC-SA0	

\* A Sensor Communications Unit is required if you want to use the Amplifier Unit on a network.

Note: Only an E3NC-SH□□ or E3NC-SH□□H Sensor Head can be connected.

**Accessories (Sold Separately)**
**Sensor Head Accessories**
**Reflectors (Required for Retro-reflective Sensors) (Dimensions → page 21)**

A Reflector is not provided with the Sensor Head. It must be ordered separately.

Applicable Sensor Head	Appearance	Model	Quantity
E3NC-LH03		E39-R21	1
		E39-R22	
		E39-RS10	
		E39-RS11	

Note: Refer to the *Safety Precautions* on page 14 for how to attach the reflector.

**Sensor Head Mounting Brackets (Dimensions → page 22)**

A Mounting Bracket is not provided with the Sensor Head. It must be ordered separately as required.

Applicable Sensor Head	Appearance	Model	Quantity	Contents
E3NC-LH03		E39-L190	1	Mounting Bracket: 1 Nut plate: 1 Phillips screws (M3×18): 2
E3NC-LH02		E39-L185		
E3NC-LH01		E39-L186		
E3NC-SH250H E3NC-SH250 E3NC-SH100		E39-L187		
		E39-L188		

## Amplifier Unit Accessories

### Wire-saving Connectors (Required for models for Wire-saving Connectors.) (Dimensions → page 26)

Connectors are not provided with the Amplifier Unit and must be ordered separately. \*Protective stickers are provided.

Type	Appearance	Cable length	No. of conductors	Model
Master Connector		2 m	4	E3X-CN21
Slave Connector			2	E3X-CN22

### Sensor I/O Connectors (Required for models for M8 Connectors.) (Dimensions → page 26)

Connectors are not provided with the Amplifier Unit and must be ordered separately.

Size	Cable	Appearance	Cable type	Model
M8	Standard cable	Straight	2 m 5 m	XS3F-M421-402-A XS3F-M421-405-A
		L-shaped		XS3F-M422-402-A XS3F-M422-405-A
			4-wire	
			2 m 5 m	

**Note:** For details, refer to XS3 which can be accessed from your OMRON website.

### Amplifier Unit Mounting Bracket (Dimensions → page 27)

A Mounting Bracket is not provided with the Amplifier Unit. It must be ordered separately as required.

Appearance	Model	Quantity
	E39-L143	1

**Note:** For details, refer to Mounting Brackets on E39-L/E39-S/E39-R which can be accessed from your OMRON website.

### DIN Track (Dimensions → page 27)

A DIN Track is not provided with the Amplifier Unit. It must be ordered separately as required.

Appearance	Type	Model	Quantity
	Shallow type, total length: 1 m	PFP-100N	1
	Shallow type, total length: 0.5m	PFP-50N	
	Deep type, total length: 1 m	PFP-100N2	

### End Plate (Dimensions → page 27)


Two End Plates are provided with the Sensor Communications Unit. End Plates are not provided with the Amplifier Unit. They must be ordered separately as required.

Appearance	Model	Quantity
	PFP-M	1

### Cover

Attach these Covers to Amplifier Units.

Order a Cover when required, e.g., if you lose the covers.

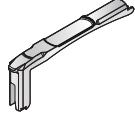Appearance	Model	Quantity
	E39-G24 FOR E3NC-LA	1
	E39-G21 FOR E3NC-SA	

## Related Products

### Sensor Communications Units

Type	Appearance	Model
Sensor Communications Unit for EtherCAT		E3NW-ECT
Sensor Communications Unit for CompoNet		E3NW-CRT
Sensor Communications Unit for CC-Link		E3NW-CCL
Distributed Sensor Unit *		E3NW-DS

Refer to your OMRON website for details.

\* The Distributed Sensor Unit can be connected to any of the Sensor Communications Units.

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

CompoNet is a registered trademark of the ODVA.

CC-Link is a registered trademark of Mitsubishi Electric Corporation. The trademark is managed by the CC-Link Partner Association.

## Ratings and Specifications

### Compact Laser Sensors: E3NC-L

#### Sensor Heads

Item	Model	Coaxial Retro-reflective with MSR function		Diffuse-reflective		Limited-reflective			
		E3NC-LH03	E3NC-LH03+ E39-P51	E3NC-LH02	E3NC-LH02+ E39-P52				
<b>Light source (wavelength)*1</b>		Visible semiconductor laser diode (660 nm), 1.35 mW (average output: 315 $\mu$ W) (JIS Class 1, IEC/EN Class 1, and FDA Class 1)							
<b>Sensing distance*2</b>	<b>Giga-power mode (GIGA)</b>	8 m	0.5 m	1,200 mm	1,000 mm	70±15 mm			
	<b>Standard mode (Stnd)</b>	6 m		750 mm	600 mm				
	<b>High-speed mode (HS)</b>	3.5 m		250 mm	200 mm				
	<b>Super-high-speed mode (SHS)</b>	2 m		200 mm	150 mm				
<b>Beam shape</b>		Spot	Line	Spot	Line	Spot			
<b>Beam size*3</b>		Approx. 2 mm dia. at 1 m	Line length: Approx. 25 mm at 250 mm Line length: Approx. 50 mm at 500 mm	Approx. 0.8 mm dia. at 300 mm	Line length: Approx. 45 mm at 500 mm Line length: Approx. 100 mm at 1,000 mm	Approx. 0.1 mm dia. at 70 mm			
<b>Differential distance*4</b>		---		10% of sensing distance max.					
<b>Indicators</b>		OUT indicator (orange) and STABILITY indicator (green)							
<b>Ambient illumination (Receiver side)</b>		Incandescent lamp: 10,000 lx max., Sunlight: 20,000 lx max.							
<b>Ambient temperature range</b>		Operating: -10 to 55°C; Storage: -25 to 70°C (with no icing or condensation)							
<b>Ambient humidity range</b>		Operating and storage: 35% to 85% (with no condensation)							
<b>Altitude</b>		2,000 m max.							
<b>Installation environment</b>		Pollution degree 3 (as per IEC 60947-1)							
<b>Insulation resistance</b>		20 M $\Omega$ min. (at 500 VDC)							
<b>Dielectric strength</b>		1,000 VAC at 50/60 Hz for 1 min							
<b>Vibration resistance (destruction)</b>		10 to 55 Hz with a 1.5-mm double amplitude or 100 m/s <sup>2</sup> for 2 hours each in X, Y, and Z directions							
<b>Shock resistance (destruction)</b>		500 m/s <sup>2</sup> for 3 times each in X, Y, and Z directions							
<b>Degree of protection</b>		IEC IP67*5		IEC IP65 (E3NC-LH02: Applies only when adjuster is locked.)*5					
<b>Connecting method</b>		Pre-wired connector (standard length: 2 m)							
<b>Materials</b>	<b>Sensor Head</b>	<b>Case</b>	Polybutylene terephthalate (PBT)						
		<b>Lens</b>	Methacrylic resin (PMMA)						
		<b>Cable</b>	Vinyl chloride (PVC)						
	<b>Lens Attachment</b>	<b>Case</b>	---	ABS	---	ABS			
		<b>Lens</b>	---	Methacrylic resin (PMMA)	---	Methacrylic resin (PMMA)			
<b>Weight (packed state/Sensor Head only)</b>	<b>Models with 2-m cable</b>	Approx. 120 g/approx. 70 g		Approx. 115 g/approx. 65 g					
	<b>Models with 5-m cable</b>	Approx. 180 g/approx. 130 g		Approx. 175 g/approx. 125 g					
	<b>Lens Attachment</b>	---	Approx. 25 g/approx. 2 g	---	Approx. 25 g/approx. 2 g	---			
<b>Accessories</b>		Instruction Manual							

- \*1. These Sensors are classified as Class 1 laser devices under IEC 60825-1 and the regulations of Laser Notice No. 50 for FDA certification. CDRH (Center for Devices and Radiological Health) registration has been completed.  
E3NC-LH01, E3NC-LH02 (Accession Number: 1220690)  
E3NC-LH03 (Accession Number: 1320739)
- \*2. The values were measured using the OMRON standard sensing object (white paper) for the E3NC-LH01, E3NC-LH02, and E3NC-LH02 + E39-P52.  
The values for the E3NC-LH03, and E3NC-LH03 + E39-P51 apply when an E39-R21, E39-R22, E39-RS10, or E39-RS11 Reflector is used. Other Reflectors are not recommended.
- \*3. Defined at the 1/e<sup>2</sup> (13.5%) of the central intensity at the measurement distance.  
Measurement may be influenced if there is light leakage outside the defined region and the surroundings of the target object have a high reflectance in comparison to the target object.
- \*4. Measured at the rated sensing distance.
- \*5. The E39-P5□ contains a packing to prevent entry of foreign matter. The degree of protection between the E3NC-LH□□ and E39-P5□ is not specified.

## Amplifier Units

Item		Type	Standard models			Model for Sensor Communications Unit		
		NPN output	E3NC-LA21	E3NC-LA7	E3NC-LA24			
		PNP output	E3NC-LA51	E3NC-LA9	E3NC-LA54			
Connecting method		Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit			
Inputs/outputs	Outputs	2 outputs	1 output					
	External inputs	1 input				--- *1		
Power supply voltage *2		10 to 30 VDC, including 10% ripple (p-p)			Supplied from the connector through the Sensor Communications Unit			
Power consumption *3		At Power Supply Voltage of 24 VDC Normal mode: 1,560mW max. (Current consumption: 65mA max.) Eco ON: 1,320 mW max. (Current consumption: 55 mA max.) Eco LO: 1,440 mW max. (Current consumption: 60 mA max.)						
Control outputs *4		Load power supply voltage: 30 VDC max., open-collector output Load current: Groups of 1 to 3 Amplifier Units: 100 mA max., Groups of 4 to 30 Amplifier Units: 20 mA max. Residual voltage: At load current of less than 10 mA: 1 V max. At load current of 10 to 100 mA: 2 V max. OFF current: 0.1 mA max.			--			
External inputs		Refer to *5.			--			
Indicators		7-segment displays (Sub digital display: green, Main digital display: white) Display direction: Switchable between normal and reversed. OUT indicator (orange), L/D indicator (orange), ST indicator (blue), DPC indicator (green), and OUT selection indicator (orange, only on models with 2 outputs)						
Protection circuits		Power supply reverse polarity protection, output short-circuit protection, and output reverse polarity protection			Power supply reverse polarity protection and output short-circuit protection			
Response time	Super-high-speed mode (SHS)*6	Operate or reset: 80 $\mu$ s						
	High-speed mode (HS)	Operate or reset: 250 $\mu$ s						
	Standard mode (Stnd)	Operate or reset: 1 ms						
	Giga-power mode (GIGA)	Operate or reset: 16 ms						
Sensitivity adjustment		Smart Tuning (2-point tuning, full auto tuning, position tuning, maximum sensitivity tuning, power tuning, or percentage tuning (-99% to +99%), or manual adjustment.						
Maximum connectable Units		30			With E3NW-ECT: 30 units *7 With E3NW-CRT: 16 units With E3NW-CCL: 16 units			
No. of Units for mutual interference prevention	Super-high-speed mode (SHS)*6	0						
	High-speed mode (HS)	2						
	Standard mode (Stnd)	2						
	Giga-power mode (GIGA)	4						
Functions	Dynamic power control (DPC)	Provided						
	Timer	Select from timer disabled, OFF-delay, ON-delay, one-shot, or ON-delay + OFF-delay timer: 1 to 9,999 ms						
	Zero reset	Negative values can be displayed. (Threshold value is shifted.)						
	Resetting settings*8	Select from initial reset (factory defaults) or user reset (saved settings).						
	Eco mode*9	Select from OFF (digital display lit), ECO ON (digital display not lit), and ECO LO (digital display dimmed).						
	Bank switching	Select from banks 1 to 4.						
	Power tuning	Select from ON or OFF.						
	Output 1	Select from Normal Detection Mode or Area Detection Mode.						
	Output 2	Select from normal detection mode, alarm output mode, or error output mode.	---		Select from normal detection mode, alarm output mode, or error output mode.			
External input		Select from input OFF, tuning, power tuning, laser OFF, zero reset, or bank switching.			---			
Hysteresis width		Select from standard setting or user setting.						

\*1. Two sensor outputs are allocated in the programmable logic controller PLC I/O table.

PLC operation via Communications Unit enables reading detected values and changing settings.

\*2. Applicable Sensor Head is the series of E3NC-LH□□ (Input/Output 10-30V DC Class 2)

\*3. At Power Supply Voltage of 10 to 30 VDC.

Normal mode: 1,650 mW max. (Current consumption: 55 mA max. at 30 VDC, 115 mA max. at 10 VDC)

Eco ON: 1,410 mW max. (Current consumption: 47 mA max. at 30 VDC, 95 mA max. at 10 VDC)

Eco LO: 1,530 mW max. (Current consumption: 51 mA max. at 30 VDC, 105 mA max. at 10 VDC)

\*4. The total for both outputs of a model with 2 outputs is 100 mA max. (Residual voltage: Load current of less than 10 mA: 1 V max., Load current of 10 to 100 mA: 2 V max.).

\*5. The following details apply to the input.

	Contact input (relay or switch)	Non-contact input (transistor)	Input time*5-1
NPN	ON: Shorted to 0 V (Sourcing current: 1 mA max.). OFF: Open or shorted to Vcc.	ON: 1.5 V max. (Sourcing current: 1 mA max.) OFF: Vcc – 1.5 V to Vcc (Leakage current: 0.1 mA max.)	ON: 9 ms min. OFF: 20 ms min.
PNP	ON: Shorted to Vcc (Sinking current: 3 mA max.). OFF: Open or shorted to 0 V.	ON: Vcc – 1.5 V to Vcc (Sinking current: 3 mA max.) OFF: 1.5 V max. (Leakage current: 0.1 mA max.)	

\*5-1. Input time is 25 ms (ON)/(OFF) only when (in tUNe) or (in PtUn) input is selected.

\*6. The mutual interference prevention function is disabled if the detection mode is set to super-high-speed mode.

\*7. When connected to an OMRON NJ-series Controller.

\*8. The bank is not reset by the user reset function or saved by the user save function.

\*9. Eco LO is supported for Amplifier Units manufactured in July 2014 or later.

Item	Type	Standard models			Model for Sensor Communications Unit			
	NPN output	E3NC-LA21	E3NC-LA7	E3NC-LA24				
	PNP output	E3NC-LA51	E3NC-LA9	E3NC-LA54				
	Connecting method	Pre-wired	Wire-saving Connector	M8 Connector				
Ambient temperature range*	Operating: Groups of 1 or 2 Amplifier Units: -25 to 55°C, Groups of 3 to 10 Amplifier Units: -25 to 50°C, Groups of 11 to 16 Amplifier Units: -25 to 45°C, Groups of 17 to 30 Amplifier Units: -25 to 40°C Storage: -30 to 70°C (with no icing or condensation)			Operating: Groups of 1 or 2 Amplifier Units: 0 to 55°C, Groups of 3 to 10 Amplifier Units: 0 to 50°C, Groups of 11 to 16 Amplifier Units: 0 to 45°C, Groups of 17 to 30 Amplifier Units: 0 to 40°C, Storage: -30 to 70°C (with no icing or condensation)				
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)							
Altitude	2,000 m max.							
Installation environment	Pollution degree 3 (as per IEC 60947-1)							
Insulation resistance	20 MΩ (at 500 VDC)							
Dielectric strength	1,000 VAC at 50/60 Hz for 1 min							
Vibration resistance (destruction)	10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions							
Shock resistance (destruction)	500 m/s <sup>2</sup> for 3 times each in X, Y, and Z directions			150m/s <sup>2</sup> for 3 times each in X, Y, and Z directions				
Weight (packed state/Amplifier Unit only)	Approx. 115 g/approx. 75 g	Approx. 60 g/approx. 20 g	Approx. 65 g/approx. 25 g					
Materials	Case	Polycarbonate (PC)						
	Cover	Polycarbonate (PC)						
	Cable	Vinyl chloride (PVC)						
Accessories	Instruction Manual							

\* When the number of connected units is 11 or more, the ambient temperature is less than 50°C.

## Accessories

### Reflectors

Item	Model	E39-R21	E39-R22	E39-RS10	E39-RS11
Ambient temperature	Operating: -10 to 55°C; Storage: -25 to 70°C (with no icing or condensation)				
Ambient humidity	Operating/storage: 35% to 85% (with no condensation)				
Vibration resistance (destruction)	10 to 55 Hz with a 1.5-mm double amplitude or 100 m/s <sup>2</sup> for 2 hours each in X, Y, and Z directions				
Shock resistance (destruction)	500 m/s <sup>2</sup> 3 times each in X, Y, and Z directions				
Degree of protection	IEC IP67 (E39-R21 and E39-R22 only)				
Materials	Reflective surface: Methacrylic resin (PMMA) Back surface: Polybutylene terephthalate (PBT)		Methacrylic resin (PMMA)		
Weight (packed state/Reflector only)	Approx. 30 g/approx. 5 g	Approx. 35 g/approx. 10 g	Approx. 26 g/approx. 1 g	Approx. 30 g/approx. 5 g	
Accessories	Instruction manual				

## Ultra-compact CMOS Laser Sensor: E3NC-S

### Sensor Heads

Item	Sensing method Model	Distance-settable					
		E3NC-SH250H	E3NC-SH250	E3NC-SH100			
<b>Light source (wavelength)*1</b>	Visible semiconductor laser diode (660 nm), 1 mW (average output: 220 $\mu$ W) (JIS Class 2, IEC/EN Class 2, and FDA Class 2)	Visible semiconductor laser diode (660 nm), 0.5 mW (average output: 100 $\mu$ W) (JIS Class 1, IEC/EN Class 1, and FDA Class 1)					
<b>Measurement range</b>	35 to 250 mm (display value: 350 to 2,500)		35 to 100 mm (display value: 350 to 1,000)				
<b>Standard detected level difference *2</b>	35 to 180mm: 9 mm 180 to 250 mm: 25 mm		35 to 50 mm: 1.5 mm 50 to 100 mm: 3 mm				
<b>Beam size*3</b>	Approx. 1 mm dia. at 250 mm		Approx. 0.5 mm dia. at 100 mm				
<b>Indicators</b>	OUT indicator (orange), STABILITY indicator (green), and ST indicator (blue)						
<b>Ambient illumination (Receiver side)</b>	Incandescent lamp: 4,000 lx max., Sunlight: 8,000 lx max.	Incandescent lamp: 2,000 lx max., Sunlight: 4,000 lx max.	Incandescent lamp: 4,000 lx max., Sunlight: 8,000 lx max.				
<b>Ambient temperature range</b>	Operating: -10 to 50°C; Storage: -25 to 70°C (with no icing or condensation)						
<b>Ambient humidity range</b>	Operating and storage: 35% to 85% (with no condensation)						
<b>Altitude</b>	2,000 m max.						
<b>Installation environment</b>	Pollution degree 3 (as per IEC 60947-1)						
<b>Insulation resistance</b>	20 M $\Omega$ min. (at 500 VDC)						
<b>Dielectric strength</b>	1,000 VAC at 50/60 Hz for 1 min						
<b>Vibration resistance (destruction)</b>	10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions						
<b>Shock resistance (destruction)</b>	500 m/s <sup>2</sup> 3 times each in X, Y, and Z directions						
<b>Degree of protection</b>	IEC IP67						
<b>Connecting method</b>	Pre-wired connector (Standard cable length: 2 m)						
<b>Materials</b>	<b>Case</b>	Polybutylene terephthalate (PBT)					
	<b>Lens</b>	Methacrylic resin (PMMA)					
	<b>Cable</b>	Vinyl chloride (PVC)					
<b>Weight (packed state/Sensor Head only)</b>	Approx. 125 g/approx. 75 g						
<b>Accessories</b>	Instruction Manual, laser warning label (E3NC-SH250H only)						

**Note:** Incorrect detection may occur outside the measurement range if the object has a high reflection factor.

- \*1. These Sensors are classified as Class 1 laser devices under IEC 60825-1 and the regulations of Laser Notice No. 50 for FDA certification. CDRH (Center for Devices and Radiological Health) registration has been completed. (Accession Number: 1220691)
- \*2. The values were measured at the center of the sensing distance using OMRON's standard sensing object (white ceramic).
- \*3. Beam size: Defined at the  $1/e^2$  (13.5 %) of the central intensity at the measurement center distance.  
Measurement may be influenced if there is light leakage outside the defined region and the surroundings of the target object have a high reflectance in comparison to the target object.  
Also, when detecting a workpiece that is smaller than the beam size, a correct value may not be obtained.

## Amplifier Units

Item		Type	Standard models			Model for Sensor Communications Unit			
		NPN output	E3NC-SA21	E3NC-SA7	E3NC-SA24				
		PNP output	E3NC-SA51	E3NC-SA9	E3NC-SA54				
Connecting method		Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit				
Inputs/outputs	Outputs	2 outputs	1 output			— *1			
	External inputs	1 input							
Power supply voltage *2			10 to 30 VDC, including 10% ripple (p-p)			Supplied from the connector through the Sensor Communications Unit			
Power consumption *3			At Power Supply Voltage of 24 VDC Normal mode: 1,920 mW max. (Current consumption: 80 mA max.) Eco ON: 1,680 mW max. (Current consumption: 70 mA max.) Eco LO: 1,800 mW max. (Current consumption: 75 mA max.)						
Control outputs *4			Load power supply voltage: 30 VDC max., open-collector output Load current: Groups of 1 to 3 Amplifier Units: 100 mA max., Groups of 4 to 30 Amplifier Units: 20 mA max. Residual voltage: At load current of less than 10 mA: 1 V max. At load current of 10 to 100 mA: 2 V max. OFF current: 0.1 mA max.			—			
External inputs			Refer to *5.						
Indicators			7-segment displays (Sub digital display: green, Main digital display: white) Display direction: Switchable between normal and reversed. OUT indicator (orange), L/D indicator (orange), ST indicator (blue), ZERO indicator (green), and OUT selection indicator (orange, only on models with 2 outputs)						
Protection circuits			Power supply reverse polarity protection, output short-circuit protection, and output reverse polarity protection			Power supply reverse polarity protection and output short-circuit protection			
Response time	Super-high-speed mode (SHS) *6	Operate or reset: 1.5 ms							
	High-speed mode (HS)	Operate or reset: 5 ms							
	Standard mode (Stnd)	Operate or reset: 10 ms							
	Giga-power mode (GIGA)	Operate or reset: 50 ms							
Sensitivity adjustment			Smart Tuning (2-point tuning, full auto tuning, 1-point tuning, tuning without workpiece, 2-point area tuning, 1-point area tuning, or area tuning without workpiece), or manual adjustment						
Maximum connectable Units			30			With E3NW-ECT: 30 units *7 With E3NW-CRT: 16 units With E3NW-CCL: 16 units			
No. of Units for mutual interference prevention	Super-high-speed mode (SHS) *6	0							
	High-speed mode (HS)	2							
	Standard mode (Stnd)	2							
	Giga-power mode (GIGA)	2							
Functions	Timer	Select from timer disabled, OFF-delay, ON-delay, one-shot, or ON-delay + OFF-delay timer: 1 to 9,999 ms							
	Zero reset	Negative values can be displayed. (Threshold value is shifted.)							
	Resetting settings *8	Select from initial reset (factory defaults) or user reset (saved settings).							
	Eco mode *9	Select from OFF (digital display lit), ECO ON (digital display not lit), and ECO LO (digital display dimmed).							
	Bank switching	Select from banks 1 to 4.							
	Output 1	Select from Normal detection mode, Area detection mode, or hold mode.							
	Output 2	Select from Normal detection mode or Error output mode.		—		Select from Normal detection mode or Error output mode.			
	External input	Select from input OFF, tuning, laser OFF, zero reset, or bank switching.							
	Keep function *10	Select from ON or OFF.							
	Background suppression *11	Select from ON or OFF.							
	Hysteresis width	Select from standard setting or user setting.							

\*1. Two sensor outputs are allocated in the programmable logic controller PLC I/O table.

PLC operation via Communications Unit enables reading detected values and changing settings.

\*2. Applicable Sensor Head is the series of E3NC-SH□□ (Input/Output 10-30V DC Class 2).

\*3. At Power Supply Voltage of 10 to 30 VDC.

Normal mode: 2,250 mW max. (Current consumption: 75 mA max. at 30 VDC, 145 mA max. at 10 VDC)

Eco ON: 2,010 mW max. (Current consumption: 67 mA max. at 30 VDC, 125 mA max. at 10 VDC)

Eco LO: 2,130 mW max. (Current consumption: 71 mA max. at 30 VDC, 135 mA max. at 10 VDC)

\*4. The total for both outputs of a model with 2 outputs is 100 mA max. (Residual voltage: Load current of less than 10 mA: 1 V max., Load current of 10 to 100 mA: 2 V max.).

\*5. The following details apply to the input.

	Contact input (relay or switch)	Non-contact input (transistor)	Input time*5-1
NPN	ON: Shorted to 0 V (Sourcing current: 1 mA max.). OFF: Open or shorted to Vcc.	ON: 1.5 V max. (Sourcing current: 1 mA max.) OFF: Vcc – 1.5 V to Vcc (Leakage current: 0.1 mA max.)	ON: 9 ms min. OFF: 20 ms min.
PNP	ON: Shorted to Vcc (Sinking current: 3 mA max.). OFF: Open or shorted to 0 V.	ON: Vcc – 1.5 V to Vcc (Sinking current: 3 mA max.) OFF: 1.5 V max. (Leakage current: 0.1 mA max.)	

\*5-1. Input time is 25 ms (ON)/(OFF) only when (in tUnE) input is selected.

\*6. The mutual interference prevention function is disabled if the detection mode is set to super-high-speed mode.

\*7. When connected to an OMRON NJ-series Controller.

\*8. The bank is not reset by the user reset function or saved by the user save function.

\*9. Eco LO is supported for Amplifier Units manufactured in August 2014 or later.

\*10. The output for a measurement error is set. ON: The value of the output from before the measurement error is retained. OFF: The output is turned OFF when a measurement error occurs.

\*11. Only the sensing object is detected when tuning.


Item	Type	Standard models			Model for Sensor Communications Unit
	NPN output	E3NC-SA21	E3NC-SA7	E3NC-SA24	E3NC-SA0
	PNP output	E3NC-SA51	E3NC-SA9	E3NC-SA54	
	Connecting method	Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit
<b>Ambient temperature range*</b>		Operating: Groups of 1 or 2 Amplifier Units: -25 to 55°C, Groups of 3 to 10 Amplifier Units: -25 to 50°C, Groups of 11 to 16 Amplifier Units: -25 to 45°C, Groups of 17 to 30 Amplifier Units: -25 to 40°C Storage: -30 to 70°C (with no icing or condensation)			Operating: Groups of 1 or 2 Amplifier Units: 0 to 55°C, Groups of 3 to 10 Amplifier Units: 0 to 50°C, Groups of 11 to 16 Amplifier Units: 0 to 45°C, Groups of 17 to 30 Amplifier Units: 0 to 40°C Storage: -30 to 70°C (with no icing or condensation)
<b>Ambient humidity range</b>		Operating and storage: 35% to 85% (with no condensation)			
<b>Insulation resistance</b>		20 MΩ (at 500 VDC)			
<b>Altitude</b>		2,000 m max.			
<b>Installation environment</b>		Pollution degree 3 (as per IEC 60947-1)			
<b>Dielectric strength</b>		1,000 VAC at 50/60 Hz for 1 min			
<b>Vibration resistance (destruction)</b>		10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions			
<b>Shock resistance (destruction)</b>		500 m/s <sup>2</sup> for 3 times each in X, Y, and Z directions			150 m/s <sup>2</sup> for 3 times each in X, Y, and Z directions
<b>Weight (packed state/Amplifier Unit only)</b>		Approx. 115 g/approx. 75 g	Approx. 60 g/approx. 20 g	Approx. 65 g/approx. 25 g	
<b>Materials</b>	<b>Case</b>	Polycarbonate (PC)			
	<b>Cover</b>	Polycarbonate (PC)			
	<b>Cable</b>	Vinyl chloride (PVC)			
<b>Accessories</b>		Instruction Manual			

\* When the number of connected units is 11 or more, the ambient temperature is less than 50°C.


## Engineering Data (Reference Value)

### Beam Diameter Vs. Distance


**Retro-reflective Model**  
E3NC-LH03

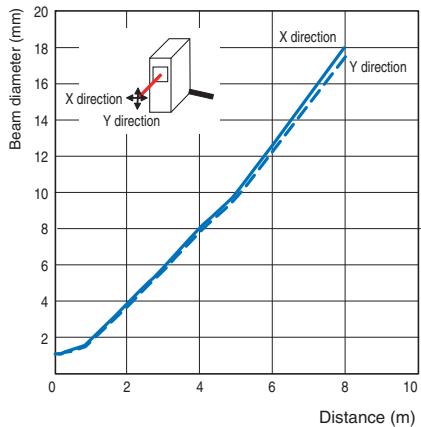


**Retro-reflective Model**  
E3NC-LH03 + E39-P51

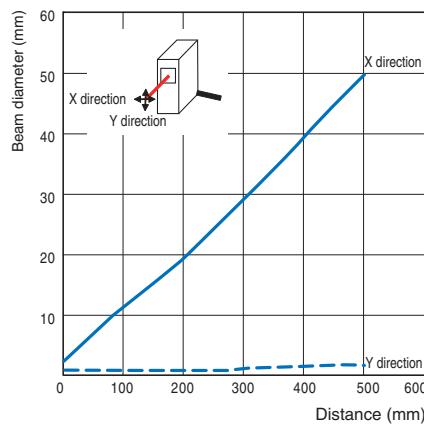


**Diffuse-reflective Model**  
E3NC-LH02

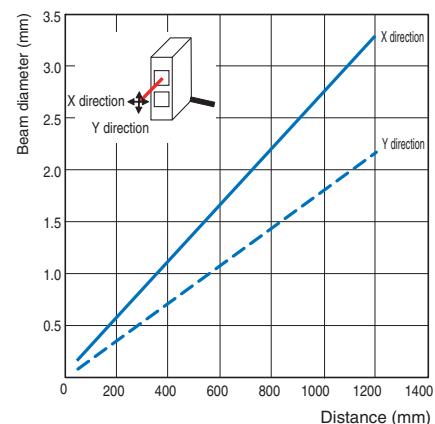


**Diffuse-reflective Model**  
E3NC-LH02 + E39-P52

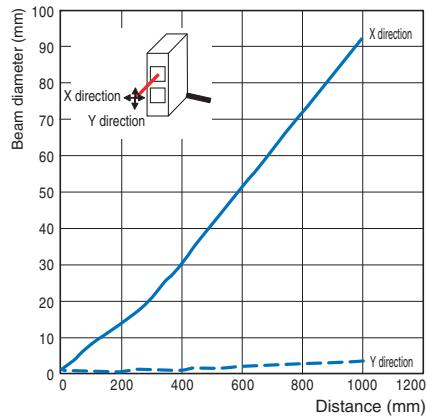


**Limited-reflective Model**  
E3NC-LH01

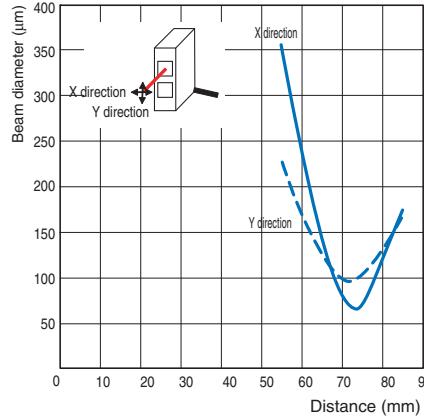

**Distance-settable Model**  
E3NC-SH250/SH250H


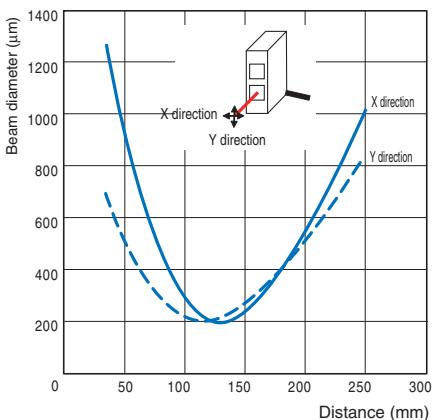


**Distance-settable Model**  
E3NC-SH100

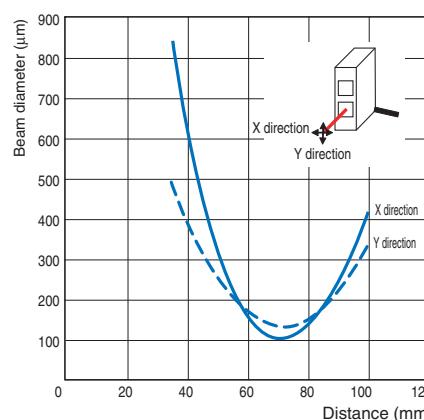



## I/O Circuit Diagrams

## NPN Output

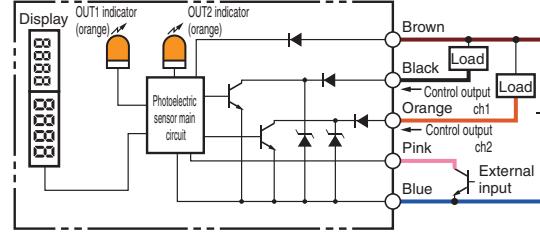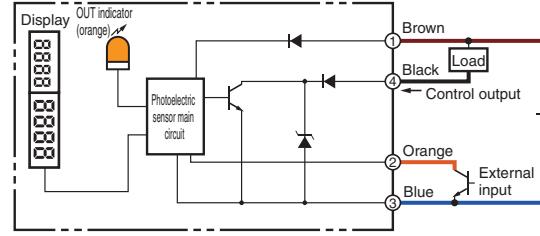Model	Operation mode	Timing chart	L/D indicator	Output circuit
E3NC-LA21 E3NC-SA21	Light-ON	ch1/ Incident light ch2/ No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between brown and black (orange) leads)		
	Dark-ON	ch1/ Incident light ch2/ No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between brown and black (orange) leads)		
E3NC-LA7 E3NC-LA24 E3NC-SA7 E3NC-SA24	Light-ON	Incident light No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between brown and black leads)		
	Dark-ON	Incident light No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between brown and black leads)		

Note: 1, 2, 3 and 4 are pin terminals of M8 Connector Type.

## PNP Output

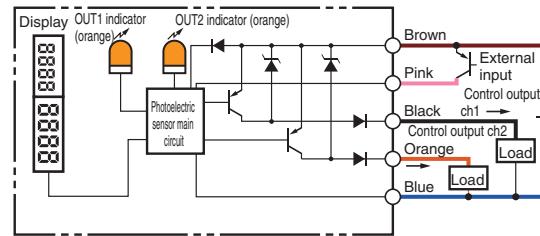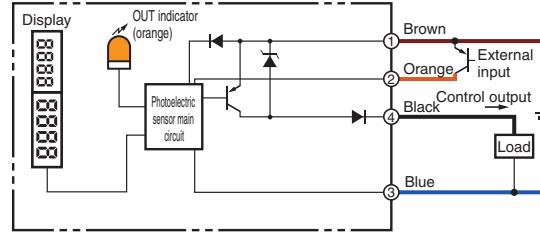
Model	Operation mode	Timing chart	L/D indicator	Output circuit
E3NC-LA51 E3NC-SA51	Light-ON	ch1/ Incident light ch2/ No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between blue and black (orange) leads)		
	Dark-ON	ch1/ Incident light ch2/ No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between blue and black (orange) leads)		
E3NC-LA9 E3NC-LA54 E3NC-SA9 E3NC-SA54	Light-ON	Incident light No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between blue and black leads)		
	Dark-ON	Incident light No incident light OUT indicator (orange) Lit Not lit Output ON OFF Load Operate (e.g., relay) Reset (Between blue and black leads)		

Note: 1, 2, 3 and 4 are pin terminals of M8 Connector Type.


## Nomenclature

### Compact Laser Sensors

#### E3NC-LA21/LA51/LA0

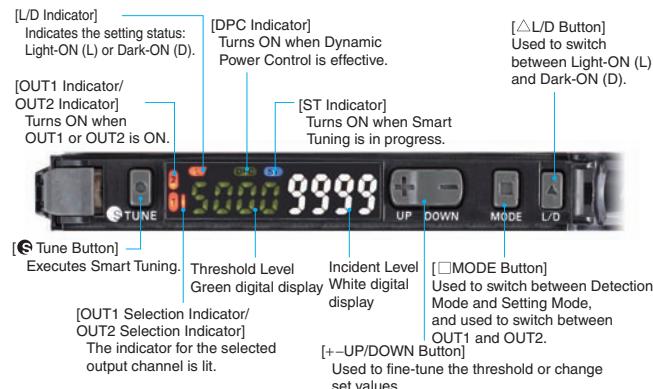


#### E3NC-LA7/LA9/LA24/LA54

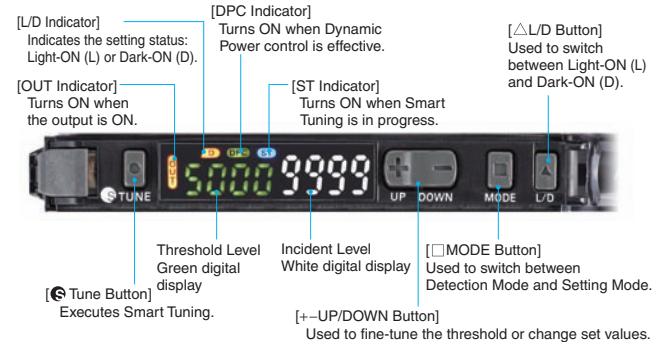


### Ultra-compact CMOS Laser Sensors

#### E3NC-SA21/SA51/SA0

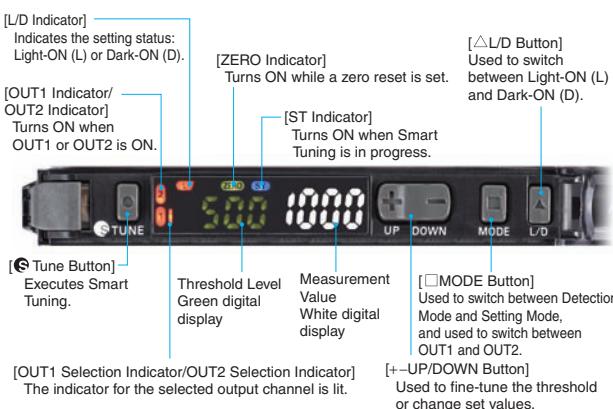

#### E3NC-SA7/SA9/SA24/SA54

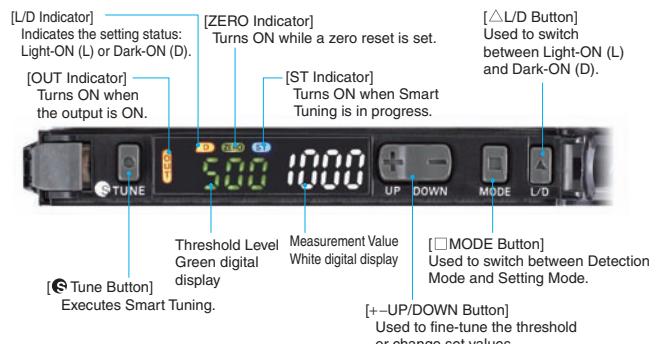



## Precautions for Safe Use

The following precautions must be observed to ensure safe operation of the Sensor Head.

### 1. Installation Environment

- Do not use the Sensor Head in an environment where explosive or flammable gas is present.

- To secure the safety of operation and maintenance, do not install the Sensor Head close to high-voltage devices or power devices.

### 2. Power Supply and Wiring

- Always use an E3NC-LA□□, E3NC-LA0, E3NC-SA□□ or E3NC-SA0 Amplifier Unit. If a different Amplifier Unit is used, damage or fire may occur.

- If you short the cable, reconnect it as specified. If the connections are not correct, damage or fire may occur.

- High-voltage lines and power lines must be wired separately from the Sensor Head. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.

- Always turn OFF the power supply before connecting or disconnecting the connectors.

### 3. Installation

- Use screws for installation and tighten the screws securely, but do not exceed the specified tightening torque.

Specified torque (M3): 0.5 N·m

### 4. Others

- Never disassemble (including removing labels), repair, modify, deform by pressure, or incinerate the Sensor Head. Do not turn the adjuster on the E3NC-LH02 with a force that is greater than 40 mN·m. Damage or fire may occur.

- Dispose of the Sensor Head as industrial waste.

- If you notice any abnormalities, immediately stop using the Sensor Head, turn OFF the power supply, and contact your OMRON representative.

### 5. Conditions of UL

(Applicable Models: E3NC-LH01/LH02 Only)

- The E3NC-LH series sensor head accessories shall be used with the E3NC-LA amplifiers.

These amplifiers and sensor head accessories shall be installed within a suitable enclosure where all components, including cords and connectors, shall be entirely contained within the same enclosure.

(Applicable Models: E3NC-SH100/SH250 Only)

- The E3NC-SH series sensor head accessories shall be used with the E3NC-SA amplifiers.

These amplifiers and sensor head accessories shall be installed within a suitable enclosure where all components, including cords and connectors, shall be entirely contained within the same enclosure.

### 6. Shortening the connection cable for use

(Applicable Models: E3NC-LH01/LH02/SH100/SH250 Only)

(• The shortened cable has not been evaluated by UL.)

## Precautions for Correct Use

Observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on Sensor Head performance.

### 1. Installation Environment

Do not install the Sensor Head in locations subject to the following conditions:

- Ambient temperatures outside of the rated range
- Condensation caused by rapid changes in temperature
- Relative humidity that is not between 35% and 85%
- Corrosive or flammable gas
- Dust, salt, or iron particles
- Direct vibration or shock
- Strong external light interference (such as other laser beams or electric arc-welding machines)
- Direct sunlight or near heaters
- Water, oil, or chemical fumes or spray
- Strong magnetic or electric fields

### 2. Warming Up

- The circuits will be unstable just after the power supply is turned ON, so measurement values may fluctuate gradually.
- For accurate measurements, allow the product to stand for at least 10 minutes after turning ON the power supply before use. (E3NC-S Series)

### 3. Maintenance and Inspection

- Always turn OFF the power supply before adjusting or connecting/ disconnecting the Sensor Head.
- Do not use thinner, benzene, acetone, or kerosene to clean the Sensor Head.
- If large dust particles or dirt adheres to the filter on the front of the Sensor Head, use a blower brush (such as one used to clean camera lenses) to blow it off. Do not blow the dust particles or dirt with your mouth. To remove dust particles or dirt, wipe it off gently with a soft cloth (such as one for cleaning lenses) moistened with a small amount of alcohol. Do not wipe it off with excessive force. Scratches on the filter may cause errors.

### 4. Sensing Object

- The Sensor Head cannot accurately measure objects with the following materials and shapes: Transparent objects (with the E3NC-LH03, objects that are extremely transparent), objects with an extremely low reflection ratio, objects smaller than the spot diameter, objects with a large curvature, excessively inclined objects, etc. Also, for long-distance detection, the Sensor may falsely operate if a white object approaches near the Sensor Head (E3NC-LH03).

### 5. Do not use the Sensor in water, rainfall, or outdoors.


- A ferrite core is attached to the Sensor Head end of the cable connected to the E3NC-LH03 5M. Do not remove the ferrite core or change its position. Also, do not bend the cable within 12 mm of each end of the ferrite core. Doing so may damage the cable.

## Attaching a Reflector

Mount the Reflector as shown in (Correct) below. Errors will be generated if you mount it at the angle shown in (Incorrect). Always install the Reflector at the same angle as the Sensor Head if the head is not mounted vertically or horizontally.

### Common for all models

(Correct) (Correct) (Incorrect) (Incorrect)

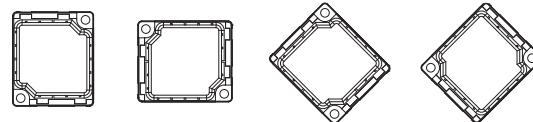


Sheet products (E39-RS10/E39-RS11) are peel-off stickers. Peel off the release paper and apply the sheet to a flat surface for installation. If there are any dirt and dust on the installation surface, a reduction in adhesion and deflection of a sheet may occur, resulting in malfunction.

**Note:** Beam is irradiated on the glossy surface.

## Attaching a Lens Attachment (E39-P51 or E39-P52)

1. Check the widths of the slots in the Sensor and the widths of the tabs on the Lens Attachment and attach the Lens Attachment as shown below. (The Lens Attachment must be in the correct orientation, so the widths of the tabs on the Lens Attachment are different on the top and bottom.)

2. After you attach the Lens Attachment, make sure that the tabs are completely engaged in the slots in the Sensor.

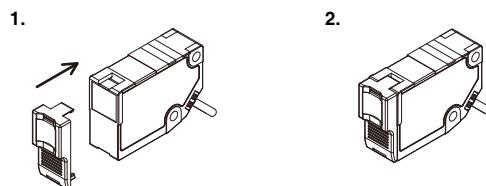

## Amplifier Units

### WARNING

This Amplifier Unit is not designed or rated for ensuring safety of persons either directly or indirectly.

Do not use it for such purposes.



Do not use the Amplifier Unit with voltage in excess of the rated voltage.



Excess voltage may result in malfunction or fire.

Never use the Amplifier Unit with an AC power supply.



Otherwise, explosion may result.

### Precautions for Safe Use

The following precautions must be observed to ensure safe operation of the Amplifier Unit. Doing so may cause damage or fire.

1. Do not install the Amplifier Unit in the following locations.
  - Locations subject to direct sunlight
  - Locations subject to condensation due to high humidity
  - Locations subject to corrosive gas
  - Locations subject to vibration or mechanical shocks exceeding the rated values
  - Locations subject to exposure to water, oil, chemicals
  - Locations subject to steam
  - Locations subjected to strong magnetic field or electric field
2. Do not use the Amplifier Unit in environments subject to flammable or explosive gases.
3. Do not use the Amplifier Unit in any atmosphere or environment that exceeds the ratings.
4. To secure the safety of operation and maintenance, do not install the Amplifier Unit close to high-voltage devices or power devices.
5. High-voltage lines and power lines must be wired separately from the Amplifier Unit. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
6. Do not apply any load exceeding the ratings. Otherwise, damage or fire may result.
7. Do not short the load. Otherwise, damage or fire may result.
8. Connect the load correctly.
9. Do not miswire such as the polarity of the power supply.
10. To use this device as connecting with each other, be sure to connect with the same power supply and turn ON the power simultaneously. Using a separate power supply will influence the functions when connecting the devices to use them.
11. Do not use the Amplifier Unit if the case is damaged.
12. Burn injury may occur. The Amplifier Unit surface temperature rises depending on application conditions, such as the ambient temperature and the power supply voltage. Attention must be paid during operation or cleaning.
13. When setting the sensor, be sure to check safety such as by stopping the equipment.
14. Be sure to turn off the power supply before connecting or disconnecting wires.
15. Do not attempt to disassemble, repair, or modify the Amplifier Unit in any way.
16. When disposing of the Amplifier Unit, treat it as industrial waste.
17. Do not use the Sensor in water, rainfall, or outdoors.
18. UL Standard Certification (Applicable Models: E3NC-LA21/LA51/SA21/SA51 Only)
 


Only the sensors with Enhanced UL Certification Mark are certified by UL. They are intended to be supplied by a "Class 2 circuit". When used in United States and Canada, Please use the same Class 2 source for input and output. The overcurrent protection current rating is 2A max. They were evaluated as Open type and shall be installed within a enclosure.

### Precautions for Correct Use


1. Be sure to mount the unit to the DIN track until it clicks.
2. When using the Amplifier Units with Wire-saving Connectors, attach the protective stickers (provided with E3X-CN-series Connectors) on the unused power pins to prevent electrical shock and short circuiting.

When using the Amplifier Units with Connectors for Communications Units, attach the protective caps (provided with E3NW-series Sensor Communications Unit).

Amplifier Unit with Wire-saving Connector

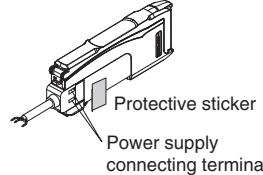

Amplifier Unit with Connector for Sensor Communications Unit

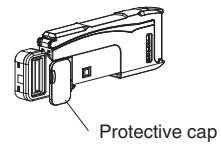

3. Use an extension cable with a minimum thickness of 0.3 mm<sup>2</sup> and less than 10 m long.
4. Do not apply the forces on the cord exceeding the following limits: Pull: 40 N; torque: 0.1 N·m; pressure: 20 N; bending: 29.4 N
5. Do not apply excessive force (9.8 N max.) such as tension, compression or torsion to the connector of the Sensor Head that is fixed to the Amplifier Unit.
6. Always keep the protective cover in place when using the Amplifier Unit. Not doing so may cause malfunction.
7. It may take time until the received light intensity and measured value become stable immediately after the power is turned on depending on use environment.
8. The product is ready to operate 200 ms after the power supply is turned ON.
9. The Mobile Console E3X-MC11, E3X-MC11-SV2 and E3X-MC11-S cannot be connected.
10. The mutual interference prevention function does not work when in combination with E3C/E2C/E3X.
11. If the unit receives excessive sensor light, the mutual interference prevention function may not work properly, resulting in malfunction of the unit. In such case, increase the threshold.
12. Standard models (E3NC-□A21/51/7/9)
 

The Sensor Communications Unit E3X-DRT21-S, E3X-CRT, E3X-ECT and E3NW cannot be connected.  
Model for Sensor Communications Unit (E3NC-□A0)  
The Sensor Communications Unit E3NW can be connected.  
E3X-DRT21-S, E3X-CRT, E3X-ECT cannot be connected.
13. If you notice an abnormal condition such as a strange odor, extreme heating of the unit, or smoke immediately stop using the product, turn off the power, and consult your dealer.
14. Do not use thinner, benzene, acetone, and lamp oil for cleaning.

(Unit: mm)



Tolerance class IT16 applies to dimensions in this data sheet unless otherwise specified.

## Dimensions


### Sensor Heads

#### Retro-reflective Model

E3NC-LH03

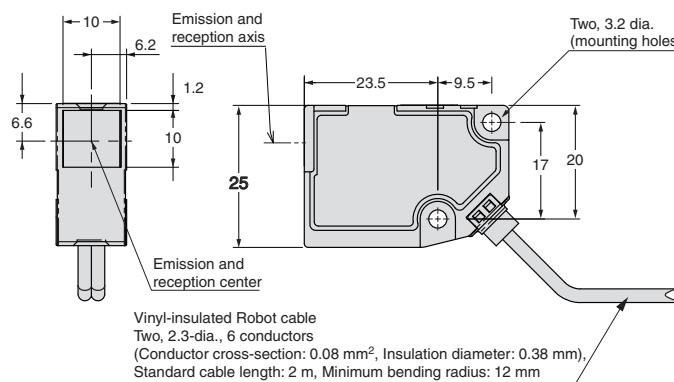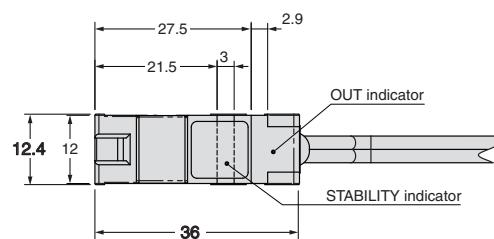



Vinyl-insulated Robot cable  
Two, 2.3-dia., 6 conductors  
(Conductor cross-section: 0.08 mm<sup>2</sup>, Insulation diameter: 0.38 mm),  
Standard cable length: 2 m, Minimum bending radius: 12 mm

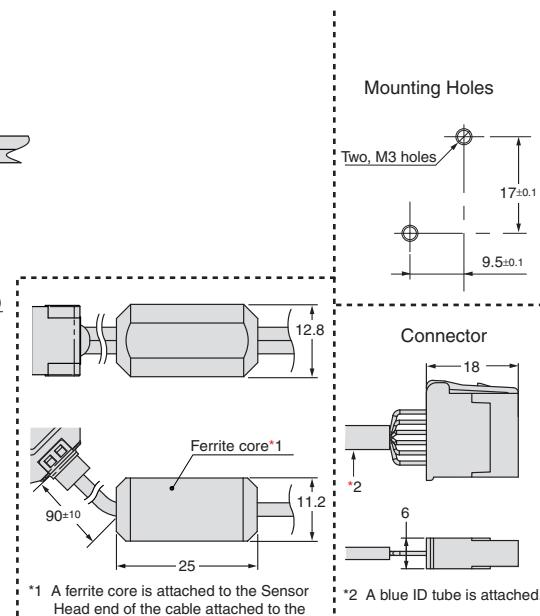


\*1 A ferrite core is attached to the Sensor Head end of the cable attached to the E3NC-LH03 5M.  
\*2 A blue ID tube is attached.

#### Diffuse-reflective Model

E3NC-LH02

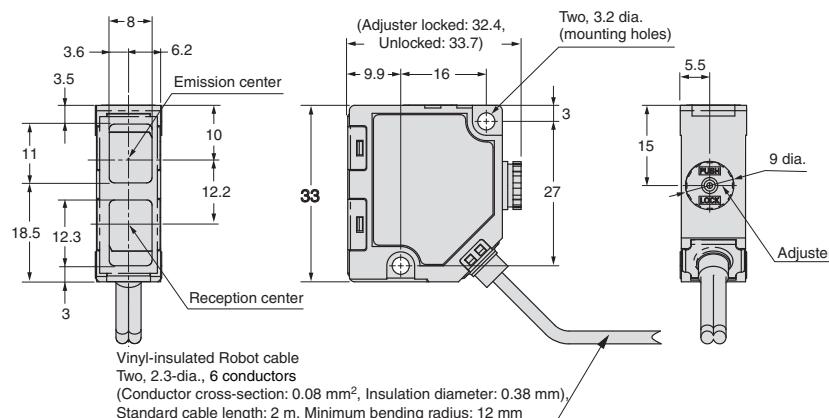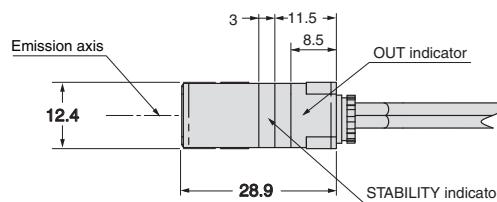


Vinyl-insulated Robot cable  
Two, 2.3-dia., 6 conductors  
(Conductor cross-section: 0.08 mm<sup>2</sup>, Insulation diameter: 0.38 mm),  
Standard cable length: 2 m, Minimum bending radius: 12 mm

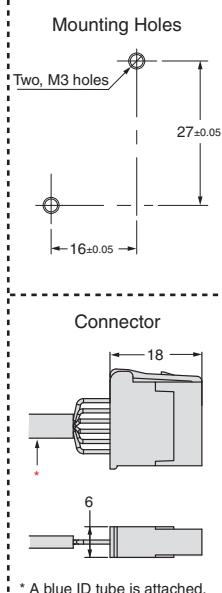

\* A blue ID tube is attached.

### Limited-reflective Model E3NC-LH01


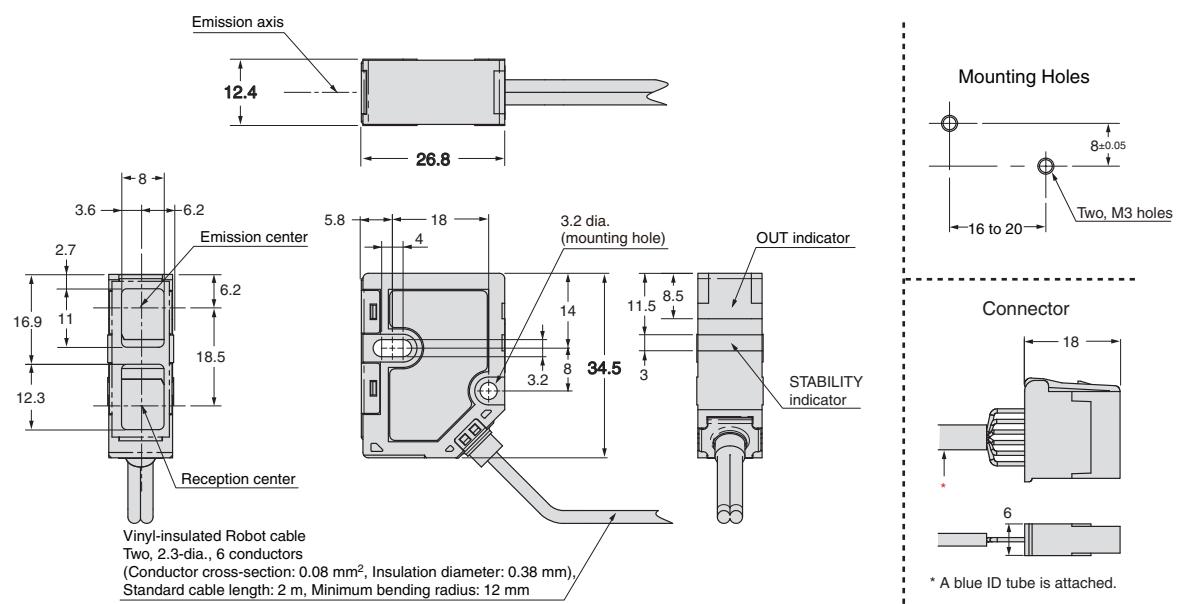


### Distance-settable Models

E3NC-SH250H

E3NC-SH250

E3NC-SH100

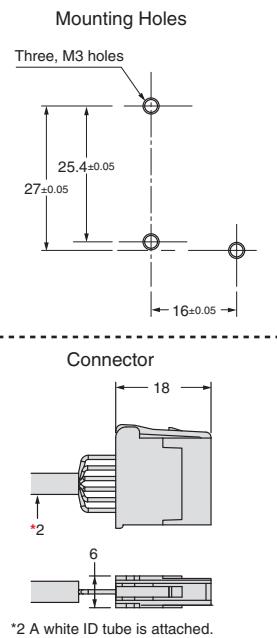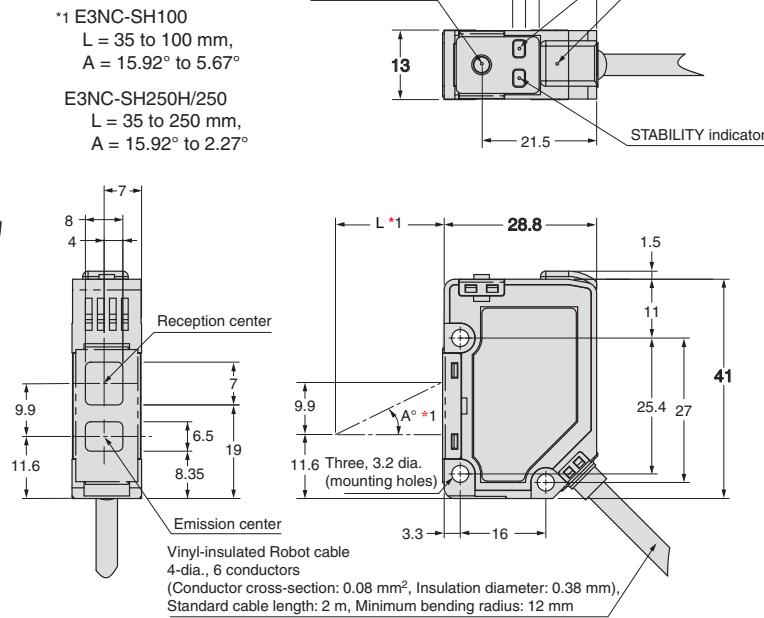

## Amplifier Units


### Pre-wired Amplifier Units

E3NC-LA21

E3NC-LA51

E3NC-SA21

E3NC-SA51

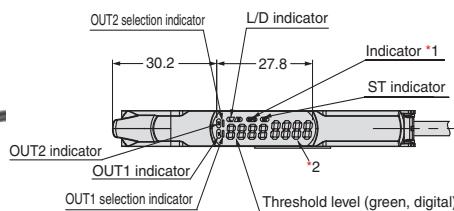

\*1. The indicators are as follows:

E3NC-LA21 DPC indicator


E3NC-LA51 ZERO indicator

\*2. The display is as follows:

E3NC-LA21	Incident level (white, digital)
E3NC-LA51	Measurement value (white, digital)

\*3. Cable Specifications

Round vinyl-insulated cable, 4 dia., 5 conductors  
(Conductor cross-section: 0.2 mm<sup>2</sup>, Insulation diameter: 0.9 mm),  
Standard cable length: 2 m, Minimum bending radius: 12 mm

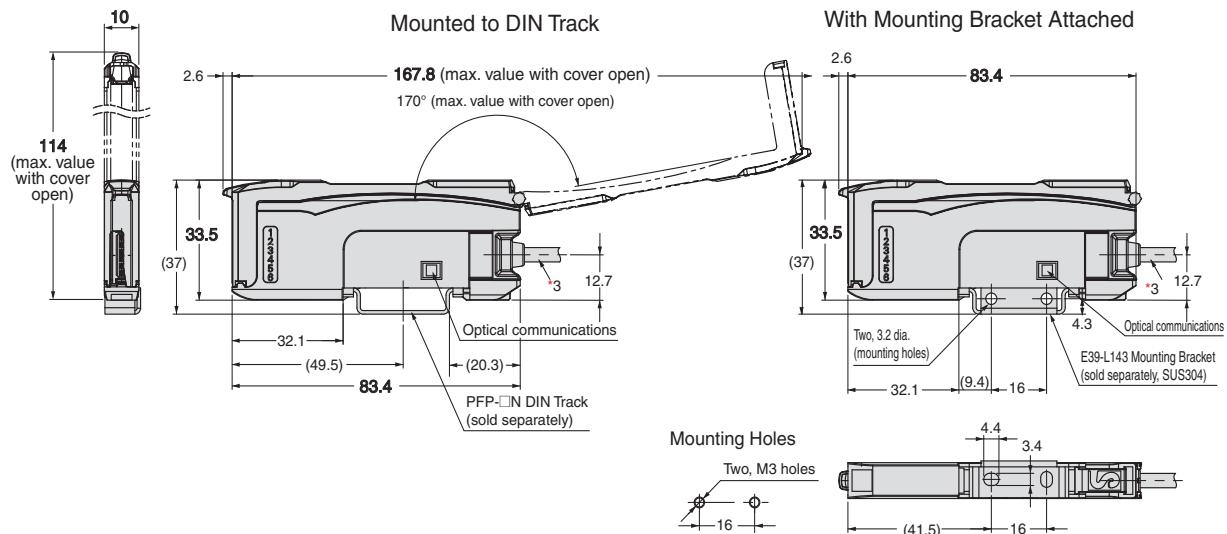


### Amplifier Units with Wire-saving Connectors

E3NC-LA7

E3NC-LA9

E3NC-SA7

E3NC-SA9

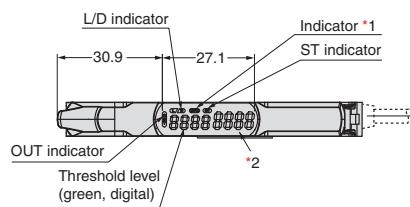

\*1. The indicators are as follows:

E3NC-LA7 DPC indicator


E3NC-LA9 ZERO indicator

\*2. The display is as follows:

E3NC-LA7	Incident level (white, digital)
E3NC-LA9	Measurement value (white, digital)




\*3. Cable Specifications

Model	Outer diameter	No. of conductors
E3X-CN22	4.0	2
E3X-CN21		4

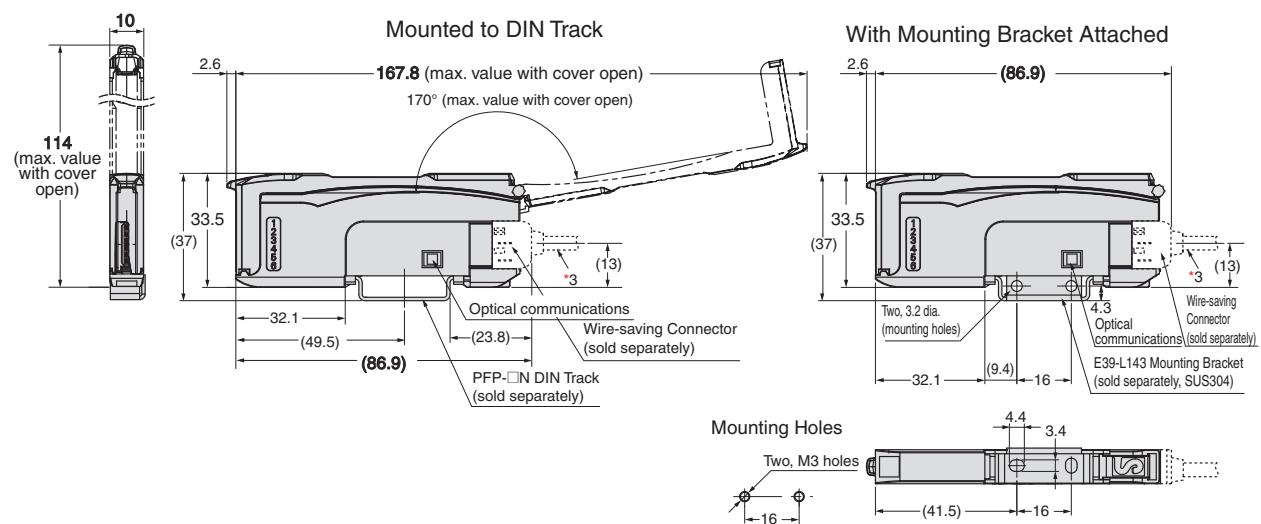

## Amplifier Units with M8 Connectors

E3NC-LA24  
E3NC-LA54  
E3NC-SA24  
E3NC-SA54

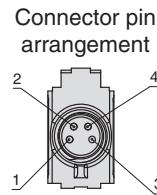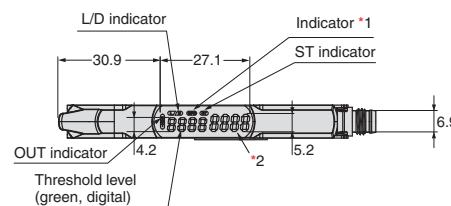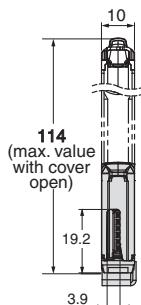


\*1. The indicators are as follows:

E3NC-LA24	DPC indicator
E3NC-LA54	ZERO indicator
E3NC-SA24	ZERO indicator
E3NC-SA54	Measurement value (white, digital)

\*2. The display is as follows:


E3NC-LA24	Incident level (white, digital)
E3NC-LA54	Measurement value (white, digital)

Mounted to DIN Track

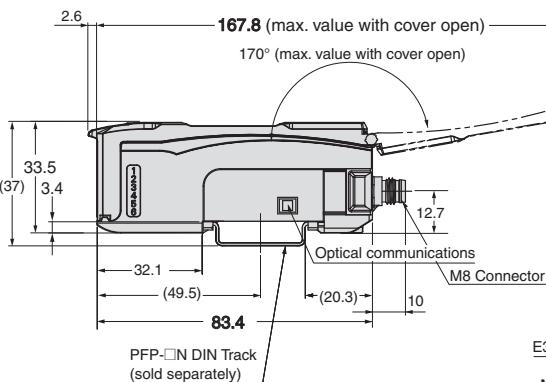



PFP-DIN Track (sold separately)

With Mounting Bracket Attached

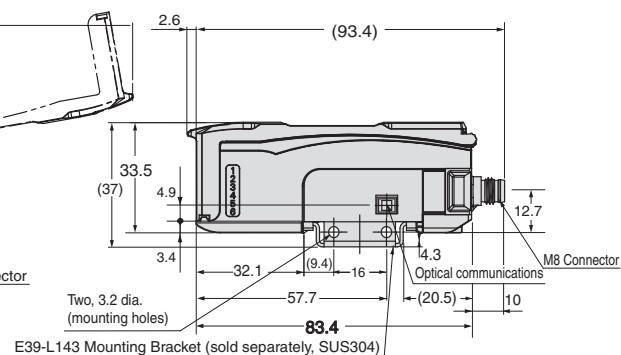


E39-L143 Mounting Bracket (sold separately, SUS304)

Mounting Holes

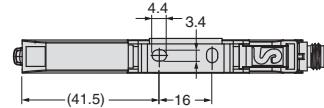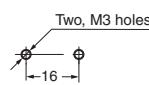

## Amplifier Units with Connectors for Sensor Communications Unit

E3NC-LA0  
E3NC-SA0

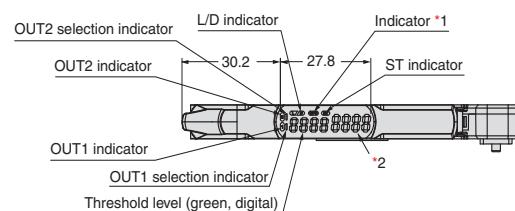


\*1. The indicators are as follows:

E3NC-LA0	DPC indicator
E3NC-SA0	ZERO indicator

\*2. The display is as follows:

E3NC-LA0	Incident level (white, digital)
E3NC-SA0	Measurement value (white, digital)

Mounted to DIN Track

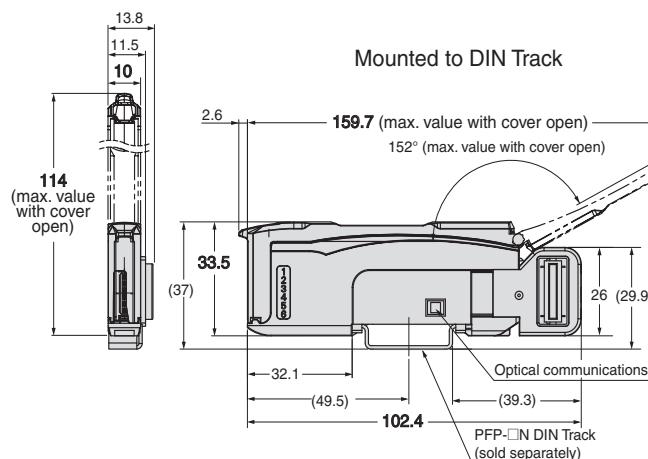


PFP-DIN Track (sold separately)

## Accessories (Sold Separately)


### Reflectors for Retro-reflective Sensors

E39-R21

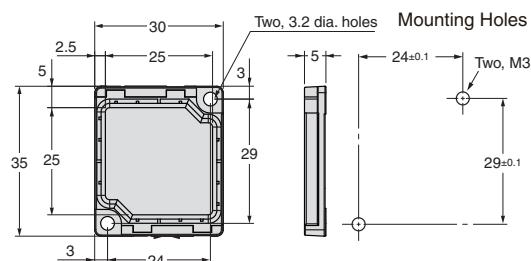


Materials Reflective surface: Methacrylic resin (PMMA)  
Back surface: Polybutylene terephthalate (PBT)

E39-RS10

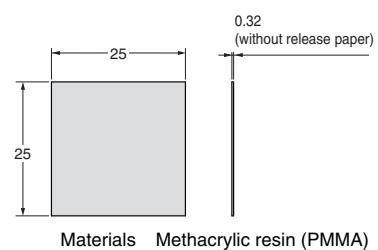


Materials Methacrylic resin (PMMA)

E39-R22

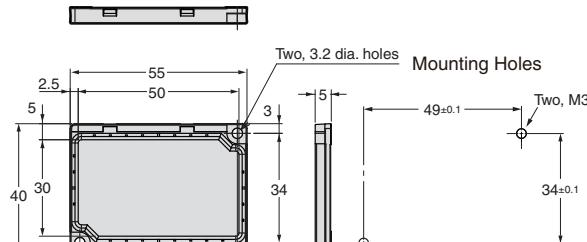

Materials Reflective surface: Methacrylic resin (PMMA)  
Back surface: Polybutylene terephthalate (PBT)


E39-RS11

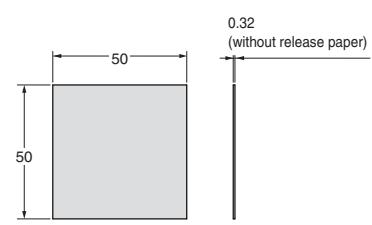

Materials Methacrylic resin (PMMA)



### Lens Attachment

E39-P51

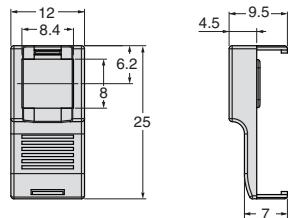


Materials Main body: ABS  
Lens: Methacrylic resin (PMMA)

With E39-P51 Lens Attachment Attached

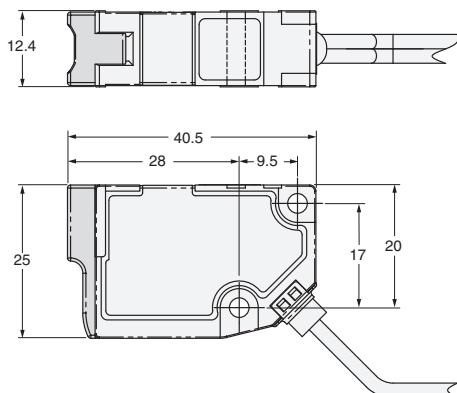
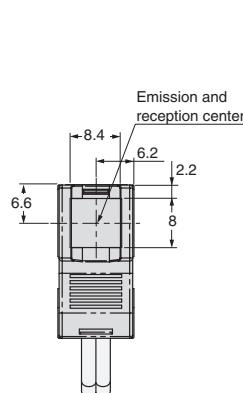


E39-P52

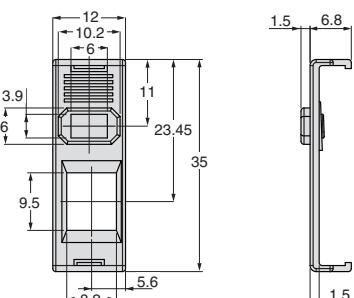

Materials Main body: ABS  
Lens: Methacrylic resin (PMMA)

With E39-P52 Lens Attachment Attached

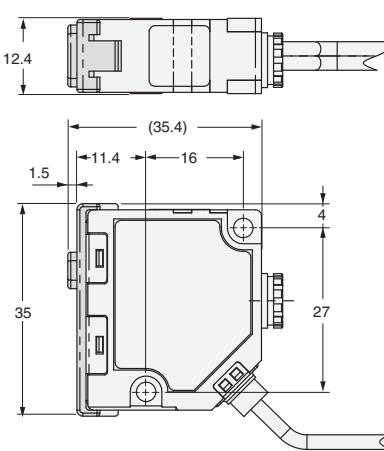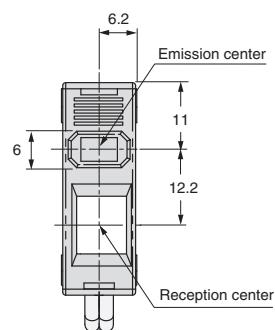



## Sensor Head Mounting Brackets

### E39-L190




#### Mounting Bracket

Materials: Stainless steel (SUS304)  
Thickness: 1.2 mm  
Accessories: Phillips screws (M3x18, P = 0.5, stainless steel): 2, Nut plate: 1

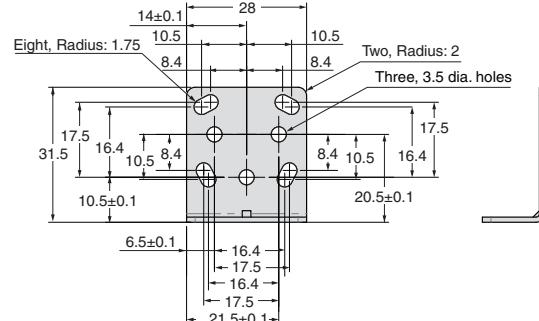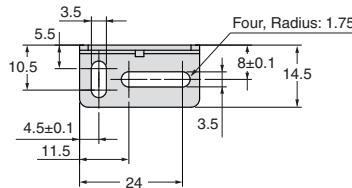


#### Nut Plate


Materials: Stainless steel (SUS304)  
Thickness: 1.5 mm

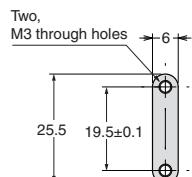

#### With E39-L190 Mounting Bracket Attached for Bottom Mounting

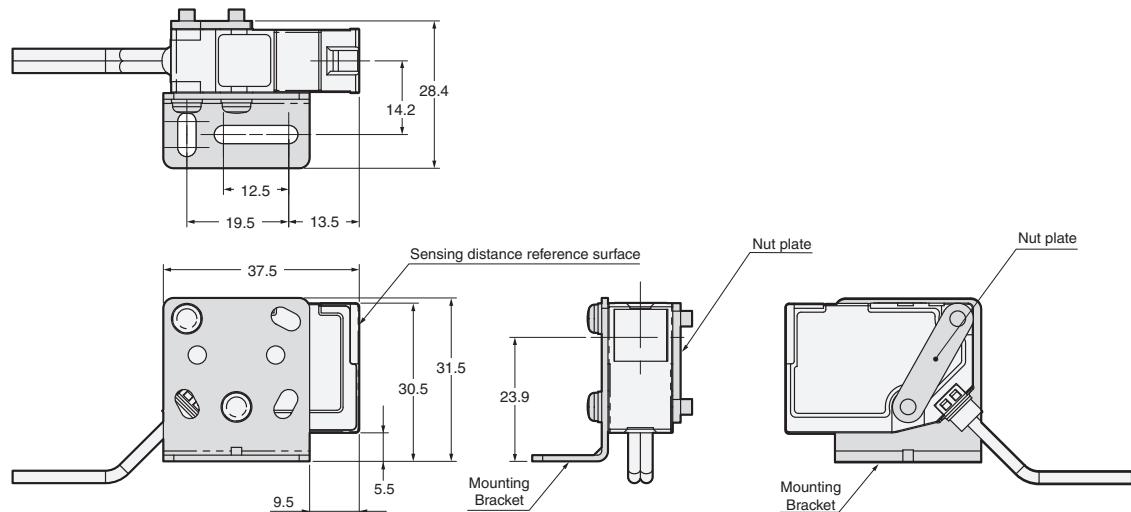

#### With E39-L190 Mounting Bracket Attached for Back Mounting

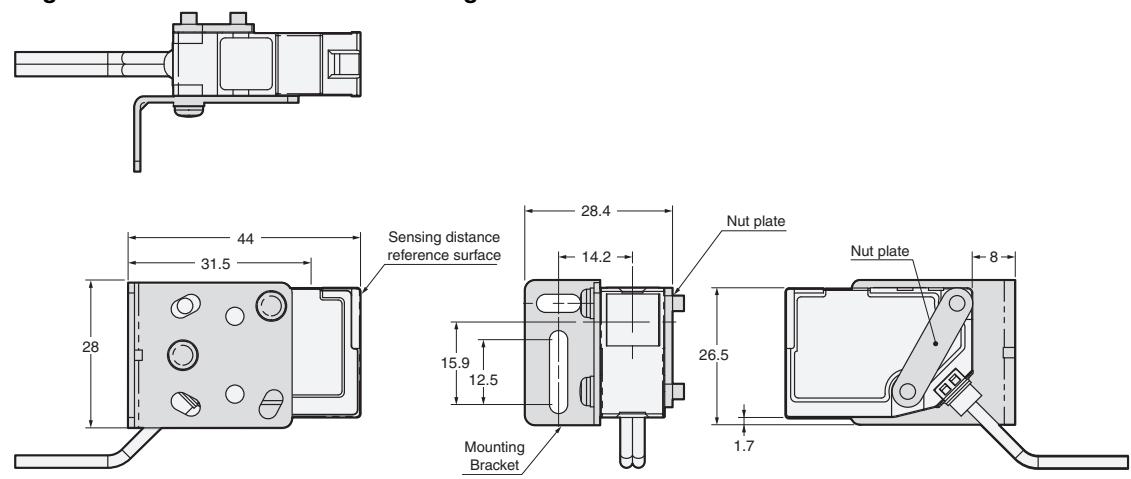

## E39-L185




Mounting Bracket

Material: Stainless steel (SUS304)

Thickness: 1.2 mm

Accessories: Phillips screws (M3x18, P = 0.5, stainless steel): 2


Nut plate: 1

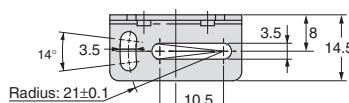



Nut Plate

Material: Stainless steel (SUS304)

Thickness: 1.5 mm

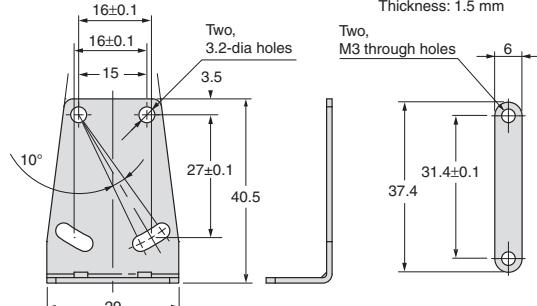

## With E39-L185 Mounting Bracket Attached

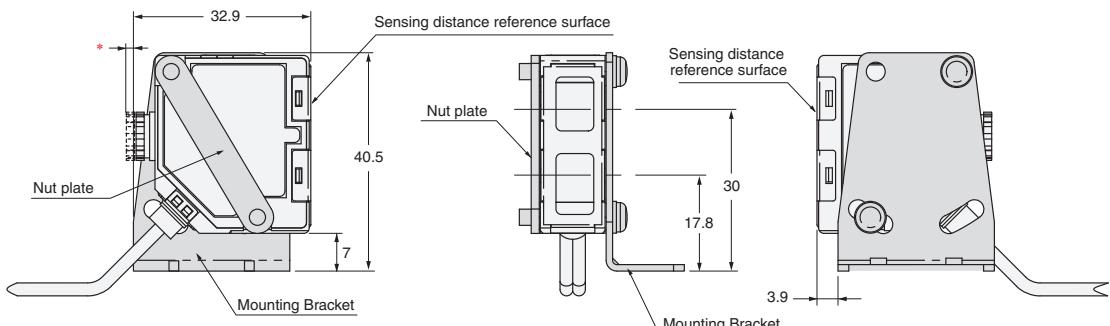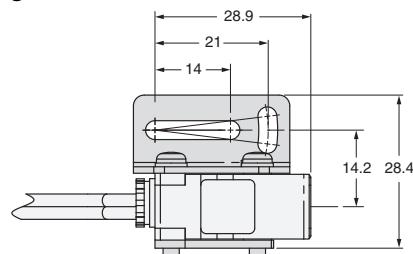

\* When adjusted, the adjuster extends 0.8 mm from the Mounting Bracket surface.

## E39-L186




Mounting Bracket

Material: Stainless steel (SUS304)

Thickness: 1.2 mm

Accessories: Phillips screws (M3x18, P = 0.5, stainless steel): 2


Nut plate: 1

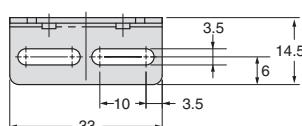


Nut Plate

Material: Stainless steel (SUS304)


Thickness: 1.5 mm

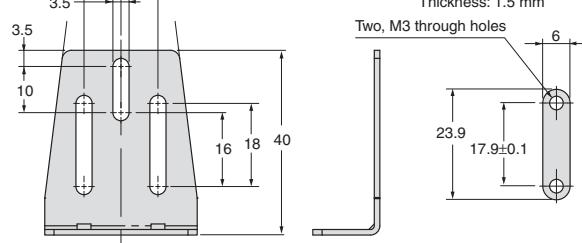

## With E39-L186 Mounting Bracket Attached for Bottom Mounting

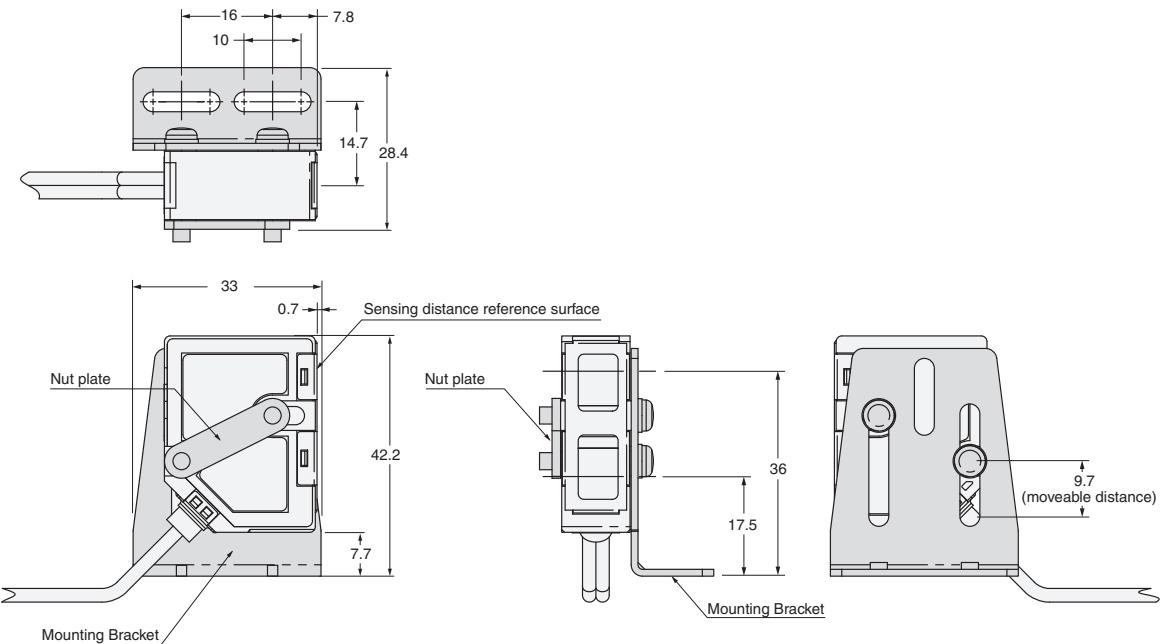

## With E39-L186 Mounting Bracket Attached for Back Mounting

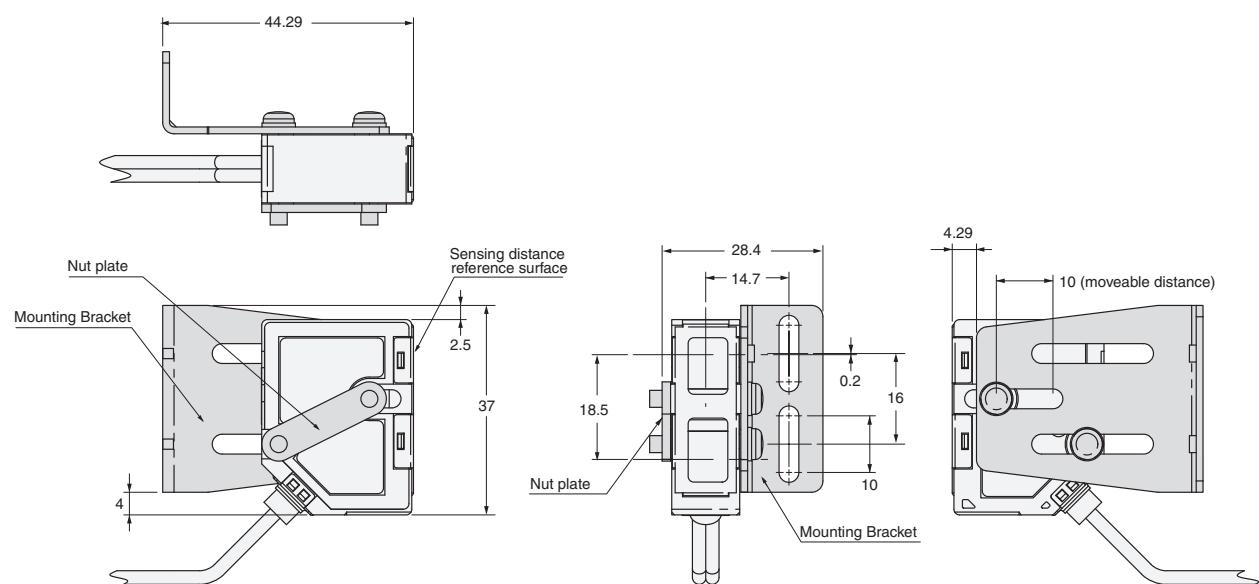

## E39-L187


## Mounting Bracket

Material: Stainless steel (SUS304)


Thickness: 1.2 mm

Accessories: Phillips screws (M3×18, P = 0.5, stainless steel): 2

Nut plate: 1

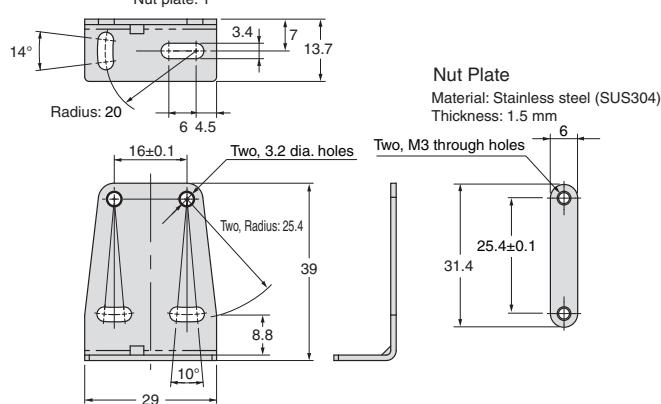

## With E39-L187 Mounting Bracket Attached

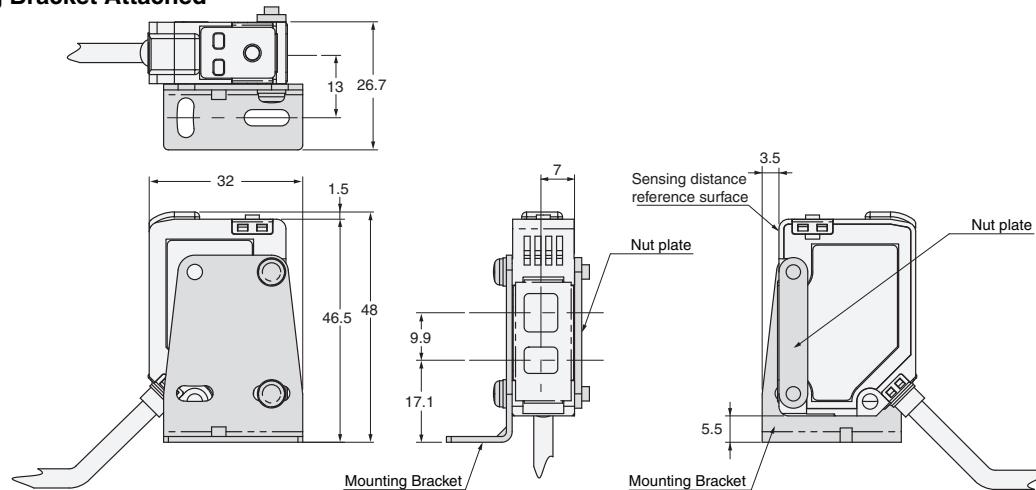

## E39-L188


## Mounting Bracket

Material: Stainless steel (SUS304)


Thickness: 1.2 mm

Accessories: Phillips screws (M3×18, P = 0.5, stainless steel): 2

Nut plate: 1

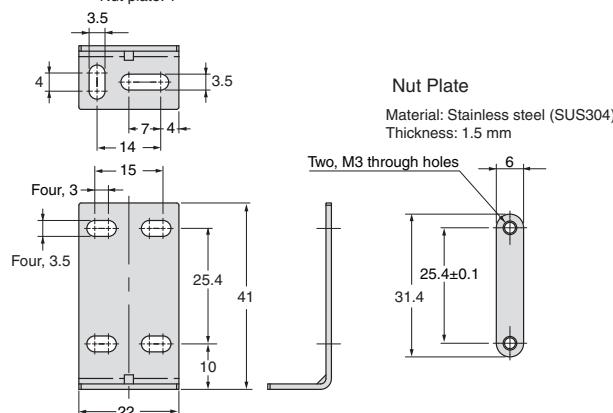


## With E39-L188 Mounting Bracket Attached

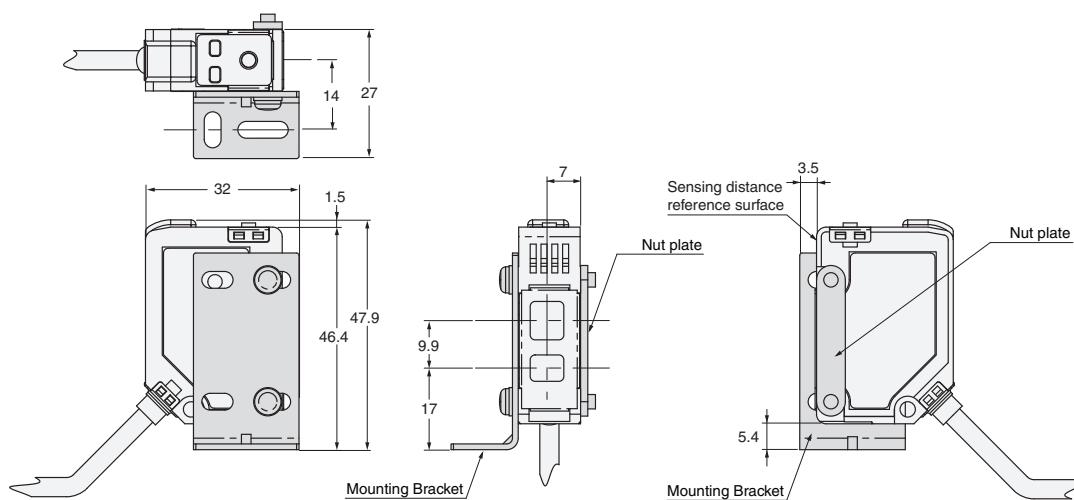


## Wire-saving Connectors

### Master Connector E3X-CN21

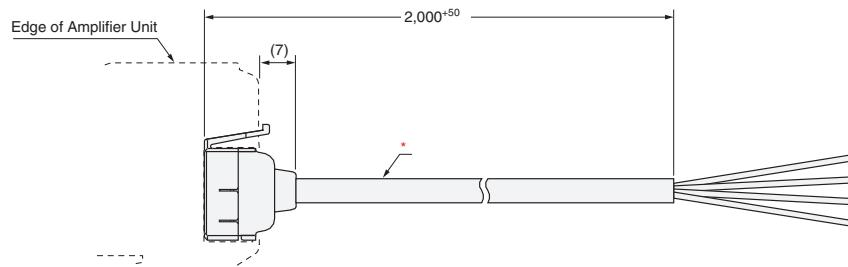

\*4-dia. cable with 4 conductors, Standard cable length: 2 m (Conductor cross-section: 0.2 mm<sup>2</sup> (AWG24), Insulation diameter: 1.1 mm)


### Slave Connector E3X-CN22

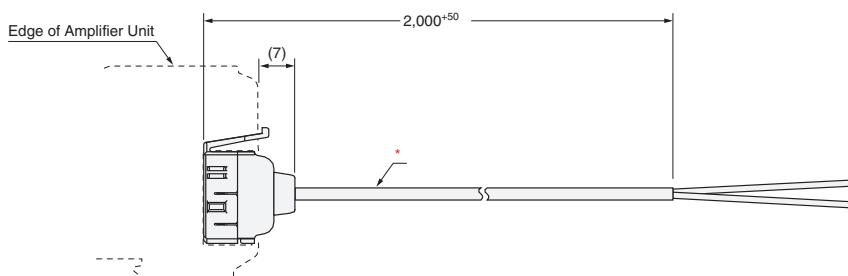


\*4-dia. cable with 2 conductors, Standard cable length: 2 m (Conductor cross-section: 0.2 mm<sup>2</sup> (AWG24), Insulation diameter: 1.1 mm)

## Sensor I/O Connectors


### Straight XS3F-M421-40□-A

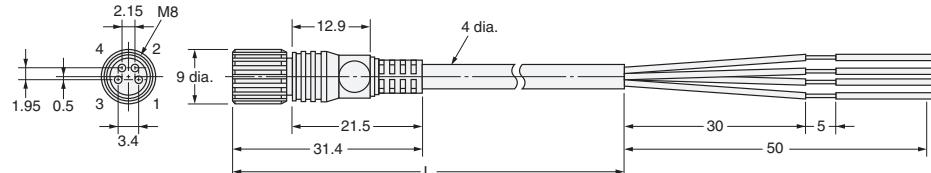



### L-shaped XS3F-M422-40□-A

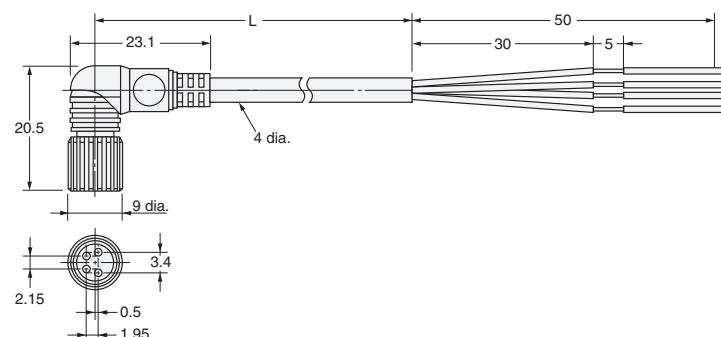

### Amplifier Unit Mounting Bracket E39-L143

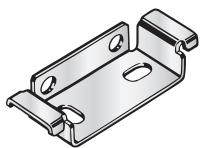


Material: Stainless steel (SUS304)

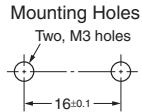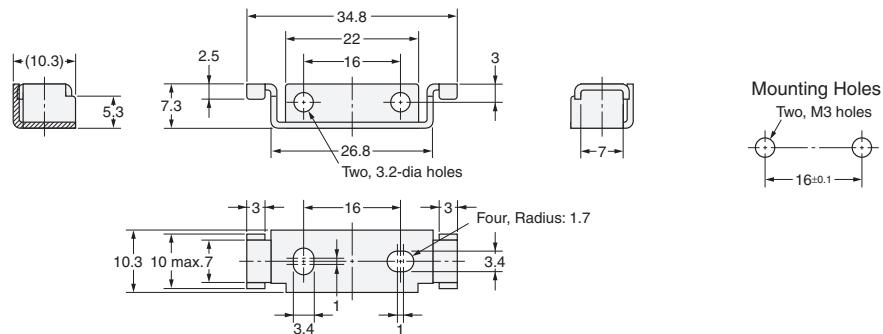

### DIN Track PFP-100N PFP-50N




Material: Aluminum

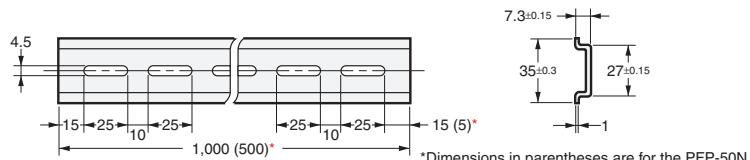

\*Dimensions in parentheses are for the PFP-50N.

### PFP-100N2


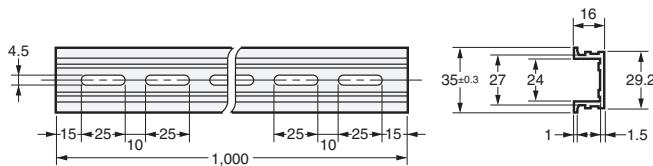


Material: Aluminum

### End Plate PFP-M



Materials: Iron, zinc plating

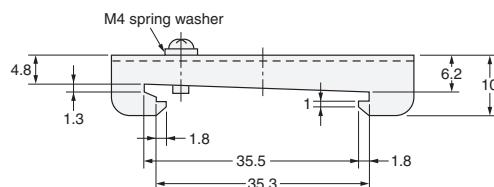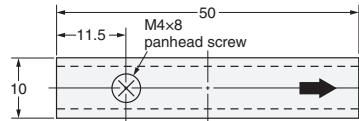

## Terms and Conditions Agreement

### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

### Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

### Limitation on Liability: Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2018.10

In the interest of product improvement, specifications are subject to change without notice.

**OMRON Corporation**  
Industrial Automation Company

<http://www.ia.omron.com/>

(c)Copyright OMRON Corporation 2018 All Right Reserved.