

# **Mobile SDRAM**

# MT48H16M16LF - 4 Meg x 16 x 4 banks MT48H8M32LF - 2 Meg x 32 x 4 banks

### **Features**

- Fully synchronous; all signals registered on positive edge of system clock
- $V_{DD}/V_{DDQ} = 1.70-1.95V$
- Internal, pipelined operation; column address can be changed every clock cycle
- Four internal banks for concurrent operation
- Programmable burst lengths: 1, 2, 4, 8, or continuous page
- Auto precharge, includes concurrent auto precharge
- · Auto refresh and self refresh modes
- LVTTL-compatible inputs and outputs
- On-chip temperature sensor to control refresh rate
- Partial-array self refresh (PASR)
- Deep power-down (DPD)
- Selectable output drive (DS)
- 64ms refresh period (8192 rows)

Options	Marking
• $V_{DD}/V_{DDQ}$	
- 1.8V/1.8V	Н
<ul> <li>Configuration</li> </ul>	
<ul> <li>16 Meg x 16 (4 Meg x 16 x 4 banks)</li> </ul>	16M16
- 8 Meg x 32 (2 Meg x 32 x 4 banks)	8M32
Plastic "green" package	
- 54-ball VFBGA (8mm x 9mm)	BF
- 90-ball VFBGA (8mm x 13mm)	<b>B5</b>
<ul> <li>Timing – cycle time</li> </ul>	
-7.5ns at $CL = 3$	-75
-8ns at CL $=3$	-8
• Power	
<ul> <li>Standard I<sub>DD2P</sub>/I<sub>DD7</sub></li> </ul>	None
- Low I <sub>DD2P</sub> /I <sub>DD7</sub>	L
Operating temperature range	
<ul><li>Commercial (0° to +70°C)</li></ul>	None
<ul> <li>Industrial (-40°C to +85°C)</li> </ul>	IT
<ul> <li>Design revision</li> </ul>	:G

Table 1: Addressing

	16 Meg x 16	8 Meg x 32			
Configuration	4 Meg x 16 x 4 banks	2 Meg x 32 x 4 banks			
Refresh count	8K	8K			
Row addressing	8K (A[12:0])	4K (A[11:0])			
Bank addressing	4 (BA[1:0])	4 (BA[1:0])			
Column addressing	512 (A[8:0])	512 (A[8:0])			

**Table 2:** Key Timing Parameters CL = CAS (READ) latency

Speed	Clock (M	Rate Hz)	Acces	s Time	Data Setup	Data Hold	
Grade	CL = 2	CL = 3	CL = 2	CL = 3	Time	Time	
-75	104	133	8ns	6ns	1.5ns	1ns	
-8	100	125	9ns	7ns	2.5ns	1ns	




## **Table of Contents**

<b>a</b> .	
Features	
Options	1
General Description	5
Functional Block Diagrams	
Ball Assignments	8
Ball Descriptions	10
Functional Description	12
Initialization	12
Register Definition	13
Mode Register	13
Extended Mode Register (EMR)	16
Commands	19
Operations	23
Bank/Row Activation	23
READs	24
WRITEs	30
Truth Tables	40
Electrical Specifications	45
Absolute Maximum Ratings	45
Notes	
Timing Diagrams	
Package Dimensions	
Revision History	



# **List of Figures**

Figure 1:	256Mb Mobile SDRAM Part Numbering	.5
Figure 2:	16 Meg x 16 SDRAM	
Figure 3:	8 Meg x 32 SDRAM	.7
Figure 4:	54-Ball FBGA (Top View) – 8mm x 9mm	
Figure 5:	90-Ball VFBGA (Top View) – 8mm x 13mm	
Figure 6:	Mode Register Definition	14
Figure 7:	CAS Latency	
Figure 8:	EMR Definition	
Figure 9:	Activating a Specific Row in a Specific Bank	
Figure 10:	Example: Meeting tRCD (MIN) When 2 < tRCD (MIN)/tCK < 3	
Figure 11:	READ Command.	
Figure 12:	Consecutive READ Bursts	
Figure 13:	Random READ Accesses	
Figure 14:	READ-to-WRITE	
Figure 15:	READ-to-WRITE with Extra Clock Cycle	
Figure 16:	READ-to-PRECHARGE	
Figure 17:	Terminating a READ Burst	
Figure 18:	WRITE Command.	
Figure 19:	WRITE Burst.	
Figure 20:	WRITE-to-WRITE	
Figure 21:	Random WRITE Cycles	
Figure 21:	WRITE-to-READ	
Figure 23:	WRITE-to-PRECHARGE	
Figure 23. Figure 24:	Terminating a WRITE Burst	
Figure 24. Figure 25:	PRECHARGE Command	
Figure 25. Figure 26:	Power-Down	
	Clock Suspend During WRITE Burst	))
Figure 27:	Clock Suspend During READ Burst	)U
Figure 28:	DEAD with Auto During KEAD Burst	)/ )~
Figure 29:	READ with Auto Precharge Interrupted by a READ	
Figure 30:	READ with Auto Precharge Interrupted by a WRITE	ეგ ეგ
Figure 31:	WRITE with Auto Precharge Interrupted by a READ	59 20
Figure 32:	WRITE with Auto Precharge Interrupted by a WRITE	59 50
Figure 33:	Typical Self Refresh Current vs. Temperature	
Figure 34:	Initialize and Load Mode Register	
Figure 35:	Power-Down Mode	
Figure 36:	Clock Suspend Mode	
Figure 37:	Auto Refresh Mode	
Figure 38:	Self Refresh Mode	
Figure 39:	READ – without Auto Precharge	
Figure 40:	READ – with Auto Precharge	
Figure 41:	Single READ – without Auto Precharge	ίl
Figure 42:	Single READ - with Auto Precharge	
Figure 43:	Alternating Bank Read Accesses	
Figure 44:	READ - Continuous Page Burst	
Figure 45:	READ – DQM Operation	
Figure 46:	WRITE – Without Auto Precharge	
Figure 47:	WRITE – with Auto Precharge	<b>5</b> 7
Figure 48:	Single WRITE – Without Auto Precharge	
Figure 49:	Single WRITE – with Auto Precharge	
Figure 50:	Alternating Bank Write Accesses	
Figure 51:	WRITE - Continuous Page Burst	
Figure 52:	WRITE – DQM Operation	
Figure 53:	54-Ball VFBGA (8mm x 9mm)	
Figure 54:	90-Ball VFBGA (8mm x 13mm)	74






# **List of Tables**

Table 1:	Addressing	1
Table 2:	Key Timing Parameters	
Table 3:	VFBGA Ball Descriptions	
Table 4:	Burst Definition Table	
Table 5:	Truth Table - Commands and DQM Operation	19
Table 6:	Truth Table - CKE	
Table 7:	Truth Table – Current State Bank n, Command to Bank n	41
Table 8:	Truth Table – Current State Bank n, Command to Bank m	
Table 9:	Absolute Maximum Ratings	
Table 10:	DC Electrical Characteristics and Operating Conditions	45
Table 11:	Electrical Characteristics and Recommended AC Operating Conditions	46
Table 12:	AC Functional Characteristics	
Table 13:	I <sub>DD</sub> Specifications and Conditions (x16)	48
Table 14:	I <sub>DD</sub> Specifications and Conditions (x32)	49
Table 15:	I <sub>DD7</sub> – Self Refresh Current Options	50
Table 16:	Capacitance	



Figure 1: 256Mb Mobile SDRAM Part Numbering

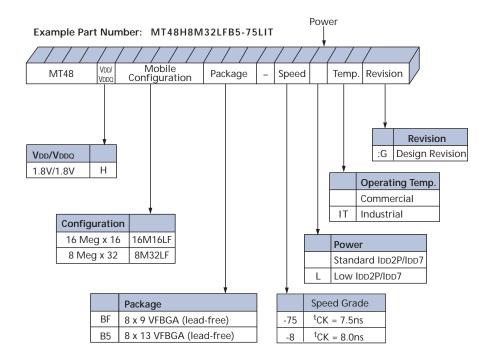

# **General Description**

The Micron  $^{\$}$  256Mb Mobile SDRAM is a high-speed CMOS, dynamic random-access memory containing 268,435,456-bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x16's 67,108,864-bit banks is organized as 8192 rows by 512 columns by 16 bits. Each of the x32's 67,108,864-bit banks is organized as 4096 rows by 512 columns by 32 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed. The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable read or write burst lengths (BLs) of 1, 2, 4, or 8 locations, or continuous page burst, with a read burst terminate option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.

The 256Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. It also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless high-speed, random-access operation.



The 256Mb SDRAM is designed to operate in 1.8V low-power memory systems. An auto refresh mode is provided, along with a power-saving deep power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAM offers substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks in order to hide precharge time, and the capability to randomly change column addresses on each clock cycle during a burst access.

# **Functional Block Diagrams**

Figure 2: 16 Meg x 16 SDRAM


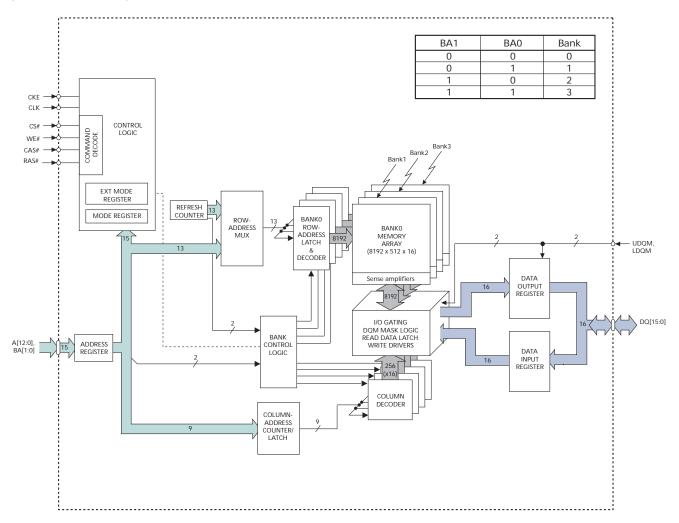




Figure 3: 8 Meg x 32 SDRAM



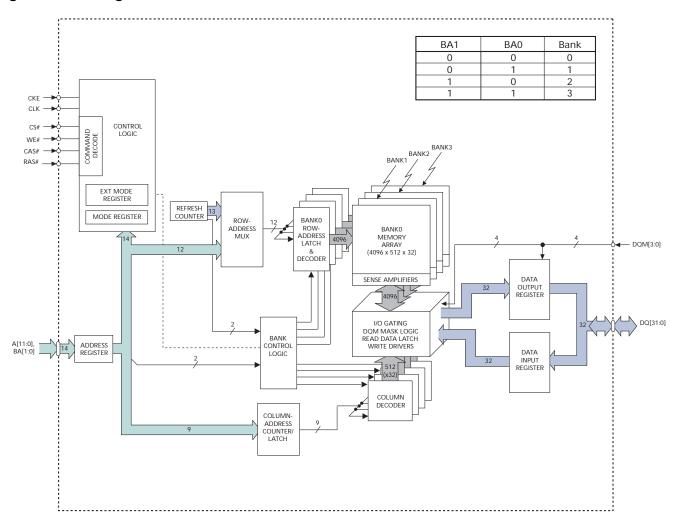

# **Ball Assignments**

Figure 4: 54-Ball FBGA (Top View) – 8mm x 9mm

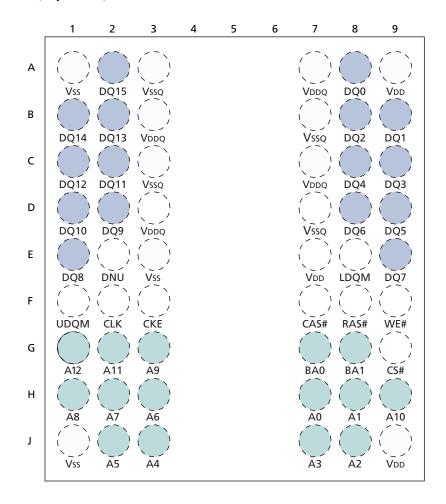




Figure 5: 90-Ball VFBGA (Top View) - 8mm x 13mm

	1	2	3	4	5	6	7	8	9
Α	DQ26	DQ24	( ) Vss				( ) V <sub>DD</sub>	DQ23	DQ21
В	DQ28	( ) VDDQ	() Vssq				VDD VDDQ	( ) Vssq	
С	Vssq Vssq Vbbq Vsss Vbbq A7 CLK		DQ25				() DQ22	DQ20	DQ19  VDDQ  VDDQ  VSSQ  VDD  A1
D	Vssq.	DQ27	DQ30				DQ22	DQ18	( ) VDDQ
E	VDDQ	DQ31	NC				NC NC	DQ16	Vssq
F	Vss	DQM3	A3				A2	DQM2	V <sub>DD</sub>
G	A4	DQ31  DQM3  A5  A8  CKE  DNU	A3 () A6 () NC () NC () Vss				( ) A10	A0	A1
Н	A7	(_) A8	NC (				NC (	BA1 ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) (	A11 (`) RAS# (`) DQM0
J	CLK	CKE	(_) A9				BA0	( ) CS#	RAS#
K	DQM1	DNU	NC				CAS#	WE#	DQM0
L	VDDQ VSSQ VSSQ	DQ8	Vss				VDD	DQ7 DQ5 DQ3	Vssq
M N	Vssq	DQ10 DQ12	DQ9				DQ6	DQ5	VDDQ
P	Vssq	DQ12	DQ14				DQ1	DQ3	VDDQ
r R	DQ11	VDDQ	VssQ				() NC	Vssq	VSSQ VDDQ VDDQ DQ4 DQ2
.,	DQ13	DQ15	Vss				VDD	DQ0	DQ2



# **Ball Descriptions**

Table 3: VFBGA Ball Descriptions

54-Ball VFBGA	90-Ball VFBGA	Symbol	Туре	Description
F2	J1	CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
F3	J2	CKE	Input	Clock enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides precharge power-down and SELF REFRESH operation (all banks idle), ACTIVE power-down (row active in any bank), Deep power-down (all banks idle), or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power.
G9	J8	CS#	Input	Chip select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
F7, F8, F9	K7, J9, K8	CAS#, RAS#, WE#	Input	Command inputs: RAS#, CAS#, and WE# (along with CS#) define the command being entered.
F1, E8	K9, K1, F8, F2	UDQM LDQM, DQM[33:0]	Input	Input/output mask: DQM is sampled HIGH and is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked during a WRITE cycle. The output buffers are placed in a High-Z state (two-clock latency) during a READ cycle. For the x16, LDQM corresponds to DQ[7:0] and UDQM corresponds to DQ[16:8]. For the x32, DQM0 corresponds to DQ[7:0], DQM1 corresponds to DQ[15:8], DQM2 corresponds to DQ[23:16], and DQM3 corresponds to DQ[31:24]. DQM[3:0] (or LDQM and UDQM if x16) are considered same state when referenced as DQM. DQM loading is designed to match that of DQ balls.
G7, G8	J7, H8	BA[1:0]	Input	Bank address input(s): BA[1:0] define to which bank the ACTIVE, READ, WRITE, or PRECHARGE command is being applied. These balls also provide the op-code during a LOAD MODE REGISTER (LMR) command. BA[1:0] become "Don't Care" when registering an ALL BANK PRECHARGE (A10 HIGH).
H7, H8, J8, J7, J3, J2, H3, H2, H1, G3, H9, G2, G1	G8, G9, F7, F3, G1, G2, G3, H1, H2, J3, G7, H9	A[12:0]	Input	Address inputs: A[12:0] are sampled during the ACTIVE command (row-address A[12:0] and READ/WRITE command (column-address A[8:0] (x32); column-address A[8:0] (x16); with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 HIGH) or bank selected by BA[1:0]. The address inputs also provide the op-code during a LMR command.



# Table 3: VFBGA Ball Descriptions (Continued)

54-Ball VFBGA	90-Ball VFBGA	Symbol	Туре	Description
A8, B9, B8, C9, C8, D9, D8, E9, E1, D2, D1, C2, C1, B2, B1, A2	P9, M8, M7, L8,	DQ[31:0]	I/O	Data input/output: Data bus.
A7, B3, C7, D3	B2, B7, C9, D9, E1, L1, M9, N9, P2, P7	$V_{\mathrm{DDQ}}$	Supply	DQ power: Provide isolated power to DQ for improved noise immunity.
A3, B7, C3, D7	B8, B3, C1, D1, E9, L9, M1, N1, P3, P8	$V_{SSQ}$	Supply	DQ ground: Provide isolated ground to DQ for improved noise immunity.
A9, E7, J9	A7, F9, L7, R7	$V_{\mathrm{DD}}$	Supply	Core power supply.
A1, E3, J1	A3, F1, L3, R3	$V_{SS}$	Supply	Ground.
-	E3, E7, H3, H7, K3	NC	_	Internally not connected: These could be left unconnected, but it is recommended they be connected to $V_{SS}$ .
E2	K2	DNU	Input	E2 is a TEST pin that must be tied to $V_{SS}$ or $V_{SSQ}$ in normal operation.



# **Functional Description**

In general, a 256Mb SDRAM is quad-bank DRAM that operates at 1.8V and includes a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK).

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA[1:0] select the bank, A[12:0] select the row for x16, and A[11:0] select the row for x32). The address bits (A[8:0] for x16 and A[8:0] for x32) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions, and device operation.

## Initialization

SDRAM must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. The initialization for mobile SDRAM is as follows.

- 1. Simultaneously apply power to V<sub>DD</sub> and V<sub>DDQ</sub>.
- 2. After power supplies have settled, apply a stable clock signal. Stable clock is defined as a signal cycling within timing constraints specified for the clock pin.
- 3. Wait at least  $100\mu s$ . During this period NOP or COMMAND INHIBIT commands should be applied. No other command other than NOP or COMMAND INHIBIT is allowed during this period.
- 4. Preform a PRECHARGE ALL command to place the SDRAM into an all banks idle state.
- 5. Wait at least <sup>t</sup>RP time. During this time NOP or COMMAND INHIBIT commands must be applied.
- 6. Issue an AUTO REFRESH command.
- 7. Wait at least <sup>t</sup>RFC time, during which only NOP or COMMAND INHIBIT commands are allowed.
- 8. Issue an Auto Refresh command.
- 9. Wait at least <sup>t</sup>RFC time, during which only NOP or COMMAND INHIBIT commands are allowed.
- 10. Issue a LOAD MODE REGISTER command with BA1=0, and BA0=0, to program the mode register with desired values.
- 11. Wait <sup>t</sup>MRD time. Only NOP or COMMAND INHIBIT commands may be applied during this time.
- 12. Issue a LOAD MODE REGISTER command with BA1 = 1, and BA0 = 0, to program the extended mode register with desired values.
- 13. Wait <sup>t</sup>MRD time. Only NOP or COMMAND INHIBIT commands may be applied during this time.

The Mobile SDRAM is now initialized and can accept any valid command.



# **Register Definition**

## **Mode Register**

There are two mode registers in the component: mode register and extended mode register (EMR). The mode register is illustrated in Figure 6 on page 14. The mode register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length (BL), a burst type, a CAS latency (CL), an operating mode and a write burst mode, as shown in Figure 6 on page 14. The mode register is programmed via the LMR command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M[2:0] specify the BL, M3 specifies the type of burst, M[6:4] specify the CL, M[8:7] specify the operating mode, M9 specifies the write burst mode, and M[11:10] should be set to zero.

The mode register must be loaded when all banks are idle, and the controller must wait <sup>t</sup>MRD before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

#### **Burst Length (BL)**

Read and write accesses to the SDRAM are burst oriented, with the BL being programmable, as shown in Figure 6 on page 14. The BL determines the maximum number of column locations that can be accessed for a given READ or WRITE command. BL = 1, 2, 4, 8 locations are available for both the sequential and the interleaved burst types, and a continuous page burst is available for the sequential type. The continuous page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the BL is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A[8:1] when BL = 2, A[8:2] when BL = 4, and A[8:3] when BL = 8. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Continuous page bursts wrap within the page if the boundary is reached.


#### **Burst Type**

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the BL, the burst type, and the starting column address, as shown in Table 4 on page 15.



Figure 6: Mode Register Definition

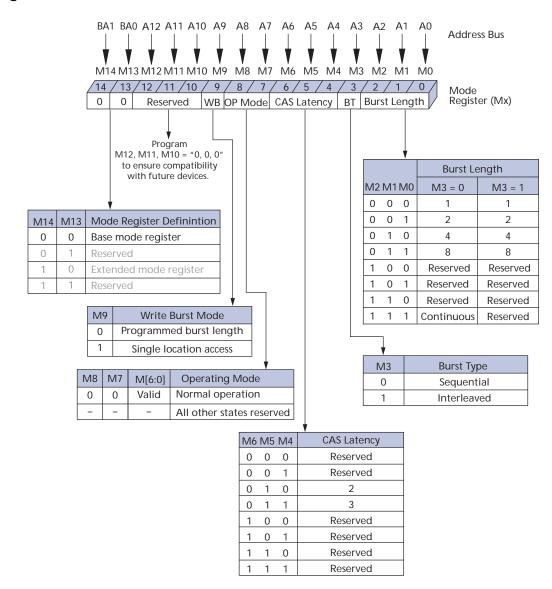



**Table 4: Burst Definition Table** 

				Order of Accesses Within a Burst				
Burst Length	Starting	g Column	Address	Type = Sequential	Type = Interleaved			
2			A0					
			0	0-1	0-1			
			1	1-0	1-0			
4		A1	A0					
		0	0	0-1-2-3	0-1-2-3			
		0	1	1-2-3-0	1-0-3-2			
		1	0	2-3-0-1	2-3-0-1			
		1	1	3-0-1-2	3-2-1-0			
8	8 A2 A1 A		A0					
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7			
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6			
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5			
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4			
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3			
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2			
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1			
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0			
Continuous		n = A[8:0]		Cn, Cn + 1,	Not supported			
Page				Cn + 2				
				Cn + 3,				
				Cn + 4, Cn - 1,				
				Crr - 1, Cn				

### **CAS Latency (CL)**


The CL is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks.

If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n+m. The DQs will start driving as a result of the clock edge one cycle earlier (n+m-1), and provided that the relevant access times are met, the data will be valid by clock edge n+m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 7 on page 16.

Reserved states should not be used as unknown operation or incompatibility with future versions may result. \\



Figure 7: CAS Latency

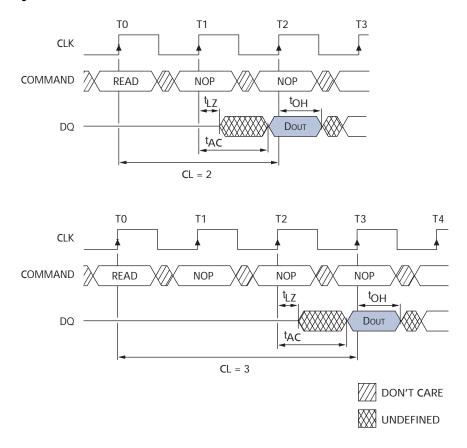

#### **Operating Mode**

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

#### **Write Burst Mode**

When M9 = 0, the BL programmed via M[2:0] applies to both READ and WRITE bursts; when M9 = 1, the programmed BL applies to READ bursts, but write accesses are single-location accesses.


# **Extended Mode Register (EMR)**

The low-power EMR controls the functions beyond those controlled by the mode register. These additional functions are special features of the mobile device. They include temperature-compensated self refresh (TCSR) control, partial-array self refresh (PASR), and output drive strength.

The low-power EMR is programmed via the MODE REGISTER SET command and retains the stored information until it is programmed again or the device loses power.



Figure 8: EMR Definition

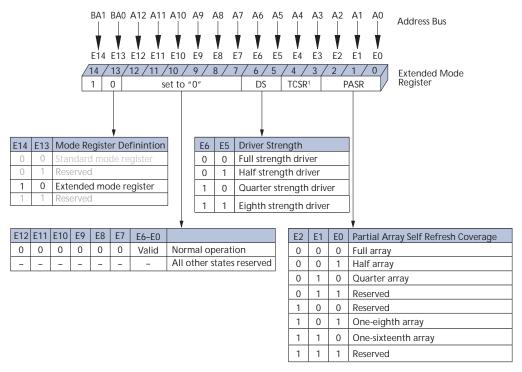

Notes: 1. On-die temperature sensor is used in place of TCSR. Setting these bits will have no effect.

The EMR must be loaded when all banks are idle and no bursts are in progress, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements results in unspecified operation. Once the values are entered, the EMR settings will be retained even after exiting deep power-down mode.

### **Temperature-Compensated Self Refresh (TCSR)**

On this version of the Mobile SDR SDRAM, a temperature sensor is implemented for automatic control of the self refresh oscillator on the device. Therefore, it is recommended not to program or use the temperature-compensated self refresh control bits in the extended mode register.

Programming of the TCSR bits has no effect on the device. The self refresh oscillator will continue refresh at the factory programmed optimal rate for the device temperature.



### Partial-Array Self Refresh (PASR)

For further power savings during self refresh, the partial-array self refresh (PASR) feature allows the controller to select the amount of memory that will be refreshed during self refresh. The following refresh options are available.

- 1. All banks (banks 0, 1, 2, and 3).
- 2. Two banks (banks 0 and 1; BA1 = 0).
- 3. One bank (bank 0; BA1 = BA0 = 0).
- 4. Half bank (bank 0; BA1 = BA0 = row address MSB = 0).
- 5. Quarter bank (bank 0; BA1 = BA0; row address MSB = row address MSB -1 = 0).

WRITE and READ commands occur to any bank selected during standard operation, but only the selected banks in PASR will be refreshed during self refresh. It is important to note that data in banks 2 and 3 will be lost when the two-bank option is used.

### **Driver Strength**

Bits E5 and E6 of the EMR can be used to select the driver strength of the DQ outputs. This value should be set according to the application's requirements.



### Commands

Table 5 provides a quick reference of available commands. This is followed by a written description of each command. Three additional truth tables appear following "Operations" on page 23. These tables provide current state/next state information.

Table 5: Truth Table – Commands and DQM Operation
Notes 1 and 2 apply to all commands

Name (Function)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQs	Notes
COMMAND INHIBIT (NOP)	Н	Х	Х	Χ	Х	Х	Х	4
NO OPERATION (NOP)	L	Н	Н	Н	Х	Х	Х	4
ACTIVE (Select bank and activate row)	L	L	Н	Н	Х	Bank/Row	Х	5
READ (Select bank and column, and start READ burst)	L	Н	L	Н	L/H	Bank/Col	Х	6
WRITE (Select bank and column, and start WRITE burst)	L	Н	L	L	L/H	Bank/Col	Valid	6
BURST TERMINATE or deep power-down (Enter deep power-down mode)	L	Н	Н	L	Х	Х	Х	3, 7, 8
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	Х	Code	Х	9
AUTO REFRESH or SELF REFRESH (Enter self refresh mode)	L	L	L	Н	Х	Х	Х	10, 11
LOAD MODE REGISTER	L	L	L	L	Х	Op-Code	Х	12
Write enable/output enable	Χ	Х	Х	Х	L	Х	Active	
Write inhibit/output High-Z	Χ	Х	Х	Χ	Н	Х	High-Z	

Notes: 1. CKE is HIGH for all commands shown except SELF REFRESH and deep power-down.

- 2. All states and sequences not shown are reserved and/or illegal.
- 3. The purpose of the BURST TERMINATE command is to stop a data burst, thus the command could coincide with data on the bus. However, the DQs column reads a don't care state to illustrate that the BURST TERMINATE command can occur when there is no data present.
- 4. DESELECT and NOP are functionally interchangeable.
- 5. BA[1:0] provide bank address and A[12:0] provide row address.
- 6. BA[1:0] provide bank address; A[9:0] provide column address; A10 HIGH enables the auto precharge feature (nonpersistent), and A10 LOW disables the auto precharge feature.
- 7. Applies only to read bursts with auto precharge disabled; this command is undefined (and should not be used) for READ bursts with auto precharge enabled and for WRITE bursts.
- 8. This command is a BURST TERMINATE if CKE is HIGH, deep power-down if CKE is LOW.
- 9. A10 LOW: BA[1:0] determine which bank is precharged. A10 HIGH: all banks are precharged and BA[1:0] are "Don't Care."
- 10. This command is AUTO REFRESH if CKE is HIGH, SELF REFRESH if CKE is LOW.
- 11. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 12. BA[1:0] select either the standard mode register or the extended mode register (BA0 = 0, BA1 = 0 select the standard mode register; BA0 = 0, BA1 = 1 select extended mode register; other combinations of BA[1:0] are reserved.) A[12:0] provide the op-code to be written to the selected mode register.

#### **COMMAND INHIBIT**

The COMMAND INHIBIT function prevents new commands from being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.



#### **NO OPERATION (NOP)**

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM which is selected (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

#### LOAD MODE REGISTER (LMR)

The mode register is loaded via inputs A[12:0] and BA[1:0]. (See "Mode Register" on page 13.) The LMR and LOAD EXTENDED MODE REGISTER (LEMR) commands can only be issued when all banks are idle, and a subsequent executable command cannot be issued until <sup>t</sup>MRD is met.

#### **ACTIVE**

The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA[1:0] inputs selects the bank, and the address provided selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

#### **READ**

The READ command is used to initiate a burst read access to an active row. The value on the BA[1:0] inputs selects the bank, and the address provided selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the read burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Read data appears on the DQs subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQs will be High-Z two clocks later; if the DQM signal was registered LOW, the DQs will provide valid data.

#### WRITE

The WRITE command is used to initiate a burst write access to an active row. The value on the BA[1:0] inputs selects the bank, and the address provides the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the write burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DQM signal is registered HIGH, the corresponding data inputs will be ignored, and a write will not be executed to that byte/column location.

#### **PRECHARGE**

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (<sup>t</sup>RP) after the precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA[1:0] select the bank. Otherwise BA[1:0] are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.



#### **BURST TERMINATE**

The BURST TERMINATE command is used to truncate either fixed-length or continuous page bursts. The most recently registered READ or WRITE command prior to the BURST TERMINATE command will be truncated, as shown in "Operations" on page 23.

#### **AUTO REFRESH**

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) refresh in conventional DRAM. This command is non persistent, so it must be issued each time a refresh is required. All active banks must be PRE-CHARGED prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum <sup>t</sup>RP has been met after the PRE-CHARGE command, as shown in "Operations" on page 23.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. The 256Mb SDRAM requires 8192 AUTO REFRESH cycles every 64ms ( $^t$ REF). Providing a distributed AUTO REFRESH command every 7.8125 $\mu$ s will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 8192 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate ( $^t$ RFC), once every 64ms.

#### **SELF REFRESH**

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the SDRAM retains data without external clocking. The SELF REFRESH command is initiated like an AUTO REFRESH command, except CKE is disabled (LOW). Once the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care" with the exception of CKE, which must remain LOW.

Once self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own auto refresh cycles. The SDRAM must remain in self refresh mode for a minimum period equal to  ${}^{\rm t}$ RAS and may remain in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock ball) prior to CKE going back HIGH. Once CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of two clocks) for <sup>t</sup>XSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued every  $7.8125\mu s$  or less as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

#### **Auto Precharge**

Auto precharge is a feature which performs the same individual-bank precharge function described above, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the continuous page burst mode, where auto precharge does not apply. Auto precharge is non persistent in that it is either enabled or disabled for each individual READ or WRITE command.



Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (<sup>t</sup>RP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in "Operations" on page 23.

## **Deep Power-Down**

Deep power-down is an operating mode used to achieve maximum power reduction by eliminating the power to the memory array. Data will not be retained once the device enters deep power-down mode.



# **Operations**

### **Bank/Row Activation**

Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be "opened." This is accomplished via the ACTIVE command, which selects both the bank and the row to be activated (see Figure 9).

After opening a row (issuing an ACTIVE command), a READ or WRITE command may be issued to that row, subject to the  ${}^{t}RCD$  specification.  ${}^{t}RCD$  (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a  ${}^{t}RCD$  specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 10 on page 24, which covers any case where 2 <  ${}^{t}RCD$  (MIN)/ ${}^{t}CK \le 3$ . (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive ACTIVE commands to the same bank is defined by <sup>t</sup>RC.

A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by <sup>t</sup>RRD.

Figure 9: Activating a Specific Row in a Specific Bank


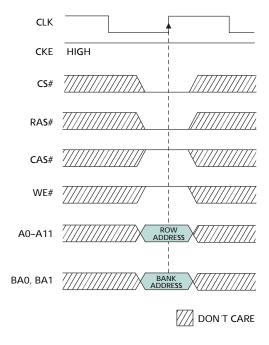




Figure 10: Example: Meeting  ${}^{t}RCD$  (MIN) When 2 <  ${}^{t}RCD$  (MIN)/ ${}^{t}CK \le 3$ 

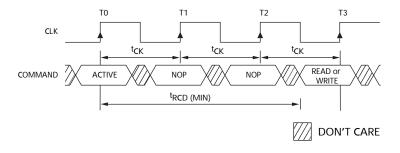


## **READs**

READ bursts are initiated with a READ command, as shown in Figure 11.

The starting column and bank addresses are provided with the READ command, and auto precharge is either enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic READ commands used in the following illustrations, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address will be available following the CL after the READ command. Each subsequent data-out element will be valid by the next positive clock edge. Figure 7 on page 16 shows general timing for each possible CL setting.

Figure 11: READ Command

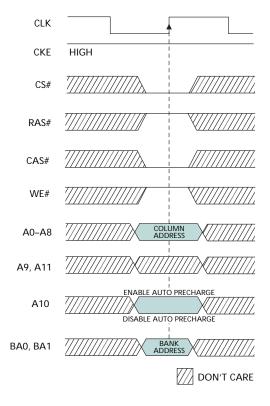




Upon completion of a burst, assuming no other commands have been initiated, the DQs will go High-Z. A continuous page burst will proceed until terminated (at the end of the page, it will wrap to the start address and continue).

Data from any READ burst may be truncated with a subsequent READ command, and data from a fixed-length READ burst may be immediately followed by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued x cycles before the clock edge at which the last desired data element is valid, where x = CL - 1.

Figure 7 on page 16 shows for CL of two and three; data element n+3 is either the last of a burst of four or the last desired of a longer burst. The 256Mb SDRAM uses a pipelined architecture. A READ command can be initiated on any clock cycle following a previous READ command. Full-speed random read accesses can be performed to the same bank, as shown in Figure 12 on page 25, or each subsequent READ may be performed to a different bank.


Figure 12: Consecutive READ Bursts

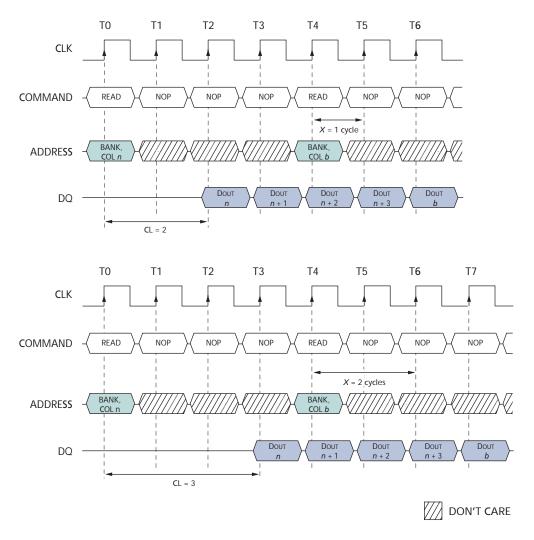



Note: Each READ command may be to either bank. DQM is LOW.

Figure 13: Random READ Accesses

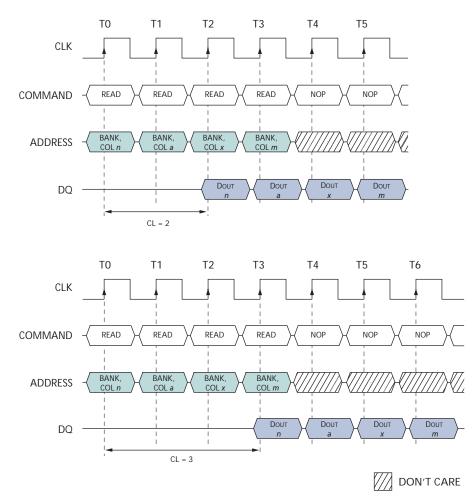

Note: Each READ command may be to either bank. DQM is LOW.

Data from any READ burst may be truncated with a subsequent WRITE command, and data from a fixed-length READ burst may be immediately followed by data from a WRITE command (subject to bus turnaround limitations). The WRITE burst may be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/O contention can be avoided. In a given system design, there may be a possibility that the device driving the input data will go Low-Z before the SDRAM DQs go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.

The DQM input is used to avoid I/O contention, as shown in Figure 14 on page 27 and Figure 15 on page 28. The DQM signal must be asserted (HIGH) at least two clocks prior to the WRITE command (DQM latency is two clocks for output buffers) to suppress dataout from the READ. Once the WRITE command is registered, the DQs will go High-Z (or remain High-Z), regardless of the state of the DQM signal, provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If




not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4 (as in Figure 15 on page 28) then the WRITEs at T5 and T7 would be valid, while the WRITE at T6 would be invalid.

The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 12 on page 25 shows the case where the clock frequency allows for bus contention to be avoided without adding a NOP cycle, and Figure 13 on page 26 shows the case where the additional NOP is needed.

A fixed-length READ burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated). The PRECHARGE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 16 on page 28 for each possible CL; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until <sup>t</sup>RP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or continuous page bursts.


Figure 14: READ-to-WRITE

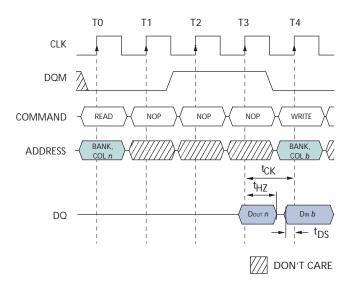

Note: CL = 3. The READ command may be to any bank, and the WRITE command may be to any bank. If a burst of one is used, then DQM is not required.




Figure 15: READ-to-WRITE with Extra Clock Cycle

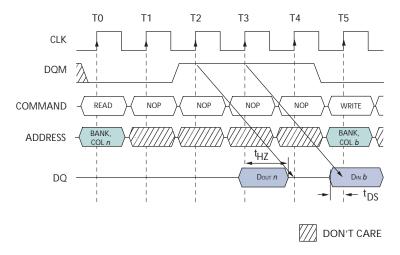

Note: CL = 3. The READ command may be to any bank, and the WRITE command may be to any bank.

Figure 16: READ-to-PRECHARGE

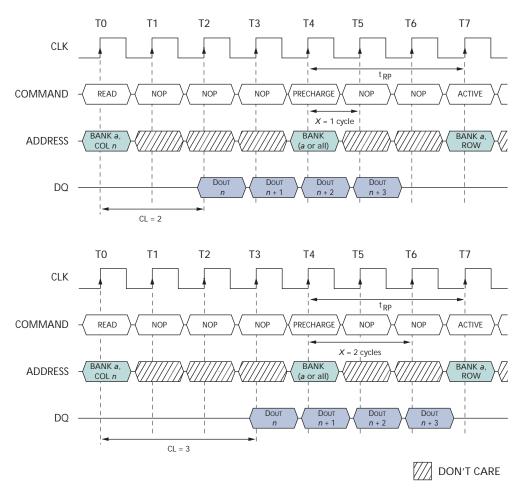


Note: DQM is LOW.



Continuous page bursts can be truncated with the BURST TERMINATE command, and fixed-length READ bursts may be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 17 for each possible CL; data element n + 3 is the last desired data element of a longer burst.

Figure 17: Terminating a READ Burst

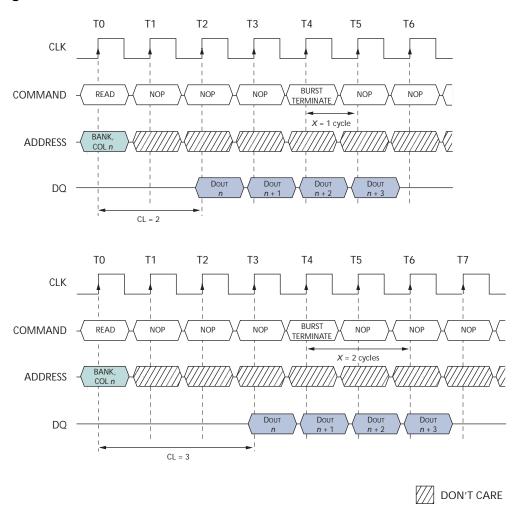

Note: DQM is LOW.




### **WRITEs**

WRITE bursts are initiated with a WRITE command, as shown in Figure 18 on page 30.

The starting column and bank addresses are provided with the WRITE command, and auto precharge is either enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic WRITE commands used in the following illustrations, auto precharge is disabled.

During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQs will remain High-Z and any additional input data will be ignored (see Figure 19). A continuous page burst will proceed until terminated (at the end of the page, it will wrap to the start address and continue).


Figure 18: WRITE Command

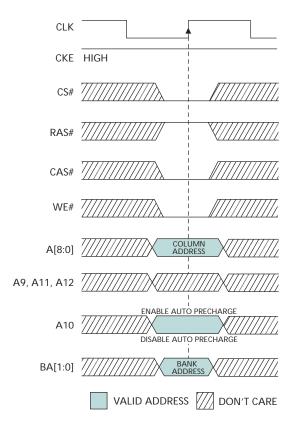

Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command. An example is shown in Figure 20 on page 31. Data n+1 is either the last of a burst of two or the last desired of a longer burst. The 256Mb SDRAM uses a pipelined architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 19 on page 31, or each subsequent WRITE may be performed to a different bank.




Figure 19: WRITE Burst

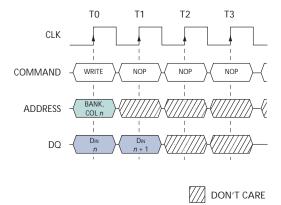

Note: BL = 2. DQM is LOW.

Figure 20: WRITE-to-WRITE

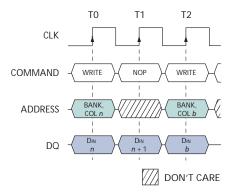

Note: BL = 2. DQM is LOW. Each WRITE command may be to any bank.

Data for any WRITE burst may be truncated with a subsequent READ command, and data for a fixed-length WRITE burst may be immediately followed by a READ command. Once the READ command is registered, the data inputs will be ignored, and WRITEs will not be executed. An example is shown in Figure 21 on page 32. Data n+1 is either the last of a burst of two or the last desired of a longer burst.


Data for a fixed-length WRITE burst may be followed by, or truncated with, a PRE-CHARGE command to the same bank (provided that auto precharge was not activated), and a continuous page WRITE burst can be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued <sup>t</sup>WR after the clock edge at which the last desired input data element is registered. The auto precharge mode requires a <sup>t</sup>WR of at least one clock plus time (see note 24 on page 53), regardless of frequency.

In addition, when truncating a WRITE burst, the DQM signal must be used to mask input data for the clock edge prior to, and the clock edge coincident with, the PRE-CHARGE command. An example is shown in Figure 21 on page 32. Data n+1 is either the last of a burst of two or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until <sup>t</sup>RP is met.




In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or continuous page bursts.

Figure 21: Random WRITE Cycles

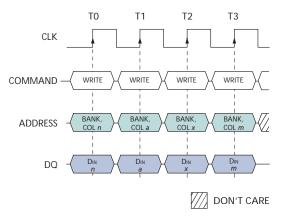

Note: Each WRITE command may be to any bank. DQM is LOW.


Figure 22: WRITE-to-READ

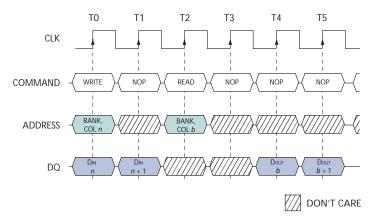

Note: BL = 2. The WRITE command may be to any bank, and the READ command may be to any bank. DQM is LOW. CL = 2 for illustration.




Figure 23: WRITE-to-PRECHARGE

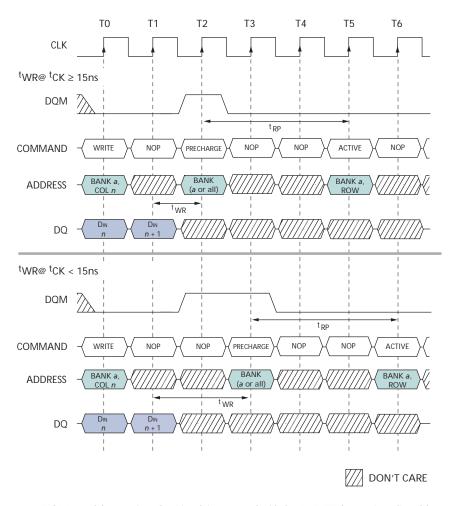

Note: DQM could remain LOW in this example if the WRITE burst is a fixed length of two.

Figure 24: Terminating a WRITE Burst

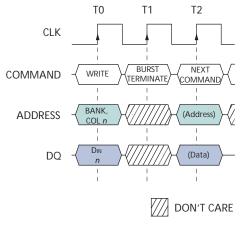

Note: DQMs are LOW.




Fixed-length or continuous page WRITE bursts can be truncated with the BURST TER-MINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command. This is shown in Figure 22 on page 32, where data n is the last desired data element of a longer burst.

#### **PRECHARGE**

The PRECHARGE command (see Figure 25) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (<sup>t</sup>RP) after the precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA[1:0] select the bank. When all banks are to be precharged, inputs BA[1:0] are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

Figure 25: PRECHARGE Command

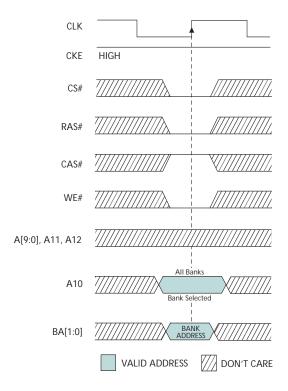


#### **Power-Down**

Power-down occurs if CKE is registered LOW coincident with a NOP or COMMAND INHIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. The device may not remain in the power-down state longer than the refresh period (64ms) since no REFRESH operations are performed in this mode.



The power-down state is exited by registering a NOP or COMMAND INHIBIT and CKE HIGH at the desired clock edge (meeting <sup>t</sup>CKS). See Figure 24.

Figure 26: Power-Down

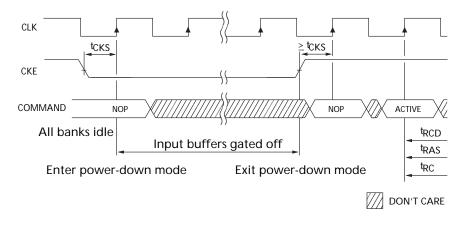

#### **Deep Power-Down**

Deep power-down mode is a maximum power savings feature achieved by shutting off the power to the entire memory array of the device. Data in the memory array will not be retained once deep power-down mode is executed. Deep power-down mode is entered by having all banks idle then CS# and WE# held LOW with RAS# and CAS# HIGH at the rising edge of the clock, while CKE is LOW. CKE must be held LOW during deep power-down.

To exit deep power-down mode, CKE must be asserted HIGH. Upon exit of Deep Power-Down mode, at least  $200\mu s$  of valid clocks with either NOP or COMMAND INHIBIT commands are applied to the command bus, followed by a full Mobile SDRAM initialization sequence, is required.

#### **Clock Suspend**

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered LOW. In the clock suspend mode, the internal clock is deactivated, "freezing" the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input balls at the time of a suspended internal clock edge is ignored; any data present on the DQ balls remains driven; and burst counters are not incremented, as long as the clock is suspended. (See examples in Figure 27 and Figure 28 on page 37.)

Clock suspend mode is exited by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.

#### **Burst Read/Single Write**

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the mode register to a logic 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed BL. READ commands access columns according to the programmed BL and sequence, just as in the normal mode of operation (M9 = 0).




### **Concurrent Auto Precharge**

An access command (READ or WRITE) to a second bank while an access command with auto precharge enabled on a first bank is executing is not allowed by SDRAM, unless the SDRAM supports concurrent auto precharge. Micron SDRAM support concurrent auto precharge. Four cases where concurrent auto precharge occurs are defined in the "READ with Auto Precharge" and "WRITE with Auto Precharge" sections.

#### **READ** with Auto Precharge

- 1. Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a READ on bank *n*, CL later. The precharge to bank *n* will begin when the READ to bank *m* is registered (see Figure 29 on page 37).
- 2. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The precharge to bank *n* will begin when the WRITE to bank *m* is registered (see Figure 30 on page 38).


Figure 27: Clock Suspend During WRITE Burst

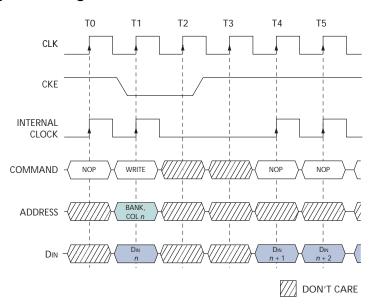

Note: For this example, BL = 4 or greater, and DM is LOW.




Figure 28: Clock Suspend During READ Burst

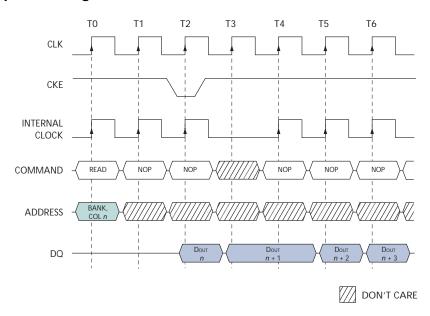

Note: For this example, CL = 2, BL = 4 or greater, and DQM is LOW.


Figure 29: READ with Auto Precharge Interrupted by a READ

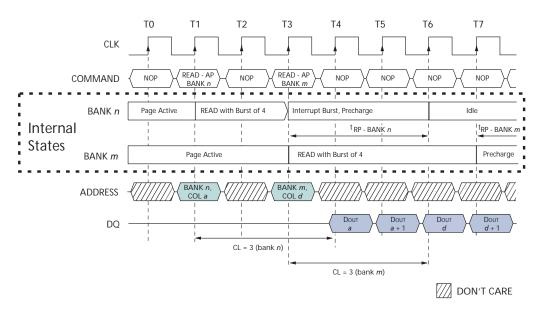

Note: DQM is LOW.



Figure 30: READ with Auto Precharge Interrupted by a WRITE

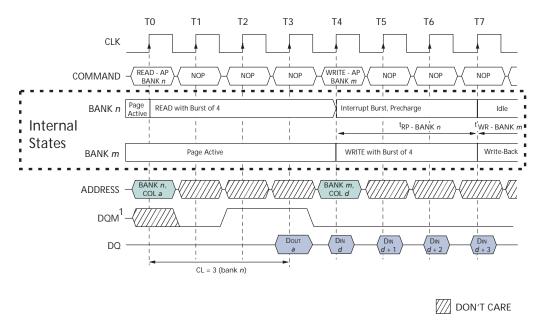


Note: DQM is HIGH at T2 to prevent Dout a + 1 from contending with Din d at T4.

#### **WRITE** with Auto Precharge

- 1. Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a WRITE on bank *n* when registered, with the data-out appearing CL later. The precharge to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (see Figure 31 on page 39).
- 2. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a WRITE on bank *n* when registered. The precharge to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the WRITE to bank *m* is registered. The last valid data WRITE to bank *n* will be data registered one clock prior to a WRITE to bank *m* (see Figure 32 on page 39).




Figure 31: WRITE with Auto Precharge Interrupted by a READ

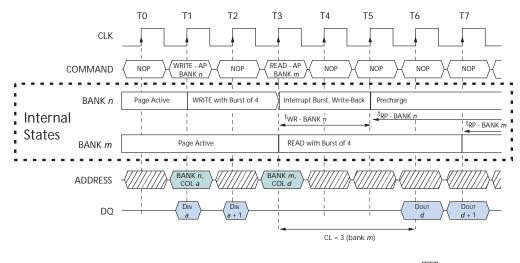

DON'T CARE

Note: DQM is LOW.

Figure 32: WRITE with Auto Precharge Interrupted by a WRITE

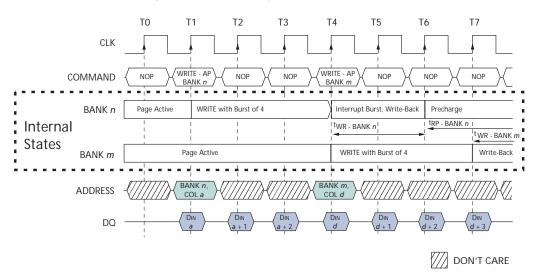

Note: DQM is LOW.



## **Truth Tables**

Table 6: Truth Table - CKE

Notes: 1-4

CKE <sub>n-1</sub>	CKE <sub>n</sub>	Current State	Command <sub>n</sub>	Action <sub>n</sub>	Notes
L	L	Power-down	X	Maintain power-down	
		Self refresh	X	Maintain self refresh	
		Clock suspend	X	Maintain clock suspend	
		Deep power-down	Х	Maintain deep power-down	8
L	Н	Power-down	COMMAND INHIBIT or NOP	Exit power-down	5
		Deep power-down	X	Exit deep power-down	8
		Self refresh	COMMAND INHIBIT or NOP	Exit self refresh	6
		Clock suspend	X	Exit clock suspend	7
Н	L	All banks idle	COMMAND INHIBIT or NOP	Power-down entry	
		All banks idle	BURST TERMINATE	Deep power-down entry	8
		All banks idle	AUTO REFRESH	Self refresh entry	
		Reading or writing	VALID	Clock suspend entry	
Н	Н		See Table 8 on page 43		

- Notes: 1. CKE<sub>n</sub> is the logic state of CKE at clock edge n; CKE<sub>n-1</sub> was the state of CKE at the previous clock edge.
  - 2. Current state is the state of the SDRAM immediately prior to clock edge *n*.
  - 3.  $COMMAND_n$  is the command registered at clock edge n, and  $ACTION_n$  is a result of  $COMMAND_n$ .
  - 4. All states and sequences not shown are illegal or reserved.
  - 5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that <sup>t</sup>CKS is met).
  - 6. Exiting self refresh at clock edge *n* will put the device in the all banks idle state once <sup>t</sup>XSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the <sup>t</sup>XSR period. A minimum of two NOP commands must be provided during <sup>t</sup>XSR period.
  - 7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.
  - 8. Deep power-down is power savings feature of this Mobile SDRAM device. This command is BURST TERMINATE when CKE is HIGH and deep power-down when CKE is LOW.



Table 7: Truth Table - Current State Bank n, Command to Bank n

Notes: 1-6; notes appear below table

Current State	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	L	L	Н	Н	ACTIVE (Select and activate row)	
	L	L	L	Н	AUTO REFRESH	7
	L	L	L	L	LMR	7
	L	L	Н	L	PRECHARGE	11
Row active	L	Н	L	Н	READ (Select column and start READ burst)	10
	L	Н	L	L	WRITE (Select column and start WRITE burst)	10
	L	L	Н	L	PRECHARGE (Deactivate row in bank or banks)	8
Read	L	Н	L	Н	READ (Select column and start new READ burst)	10
(auto precharge	L	Н	L	L	WRITE (Select column and start WRITE burst)	10
disabled)	L	L	Н	L	PRECHARGE (Truncate READ burst, start PRECHARGE)	8
	L	Н	Н	L	BURST TERMINATE	9
Write	L	Н	L	Н	READ (Select column and start READ burst)	10
(auto precharge	L	Н	L	L	WRITE (Select column and start new WRITE burst)	10
disabled)	L	L	Н	L	PRECHARGE (Truncate WRITE burst, start PRECHARGE)	8
	L	Н	Н	L	BURST TERMINATE	9

Notes: 1. This table applies when CKE<sub>n-1</sub> was HIGH and CKE<sub>n</sub> is HIGH (see Table 6 on page 40) and after <sup>t</sup>XSR has been met (if the previous state was self refresh).

- 2. This table is bank-specific, except where noted; i.e., the current state is for a specific bank and the commands shown are those allowed to be issued to that bank when in that state. Exceptions are covered in the notes below.
- 3. Current state definitions:

Idle: The bank has been precharged, and <sup>t</sup>RP has been met.

Row active: A row in the bank has been activated, and <sup>t</sup>RCD has been met. No data

bursts/accesses and no register accesses are in progress.

Read: A READ burst has been initiated, with auto precharge disabled, and has

not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has

not yet terminated or been terminated.

4. The following states must not be interrupted by a command issued to the same bank. COMMAND INHIBIT or NOP commands, or allowable commands to the other bank should be issued on any clock edge occurring during these states. Allowable commands to the other bank are determined by its current state and Table 7, and according to Table 8 on page 43.

Precharging: Starts with registration of a PRECHARGE command and ends when

<sup>t</sup>RP is met. Once <sup>t</sup>RP is met, the bank will be in the idle state.

Row activating: Starts with registration of an ACTIVE command and ends when <sup>t</sup>RCD

is met. Once <sup>t</sup>RCD is met, the bank will be in the row active state.

Read w/auto- Starts with registration of a READ command with auto precharge


precharge enabled: enabled and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank

will be in the idle state.

Write w/auto- Starts with registration of a WRITE command with auto precharge

precharge enabled: enabled and ends when<sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank

will be in the idle state.





5. The following states must not be interrupted by any executable command; DESELECT or NOP commands must be applied on each positive clock edge during these states.

Refreshing: Starts with registration of an AUTO REFRESH command and ends

when <sup>t</sup>RFC is met. Once <sup>t</sup>RFC is met, the Mobile SDRAM will be in the

all banks idle state.

Accessing mode Starts with registration of an LMR command and ends when <sup>t</sup>MRD

register: has been met. Once <sup>t</sup>MRD is met, the Mobile SDRAM will be in the

all banks idle state.

Precharging all: Starts with registration of a PRECHARGE ALL command and ends

when <sup>t</sup>RP is met. Once <sup>t</sup>RP is met, all banks will be in the idle state.

- 6. All states and sequences not shown are illegal or reserved
- 7. Not bank-specific; requires that all banks are idle.
- 8. May or may not be bank-specific; if all banks are to be precharged, all must be in a valid state for precharging.
- 9. Not bank-specific; BURST TERMINATE affects the most recent READ or WRITE burst, regardless of bank.
- 10. READs or WRITEs listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 11. Does not affect the state of the bank and acts as a NOP to that bank.



#### Table 8: Truth Table - Current State Bank n, Command to Bank m

Notes: 1-6; notes appear below and on next page

<b>Current State</b>	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	Χ	Х	Х	Χ	Any command otherwise allowed to bank m	
Row activating,	L	L	Н	Н	ACTIVE (Select and activate row)	
active, or	L	Н	L	Н	READ (Select column and start READ burst)	7
precharging	L	Н	L	L	WRITE (Select column and start WRITE burst)	7
	L	L	Н	L	PRECHARGE	
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto precharge	L	Н	L	Н	READ (Select column and start new READ burst)	7, 8
disabled)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 9
	L	L	Н	L	PRECHARGE	10
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto precharge	L	Н	L	Н	READ (Select column and start READ burst)	7, 11
disabled)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 12
	L	L	Н	L	PRECHARGE	10
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 13, 14
precharge)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 13, 15
	L	L	Н	L	PRECHARGE	10
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 13, 16
precharge)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 13, 17
	L	L	Н	L	PRECHARGE	10

Notes: 1. This table applies when CKE<sub>n-1</sub> was HIGH and CKE<sub>n</sub> is HIGH (see Table 6 on page 40) and after <sup>t</sup>XSR has been met (if the previous state was self refresh).

- 2. This table describes alternate bank operation, except where noted; i.e., the current state is for bank *n* and the commands shown are those allowed to be issued to bank *m* (assuming that bank *m* is in such a state that the given command is allowable). Exceptions are covered in the notes below.
- 3. Current state definitions:

Idle: The bank has been precharged, and <sup>t</sup>RP has been met.

Row active: A row in the bank has been activated, and <sup>t</sup>RCD has been met. No

data bursts/accesses and no register accesses are in progress.

Read: A READ burst has been initiated, with auto precharge disabled, and

has not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and

has not yet terminated or been terminated.

Read w/autoprecharge enabled: Starts with registration of a READ command with auto precharge precharge enabled: enabled and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank

will be in the idle state.

Write w/autoprecharge enabled:

Starts with registration of a WRITE command with auto precharge enabled and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank

will be in the idle state.

- 4. AUTO REFRESH, SELF REFRESH and LMR commands may only be issued when all banks are idle.
- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.



- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CL later (see Figure 11 on page 24).
- 9. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (see Figure 12 on page 25 and Figure 13 on page 26). DQM should be used one clock prior to the WRITE command to prevent bus contention.
- 10. Burst in bank *n* continues as initiated.
- 11. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank m will interrupt the WRITE on bank n when registered (see Figure 20 on page 31), with the data-out appearing CL later. The last valid WRITE to bank n will be data-in registered one clock prior to the READ to bank m.
- 12. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank will interrupt the WRITE on bank *n* when registered (see Figure 18 on page 30). The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 13. Concurrent auto precharge: Bank *n* will initiate the auto precharge command when its burst has been interrupted by bank *m* burst.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CL later. The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered.
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered.
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank m will interrupt the WRITE on bank n when registered, with the dataout appearing CL later. The PRECHARGE to bank n will begin after  ${}^{t}WR$  is met, where  ${}^{t}WR$  begins when the READ to bank m is registered. The last valid WRITE bank n will be data-in registered one clock prior to the READ to bank m.
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* interrupt the WRITE on bank *n* when registered. The PRECHARGE to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the WRITE to bank *m* is registered. The last valid WRITE to bank *n* will be data registered one clock to the WRITE to bank *m*.



# **Electrical Specifications**

## **Absolute Maximum Ratings**

Stresses greater than those listed in Table 9 may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

**Table 9: Absolute Maximum Ratings** 

Voltage/Temperature	Min	Max	Units
Voltage on V <sub>DD</sub> /V <sub>DDQ</sub> supply relative to V <sub>SS</sub> (1.8V)	-0.3	+2.7	V
Voltage on inputs, NC or I/O balls relative to V <sub>SS</sub> (1.8V)	-0.3	+2.7	
Storage temperature plastic	-55	+150	

**Table 10: DC Electrical Characteristics and Operating Conditions** 

Notes: 1, 5, 6; notes appear on page 52 and 53;  $V_{DD}/V_{DDO} = 1.7-1.95V$ 

Parameter/Condition	Symbol	Min	Max	Units	Notes
Supply voltage	$V_{DD}$	1.7	1.95	V	
I/O supply voltage	$V_{DDQ}$	1.7	1.95	V	
Input high voltage: Logic 1; All inputs	V <sub>IH</sub>	$0.8 \times V_{DDQ}$	$V_{DDQ} + 0.3$	V	22
Input low voltage: Logic 0; All inputs	$V_{IL}$	-0.3	+0.3	V	22
Output high voltage: All inputs: I <sub>OUT</sub> = -4mA	V <sub>OH</sub>	$0.9 \times V_{DDQ}$	_	V	
Output low voltage: All inputs: I <sub>OUT</sub> = 4mA	V <sub>OL</sub>	-	0.2	V	
Input leakage current: Any input $0V \le V_{IN} \le V_{DD}$ (All other balls not under test = $0V$ )	I <sub>I</sub>	-1.0	1.0	μA	
Output leakage current: DQ are disabled; 0V ≤ V <sub>OUT</sub> ≤ V <sub>DDQ</sub>	I <sub>OZ</sub>	-1.5	1.5	μΑ	
Operating temperature					
T <sub>A</sub> (commercial) T <sub>A</sub> (industrial)		+70 +85	°C		



**Table 11:** Electrical Characteristics and Recommended AC Operating Conditions Notes: 5, 6, 8, 9, 11; notes appear on page 52 and 53

AC Characteristics		-	75	•	8			
Parameter		Symbol	Min	Max	Min	Max	Units	Notes
Access time from CLK (pos. edge)	CL = 3	<sup>t</sup> AC (3)		6		7	ns	
	CL = 2	<sup>t</sup> AC (2)		8		9	ns	9
Address hold time		<sup>t</sup> AH	1		1		ns	
Address setup time		<sup>t</sup> AS	1.5		2.5		ns	
CLK high-level width		<sup>t</sup> CH	3		3		ns	
CLK low-level width		<sup>t</sup> CL	3		3		ns	
Clock cycle time	CL = 3	<sup>t</sup> CK (3)	7.5		8		ns	23
	CL = 2	<sup>t</sup> CK (2)	9.6		10		ns	23
CKE hold time		<sup>t</sup> CKH	1		1		ns	
CKE setup time		<sup>t</sup> CKS	2.5		2.5		ns	
CS#, RAS#, CAS#, WE#, DQM hold time		<sup>t</sup> CMH	1		1		ns	
CS#, RAS#, CAS#, WE#, DQM setup time	<sup>t</sup> CMS	1.5		2.5		ns		
Data-in hold time		<sup>t</sup> DH	1		1		ns	
Data-in setup time		<sup>t</sup> DS	1.5		2.5		ns	
Data-out High-Z time	CL = 3	<sup>t</sup> HZ (3)		6		7	ns	10
	CL = 2	<sup>t</sup> HZ (2)		9		9	ns	10
Data-out Low-Z time		<sup>t</sup> LZ	1		1		ns	
Data-out hold time (load)		<sup>t</sup> OH	2.5		2.5		ns	
Data-out hold time (no load)		<sup>t</sup> OHn	1.8		1.8		ns	25
ACTIVE-to-PRECHARGE command		<sup>t</sup> RAS	44	120,000	48	120,000	ns	
ACTIVE-to-ACTIVE command period		<sup>t</sup> RC	67.5		72		ns	
ACTIVE-to-READ or WRITE delay		<sup>t</sup> RCD	19		20		ns	
Refresh period (8192 rows)		<sup>t</sup> REF		64		64	ms	
AUTO REFRESH period		<sup>t</sup> RFC	80		80		ns	
PRECHARGE command period		<sup>t</sup> RP	19		19		ns	
ACTIVE bank a to ACTIVE bank b command		<sup>t</sup> RRD	2		2		<sup>t</sup> CK	
Transition time		<sup>t</sup> T	0.3	1.2	0.5	1.2	ns	7
WRITE recovery time		<sup>t</sup> WR	15		15		ns	31
Exit SELF REFRESH to ACTIVE command		<sup>t</sup> XSR	80		80		ns	20



**Table 12: AC Functional Characteristics** 

Notes: 5, 6, 8, 9,11 notes appear on page 52 and 53

Parameter		Symbol	-75	-8	Units	Notes
READ/WRITE command to READ/WRITE command		<sup>t</sup> CCD	1	1	<sup>t</sup> CK	17
CKE to clock disable or power-down entry mode		<sup>t</sup> CKED	1	1	<sup>t</sup> CK	14
CKE to clock enable or power-down exit setup mode		<sup>t</sup> PED	1	1	<sup>t</sup> CK	14
DQM to input data delay		<sup>t</sup> DQD	0	0	<sup>t</sup> CK	17
DQM to data mask during WRITEs		<sup>t</sup> DQM	0	0	<sup>t</sup> CK	17
DQM to data High-Z during READs		<sup>t</sup> DQZ	2	2	<sup>t</sup> CK	17
WRITE command to input data delay		<sup>t</sup> DWD	0	0	<sup>t</sup> CK	17
Data-in to ACTIVE command		<sup>t</sup> DAL	5	5	<sup>t</sup> CK	15, 21
Data-in to PRECHARGE command		<sup>t</sup> DPL	2	2	<sup>t</sup> CK	16, 21
Last data-in to burst STOP command		<sup>t</sup> BDL	1	1	<sup>t</sup> CK	17
Last data-in to new READ/WRITE command		<sup>t</sup> CDL	1	1	<sup>t</sup> CK	17
Last data-in to PRECHARGE command		<sup>t</sup> RDL	2	2	<sup>t</sup> CK	16, 21
LMR command to ACTIVE or REFRESH command		<sup>t</sup> MRD	2	2	<sup>t</sup> CK	25
Data-out High-Z from PRECHARGE command	CL = 3	tROH(3)	3	3	<sup>t</sup> CK	17
	CL = 2	tROH(2)	2	2	<sup>t</sup> CK	17



## Table 13: I<sub>DD</sub> Specifications and Conditions (x16)

Notes: 1, 5, 6, 11, 13; notes appear on page 52 and 53; V<sub>DD</sub>/V<sub>DDQ</sub> = 1.7–1.95V

				ах		
Parameter/Condition		Symbol	-75	-8	Units	Notes
Operating current: Active mode; BL = 1; READ or WRITE; <sup>t</sup> RC = <sup>t</sup> RC (MI	N)	I <sub>DD1</sub>	65	60	mA	1, 18, 19
Standby current: Power-down mode; All banks idle; CKE = LOW		I <sub>DD2P</sub> standard	300	300	μA	1, 18, 19
		I <sub>DD2P</sub> Iow-power	220	220	μA	1, 18, 19
Precharge nonpower-down standby current with c banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# =		I <sub>DD2PS</sub> standard	300	300	μA	30
control inputs are switching; Data bus inputs are st	table	I <sub>DD2PS</sub> Iow-power	220	220	μA	30
Standby current: Non-power-down mode; All banks idle; CKE = HIGI	Н	I <sub>DD2N</sub>	20	20	mA	
Precharge nonpower-down standby current with c banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = control inputs are switching; Data bus inputs are st	I <sub>DD2NS</sub>	5	5	mA		
Standby current: Active mode; CKE = LOW; CS# = HIGH; All banks ac progress	tive; No accesses in	I <sub>DD3P</sub>	5	5	mA	1, 12, 19
Precharge nonpower-down standby current with c banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = control inputs are switching; Data bus inputs are st	= HIGH; Address and	I <sub>DD3PS</sub>	3	3	mA	
Standby current: Active mode; CKE = HIGH; CS# = HIGH; All banks ac No accesses in progress	ctive after <sup>t</sup> RCD met;	I <sub>DD3N</sub>	25	25	mA	1, 12, 19
Precharge nonpower-down standby current with c banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = control inputs are switching; Data bus inputs are st	= HIGH; Address and	I <sub>DD3NS</sub>	10	10	mA	
Operating current: Burst mode; READ or WRITE; All banks active, half cycle	I <sub>DD4</sub>	90	85	mA	1, 18, 19	
Auto refresh current:	<sup>t</sup> RFC = <sup>t</sup> RFC (MIN)	I <sub>DD5</sub>	100	95	mA	1, 12,
CKE = HIGH; CS# = HIGH	<sup>t</sup> RFC = 7.8125µs	I <sub>DD6</sub>	5	5	mA	18 19, 26
Deep power-down	I <sub>ZZ</sub>	10	10	μΑ	29, 30	



## Table 14: I<sub>DD</sub> Specifications and Conditions (x32)

Notes: 1, 5, 6, 11, 13; notes appear on page 52 and 53; V<sub>DD</sub>/V<sub>DDQ</sub> = 1.7–1.95V

			M	ах		
Parameter/Condition		Symbol	-75	-8	Units	Notes
Operating current: Active mode; BL = 1; READ or WRITE; <sup>t</sup> RC = <sup>t</sup> RC (MIN	I)	I <sub>DD1</sub>	95	90	mA	1, 18, 19
Standby current: Power-down mode; All banks idle; CKE = LOW		I <sub>DD2P</sub> standard	300	300	μA	30
		I <sub>DD2P</sub> Iow- power	220	220	μΑ	30
Precharge nonpower-down standby current with clobanks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# =	= HIGH; Address and	I <sub>DD2PS</sub> standard	300	300	μA	30
control inputs are switching; Data bus inputs are sta	able	I <sub>DD2PS</sub> Iow- power	220	220	μΑ	30
Standby current: Non-power-down mode; All banks idle; CKE = HIGH		I <sub>DD2N</sub>	20	20	mA	
Precharge nonpower-down standby current with clock stopped: All banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = HIGH; Address and control inputs are switching; Data bus inputs are stable			5	5	mA	
Standby current: Active mode; CKE = LOW; CS# = HIGH; All banks active; No accesses in progress			5	5	mA	1, 12, 19
Precharge nonpower-down standby current with clobanks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = control inputs are switching; Data bus inputs are sta	= HIGH; Address and	I <sub>DD3PS</sub>	3	3	mA	
Standby current: Active mode; CKE = HIGH; CS# = HIGH; All banks act No accesses in progress	ive after <sup>t</sup> RCD met;	I <sub>DD3N</sub>	25	25	mA	1, 12, 19
Precharge nonpower-down standby current with clock stopped: All banks idle; CKE is LOW, CS is HIGH; CK = LOW, CK# = HIGH; Address and control inputs are switching; Data bus inputs are stable			10	10	mA	
Operating current: Burst mode; READ or WRITE; All banks active, half DQs toggling every cycle			120	115	mA	1, 18, 19
Auto refresh current: CKE = HIGH; CS# = HIGH	${}^{t}RFC = {}^{t}RFC \text{ (MIN)}$	I <sub>DD5</sub>	100	95	mA	1, 12, 18, 26
	<sup>t</sup> RFC = 7.8125µs	I <sub>DD6</sub>	5	5	mA	19, 27
Deep power-down		I <sub>ZZ</sub>	10	10	μA	29, 30




**Table 15:** I<sub>DD7</sub> - Self Refresh Current Options

Notes: 2, 28, 30; notes appear on page 52 and page 53

Temperature-Compensated Self Refresh Parameter/Condition	Maximum Temperature	Low IDD7 Option "L"	Standard IDD7	Units
Self refresh current:	85°C	220	300	μΑ
CKE = LOW - 4-bank refresh	70°C	175	210	μΑ
	45°C	140	190	μΑ
	15°C	125	180	μΑ
Self refresh current:	85°C	200	275	μΑ
CKE = LOW – 2-bank refresh	70°C	150	180	μΑ
	45°C	130	160	μΑ
	15°C	115	150	μΑ
Self refresh current:	85°C	185	265	μΑ
CKE = LOW – 1-bank refresh	70°C	140	160	μΑ
	45°C	120	140	μΑ
	15°C	115	140	μΑ
Self refresh current:	85°C	175	255	μΑ
CKE = LOW - Half-bank refresh	70°C	125	150	μΑ
	45°C	115	130	μΑ
	15°C	110	125	μΑ
Self refresh current:	85°C	170	250	μΑ
CKE = LOW - Quarter-bank refresh	70°C	120	140	μA
	45°C	110	120	μA
	15°C	105	115	μΑ

Figure 33: Typical Self Refresh Current vs. Temperature

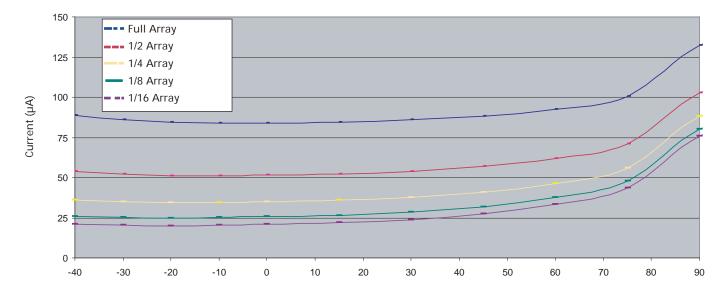



## Table 16: Capacitance


Note: 2; notes appear on page 52 and 53

Parameter	Symbol	Min	Max	Units
Input capacitance: CLK	CI1	1.5	4.5	pF
Input capacitance: All other input-only balls	CI2	2.0	4.5	pF
Input/output capacitance: DQs	Cio	2.0	6.0	pF



#### **Notes**

- 1. All voltages referenced to  $V_{SS}$ .
- 2. This parameter is sampled.  $V_{DD}$ ,  $V_{DDQ}$  = +1.8V;  $T_A$  = 25°C; ball under test biased at 0.9V; f = 1 MHz.
- 3. I<sub>DD</sub> is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 4. Enables on-chip refresh and address counters.
- 5. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range ( $-40^{\circ}C \leq T_{A} \leq +85^{\circ}C$  for  $T_{A}$  on IT parts) is ensured.
- 6. An initial pause of 100 $\mu$ s is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (V<sub>DD</sub> and V<sub>DDQ</sub> must be powered up simultaneously. V<sub>SS</sub> and V<sub>SSQ</sub> must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the <sup>t</sup>REF refresh requirement is exceeded.
- 7. AC characteristics assume  ${}^{t}T = 1$ ns.
- 8. In addition to meeting the transition rate specification, the clock and CKE must transit between  $V_{IH}$  and  $V_{IL}$  (or between  $V_{IL}$  and  $V_{IH}$ ) in a monotonic manner.
- 9. Outputs measured for 1.8V at 0.9V with equivalent load:



Test loads with full DQ driver strength. Performance will vary with actual system DQ bus capacitive loading, termination, and programmed drive strength.

- 10. <sup>t</sup>HZ defines the time at which the output achieves the open circuit condition; it is not a reference to V<sub>OH</sub> or V<sub>OL</sub>. The last valid data element will meet <sup>t</sup>OH before going High-Z.
- 11. AC timing and  $I_{DD}$  tests have  $V_{IL}$  and  $V_{IH}$ , with timing referenced to  $V_{IH}/2$  = crossover point. If the input transition time is longer than  $^tT$  (MAX), then the timing is referenced at  $V_{IL,max}$  and  $V_{IH,min}$  and no longer at the  $V_{IH}/2$  crossover point.
- 12. Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid  $V_{\rm IL}$  or  $V_{\rm IL}$  levels.
- 13. IDD specifications are tested after the device is properly initialized.
- 14. Timing actually specified by <sup>t</sup>CKS; clock(s) specified as a reference only at minimum cycle rate.
- 15. Timing actually specified by <sup>t</sup>WR plus <sup>t</sup>RP; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by <sup>t</sup>WR.
- 17. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 18. The IDD current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 19. Address transitions average one transition every two clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. Based on  ${}^{t}CK = 7.5$ ns for -75,  ${}^{t}CK = 8$ ns for -8, at CL = 3.




- 22.  $V_{IH}$  overshoot:  $V_{IH,max} = V_{DDQ} + 2V$  for a pulse width  $\leq 3$ ns, and the pulse width cannot be greater than one third of the cycle rate.  $V_{IL}$  undershoot:  $V_{IL,min} = -2V$  for a pulse width  $\leq 3$ ns.
- 23. The clock frequency can only be changed during clock stop, power-down, or while in a self-refresh mode.
- 24. Auto precharge mode only. The precharge timing budget (<sup>t</sup>RP) begins at 7ns for -8 after the first clock delay, after the last WRITE is executed. May not exceed limit set for precharge mode. The clock frequency can only be changed during
- 25. Parameter guaranteed by design.
- 26. CKE is HIGH during refresh command period <sup>t</sup>RFC (MIN), else CKE is LOW.
- 27. The  $I_{\text{DD6}}$  limit is actually a nominal value and does not result in a fail value.
- 28. Values for  $I_{DD7}$  for 70°C, 45°C, 15°C, and  $I_{DD7}$  1/2-bank and 1/4-bank are sampled only. Values for  $I_{DD7}$  4-bank, 2-bank, and 1-bank for 85°C are 100% tested.
- 29. Deep power-down current is a nominal value at 25°C. This parameter is not tested.
- 30. Test conditions include 500ms delay prior to measurement.
- 31. Auto precharge mode only. The precharge timing budget (<sup>t</sup>RP) begins at 7.5ns for -75 and 7ns for -8 after the first clock delay, after the last WRITE is executed. For auto precharge mode, at least one clock cycle is required during <sup>t</sup>WR.



# **Timing Diagrams**

Figure 34: Initialize and Load Mode Register

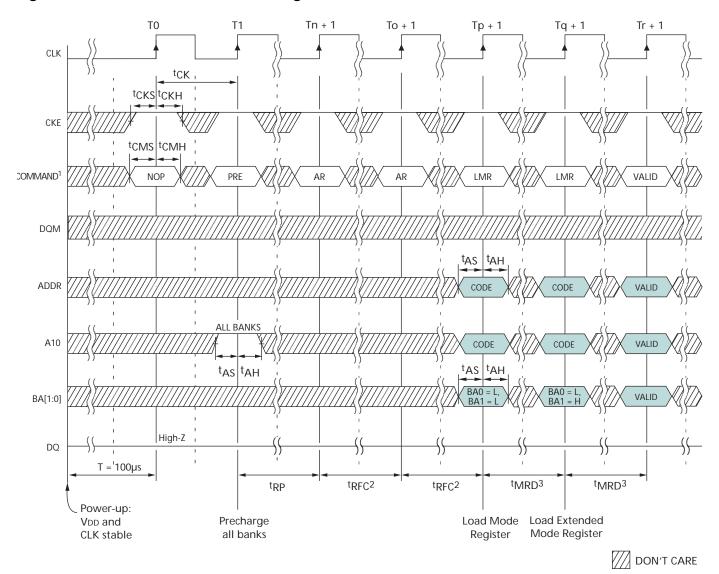


Notes: 1. PRE = PRECHARGE command; AR = AUTO REFRESH command; LMR = LOAD MODE REGISTER command.

- 2. Only NOPs or COMMAND INHIBITs may be issued during <sup>t</sup>RFC time.
- 3. At least one NOP or COMMAND INHIBIT is required during <sup>t</sup>MRD time.




Figure 35: Power-Down Mode

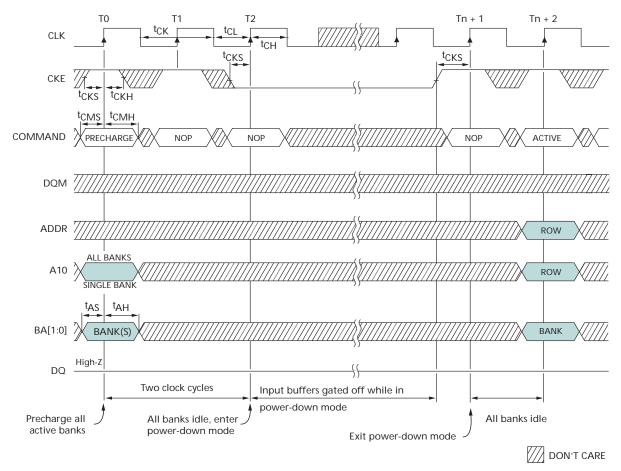

Notes: 1. Violating refresh requirements during power-down may result in a loss of data. See Table 11 on page 46.




## Figure 36: Clock Suspend Mode

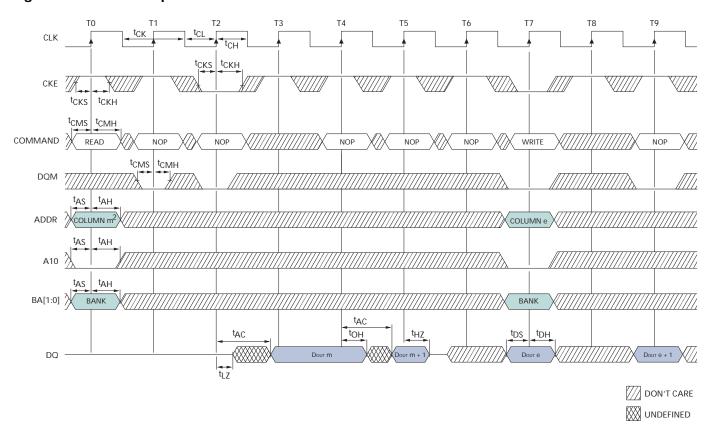

Notes: 1. For this example, BL = 2, CL = 3, and auto precharge is disabled.



Figure 37: Auto Refresh Mode

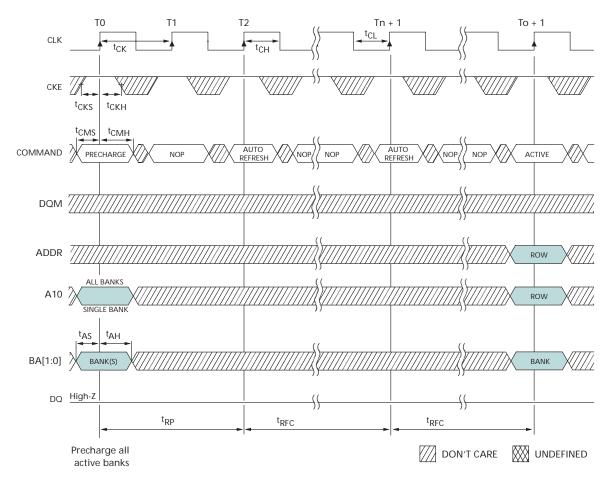


Notes: 1. Each AUTO REFRESH command performs a REFRESH cycle. Back-to-back commands are not required.

See Table 11 on page 46.




Figure 38: Self Refresh Mode

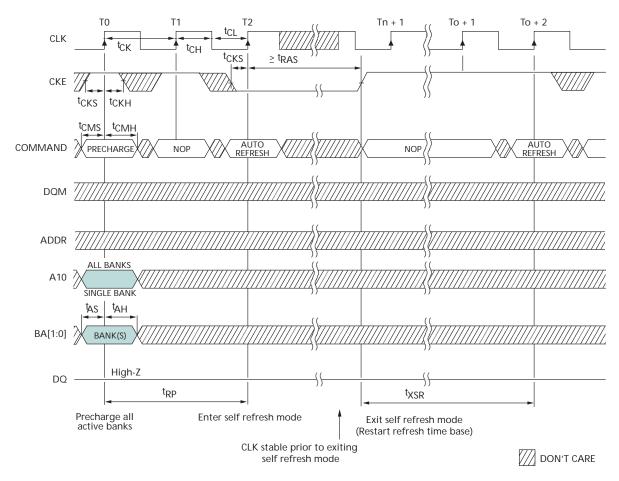




## Figure 39: READ - without Auto Precharge

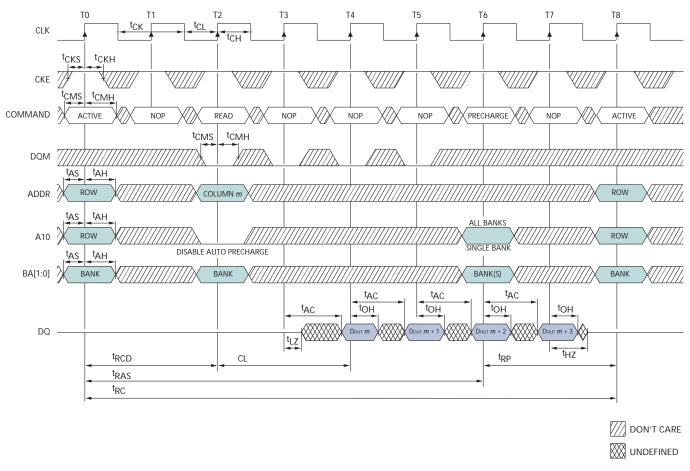

Notes: 1. For this example, BL = 4, CL = 2, and the READ burst is followed by a manual PRECHARGE.




## Figure 40: READ - with Auto Precharge

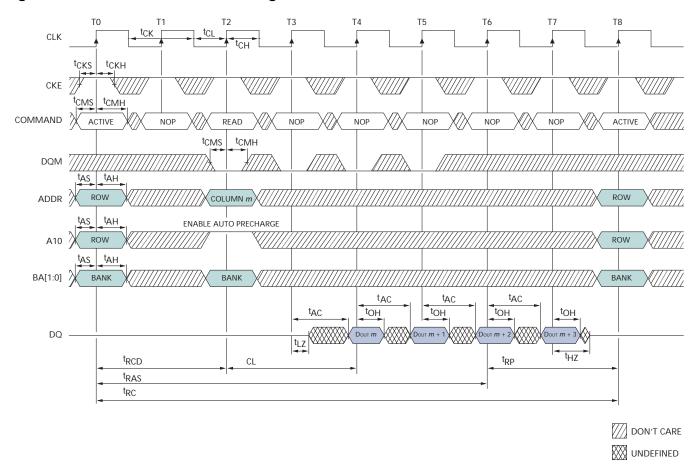

Notes: 1. For this example, BL = 4, CL = 2.



Figure 41: Single READ - without Auto Precharge

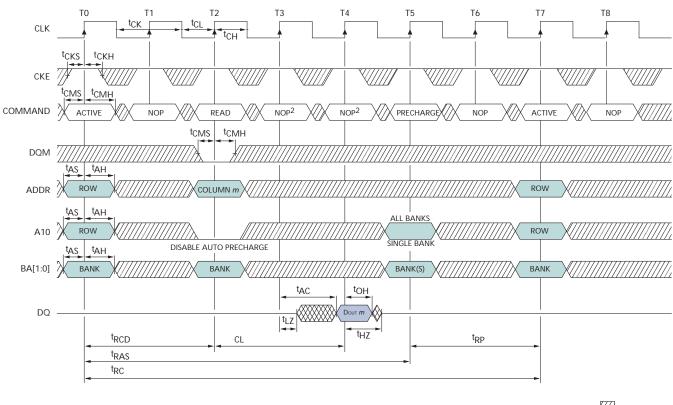

DON'T CARE


UNDEFINED

Notes: 1. For this example, BL = 4, CL = 2, and the READ burst is followed by a manual PRECHARGE.

2. PRECHARGE command not allowed or <sup>t</sup>RAS would be violated. See Table 11 on page 46.



Figure 42: Single READ - with Auto Precharge

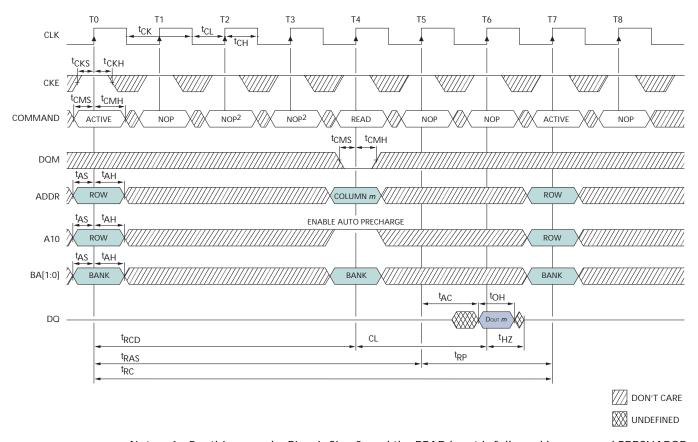


Notes: 1. For this example, BL = 4, CL = 2, and the READ burst is followed by a manual PRECHARGE.

2. PRECHARGE command not allowed or <sup>t</sup>RAS would be violated. See Table 11 on page 46.




Figure 43: Alternating Bank Read Accesses

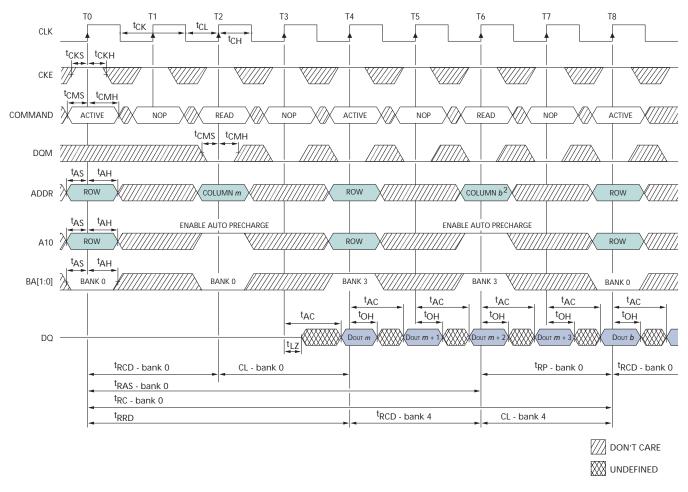

Notes: 1. For this example, BL = 4, CL = 2.



Figure 44: READ - Continuous Page Burst

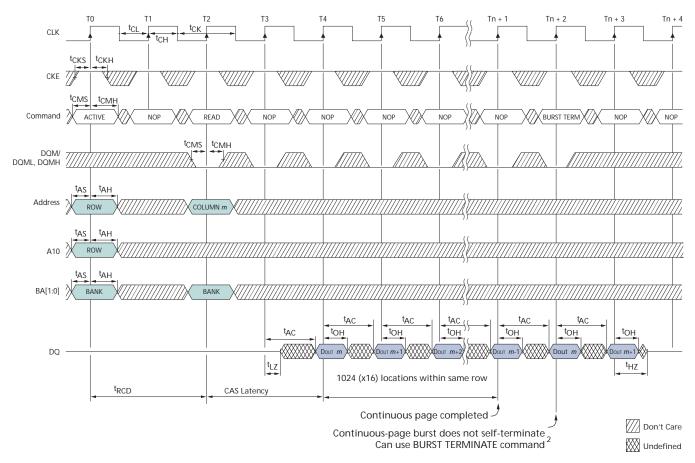


Notes: 1. For this examples, CL = 2.

2. Page left open; no <sup>t</sup>RP.




## Figure 45: READ - DQM Operation

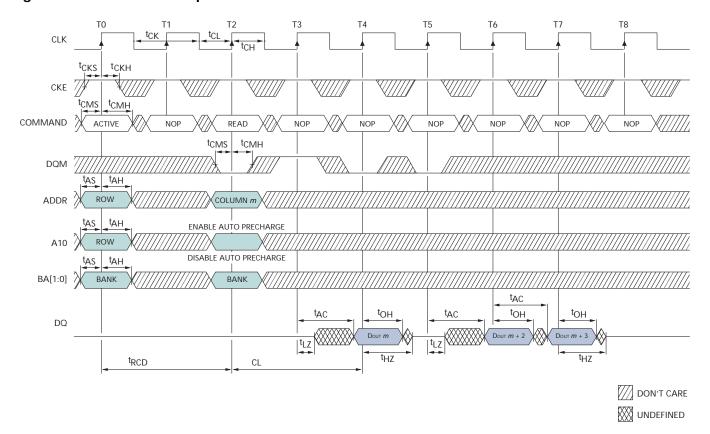

Notes: 1. For this example, CL = 2.



Figure 46: WRITE - Without Auto Precharge

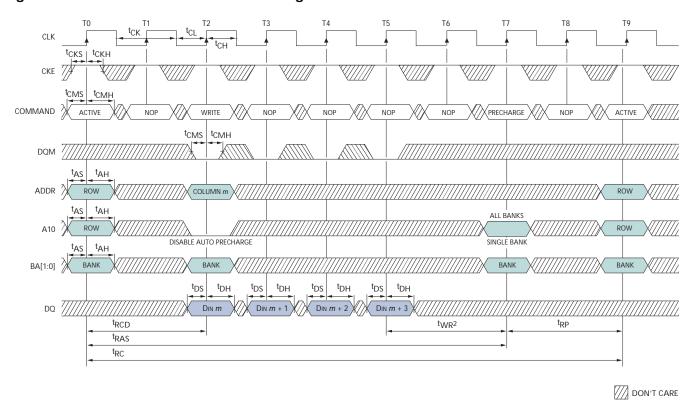


Notes: 1. For this example, BL = 4, and the WRITE burst is followed by a manual PRECHARGE.

2. 15ns is required between  $\langle DIN m + 3 \rangle$  and the PRECHARGE command, regardless of frequency.



Figure 47: WRITE - with Auto Precharge

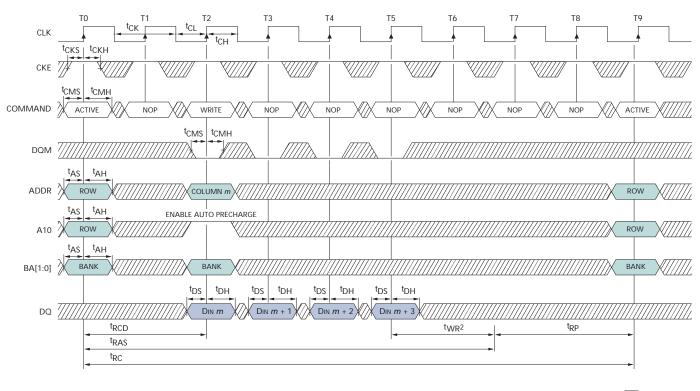


DON'T CARE

UNDEFINED

Notes: 1. For this example, BL = 4.



Figure 48: Single WRITE - Without Auto Precharge

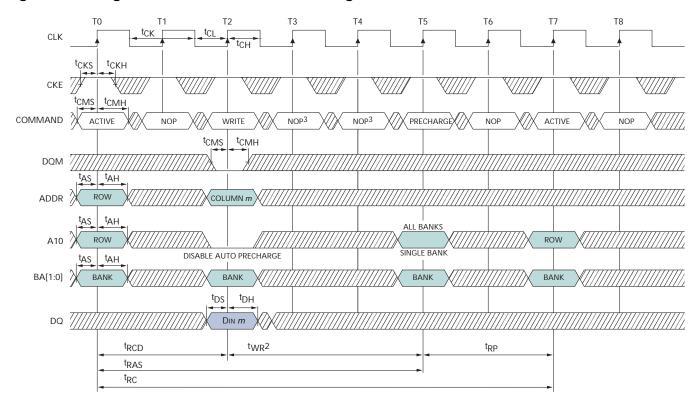


DON'T CARE

Notes: 1. For this example, BL = 1, and the WRITE burst is followed by a manual PRECHARGE.

- 2. 15ns is required between < DIN m> and the PRECHARGE command, regardless of frequency.
- 3. PRECHARGE command not allowed or <sup>t</sup>RAS would be violated. See Table 11 on page 46.




Figure 49: Single WRITE - with Auto Precharge

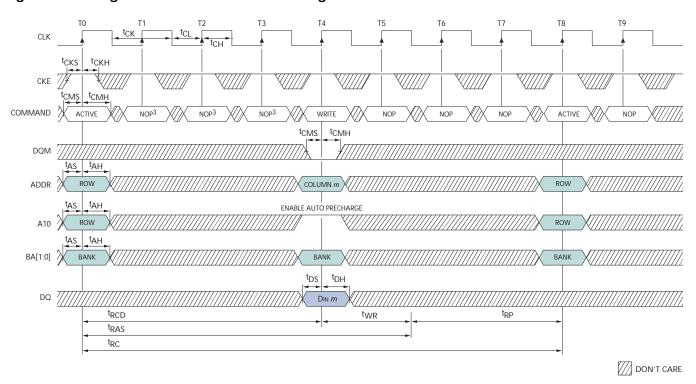

- Notes: 1. For this example, BL = 1, and the WRITE burst is followed by a manual PRECHARGE.
  - 2. 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.
  - 3. WRITE command not allowed or <sup>t</sup>RAS would be violated. See Table 11 on page 46.




Figure 50: Alternating Bank Write Accesses

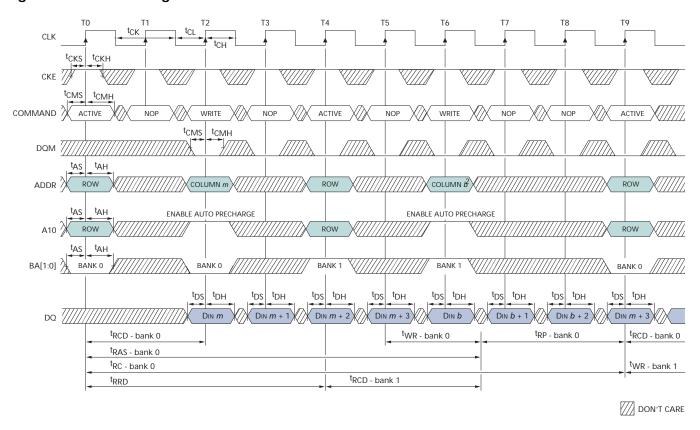

Notes: 1. For this example, BL = 4.



Figure 51: WRITE - Continuous Page Burst

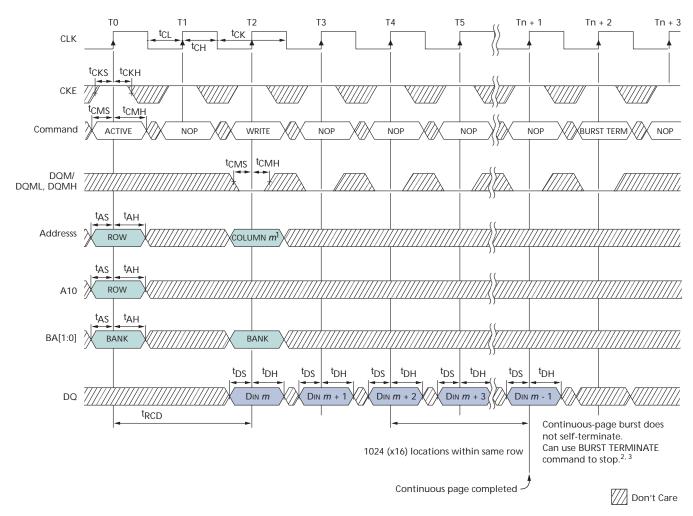


Notes: 1. x16: A11 and A12 = "Don't Care"; x8: A12 = "Don't Care."

- 2. <sup>t</sup>WR must be satisfied prior to PRECHARGE command.
- 3. Page left open; no <sup>t</sup>RP.



Figure 52: WRITE - DQM Operation

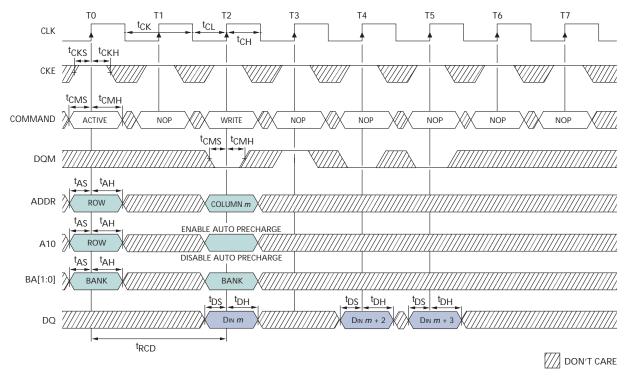


Notes: 1. For this example, BL = 4.



# **Package Dimensions**


Figure 53: 54-Ball VFBGA (8mm x 9mm)

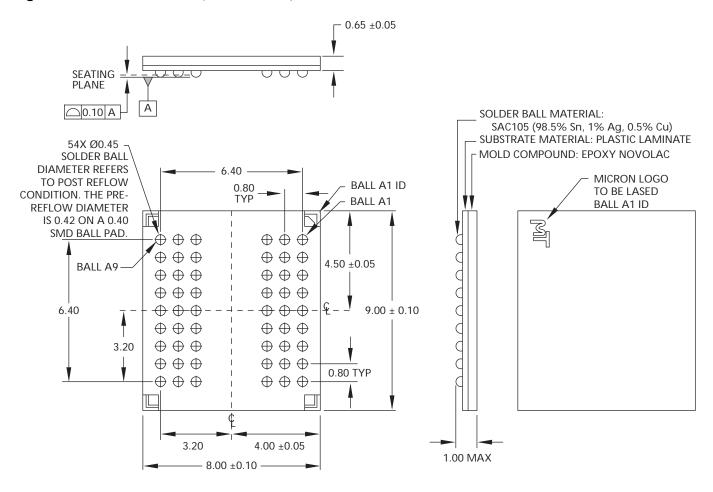

Notes: 1. All dimensions are in millimeters.



Figure 54: 90-Ball VFBGA (8mm x 13mm)

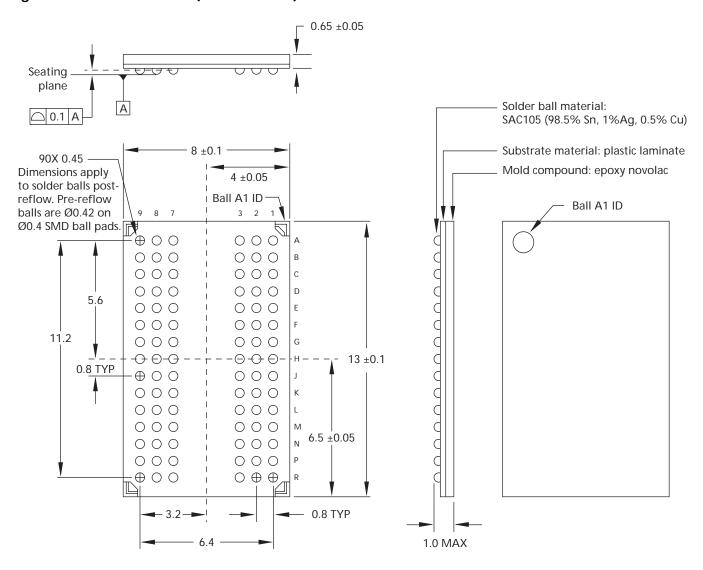

Notes: 1. All dimensions are in millimeters.

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 www.micron.com/productsupport Customer Comment Line: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners.

This data sheet contains minimum and maximum limits specified over the power supply and temperature range set forth herein. Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.



## **Revision History**

Rev. G, Production	
	• Table 10, "DC Electrical Characteristics and Operating Conditions," on page 45: Updated $I_{OZ}$ specification.
Rev. F. Production	

- Changed wording in Note 1 in the "Options" section on page 1.
- Changed CL = 2, -75 and -8 access times from "6ns" and "7ns" to "9ns" in Table 2 on page 1.
- Added "Revision :G" to Figure 1 on page 5.
- Changed refresh counter from "12" to "13" and changed Bank0 Memory Array from "8,192" to "4,096" in Figure 3 on page 7.
- Changed E2, K2 to "DNU" and added the following sentence in the: "TEST pin must be tied to VssQ in normal operation" in Table 3 on page 10.
- Added the following sentence to the "Input/output mask" description in Table 3 on page 10: "DQM loading is designed to match that of DQ balls."
- Removed all the text after the first sentence in the "Initialization" section on page 12.
- Removed the first seven words in the "Mode Register" section on page 13.
- Removed "(sequential or interleaved)" and "...the specified time..." in the "Mode Register" section on page 13.
- Changed "M13" and "M12" to "M13" and "M14" and deleted a column in the "Operating Mode" table in Figure 3 on page 7.
- Removed the notes under Table 4 on page 15.
- Corrected the "Operating Mode" table in Figure 6 on page 14.
- Removed the following text under the "Operating Mode" section on page 16: "or test modes" and "The programmed BL applies to both READ and WRITE bursts."
- Removed "(nonburst)" under the "Write Burst Mode" section on page 16.
- Removed the last two sentences in the first paragraph and removed "(BA1=1, AB0=0)," in the second paragraph in the "Low-Power Extended Mode Register (EMR) Definition" section on page 16.
- Changed the "Low-Power Extended Mode Register (EMR) Definition" heading to "Extended Mode Register (EMR)" on page 16.
- Moved Figure 7 to page 16.
- Changed the title of Figure 7 on page 16 to "EMR Definition."
- Removed all bank address references from the "PASR Self-Refresh Coverage" in Figure 7 on page 16.
- Replace the "Temperature-Compensated Self Refresh (TCSR)" section on page 17.
- Removed the second sentence in the "Partial Array Self-Refresh" section on page 18.
- Replaced Table 5 on page 19 and all the associated notes.
- Removed last paragraph and added "A0-A12" in the first sentence in the "Load Mode Register" section on page 20.
- Removed "...and the DQ balls tri-state" from the "COMMAND INHIBIT" section on page 19.
- Moved the "Auto Precharge" section to page 21.
- Added a second paragraph in the "Deep Power Down" section on page 22.
- Added "BL = 2" to the note under Figure 20 on page 31.
- Added "BL = 2" to the note under Figure 22 on page 32.
- Changed "(see Figure 23)" to "(see Figure 25)" on page 34.



	Moved Figure 25 to page 34.
	Removed the "In order to exit deep power down" paragraph on page 35.
	• Replaced text in note 9 and removed "Deep power down" rows in Table 7 on page 41.
	• Added note 9 to <sup>t</sup> AC and note 27 to <sup>t</sup> OHN in Table 11 on page 46.
	• Changed tXSR from "67.5" to "80" in Table 11 on page 46.
	• Changed "9" to "8" for <sup>t</sup> AC (2) -75, and <sup>t</sup> CK (2) -75 from "10" to "9" in Table 11 on
	page 46.
	<ul> <li>Replaced note 30 and 31 in the "Notes" section on page 52.</li> </ul>
	Moved Figure 34 to page 54.
	• Removed note 1 from Figure 38 on page 58.
Rev. E, Production	
	Changed ball D7 from "VDDQ" to "VSSQ" in Figure 4 on page 8.
Rev. D. Production .	
ic v. D, i roudettoii .	• Removed CL = 1 from Table 2 on page 1, Figure 6 on page 14, Figure 7 on page 16,
	Figure 12 on page 25, Figure 13 on page 26, Figure 16 on page 28, Figure 17 on
	page 29, Table 11 on page 46, Table 12 on page 47.
Rev. C, Production .	
	Added a "For burst length of 16 or continuous page burst, contact factory for avail-
	ability" in Features section on page 1.
	• Changed "Burst Length = 1" in the IDD1 row in Table 13 and Table 14.
	Changed all instances of "HDQM" with "UDQM."
	• Changed all instances of "DQM0-3" to "DQM" in Figure 36 through Figure 52.
	Removed all instances of continuous page burst after page 1.
	• Added changed burst length "16" and "continuous" to "Reserved" in Figure 6.
	• Removed note specifying "E14 and E13 (BA1 and BA0) must be "1, 0" to select the extended mode register (vs. the standard mode register) from Figure 8.
	• Changed the following sentence in the "Extended Mode Register (EMR)" on page 16:
	"The low-power EMR must be loaded when all banks are idle and no burst are in
	progress."
	<ul> <li>Removed the following note from Figure 53 and Figure 54: "Green packaging compo-</li> </ul>
	sition is available upon request."
Rev. B. Production	
	Added Note 1 to Figure 8, page 17.
	<ul> <li>Updated Table 15 values, page 50.</li> </ul>
	Removed all instances of -10 speed grade.  Changed CL = 2 from 104 MHz to 100 MHz.
	• Changed CL = 2 from 104 MHz to 100 MHz.
	<ul> <li>Changed "Refresh count" for 8 Meg x 32 to 8K from 4K in Table 1.</li> <li>Added "E2" row to Table 3.</li> </ul>
	• Removed the following from sentence two in the "General Description" section: "This architecture is compatible with the 2n rule of profetch architecture."
	architecture is compatible with the 2n rule of prefetch architecture."  • Pameyed all instances of "full" page hypet and replaced them with "continuous" page
	<ul> <li>Removed all instances of "full" page burst and replaced them with "continuous" page burst.</li> </ul>
	<ul> <li>Added the following note to the "Features" section on page 1: "Contact factory for availability."</li> </ul>
	•
	Added a "Power" section to "Options" on page 1.      Poplaced old part numbering table with Figure 1.
	• Replaced old part numbering table with Figure 1.
	• Changed the clock rate on -75 and -8 for CL = 2 from 111 to 100 in Table 2.



- Changed the "8" address lines going into the "column address counter/Latch" to "9" in Figure 2.
- Changed all references of 13 to 12 and changed the "8" address lines going into the "column address counter/Latch" to "9" in Figure 3.
- Changed the "8" address lines going into the "column address counter/Latch" to "9" in Figure 2.
- Deleted "(4 Meg x32 x4 banks)" from the first sentence of the "Functional Description" section.
- Removed the following sentence from the "Mode Register (MR) section: "M12 and M13 should be set to zero to prevent the EMR from being programmed."
- Added A12 to Figure 6.
- Added notes 2? and 2 to Figure 8.
- · Removed Table 5, "CAS Latency."
- Removed all notes except note 2 and added note 1 to Table 5.
- Removed all text references to the "2n rule."
- Changed the following items in Table 12: Changed <sup>t</sup>AC(2) from 7/8 to 9ns for -75 and -8 speed grades, changed <sup>t</sup>CK(2) from 9 tp 10ns for -75 and -8 speed grades, and changed <sup>t</sup>HZ(2) from 7/8 to 9ns for -75 and -8 speed grades.
- Added Table 14 for x32 specifications.
- Changed the following specifications in Table 16: CLK 1.5 (MIN) 4.5 (MAX), Input 2.0 (MIN) 4.5 (MAX), DQs 2.0 (MIN) 6.0 (MAX)
- Added Figure 33.
- Deleted first line of "Solder Ball Material" in Figure 52.
- Changed "Burst Length = 1" in the IDD1 row in Table 13 and Table 14.
- Added a "Contact factory for availability" note to Figure 6.

Initial release