

ACT2804

Rev 3, Apr-17-2017

5V/3.4A Dual Cell Battery Power Manager

FEATURES

- Dedicated Single-chip Integrated Battery Power Manager
- Dual Cell Battery Charger with Cell Balancing Management
- Auto Detection support USB BC1.2, Chinese YD/T 1591-2009, Apple 2.4A, and Samsung Devices
- Passed Apple MFi Test
- 4.5V-5.5V Input Voltage with 3.8A Input Current Limit
- 2.4A+1.0A Dual Outputs with CC Regulation
- 5.07V+/-1% Output with Prioritized Power Path from Input to Output
- 4.2V/4.35V +/- 0.5% Battery Charge Voltage Accuracy of Each Cell
- Output Plug-in Detection Wakeup and No Load Detection Sleep Mode
- Optimized Power Path and Battery Charge Control
- <10uA Low Battery Drainage Current
- I2C Port for Optimal System Performance and Status Reporting
- Configurable Charge, Discharge and HZ modes
- >92% Charge and Discharge Efficiency at 3.4A Output for Full Battery Range
- 4 Modes of LED Operation
- Capability to Charge Wearable Devices
- Weak Input Sources Accommodation
- Safety:
 - Input Over-voltage Protection
 - Nearly Zero Power Short Circuit Protection
 - Output Over-voltage Protection

- Battery Over-charge and Over-discharge Protections
- Charge/Discharge Thermal Regulation
- TQFN5x5-40 Package

APPLICATIONS

- Backup Battery Pack
- Power Bank
- Dual Cell Boost Battery Charger
- Bluetooth Speaker
- Standalone Battery Charger with USB Output


GENERAL DESCRIPTION


ACT2804 is a space-saving and dedicated single-chip solution for dual-cell battery charge and discharge. It takes 5V USB input source to charge a dual cell battery with boost configuration in three phases: preconditioning, constant current, and constant voltage. Charge is terminated when the current reaches 10% of the fast charge rate. The battery charger is thermally regulated at 110°C with charge current foldback.

If input 5V is not present, ACT2804 discharge a dual cell battery with buck configuration to provide 5.07V+/-1% to output ports. There is a power path from input to output. The cycle-by-cycle peak current mode control, constant current regulation, short circuit protection and over voltage protection maximize safe operation.

ACT2804 provides 4 LED drive pins for battery capacity level and charge status indication to indicate 25%, 50%, 75%, and 75% above battery level with battery impedance compensation. The LED indication patterns are programmable .

ACT2804 is available in a thermally enhanced 5mmx5mm QFN55-40 package with exposed pad.

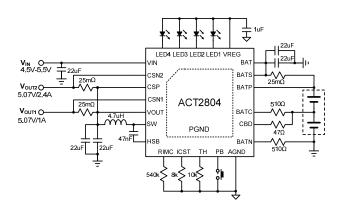

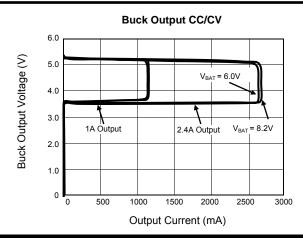




ORDERING INFORMATION

	PART NUMBER	BATTERY CELL VOLTAGE	JUNCTION TEMPERATURE	PACKAGE	PINS
Ī	ACT2804QJ-T 4.20V		-40°C to 150°C	QFN55-40	40
Ī	ACT2804QJ-T0435	4.35V	-40°C to 150°C	QFN55-40	40

PIN CONFIGURATION

Downloaded from Arrow.com.

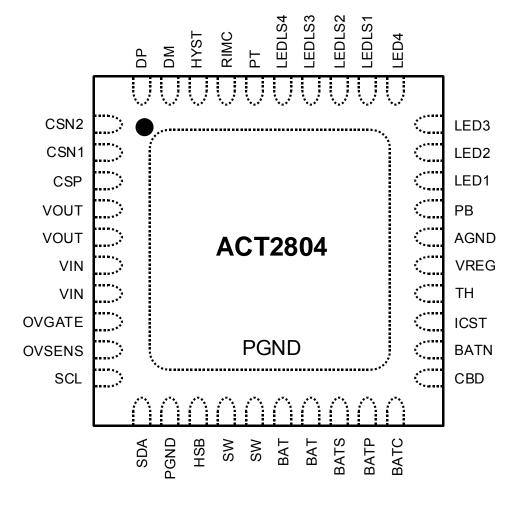


TOP VIEW



PIN DESCRIPTIONS

PIN	NAME	DESCRIPTION
1	CSN2	Output current sense negative input for channel 2.
2	CSN1	Output current sense negative input for channel 1.
3	CSP	Output current sense positive input.
4, 5	VOUT	Power Output Pin.
6, 7	VIN	USB or AC Adapter input.
8	OVGATE	Output to drive optional external NMOS protect IC from over voltage.
9	OVSENS	USB or AC Adapter input sense.
10	SCL	I2C clock input.
11	SDA	I2C data input.
12	PGND	Power ground. Directly connect this pin to IC thermal PAD and connect 10uF or 22uF high quality capacitors from BAT to PGND on the same layer with IC.
13	HSB	High side bias pin. Connect a 47nF ceramic capacitor from HSB to SW.
14,15	SW	Internal switch connected to a terminal of the output inductor.
16,17	BAT	BAT connection. Connect it to battery current sense positive terminal. Bypass BAT pin to PGND pin with high quality ceramic capacitors on the same layer with IC.
18	BATS	Battery charge current sense input. Connect to charge sense resistor positive terminal with Kevin sense.
19	BATP	Connect to charge sense resistor negative terminal and battery positive terminal.
20	BATC	Battery central point connection. Connect to dual battery cell common terminal.
21	CBD	Cell balancing discharge. Connect to a discharge resistor from this pin to battery common terminal.
22	BATN	Battery negative terminal.
23	ICST	Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charging current. The current setting ranges from 0.5A-1.8A. The voltage at this pin reflects the charge current and discharge current in charge mode and discharge mode, respectively.
24	TH	Temperature sensing input. Connect to a battery thermistor terminal.
25	VREG	+5V Bias output. Connect a 1.0uF to this pin. This pin supplies up to 50mA output current. The bias turns on in charge mode and discharge mode. Internal register bit can shut down the bias. Bias turns off in HZ mode.





PIN DESCRIPTIONS

PIN	NAME	DESCRIPTION
26	AGND	Logic ground output. Connect this pin to the exposed PGND pad on same layer with IC.
27	РВ	Push button input. When this pin is pushed for more than 40ms, LED1-4 indicators are enabled for 5 seconds.
28	LED1	Battery level indicator.
29	LED2	Battery level indicator.
30	LED3	Battery level indicator.
31	LED4	Battery level indicator.
32	LEDLS1	LED1 threshold level shift. Connect a resistor from the pin to AGND to shift LED1 threshold.
33	LEDLS2	LED2 threshold level shift. Connect a resistor from the pin to AGND to shift LED2 threshold.
34	LEDLS3	LED3 threshold level shift. Connect a resistor from the pin to AGND to shift LED3 threshold.
35	LEDLS4	LED4 threshold level shift. Connect a resistor from the pin to AGND to shift LED4 threshold.
36	PT	LED indication mode input. The 5 modes of LED indication patterns are set by a voltage at this pin. Connect a resistor at the pin to set the voltage and an LED indication pattern.
37	RIMC	RIMC Battery impedance compensation input.
38	HYST	The hysteresis window setting input. Connect a resistor at the pin to set the hysteresis windows for LED1, 2, 3, 4.
39	DM	Output port auto detection input. Connected to portable device D
40	DP	Output port auto detection input. Connected to portable device D+.
41	PGND	Exposed pad. Must be soldered to ground plane layer(s) on the PCB for best electrical and thermal conductivity.



ABSOLUTE MAXIMUM RATINGS®

PARAMETER	VALUE	UNIT
LEDLS1, LEDLS2, LEDLS3, LEDLS4, RIMC, HYST and PT to GND	-0.3 to +6	V
LED1, LED2, LED3 and LED4 to GND	-0.3 to +6	V
PB, DM, DP, TH, SCL, SDA and ICST to GND	-0.3 to +6	V
OVSENS to GND	-0.3 to +16	V
OVGATE to GND	-0.3 to +12	V
VIN, VOUT and VREG to GND	-0.3 to +6	V
CSP to CSN2, CSP to CSN1, CSP to VOUT	-0.3 to +0.3	V
BAT to BATS, BATS to BATP	-0.3 to +0.3	V
BATC to BATN	-0.3 to +6	V
BAT to BATC	-0.3 to +6	V
BATN to GND	-0.3 to +0.3	V
CBD to BAT	-6 to +0.3	V
BATN to CBD	-6 to +0.3	V
SW to PGND	-0.3 to +12	V
HSB to SW	-0.3 to +6	V
Junction to Ambient Thermal Resistance (θ _{JA})	40	°C/W
Operating Junction Temperature (T _J)	-40 to 150	$^{\circ}$
Operating Temperature Range (T _A)	-40 to 85	$^{\circ}$ C
Store Temperature	-55 to 150	$^{\circ}$ C
Lead Temperature (Soldering, 10 sec)	300	$^{\circ}$ C

Do not exceed these limits to prevent damage to the device. Exposure to absolute maximum rating conditions for long periods may affect device reliability.

- 5 -



(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Input Current Limit, Over Voltage Prote	ection, Output Under Voltage Pr	otection			
Input Voltage Range		4.5		5.5	V
Input Over Voltage Protection	VIN rising, V _{IN} OVP	5.5	5.7	6.0	V
Input Over Voltage Hysteresis	VIN falling, VIN_OVP_HYST		290		mV
Input Under Voltage Lock-Out	VIN rising, V _{IN} _UVLO		4.2		V
Input Under Voltage Lock-Out Hysteresis	VIN falling, VIN_UVLO_HYST		200		mV
Input Current Limit Setting Range		-10%	3.8	+10%	Α
Output Under voltage protection (UVP)	VOUT falling, VOUT_UVP		3.65		V
Output Under Voltage Protection Hysteresis	VOUT rising, VOUT_UVP_HYST		200		mV
Q1 wait time in hiccup mode			3		s
Boost Mode/Charge Mode		•			•
Switching Frequency		-15%	400	+15%	KHz
Precondition Voltage Threshold of Each Cell	VBAT1,2 rising		2.8		V
Preconditioning current	Percentage of fast charge current		15		%
Boost Charger UVLO	VOUT rising, BST_UVLO		4.2		V
D. W F. 10701 V. W.	VBAT_EOC (ACT2804QJ-T)	-0.5%	4.2	+0.5%	V
Battery End-Of-Charge Voltage	VBAT_EOC (ACT2804QJ-T0435)	-0.5%	4.35	+0.5%	V
End of Charge Detection Current	Percentage of fast charge current		10		%
Buck mode/Discharge					
Buck Under Voltage Lock-Out	VABT falling, VBAT1, 2		2.9		V
	REG3[1:0]=00, Default		5.07		V
	REG3[1:0]=01		5.12		V
VOUT Output Regulation Voltage	REG3[1:0]=10		5.17		V
	REG3[1:0]=11		5.22		V
	RCS1=25mΩ, ICC1	1.05	1.25	1.40	A
VOUT1 and VOUT2 Current Limit	RCS2=25mΩ, ICC2	2.45	2.65	2.85	A
	1002-201132, 1002	2.40	2.00	2.00	_ ^



(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Buck Converter Under Voltage Protection Threshold	VOUT falling goes into hiccup		3.65		٧
Buck Converter Over Voltage Protection Threshold	VOUT rising, BCK_OVP		5.7		V
Buck Convert Hiccup Time			3.4		s
Buck Converter Light-Load Cut-off Current		5	10	15	mA
Buck Converter Light-Load Cut-off Deglitch Time			12.5		s
High Side Switch Peak Current Limit	All condition	4.5			Α
Over Temperature Protection	ОТР		160		$^{\circ}$
Over Temperature Protection Hysteresis	OTP_HYST		20		$^{\circ}$
Battery Protection					
Battery Over Charge Current		2.6	3		Α
Battery Over Voltage	Percentage of EOC Voltage	101.5	102.5	103.5	%
Battery Under Voltage and Short Circuit Protection			1.6		>
Preconditioning timer	If timer expires, goes to latch-off		1		hr
TH Dull on Coment	Charge mode		140		uA
TH Pull-up Current	Discharge mode		100		uA
TU High Throshold	Charge mode	2.5			V
TH High Threshold	Discharge mode		2.5		V
TH Low Threshold	Charge mode	1			٧
TH LOW THIESHOID	Discharge mode	0.57			>
System Management					
VREG Output Current			50		mA
PB Rising Threshold	PB rising, discharge mode		0.95		٧
PB Falling Threshold	PB falling, discharge mode		0.75		٧
PB internal pull up resistance	Pull up to internal supply		1.2		ΜΩ
Fault Condition Alarm Frequency	0.5s on and 0.5s off		1.0		Hz
Fault Condition Alarm Timer			10		s
	•	-			



(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
LED Indication					
LED1-4 Indication Level Setting		5.5		8.8	V
LED Sink Current			3		mA
LED1-4 Scan Interval	For each LED pattern before lighting LEDs	0.5			s




(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
SCL, SDA Input Low	V _{CC} = 5V			0.4	V
SCL, SDA Input High	V _{CC} = 5V	1.25			V
SDA Leakage Current	SDA=5V			1	μA
SDA Output Low	I _{OL} = 5mA			0.35	V
SCL Clock Frequency, f _{SCL}		0		1000	kHz
SCL Low Period, t _{LOW}		0.5			μs
SCL High Period, t _{HIGH}		0.26			μs
SDA Data Setup Time, t _{SU}		50			ns
SDA Data Hold Time, t _{HD}	See Note: 1	0			ns
Start Setup Time, t _{ST}	For Start Condition	260			ns
Stop Setup Time, t _{SP}	For Stop Condition	260			ns
Capacitance on SCL or SDA Pin				10	pF
SDA Fall Time SDA, T _{of}	Device requirement			120	ns
Rise Time of both SDA and SCL, t _r	See Note: 3			120	ns
Fall Time of both SDA and SCL, $t_{\rm f}$	See Note: 3			120	ns
Pulse Width of spikes must be suppressed on SCL and SDA		0		50	ns

Notes: 1. Comply to I2C timings for 1MHIZ operation - "Fast Mode Plus"

- 2. No internal timeout for I2C operations
- 3. This is a I2C system specification only. Rise and Fall time of SCL & SDA not controlled by the device.
- 4. Device Address is 7'h5A Read Address is 8'hB4 and write is 8'hB5

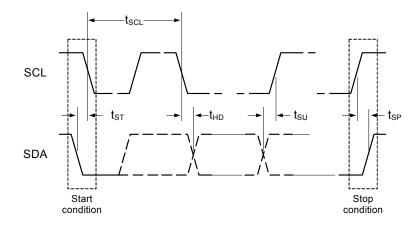




I²C DESCRIPTION

PROGRAMMABLE PARAMETER LIST

ITEMS	STEP/STATUS	DEFAULT	COMMENT						
Input Current Limit and Q1									
Input Current Limit	0.6A,1.25A, 2.75A, 3.8A	3.8A	+/-10%						
VIN UVLO	4.2V, 4.5V	4.2V							
Buck Converter/Discharge Mo	ode								
Discharge Cut-Off Voltage	2.7V, 2.8V, 2.9V, 3.0V	2.9V							
VOUT1 and VOUT2 Current Limit	1.25A/2.6A or 2.6A/1.25A	1.25A/2.65A	Switch by I2C						
VOUT Voltage	5.07V, 5.12V, 5.17V, 5.22V	5.07V							
Boost Converter/Charge Mode	•								
Battery EOC Voltage	4.35V, 4.20V, 4.15V, 4.1V	4.20V (ACT2804QJ-T) 4.35V (ACT2804QJ-T0435)							
Pre-charge voltage threshold	2.8V, 3.0V	2.8V							
Pre-charge Current	10%, 15%, 20%, 25%	15%							
EOC Current	6%, 10%, 14%, 18%	10%							
Fast charge current	60%, 80%, 100%, 120%	100%							
System	•	•							
VCC ON/OFF in HZ Mode	ON, OFF	OFF							

Downloaded from Arrow.com.





CUSTOMER REGISTER MAP

∞			7	6			თ	4		ω)	٨	ა	-	٠	Add- ress
Battery Fault		Fault	System	System Status		System	Config Charge &	Charge	Oppfia	Discharge	Confia	System	Config	2000	Master	Name
7J		; ;	ZJ	R			R/W	R/W		7.8	_ 	2	0		N N	Туре
8'h00		:	8'h00	8'h00			8'h92	8'h99		8'088	}	o i o	8	0	8,400	Reset Value
Temperature 0: No Fault 1: Fault	Battery Over	0: No Fault 1: Fault	VIN UV/OV	00: Disabled 10: Discharge Useo	DC-DC Ope	00: 60% 10: 100%	Battery Fast (EOC 0: 0s 1: 45mins	Charge Time after	01: 10: 11:	VIN Cur	Coaid	0	Ç	۸ م پ	7
Temperature 0: No Fault 1: Fault	Battery Un-	0: No Fault 1: Fault	VOUT UV/	d 01: Charge arge 11: Not Used	DC-DC Operation Mode	01: 80% 11: 120%	Battery Fast Charge Current Level	Voltage Level 0: 2.8V 1: 3.0V	Battery Pre- Condition	01: 0.6A 10:3.8A 11: 1.15A	VIN Current Limit 00: 2.75A	O CO	0	Ç	n n n n n n n n n n n n n n n n n n n	6
Voltage 0: No Fault 1: Fault	Battery Over-	0: No Fault 1: Fault	Over- Temperature	00: 1 01: Pre- 10: Fas 11: T	Battery Ch	0: OFF 1: ON	VREG ON/ OFF in HZ Mode	00: 10% 10: 20%	Battery Pre-Cond	0: 4.2V 1: 4.5V	VIN UVLO Level	Spare	0	0: No Force 1: Force	Force Standby	5
0: No Fault 1: Fault		0: No Fault 1: Fault	Discharging Thermal Fold- back	00: Trickle 01: Pre-Condition 10: Fast Charge 11: Top Off	Battery Charging Status	1: Latch-Off	HZ Latch-Off	01: 15% 11: 25%	Battery Pre-Condition Current Level	Spare)	0: 0s 1: 30s	LED Indication Lock-out	0: Enable 1: Disable	Disable Light Load	4
& Pin Fault 0: No Fault 1: Fault	Battery Short	0: No Fault 1: Fault	Flash Light Over-Current	0: Not Con- nected 1: Con- nected	USB Device Status		Spare	Spare		00: 2.7V 10: 2.9V	Battery Discharge Voltage	o G	0	0: Enable 1: Disable	Disable Battery Cell Balance	ဖ
rent 0: No Fault 1: Fault	Battery	1	Spare	Spare		0: 120mV 1: 60mV	Cell Bal- ance Hys- teresis	Spare		01: 2.8V 11: 3.0V	Discharge Cut-Off Voltage	0: Enable 1: Disable	LED Scan Disable	0: No Mask 1: Mask	Mask Faults	2
Condition Timer Expire 0: No Fault 1: Fault	Battery Trickle/Pre-	9	Spare	Spare		0: Single 1: Dual	Thermistor Thresholds	00: 6% 10: 14%	Battery EOC Current Level	Spare)	0: Disable 1: Enable	LED Always Display Dur-	1: Clear Faults	Clear Faults	1
0: No Fault 1: Fault	Battery	1	Spare	Spare		-	Spare	01: 10% 11: 18%	urrent Level	Spare)	riod 0: 2s 1: 3s	LED Breathing PWM Pe-	set 1: Reset	Soft Reset	0



FUNCTIONAL DESCRIPTION

ACT2804 is a complete battery charging and discharging power management solution for applications of dull-cell lithium-based backup battery pack or power bank.

With the advanced bidirectional architecture, a synchronous boost/buck converter is connected from VOUT to switching node (SW). The converter could be configured as either boost to charge battery or buck to discharge battery.

Modes of Operation

ACT2804 has 3 operation modes: charge mode, discharge mode, and high-impedance (HZ) mode.

High Impedance (HZ) Mode

HZ mode is the default mode. In HZ mode, all the switches are turned off , only PB circuit alive and the IC draws less than 10uA current from VBAT.

Discharge Mode

In discharge mode, Buck converter operates in CV/CC regulation. VOUT1 current limit is set at 1.25A and VOUT2 current limit is set at 2.65A.

Charge Mode

ACT2804 is configured in charge mode (boost mode) when VIN is valid. In this mode, a battery is charged with trickle, preconditioning, fast charge, top-off and end of charge (EOC). The typical charge management is shown in Figure 1.

Precondition Charge

When operating in precondition state, the cell is charged at a reduced current at 15% of the programmed maximum fast charge constant current. Once V_{BAT} reaches the precondition threshold voltage the state machine jumps to the fast charge state.

Fast Charge

If battery voltage is above preconditioning

threshold, boost converter charges battery with constant current. In fast charge state, the ACT2804 charges at the current set by the external resistor connected at the ICST pin. During a normal charge cycle fast charge continues in CC mode until V_{BAT} reaches the charge termination voltage, at which point the ACT2804 charges in top off state.

Top Off

Device transitions from Fast Charge (CC) to Top Off (CV), and moves to EOC (End of Charge) state when charging current is less than I_{EOC} .

End of Charge

In Top Off mode, when charges current decreases to 10% of set fast charge current, the boost converter goes into end of charge mode and keep monitoring the battery voltage.

Recharge

In EOC, device would re-charge batteries when both battery voltage levels drops 5% below V_{EOC} .

Battery Removal


If the battery is removed, boost converter regulates at the programmed regulation voltage.

Cell Balance

Cell Balance is activated in both Fast Charge and Top Off modes. Each battery is connected with a parallel bleeding switch.

Push Button

PB is always watched in HZ mode and discharge mode. If the push but on PB is pressed for >40mS in HZ mode, the LED (s) will turn on for 5 seconds. In the mean time, discharge mode is enabled.

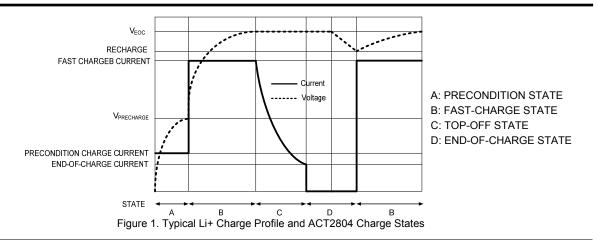



Fast Charge Current Control

The block diagram in Figure 2 shows how battery current is sensed for charge current control.

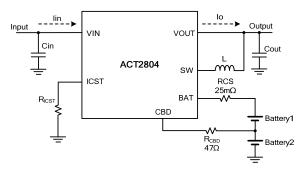


Figure 2: Battery current monitoring

A small percentage of charge current is sensed and sinked into a resistor connected at pin ICST. In charge mode, this would allow user to set fast charge current based on the following equation.

$$Ic(A) = \frac{1000}{5 * R_{CS}(m\Omega) * R_{ICST}(k\Omega)}$$
(1)

For example, I_C =1A with R_{CS} =25m Ω and R_{ICST} =8k Ω .

Recommended RICST is shown in following table:

I _C (A)	R_{I}	R _{ICST}					
IC (A)	R_{CS} =25m Ω	R _{CS} =50mΩ	Units				
0.8	10	5	kΩ				
0.9	8.89	4.44	kΩ				
1.0	8	4	kΩ				
1.1	7.27	3.64	kΩ				
1.2	6.67	3.33	kΩ				
1.3	6.15	3.08	kΩ				
1.4	5.71	2.86	kΩ				
1.5	5.33	2.67	kΩ				

During discharge mode, inputs of battery current sense amp are flipped to sense discharge current, and voltage level at pin ICST can be used (by the system) to monitor the magnitude of discharge current based on the following equation.

$$V_{ICST} = \frac{I_{DISCHARGE} \times R_{ICST}}{20 k\Omega}$$
 (2)

For example: V_{ICST} =0.4V with I_DISCHARGE=1A, and R_{ICST} =8k Ω .

LED Threshold Setting

LED1, LED2, LED3 and LED4 thresholds are adjustable with external resistors R_{LS1} , R_{LS2} , R_{LS3} ,

and R_{LS4} connected from LEDLS1, LEDLS2, LEDLS3, LEDLS4 to APNG respectively, as shows in Figure3.

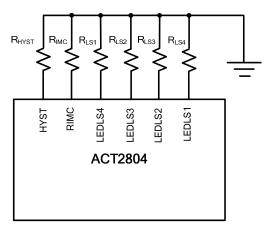


Figure 3: LED threshold setting

The following equation shows how the external resistor shifts the LED thresholds. The range of LED1 - LED4 indicator threshold shift from 5.5V - 8.8V

$$V_{LEDX(V)} = 5.5V + \frac{108 \,\mathrm{k}\Omega}{\mathrm{R}_{\mathrm{LSy}}(k\Omega)} \tag{3}$$

VLED Example is given by the below table:

R_{LSx} $(k\Omega)$	V _{LEDx} (V)	R_{LSx} (k Ω)	V _{LEDx} (V)
40	8.2	72	7
43.2	8	90	6.7
47	7.798	108	6.5
49.1	7.7	120	6.4
57	7.395	135	6.3
60	7.3	180	6.1
67.5	7.1	270	5.9

LED Hysteresis Window Setting

The adjustable LED voltage thresholds are set for HZ mode. In charge mode, the measured battery voltage is higher than in HZ mode, while in discharge mode, the measured battery voltage is lower. To have relatively better "fuel gauge" for battery, a programmable hysteresis window will help. When the battery voltage goes up (in charge mode), the thresholds become higher, when the battery voltage goes down, lower thresholds are applied.

ACT2804 provide HYST pin to set hysteresis window for each indication level as shows in Figure 3.



HYST pin is regulated at 1V. Its input current will determine hysteresis adjustment equally to all level. Connect HYST to AGND via a resistor to set hysteresis window.

Beside the hysteresis window, to avoid comparison oscillation, fixed 100mV of hysteresis is added to each LEVEL comparator.

Hysteresis window is given by below equation:

$$HYST (V) = \frac{54K}{RHYST (K\Omega)}$$
 (4)

$$V_{HYST}(4:3) = 0.5*HYST$$
 $V_{HYST}(2:1) = 0.6*HYST$ (5)

Then RHYST Example is given by the below table:

$R_{HYST}(k\Omega)$	LED1 VHYST	LED2 VHYST	LED3 VHYST	LED4 VHYST
Floating	0mV	0mV	0mV	0mV
270	120mV	120mV	100mV	100mV
135	240mV	240mV	200mV	200mV
90	360mV	360mV	300mV	300mV
67.5	480mV	480mV	400mV	400mV
54	600mV	600mV	500mV	500mV
45	720mV	720mV	600mV	600mV

Battery Impedance Compensation

To avoid the number of LEDs changes between charge and discharge modes. Internal impedance compensation circuit is built in. An external resistor is used to set the impedance from $100m\Omega$ to $800m\Omega$. RIMC is corresponding to battery impedance. The LED1-4 thresholds shifted up and down based on the product of charge/discharge current and set impedance. RIMC value is given by below equation.

$$R_{IMC}(k\Omega) = 2160 k\Omega \times \frac{R_{CS}(m\Omega)}{R_{RAT}(m\Omega)}$$
 (6)

In case not using compensation, float RIMC then there is no compensation affects to trig-points.

RIMC example is given by the below table:

RBAT (mΩ)	100	200	300	400	500	600	700
$RCS = 25 \text{ m}\Omega$	540k	270k	180k	135k	108k	90k	77k
$RCS = 50 \text{ m}\Omega$	1080k	540k	360k	270k	216k	180k	154k

Battery Temperature Monitering

The ACT2804 monitors the battery pack temperature by measuring TH voltage at the TH pin as shows in Figure 4. The TH pin is connected to the thermistor resistor net which includes a negative temperature coefficient thermistor. An internal current source provides a bias current to generate

TH voltage. The ACT2804 compares the voltage at the TH pin with the internal V_{THH} and V_{THL} thresholds to determine if charging or discharging is allowed. When $V_{TH} < V_{THL}$ or $V_{TH} > V_{THH}$, it will be triggered latch off fault, there is 3 ways to wake up ACT2804 when V_{TH} returns to the normal range.

- . Push PB when latch off bit is not set
- I²C to clear faults in standby
- 3. Plug Vin to power up

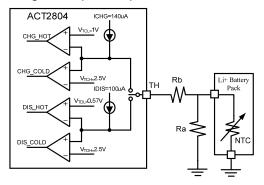


Figure 4: Thermistor setting

$$V_{TCL} = I_{CHG} \times Rchot \tag{7}$$

$$V_{TCH} = I_{CHG} \times Rcold \tag{8}$$

$$Rchot = Rb + \frac{Ra \times R_{NTCh}}{Ra + R_{NTCh}}$$
(9)

$$Rcold = Rb + \frac{Ra \times R_{NTCc}}{Ra + R_{NTCc}}$$
 (10)

R_{NTCc}: NTC Resistor at cold temperature (Tcold)

 R_{NTCh} : NTC Resistor at hot temperature (Thot)

From (7) (8) (9) and (10) calculate Ra and Rb in charge mode, as the same method, the resistors in discharge mode can be calculated.

Cell Balance Setting

ACT2804 has integrated a cell balance feature to reduce the un-balance charge between dual batteries. Normally cell balance is activated during Fast Charge and Top Off modes.



In charge mode, the battery charger provides bias current to balance battery charge. The balance resistor is either connected to upper battery or lower battery depending on which battery voltage is higher. The balance resistor is connected in parallel with one battery that is higher than the other battery. For extremely unbalanced 2S batteries, the charger takes a few cycles to make two battery voltage balanced. For some applications, like removable dual cell batteries, a charger is required to balance dual cells in one charge cycle. In this case, the circuit shown in Figure 5 is recommended. The balance current through the 22 Ohm resistor needs to be higher than EOC current threshold.


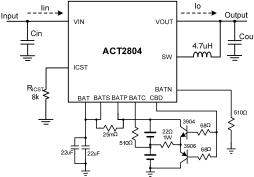


Figure 5: Cell balance

LED Indication

ACT2804 is designed 5 levels of PT pin voltage into 5 application patterns. A resistor is connected from PT pin to ground and the voltage at PT pin programs the LED indication patterns shown in Figure 6.

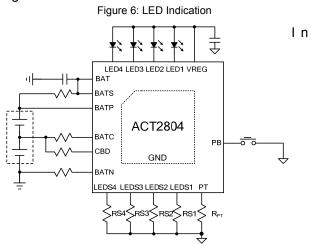

discharge mode, when battery voltage goes below LED1 threshold, LED1 starts flashing until Buck (discharge mode) turns off due to either light load or Buck UVLO. The flash frequencies for all the LEDs

are 0.5Hz with 1s on and 1s off.

In HZ mode, when PB is pressed for 40ms, Buck turns on. If VBAT<LED1, LED1 starts flashing until Buck turns off.

Conventional indication patterns could behave to have two application. Setting $R_{\text{PT}}\text{=}4k\Omega$ to have "Always On", setting $R_{\text{PT}}\text{=}12k\Omega$ to have "5s Indication". The behaviors for both setting are same in charge mode.

See below table for more information.

#	INDICATION PATTERN	R_{PT}
1a	Conventional Always On In Discharge	4kΩ
1b	Conventional 5s Indication in Discharge	12kΩ
2	Breathing 5s Indication in Discharge	24kΩ
3	Bottom Charging 5s Indication in Discharge	40kΩ
4	Circulating 5s Indication in Discharge	56kΩ

Below shows 4 LED indication patterns.

		Bottom		
	Conventional	Charging	Circulating	Breathing
<25%	$\otimes \otimes \otimes \otimes$	$\bigcirc \otimes \otimes \otimes$	0000	$\mathbb{O} \otimes \otimes \otimes$
25%≤SOC<50%	$\mathbb{O} \mathbb{O} \mathbb{O} \mathbb{O} \mathbb{O}$	0088	0000	0088
50%≤SOC<75%	00000	0008	0000	0008
75%≤SOC<100%	0000	0000	0000	0000
EOC	0000	0000	0000	0000
	Flash	O Circ	culating on	Always on
	Breathing	on/off 🚫 Off	;	

LED1-4 Refreshing Cycle

Every time when VIN is plugged in or a PB is pushed, LED1, 2, 3, 4 turns on sequentially at 0.5s interval, like a LED scanning, and then goes into corresponding mode defined by PT pin.


LED1-4 Fault Alarm Signal

At fault conditions, actions are taken. In the meantime, all the 4 LEDs turn on/off with 0.5s on and 0.5s off for 10 seconds to send alarm signal out. The fault conditions include battery OVP, UVP, OTP.

PCB Board Layout Guidance

When laying out the printed circuit board, the following checklist should be used to ensure proper operation of the IC.

1. Arrange the power components to reduce the AC loop area.





- Place the decoupling ceramic capacitor as close to BAT pin as possible. Use different capacitance combination to get better EMI performance.
- 3. Place the decoupling ceramic capacitors close to VIN pin, VOUT pin, and BAT pin.
- 4. Use copper plane for power GND for best heat dissipation and noise immunity.
- Connect battery with the sequence of BATN->BATP->BATC.
- Use Kevin sense from sense resistors to CSP and CSN1, CSN2 pins, and the sense resistor from BATS and BATP pins.
- 7. SW pad is a noisy node switching. It should be isolated away from the rest of circuit for good EMI and low noise operation.
- Thermal pad is connected to GND layer through vias. PGND and AGND should be single-point connected.
- RC snubber and external Schottky diode across SW to PGND can be added as needed for reducing SW spike and better EMI performance.



APPLICATIONS SCHEMATIC

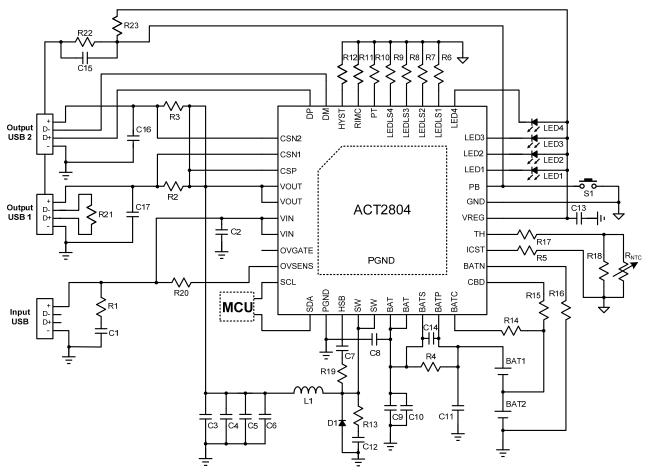


Figure 7. ACT2804 typical application circuit

(Input current limit 3.8A, fast charge current limit 1.0A, discharge output constant current 2.4A+1A) Charge: Cold: 0°C, Hot: 45°C. Discharge: Cold: -20°C, Hot: 60°C.



ACT2804


Rev 3, Apr-17-2017


Table 5: BOM List


ITEM	REFERENCE	DESCRIPTION		MANUFACTURER	
1	C1	Ceramic capacitor, 4.7uF/10V, X7R, 0805		Murata/TDK	
2	C2,C3,C4,C5	Ceramic capacitor, 22uF/10V, X7R, 1206		Murata/TDK	
3	C8,C10,C11	Ceramic capacitor, 22uF/16V, X7R, 1206		Murata/TDK	
4	C6,C9	Ceramic capacitor, 0.1uF/16V, X7R, 0603	2	Murata/TDK	
5	C7	Ceramic capacitor, 47nF/10V, X7R, 0603	1	Murata/TDK	
6	C12	Ceramic capacitor, 2.2nF/16V, X7R, 0603	1	Murata/TDK	
7	C13	Ceramic capacitor, 1uF/10V, X7R, 0603	1	Murata/TDK	
8	C14	Ceramic capacitor, 100nF/16V, X7R, 0603	1	Murata/TDK	
9	C15	Ceramic capacitor, 2.2uF/10V, X7R, 0603	1	Murata/TDK	
10	C16,C17	Ceramic capacitor, 3.3uF/10V, X7R, 0603	2	Murata/TDK	
11	D1	MBR1020VL, 20V, 1A Schottky, optional	1	Panjit	
12	L1	Core SWPA8040S4R7NT 4.7uH 5.9A	1	Sunlord	
13	LED1,LED2, LED3,LED4	LED, 0603, Blue	4	LED Manu	
14	R1	Chip Resistor, 2.7Ω, 1/8W, 1%, 0805	1	Murata/TDK	
15	R2,R3,R4	Chip Resistor, 25mΩ, 1/2W, 1%, 1206	3	SART	
16	R5	Chip Resistor, 8kΩ, 1/10W, 1%, 0603		Murata/TDK	
17	R6	Chip Resistor, 83kΩ, 1/10W, 1%, 0603		Murata/TDK	
18	R7	Chip Resistor, 63.5kΩ, 1/10W, 1%, 0603	1	Murata/TDK	
19	R8	Chip Resistor, 51.4kΩ, 1/10W, 1%, 0603	1	Murata/TDK	
20	R9	Chip Resistor, 41.5kΩ, 1/10W, 1%, 0603	1	Murata/TDK	
21	R10	Chip Resistor, 12kΩ, 1/10W, 5%, 0603	1	Murata/TDK	
22	R11,R12	Chip Resistor, 540kΩ, 1/10W, 1%, 0603	2	Murata/TDK	
23	R13	Chip Resistor, 0.47Ω, 1/8W, 5%, 0805	1	Murata/TDK	
24	R14,R16	Chip Resistor, 510Ω, 1/10W, 1%, 0603	2	Murata/TDK	
25	R15	Chip Resistor, 47Ω, 1/2W, 5%, 1206	1	Murata/TDK	
26	R17	Chip Resistor, 3kΩ, 1/10W, 1%, 0603	1	Murata/TDK	
27	R18	Chip Resistor, 32kΩ, 1/10W, 1%, 0603	1	Murata/TDK	
28	R19	Chip Resistor, 10Ω, 1/10W, 1%, 0603		Murata/TDK	
29	R20	Chip Resistor, 200Ω, 1/10W, 5%, 0603, optional		Murata/TDK	
30	R21	Chip Resistor, 100Ω, 1/10W, 5%, 0603		Murata/TDK	
31	R22, R23	Chip Resistor, 715kΩ, 1/10W, 5%, 0603		Murata/TDK	
32	R _{NTC}	103AT NTC Thermistor, NXRT15XH103V 1 Mu		Murata/TDK	
33	РВ	Push Button Switch 1 Nikkai		Nikkai Omron	
34	USB	10.2*14.6*7mm, 4P			
35	Micro-USB	MICRO USB 5P/F SMTB	1		
36	U1	IC, ACT2804, QFN 55-40	1	Active-Semi	





(Schematic as show in Figure 7, Ta = 25°C, unless otherwise specified)

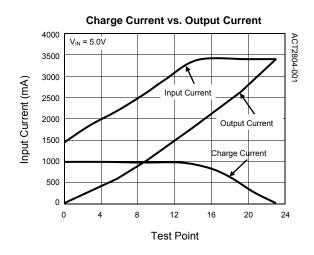


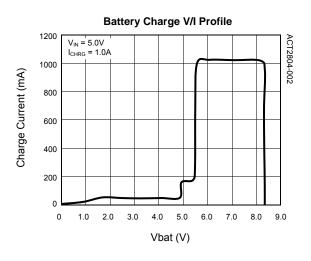

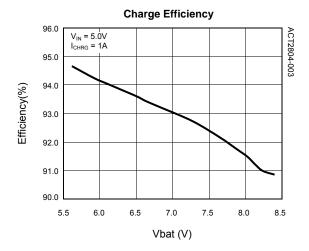

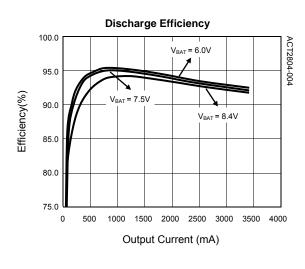


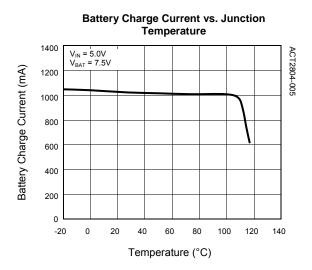


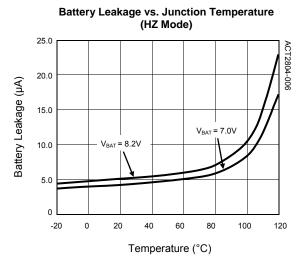






(Schematic as show in Figure 7, Ta = 25°C, unless otherwise specified)

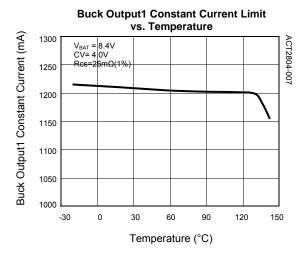


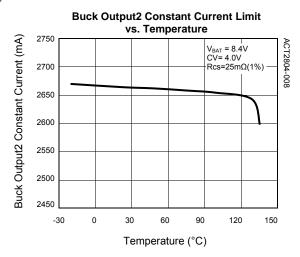

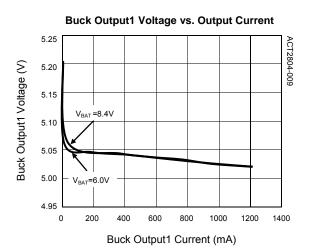

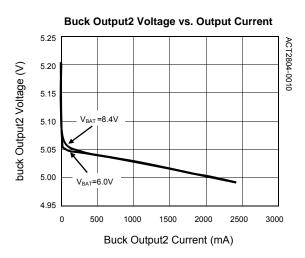


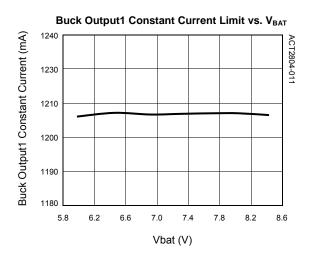


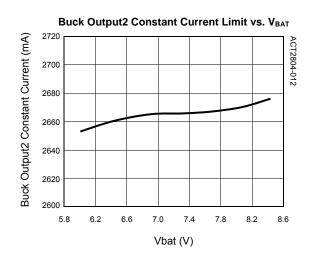






(Schematic as show in Figure 7, Ta = 25°C, unless otherwise specified)

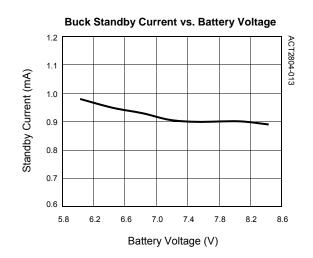


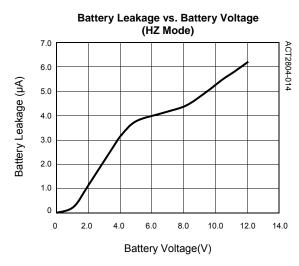

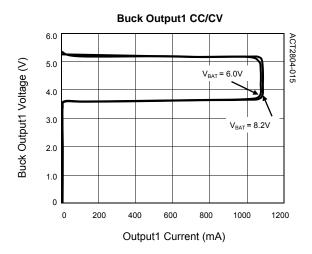

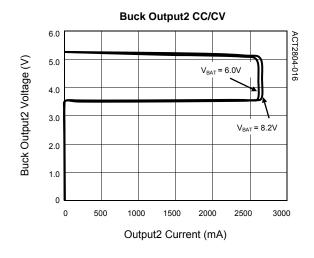

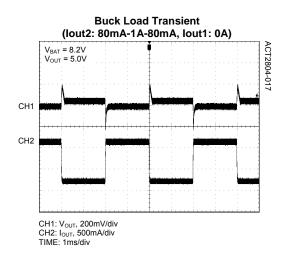


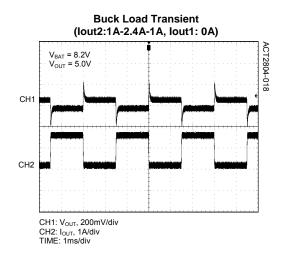




(Schematic as show in Figure 7, Ta = 25°C, unless otherwise specified)

Buck Load Transient (lout2: 80mA-1A-80mA, lout1: 1A)

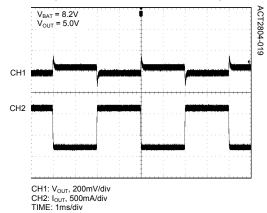

Buck Load Transient (lout2:1A-2.4A-1A, lout1: 1A)

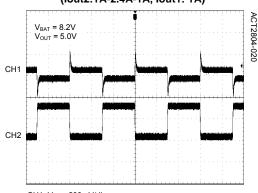


CH1: V_{OUT}, 200mV/div CH2: I_{OUT}, 1A/div TIME: 1ms/div




PACKAGE OUTLINE


QFN55-40 PACKAGE OUTLINE AND DIMENSIONS

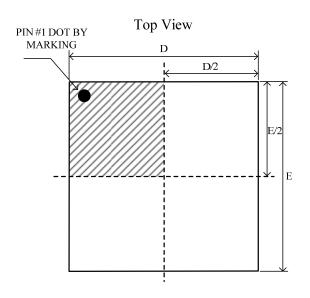

SYMBOL		SION IN ETERS	DIMENSION IN INCHES		
	MIN	MAX	MIN	MAX	
Α	0.700	0.800	0.028	0.031	
A1	0.000	0.050	0.000	0.002	
A3	0.203	REF	0.008 REF		
b	0.150	0.250	0.006	0.010	
D	4.924	5.076	0.194	0.200	
Е	4.924	5.076	0.194	0.200	
D1	3.300	3.500	0.130	0.138	
E1	3.300	3.500	0.130	0.138	
е	0.400 TYP		0.016 TYP		
L	0.324	0.476	0.013	0.019	
k	0.200	MIN	0.008 MIN		



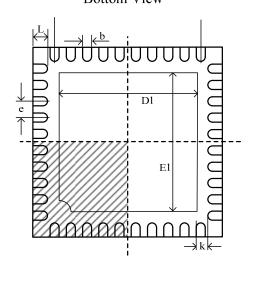



Active-Semi, Inc. reserves the right to modify the circuitry or specifications without notice. Users should evaluate each product to make sure that it is suitable for their applications. Active-Semi products are not intended or authorized for use as critical components in life-support devices or systems. Active-Semi, Inc. does not assume any liability arising out of the use of any product or circuit described in this datasheet, nor does it convey any patent license.

Active-Semi and its logo are trademarks of Active-Semi, Inc. For more information on this and other products, contact <u>sales@active-semi.com</u> or visit <u>http://www.active-semi.com</u>.

octive-semi is a registered trademark of Active-Semi.

Downloaded from Arrow.com.