

SNVS812A-MAY 2012-REVISED MAY 2013

# EMB1428Q Switch Matrix Gate Driver

Check for Samples: EMB1428Q

## FEATURES

- 60V Maximum Stack Operating Voltage
- Twelve (12) Floating Gate Drivers
- SPI Bus Interface (for Charge/discharge Commands and Fault Reporting)
- Low Power Sleep Mode
- EMB1428Q is an Automotive Grade Product that is AEC-Q100 Grade 1 Qualified (-40°C to +125°C Operating Junction Temperature)

# APPLICATIONS

- Li-Ion Battery Management Systems
- Electrical/Hybrid Vehicles
- Grid-Power Storage

## DESCRIPTION

The EMB1428 Switch Matrix Gate Driver IC is designed to work in conjunction with EMB1499 DC/DC Controller IC to support TI's switch matrix based active cell balancing scheme in a battery management system. The EMB1428 provides 12 floating MOSFET gate drivers necessary for balancing up to 7 battery cells connected in a series stack. Multiple EMB1428 ICs may be used together to balance a stack of more than seven battery cells.

The EMB1428 integrated circuit interfaces with the EMB1499 DC/DC controller to control and enable charging and discharging modes. The EMB1428 uses an SPI bus to accept commands from the main controller (CPU/MCU) on which battery cell should be charged or discharged and to report back any faults to the main controller (CPU/MCU).

Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet. All trademarks are the property of their respective owners.



## **Typical Application**

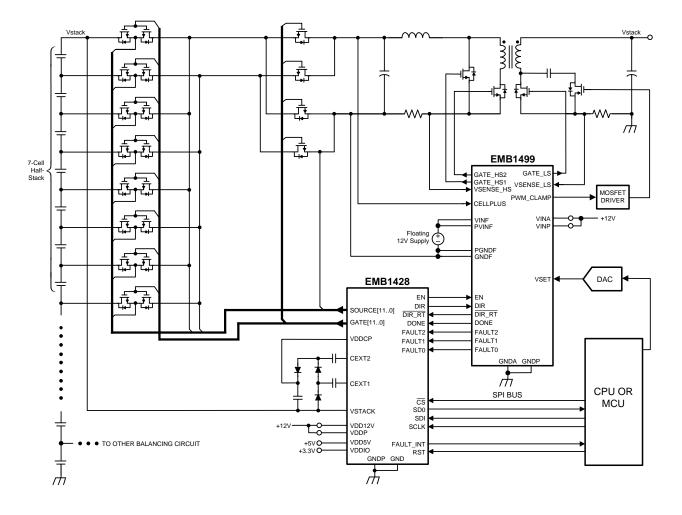



Figure 1. Typical Application

SNVS812A-MAY 2012-REVISED MAY 2013



www.ti.com

#### **Connection Diagram**

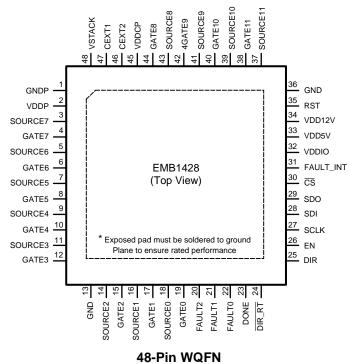

See RHS Package

#### Table 1. ORDERING INFORMATION

Order number	Package Type	Package Drawing	Supplied As	Features
EMB1428QSQ			1000 Units in Tape and Reel	AECQ100 Grade qualified. Automotive
EMB1428QSQE	WQFN	RHS	250 Units in Tape and Reel	EMB1428QSQE 250 Units in Tape and Reel Grade Production Flow <sup>(1)</sup>
EMB1428QSQX			2500 Units in Tape and Reel	Reci Clade i Toddellori i Iowaa

(1) Automotive Grade (Q) product incorporates enhanced manufacturing and support processes for the automotive market, including defect detection methodologies. Reliability qualification is compliant with the requirements and temperature grades defined in the AEC-Q100 standard. Automotive grade products are identified with the letter Q. For more information go to http://www.ti.com/automotive.

#### **PIN DESCRIPTIONS**

Pin	Name	Description	Application Information
1	GNDP	Ground for charge pump circuitry	Connect to stack ground at board level.
2	VDDP	12V supply for charge pump circuitry	Connect to 12V supply at board level with $0.1\mu F$ bypass cap to GNDP.
3, 5, 7, 9, 11, 14, 16, 18, 37, 39, 41, 43	SOURCE0 to SOURCE11	Floating driver references	Connect to FET switch sources.
4, 6, 8, 10, 12, 15, 17, 19, 38, 40, 42, 44	GATE0 to GATE11	Floating driver outputs	Connect to FET switch gates.
13, 36	GND	Ground	Internal reference for all analog and digital circuitry except the charge pump.
20, 21, 22	FAULT[2, 1, 0]	Inputs, three-bit digital fault code from EMB1499	Fault code is reported to CPU through the SPI bus. 5V Schmitt-trigger inputs, 12V signal tolerant.
23	DONE	Input from EMB1499, indicates end of charge cycle	5V Schmitt-trigger input, 12V signal tolerant.

Copyright © 2012–2013, Texas Instruments Incorporated



#### SNVS812A - MAY 2012 - REVISED MAY 2013

## **PIN DESCRIPTIONS (continued)**

Pin	Name	Description	Application Information		
24	DIR_RT	Input from EMB1499, handshake signal, inverted version of DIR	5V Schmitt-trigger input, 12V signal tolerant		
25	DIR	Output to EMB1499, indicates direction of charging current	'High' indicates charge mode, 'Low' indicates discharge mode. 5V CMOS output levels.		
26 EN		Output to EMB1499, enable signal for charge/discharge cycle	'High' signals EMB1499 to begin charge or discharge cycle, 'Low' signals EMB1499 to ramp down current and finish present cycle. 5V CMOS levels.		
27	SCLK	SPI clock input	1MHz SPI interface, I/O levels are referenced to the VDDIO supply.		
28	SDI	SPI data input			
29	SDO	SPI data output			
30	CS	SPI chip select input			
31	FAULT_INT	Fault interrupt output to CPU	Referenced to the VDDIO supply.		
32	VDDIO	IO supply for SPI interface circuitry	Connect to CPU supply to match I/O level		
33	VDD5V	5V supply for digital core and EMB1499 interface circuitry			
34	VDD12V	12V supply for analog core circuitry			
35	RST	RESET pin			
45	VDDCP	Floating supply input from external charge pump circuit	Connected to external charge pump circuit that provides a floating supply referenced to the top of the battery module (VSTACK).		
46, 47	CEXT1, CEXT2	Charge pump driver outputs	Buffered, differential 1MHz clock signals for driving external charge pump circuit.		
48	VSTACK	Supply from the highest voltage in the battery module			



These devices have limited built-in ESD protection. The leads should be shorted together or the device placed in conductive foam during storage or handling to prevent electrostatic damage to the MOS gates.

SNVS812A-MAY 2012-REVISED MAY 2013

#### www.ti.com

#### ABSOLUTE MAXIMUM RATINGS<sup>(1)</sup>

Any SOURCE pin to GND	-0.5V to 70V
VSTACK to GND	-0.5V to 70V
VDDCP to VSTACK	-0.5V to 25V
VDDCP to GND	-0.5V to 90V
VDD12V to GND	-0.5V to 16V
VDDP to GNDP	-0.5V to 16V
GNDP to GND	-0.5V to 0.5V
FAULTX, DONE, DIR_RT to GND	-0.5V to 16V
VDD5V, VDDIO to GND	-0.5V to 7.5V
All other inputs to GND	-0.5V to 7.5V
ESD Rating <sup>(2)</sup>	±2 kV
Soldering Information	
Junction Temperature	150°C
Storage Temperature	-65°C to 150°C

(1) Absolute Maximum Ratings indicate limits beyond which damage to the device may occur, including inoperability and degradation of device reliability and/or performance. Functional operation of the device and/or non-degradation at the Absolute Maximum Ratings or other conditions beyond those indicated in the recommended Operating Ratings is not implied. The recommended Operating Ratings indicate conditions at which the device is functional and should not be operated beyond such conditions.

(2) The human body model is a 100pF capacitor discharged through a 1.5 k $\Omega$  resistor into each pin. Test method is per JESD22–A114.

## **OPERATING RATINGS**

VSTACK to GND	15V to 60V
VDD12V to GND	10.8V to 13.2V
VDDP to GNDP	10.8V to 13.2V
VDD5V, to GND	4.5V to 5.5V
VDDIO to GND	2.5V to 5.5V
VDDCP to VSTACK	18V to 24V
Junction Temperature (T <sub>J</sub> )	-40°C to 125°C

#### SNVS812A - MAY 2012 - REVISED MAY 2013

## **ELECTRICAL CHARACTERISTICS**

Limits in standard type are for  $T_J = 25^{\circ}$ C only; limits in boldface type apply over the junction temperature ( $T_J$ ) range of -40°C to +125°C. Minimum and Maximum limits are specified through test, design, or statistical correlation. Typical values represent the most likely parametric norm at  $T_J = 25^{\circ}$ , and are provided for reference purposes only. VSTACK = 60V, SOURCEX = 0V, VDD12V = VDDP = 12V, VDD5V = 5V, VDDIO = 3.3V unless otherwise indicated in the conditions column.

Symbol	Parameter	Conditions	Min	Typ <sup>(1)</sup>	Max	Units
System Parame	ters	· I				·
I <sub>STACK</sub>	Stack supply current	System connected to Cell 1,		1.57	2.4	mA
I <sub>VDDP</sub>	Charge pump driver supply current	EN high		4	6	mA
I <sub>VDD12V</sub>	12V supply current	VSTACK = 60V		100	125	μA
I <sub>VDD5V</sub>	5V supply current	SOURCEx = 60V		135	180	μA
I <sub>VDDIO</sub>	IO supply current			0.2	1.8	μA
I <sub>STACK_SD</sub>	Stack supply current, shutdown	Shutdown (FETs disconnected)		1.4	2.3	μA
I <sub>VDDP_SD</sub>	Charge pump driver supply current, shutdown	VSTACK = 60V			0.4	μA
I <sub>VDD12V_SD</sub>	12V supply current, shutdown	SOURCEx = 60V			0.2	μA
I <sub>VDD5V_SD</sub>	5V supply current, shutdown			8.7	11	μA
I <sub>VDDIO_SD</sub>	IO supply current, shutdown				0.1	μA
I <sub>STACK_RST</sub>	Stack supply current, reset	RESET		0.28	2.3	μA
I <sub>VDDP_RST</sub>	Charge pump driver supply current, reset	VSTACK = 60V			0.8	μA
IVDD12V RST	12V supply current, reset	SOURCEx = 60V			1.2	μA
I <sub>VDD5V_RST</sub>	5V supply current, reset			20	28	μA
IVDDIO RST	IO supply current, reset				0.5	μA
FET Driver Para	meters	• • •				
t <sub>EN</sub>	Driver setup time, Cell-to-Cell	Rising edge of DONE to rising edge of EN			2.4	ms
	Driver set up time from shutdown	Rising edge of $\overline{CS}$ to rising edge of EN		1.23	2.4	ms
t <sub>PD</sub>	Shutdown time	Rising edge of DONE to last clock pulse on CEXT2		330	500	μs
V <sub>GSON</sub>	Driver output 'on' voltage, V <sub>GATE</sub> - V <sub>SOURCE</sub>		10.8	12.1	14	V
$\Delta V_{GSON}$	VSTACK Line Regulation	SOURCEx = 0V, VSTACK = 15V to 60V		3.5	9	mV/V
	VSOURCE Line Regulation	SOURCEx = 0V to 60V, VSTACK = 60V		5.5	20	mV/V
I <sub>GON</sub>	GATE pin output drive current during FET turn-on transient	(GATE-SOURCE) = $V_{GSON}/2$	100	225		μA
R <sub>GSTRANS</sub>	Driver output pull-down resistance during FET turn-off transient, GATE to SOURCE pin	$(GATE-SOURCE) = V_{GSON}/2$		16.2	17.5	Ω
R <sub>GSON</sub>	Driver output pull-down resistance active		100	150	220	Ω
R <sub>GSOFF</sub>	Driver output pull-down resistance after FET turn-off transient has finished, GATE to SOURCE pin	(GATE-SOURCE) ≤ 0.2V	100	150	220	Ω
I <sub>SRC</sub>	SOURCE pin bias current, power- up, driver output on			210		μA
	SOURCE pin bias current, power- up, driver output off			80		μA
I <sub>SRC_SD</sub>	SOURCE pin bias current, power- down	Shutdown		100		nA

(1) Typical specifications represent the most likely parametric norm at 25°C operation.



SNVS812A - MAY 2012 - REVISED MAY 2013

www.ti.com

## **ELECTRICAL CHARACTERISTICS (continued)**

Limits in standard type are for  $T_J = 25^{\circ}$ C only; limits in boldface type apply over the junction temperature ( $T_J$ ) range of  $-40^{\circ}$ C to +125°C. Minimum and Maximum limits are specified through test, design, or statistical correlation. Typical values represent the most likely parametric norm at  $T_J = 25^{\circ}$ , and are provided for reference purposes only. VSTACK = 60V, SOURCEX = 0V, VDD12V = VDDP = 12V, VDD5V = 5V, VDDIO = 3.3V unless otherwise indicated in the conditions column.

Symbol	Parameter	Conditions	Min	Typ <sup>(1)</sup>	Max	Units
Charge Pump	Parameters			-		1
V <sub>CPO</sub>	Charge pump output measured with respect to VSTACK	VDDP = 12V, System connected to Cell 1, EN high		23.5		V
R <sub>OUT_CP</sub>	Charge pump output resistance			1.7		Ω
V <sub>CP_UVH</sub>	Charge pump UVLO upper trip voltage, VDDCP - VSTACK			16		V
V <sub>CP_UVL</sub>	Charge pump UVLO lower trip voltage, VDDCP - VSTACK			14		V
f <sub>CLK</sub>	C <sub>EXT1,2</sub> pin clock frequency		0.9	1.0	1.15	MHz
SPI/Microcont	roller Interface Input Parameters (CS, s	SDI, SCLK, RST)				
V <sub>IH</sub>	CS, SDI, SCLK Logic high threshold			2.25	2.35	V
V <sub>IL</sub>	CS, SDI, SCLK Logic low threshold		0.95	1.0		V
V <sub>IH-5V</sub>	CS, SDI, SCLK Logic high threshold	VDDIO = 5.0V		3.47	3.6	V
V <sub>IL-5V</sub>	CS, SDI, SCLK Logic low threshold		1.45	1.55		V
I <sub>IN</sub>	SDI, SCLK Input bias current	$V_{SDI}$ , $V_{SCLK}$ = VDDIO = 5.0V			0.01 <b>0.1</b>	μΑ
R <sub>PUCS</sub>	Internal Pull-up resistance from CS to VDDIO			98		kΩ
V <sub>IH_RST</sub>	Reset Logic high threshold			1.0	1.35	V
V <sub>IL_RST</sub>	Reset Logic low threshold		0.55	0.95		V
R <sub>PDRST</sub>	Internal Pull-down resistance from RST to GND			98		kΩ
SPI/Microcont	roller Interface Output Parameters (FA	ULT_INT, SDO)				
V <sub>OH</sub>	Output High Voltage	I <sub>SOURCE</sub> = 200µA	3.15	3.19		V
		I <sub>SOURCE</sub> = 1mA		2.7		V
V <sub>OL</sub>	Output Low Voltage	I <sub>SINK</sub> = 200μA		0.12	0.155	V
		I <sub>SINK</sub> = 1mA		0.6		V
I <sub>OZH</sub>	SDO TRI-STATE Leakage current (high)	V <sub>SDO</sub> = 0V or VDDIO			3	μΑ
I <sub>OZL</sub>	SDO TRI-STATE Leakage current (low)	V <sub>SDO</sub> = 0V or VDDIO			0.2	μΑ
SPI/Microcont	roller Interface Timing Specifications (	Need SPI mode)				
f <sub>SCLK</sub>	Serial clock from CPU			1.0	1.1	MHz
DC	SCLK Duty Cycle		10	50	75	%
t <sub>CSU</sub>	CS falling edge to SCLK rising edge		100			ns
t <sub>CDSU</sub>	CS rising edge to SCLK rising edge		50			ns
t <sub>TRANS</sub>	CS high pulse width		1.5			μs
t <sub>SU</sub>	SDI setup to SCLK rising edge		50			ns
	SDO setup from SCLK rising edge		200			ns

SNVS812A - MAY 2012 - REVISED MAY 2013

## ELECTRICAL CHARACTERISTICS (continued)

Limits in standard type are for  $T_J = 25^{\circ}C$  only; limits in boldface type apply over the junction temperature ( $T_J$ ) range of  $-40^{\circ}C$ to +125°C. Minimum and Maximum limits are specified through test, design, or statistical correlation. Typical values represent the most likely parametric norm at  $T_J = 25^\circ$ , and are provided for reference purposes only. VSTACK = 60V, SOURCEX = 0V, VDD12V = VDDP = 12V, VDD5V = 5V, VDDIO = 3.3V unless otherwise indicated in the conditions column.

ns		200			
n				CSand SDI hold time from SCLK rising edge	thd
		250		SDO hold time from SCLK rising edge	
<b>50</b> ns				CS falling edge to SDO enabled	tcs
<b>60</b> ns				CS rising edge to SDO disabled (tri-state)	tois
			1, FAULT2, DIR_RT, DONE)	nput Parameters (FAULT0, FAULT	EMB1499 Interface
3.6 V	3.4			Logic high threshold	V <sub>IH-EMB1499</sub>
V	1.6	1.4		Logic low threshold	VIL-EMB1499
0.6 μ/ 1			$V(FAULT_X, \overline{DIR}_RT, DONE) = 12V$	Input bias current	IN-EMB1499
				Dutput Parameters (EN, DIR)	EMB1499 Interface
V	4.9	4.86	I <sub>SOURCE</sub> = 200µA	Output High Voltage	V <sub>OH-EMB1499</sub>
V	4.4		I <sub>SOURCE</sub> = 1mA		
0.3 V	0.11		I <sub>SINK</sub> = 200μA	Output Low Voltage	V <sub>OL-EMB1499</sub>
V	0.56		I <sub>SINK</sub> = 1mA		
				Timing Specifications	EMB1499 Interface
<b>700</b> ns				DIR transition to corresponding DIR_RT	t <sub>DIR</sub>
μ		3.4		DIR setup to EN rising edge	tDIRSU
μ	2			Any fault condition to FAULT_INT rising edge	t <sub>int</sub>
μ		3	Prior to EMB1499 fault condition	DONE low pulse width	t <sub>DNL</sub>
μ		1	EMB1499 reporting a fault condition	FAULT[2, 1, 0] setup to DONE rising edge	t <sub>FSU</sub>
h		8		FAULT[2, 1, 0] hold time from DONE rising edge	<sup>t</sup> FHD
_	2	1		rising edge DONE low pulse width FAULT[2, 1, 0] setup to DONE rising edge FAULT[2, 1, 0] hold time from	t <sub>DNL</sub>



SNVS812A - MAY 2012 - REVISED MAY 2013

www.ti.com

## **BLOCK DIAGRAM**

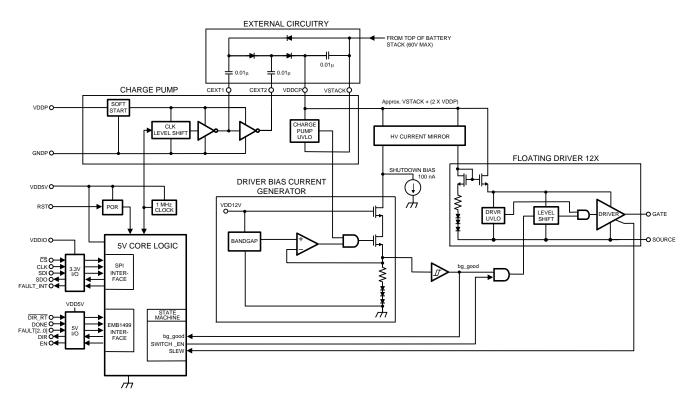


Figure 2. EMB1428 High -Level Block Diagram

EMB1428Q

SNVS812A - MAY 2012 - REVISED MAY 2013



www.ti.com

#### **APPLICATION INFORMATION**

The EMB1428 and the EMB1499 work in conjunction to control an active balancing circuit for up to 7 battery cells connected in series. See Typical Application for the typical system architecture. The EMB1428 provides 12 floating gate drivers that are needed for the control of the FET switch matrix in the circuit. The EMB1499 is a DC/DC controller that regulates the inductor current in the bi-directional forward converter. In a typical application, the forward converter has the inductor side connected to the switch matrix and the other side to the battery stack. With such an arrangement, every cell balancing action is an energy exchange between a cell and the whole stack. The maximum number of cells in such a stack is constrained by the maximum stack voltage the EMB1428 can handle (60V). Theoretically the 7 cells associated with an EMB1428 can be anywhere along the stack. So in the case of a 14-cell stack, one EMB1428 can be used to handle the lower 7 cells (lower half-stack), and another EMB1428 can be used to handle the upper 7 cells (upper half-stack).

When the EMB1428 receives a cell balance command from the micro controller to charge or discharge a particular cell, it will first turn off all switches irrelevant to the balancing of that cell and then turn on the switches that will properly connect the cell to the forward converter. Once the proper switches in the switch matrix have been turned on, the EMB1428 will signal the EMB1499 to start charging or discharging the cell. The EMB1499 will then ramp the forward converter's inductor current (positive or negative) to a user-defined magnitude and keep a current constant. The inductor current is the balancing current the cell receives. Upon receiving a command from the microcontroller to stop balancing or to switch balancing action to a different cell, the EMB1428 will inform the EMB1499 to bring the balancing current towards zero. Once the inductor current has ramped down to zero, the EMB1428 will turn off all the switches that are not needed by the new command and turn on the switches that are needed (if any). If the new command is to balance a different cell, the EMB1428 will enter a low power sleep mode, also known as shutdown mode.

#### The Switch Matrix

The FET switches in a switch matrix fall into two categories. See Figure 3 for a detailed illustration. The switches directly connected to the battery cells are called the "cell switches". Each cell switch is comprised of two N-FETs that are connected in a common source and common gate manner and is capable of blocking current flow in both directions. The switches directly connected to the DC/DC converter are called the "polarity switches". Each polarity switch is simply an N-FET and is capable of blocking current flow in one direction only.

Of the 7 cells handled by the EMB1428, assume the bottom cell is Cell 1, the one above it is Cell 2, and so on. Cell 1 is connected to two cell switches, i.e. Cell Switch 0 and Cell Switch 1 (CSW0 and CSW1). Cell 2 is connected to CSW1 and CSW2. This pattern repeats through all cell connections. Each cell switch has one drain node connected to either the EVEN rail (if the switch is even numbered) or the ODD rail (if the switch is odd numbered). Each of the four polarity switches (PSW0 through PSW3) either has a drain connected to the positive end of the DC/DC converter and a source connected to the EVEN or ODD rail, or has a source connected to the negative end of the DC/DC converter and a drain to the EVEN or ODD rail. The function of the cell switches is to select the chosen cell on the EVEN and ODD rails and the function of the polarity switches is to connect the cell to the DC/DC converter in a positive-to-positive and negative-to-negative manner.

Each time the EMB1428 tries to charge or discharge a certain cell, it will first turn off all irrelevant switches, and turn on or keep on relevant cell switches. It will then connect the cell to the EVEN and ODD rails and turn on the appropriate polarity switches.

#### TEXAS INSTRUMENTS

www.ti.com

SNVS812A - MAY 2012 - REVISED MAY 2013

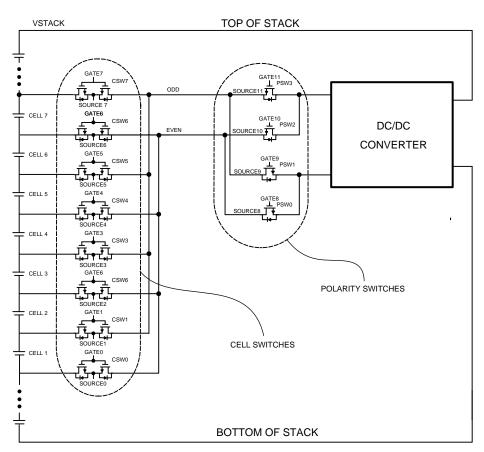


Figure 3. Switch Matrix

### **Reference Current Generator**

A block diagram of the reference current generator is shown in Figure 4. This block generates bias currents that are used in the 12 floating drivers to create temperature-stable driver output voltages. The main blocks in the reference current generator are bandgap, opamp, resistor/diode stack, and shutdown bias generator.

The 5V bandgap voltage is forced across a stack of resistors and diodes in the operational amplifier feedback loop to generate a reference current. The reference current is mirrored from the VDDCP rail to each of the 12 floating drivers.

During sleep mode the bandgap output is held at 0V such that the reference current output is zero. A SOURCE shutdown bias current, I<sub>SRC</sub>, is already created by a parallel bias generator that is active any time VSTACK is greater than 2V typical. The SOURCE shutdown bias current ensures that the driver outputs will be clamped off during shutdown if there is any significant voltage applied to VSTACK.

TEXAS INSTRUMENTS

www.ti.com

SNVS812A - MAY 2012 - REVISED MAY 2013

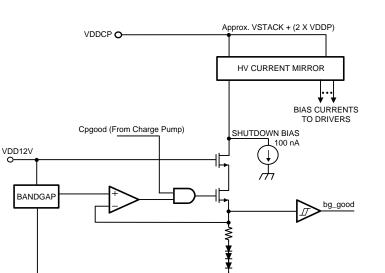


Figure 4. Reference Current Generator

The reference generator also monitors the cpgood signal which comes from the charge pump UVLO. If cpgood is low then the reference generator is held in a standby mode with zero output current until the charge pump has started. This delay prevents supply headroom issues that can occur if the drivers are turned on before the charge pump has created a large enough voltage at the VDDCP pin.

The bg\_good signal is generated by a Schmitt trigger inverter that is driven by the operational amplifier feedback loop. This signal indicates that the bandgap has started up, the charge pump is operational, and the reference current is flowing to the drivers. The digital block monitors the bg\_good signal and generates a fault if it is low when an SPI command is received.

## **Floating Gate Driver**

Figure 5 shows the main blocks in the floating gate driver cell along with a dual-FET load and the built-in bleeder resistor. Each of the 12 drivers has a floating supply generator, shutdown circuit, UVLO, level-shift, and output buffer. The SOURCE pin can be up to 60V above ground for a 14 cell pack (14X4.3V) and the GATE pin must be able to swing 12V above the SOURCE pin (in some cases above the top of the battery stack) to turn on the external FETs.

The internal 100k bleeder resistors ensure that the FET switches will automatically turn off in the event of a catastrophic driver failure and that the FET switches are in an off state upon system power-up. The driver is designed to drive the FET switch directly with no gate-source resistor.





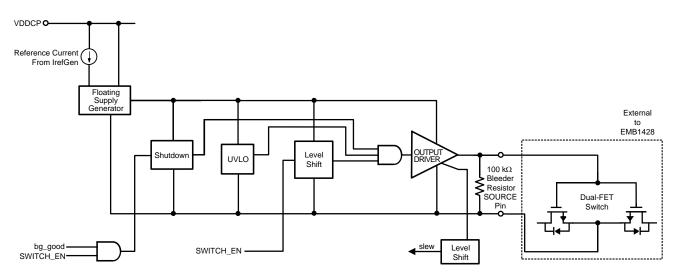


Figure 5. Floating Gate Driver

Each driver receives a reference current from the VDDCP rail that must flow out of the SOURCE pin and into the FET network along with the rest of the driver's bias current. The total SOURCE pin current for each driver with an off output is  $I_{SRC}$ . For drivers with outputs that are 'on',  $I_{GON}$  flows through the bleeder resistor and out of the source connection. For drivers 0 through 7 this current can flow into the battery stack or into the EVEN or ODD rail depending on which of the two FET body diodes is forward biased. This current helps ensure that the source connection of the dual-FET switches does not get pulled down such that a drain-source breakdown occurs. For drivers 8 through 11 this current usually flows into the EVEN or ODD rails, through an 'ON' dual-FET switch, and back into the battery stack.

### **Driver Shutdown Circuit**

The driver shutdown block is essentially a simple level-shift circuit that monitors the system level shutdown signal (SWITCH\_EN) and the bg\_good signal. If shutdown is high and/or bg\_good is low then the driver output is forced low and the driver enters a low power shutdown state. The bg\_good signal indicates that the charge pump and bandgap are powered up and functional. This circuit also indirectly ensures that the drivers will automatically shut down if either the 5V or 12V supplies are not operational.

### Floating Driver UVLO

A UVLO circuit is included in each driver to prevent the driver output from turning on unless its floating supply is active.

### Floating Driver Output Buffer

Figure 6 shows the architecture for the floating driver output buffer along with a dual-FET load. The output buffer uses a two-stage parallel architecture to help control output currents that must be supplied by the charge pump. A low-output-drive slewing stage begins every output transition and a parallel high-output-drive latching stage is activated once the output has slewed to within 300mV(typical) of whichever rail it is approaching. The latching stage also provides a low output impedance to hold the output on or off in the presence of external noise transients. This architecture is used because all current provided by the output buffer to charge the external FET switch gate-source capacitance (i.e. turn a switch 'ON') must be supplied to the VDDCP pin by the charge pump. Turning a switch off is much simpler: all charge drained from the external FET gate-source capacitance flows into the GATE pin, through the driver pull-down circuitry, and back out through the SOURCE pin.



SNVS812A - MAY 2012 - REVISED MAY 2013

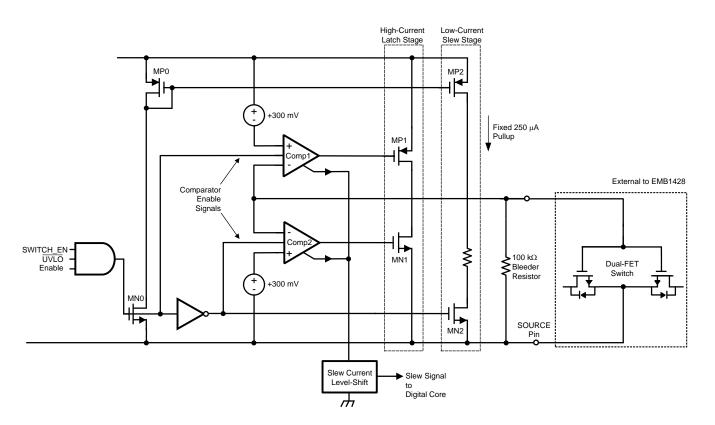


Figure 6. Floating Driver Output Buffer

The slewing output stage consists of a pull-up current source (MN0, MP0, and MP2) and a resistive pull-down circuit (MN2, and 20K resistor). The pull-up slewing current is  $I_{GON}$ . The approximate pull-up time can be estimated using the model shown in Figure 7 where the input is a current step waveform.  $R_{BLD}$  is the 100k bleeder resistance, typical. Vo is the voltage to which the slewing stage pulls the gate voltage up to (12V-0.3V = 11.7V). The equation for the slewing time is:

$$t_{SLEW} = C_{gs} \times R_{BLD} \times \ln\left(\frac{I_{GON} \times R_{BLD}}{I_{GON} \times R_{BLD} - V_o}\right)$$
(1)

Using the above equation along with a conservative estimate for the Cgs of the dual-FETs of 5nF gives pull-up times of 316  $\mu$ s (R<sub>BLD</sub> = 100k; V<sub>o</sub> = 11.7V).

The pull-down behavior of the slewing output stage is determined by the RC circuit formed by the 20K resistor, the 100k bleeder resistor, and the Cgs of the external FETs. Using an analysis very similar to the above equation, the pull-down time can be estimated at approximately  $307 \ \mu$ s.




Figure 7. Driver Output Slewing Model



The latching output stage shown in Figure 6 consists of comparators Comp1 and Comp2 along with output devices MP1 and MN1. Half of this stage is de-activated each time the output begins a transition so that it does not conflict with the slewing stage. Comp1 and Comp2 receive an enable signal that switches them between normal comparator operation and a low-power mode where their outputs are forced high (Comp1) or low (Comp2) to unlatch. These comparators have a current output that is activated whenever the comparator is in comparator mode but un-latched (i.e. the output is still slewing). These currents are wire-ORed and processed by a level-shift circuit to produce a 5V logic slew signal. This slew signal is used by the digital core to control the timing of the switch enable signals.

#### Charge Pump

The EMB1428 uses a two-stage charge pump architecture that is shown in Figure 8. The main components of the charge pump are a soft start generator, clock level shift, output drivers, and a UVLO. This type of charge pump produces a floating supply voltage, VCPP that is typically (2 x VDDP) - (3 x Vdiode) with no load. The typical values for C1-C3 are expected to be 0.01  $\mu$ F.

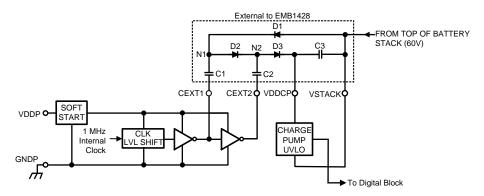


Figure 8. Charge Pump

In steady-state, the signals at the CEXT1 and CEXT2 pins are square wave voltages that are 180° out of phase, with an amplitude equal to the supply voltage VDDP. When CEXT1 is pulled low, C1 is charged through D1 to VSTACK minus the diode drop. With no loading at the output of the charge pump, the capacitor C1 acts like a simple electro-static level shift such that the CEXT1 square wave is reproduced at node N1 but switching between VSTACK and VSTACK+VDDP. During the opposite clock phase, the phase difference between the CEXT1 and CEXT2 pins allows charge to flow from C1 to C2 through D2 such that C2 is charged to VSTACK+VDDP when N1 is high and N2 is low. The next phase of the clock causes N2 to be pushed up to VSTACK + (2 x VDDP) through C2 which reverse biases D2 and forward biases D3. The D3/C3 circuit simply rectifies this square wave and creates a DC voltage of approximately 2 x VDDP across C3. The voltage developed across C3 is used as a floating supply for the VDDCP pin that is referenced to VSTACK. The VDDP supply current is always 2 times the load current pulled from the output of the charge pump.

## Charge Pump UVLO

A floating UVLO circuit is connected between the VDDCP and VSTACK pins to monitor the charge pump output. The output of the UVLO has also been modified to produce the ground-referenced 5V cpgood signal through a level-shift circuit. The UVLO trip points are listed in the ELECTRICAL CHARACTERISTICS table as  $V_{CP_UVH}$  and  $V_{CP_UVL}$ .

### **Serial Interface**

The serial interface operates on 8-bit transactions. See Figure 9 for proper operation of the serial interface. The microcontroller must send a 4-bit command on SDI followed by 4 zeros. The EMB1428 will provide fault[3:0] on SDO (related to the previous command), followed by the 4-bit command that it just received. The EMB1428 will drive SDO on the falling edge of SCLK and sample SDI on the rising edge of SCLK. The assertion of  $\overline{CS}$  will cause an internal signal sdo\_en to go high and actively drive the SDO pin high or low. A short delay after CS has been de-asserted, sdo\_en will go low and the SDO pin will tri-state and be ready to be driven by other devices on the SPI bus.

Downloaded from Arrow.com.

Copyright © 2012–2013, Texas Instruments Incorporated

SNVS812A - MAY 2012 - REVISED MAY 2013


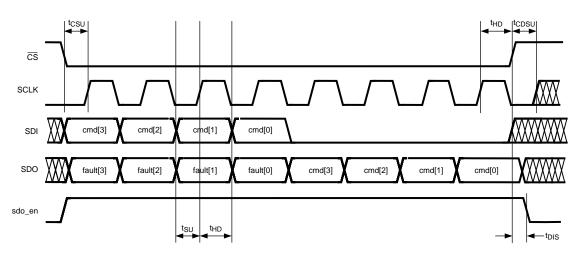


Figure 9. Serial Interface (proper operation)

If  $\overline{CS}$  goes high at any point before the 8th rising edge of SDI, the transaction will be considered aborted and the data that was received on SDI will be discarded. No command change will occur from such a transaction. However, if FAULT\_INT was cleared by the transaction it will remain cleared and the fault data will no longer be accessible.



## Figure 10. Serial Interface (inter transaction timing)

The serial clock (SCLK) will be gated low outside this block (in the IO). Thus SCLK will always be low when  $\overline{CS}$  is high.



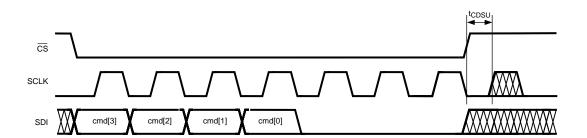


Figure 11. Serial Interface (aborted transaction)

### **Command Decoding**

The EMB1428 will receive the cmd[3:0] from the SPI interface, synchronize it into the internal clock domain, and enable the switches according to the following table:

SPI Command	State of Cell Switches	State of Polarity Switches	Description
cmd[3:0]	CSW[7:0]	PSW[3:0]	
0_000	0000_0000	0000	Open all switches
0_001	0000_0011	1001	Connect Cell 1
0_010	0000_0110	0110	Connect Cell 2
0_011	0000_1100	1001	Connect Cell 3
0_100	0001_1000	0110	Connect Cell 4
0_101	0011_0000	1001	Connect Cell 5
0_110	0110_0000	0110	Connect Cell 6
0_111	1100_0000	1001	Connect Cell 7
1_000	0000_0000	0000	Test Mode
1_001	0000_0011	1001	Connect Cell 1
1_010	0000_0110	0110	Connect Cell 2
1_011	0000_1100	1001	Connect Cell 3
1_100	0001_1000	0110	Connect Cell 4
1_101	0011_0000	1001	Connect Cell 5
1_110	0110_0000	0110	Connect Cell 6
1_111	1100_0000	1001	Connect Cell 7

#### Table 2. Switch Settings for Each Command

### Power On Reset

The following will be asynchronously reset when the internal POR block is triggered:

- 1. Serial Interface
- 2. cmd[3:0] = 4'h0
- 3. FAULT\_INT = 1'b0
- 4. EN = 1'b0
- 5. PSW[3:0] = 4'h0
- 6. CSW[7:0] = 8'h00

Copyright © 2012–2013, Texas Instruments Incorporated

SNVS812A-MAY 2012-REVISED MAY 2013



www.ti.com

- 7. Shutdown Mode = yes
- 8. Internal Clock = off
- 9. Normal Mode/Test Mode = Normal Mode

The serial interface is reset so that it is prepared to detect aborted transactions. If POR block isn't triggered, the serial interface will still function. However the initial state of the part will be unknown, so the first transaction may clock out a fault code.

## Normal Control Sequencing

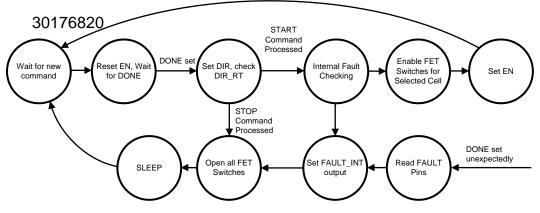


Figure 12. EMB1428 Flowchart

Switches are turned on one at a time to avoid drawing too much current from the charge pump. The following list details the normal sequence that will be used for changing the Switch and EMB1499 Controls each time a new command is received. Exceptions to the sequence (due to errors) will be explained later.

- 1. Wait for new command.
- 2. Set EN low.
- 3. Wait for DONE to be high.
- 4. Wait for those cell and polarity switches to be turned off as necessitated by the new command.
- 5. If new command is 4'b0\_000 and the EMB1428 is in shutdown mode, go to #1. If new command is not 4'b0\_000 and the EMB1428 is in shutdown mode, then exit shutdown mode.
- 6. Set DIR to be logically equal to the complement of cmd[3]
- 7. Wait for /DIR\_RT to become logically equal to cmd[3]
- 8. If any switches are currently on, turn off the ones that are not needed for this new command. (All switches can be turned off at once. Switches that are currently on and needed for the new command will not be turned off.)
- 9. If any switches were turned off in #9, wait for them to complete their turn-off process.
- 10. If the new command is 4'b0\_000 (open all switches), enter shutdown mode. Then go to #1. Otherwise, continue with next step.
- 11. Turn on next cell switch that is currently off. If all requested cell switches are on, go to #14. (Order for selecting the next cell switch does not matter.)
- 12. Wait for the cell switch to fully turn on. Then go to #12.
- 13. Turn on next polarity switch that is currently off. If all requested polarity switches are on, go to #16. (Order for selecting the next polarity switch does not matter.)
- 14. Wait for the polarity switch to fully turn on. Then go to #14.
- 15. Set EN high.
- 16. Wait for DONE to go low.
- 17. Go to #1.



Any time a new command arrives, the EMB1428 immediately goes back to step #2, regardless of where it was at in the sequence. Any time an error occurs that causes FAULT\_INT to go high, the EMB1428 immediately goes back to step #1 and acts as if it received a command to open all switches.

### **Emergency Shutdown**

If the EMB1428 receives two consecutive commands to open all switches (no intervening commands), it will immediately set {CSW[7:0], PSW[3:0]} = 12'h0. This allows all switches to be shut off if there is a problem in the EMB1499 communication or in the EMB1428 charge pump circuitry.

An emergency shutdown will cause the EMB1428 to enter shutdown mode and turn off its internal clock within a few clock cycles without waiting for switches to finish turning on or off.

#### **EMB1499 Control Signaling**

The DIR\_RT from the EMB1499 will be synchronized into the EMB1428's internal clock domain. On every rising edge of the internal clock, DIR\_RT will be compared to DIR. If they are ever at the same logic level, a fault will be generated.

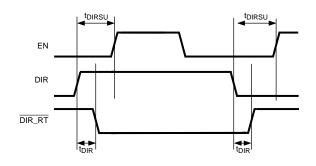


Figure 13. Direction Signals

#### **Error Detection**

The EMB1428 contains combinatorial circuitry that will monitor the CSW[7:0], PSW[3:0] outputs for any illegal combination. If an illegal combination occurs, all 12 of the switch control outputs will be forced to zero. The switch control outputs are allowed to glitch low as long as the glitches are typically less than 10ns in length. These short glitches will not pass through the switch circuitry and cause a problem. The switch control output will return to normal operation after the next serial transaction.

This circuitry is included in case the POR circuit does not function or if a radiation event occurs that could be destructive to the battery pack.

The illegal combinations are:

- 1. More than two bits of CSW[7:0] set.
- 2. Two non-consecutive bits of CSW[7:0] set.
- 3. (PSW3 | PSW0) & (PSW2 | PSW1) = 1

### Fault Reporting

The EMB1428 detects and reports faults from various sources. If a fault causes FAULT\_INT to go high, the IC will immediately act as if it received a command to open all switches: EN will go low, all switches will be turned off, and the IC will enter sleep/shutdown mode. Some faults that are only detected by a subsequent serial transaction do not trigger FAULT\_INT and thus do not cause all switches to be opened.

The fault code should always be interpreted as a problem completing the prior command. Reading the fault code clears the fault condition. The EMB1428 will always attempt to perform the command that was sent as the fault code was being read. If two commands are sent in quick succession, a fault may be read when the second command is sent because the first did not have time to complete. At this point, the EMB1428 will attempt to perform the second command.

Copyright © 2012–2013, Texas Instruments Incorporated

# EMB1428Q

SNVS812A - MAY 2012 - REVISED MAY 2013

#### **Serial Interface Faults**

If a 9th rising edge of SCLK is detected while  $\overline{CS}$  is low (Figure 14), a fault will be generated and the IC will drive FAULT\_INT high.

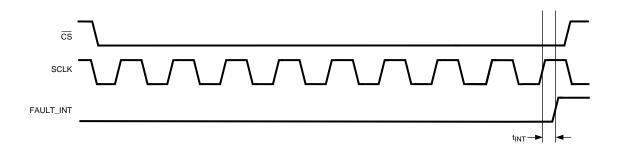


Figure 14. Serial Interface (too many clocks)

If SDI clocks in a high during any of the 4 bits when it should be low, a fault will be generated and the IC will drive FAULT\_INT high. See Figure 15.

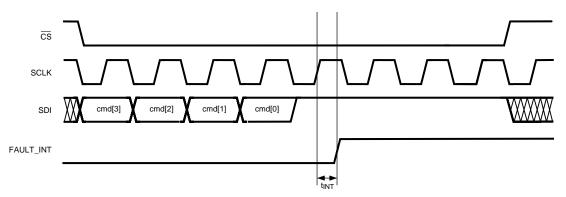


Figure 15. Serial Interface (invalid SDI high)

### EMB1499 Control Faults

#### Incorrect DIR\_RT

If DIR\_RT matches DIR on any rising edge of the internal clock, a fault <u>will be generated</u> and the IC will drive FAULT\_INT high. This fault will be masked during serial transactions. If DIR\_RT is the wrong value only during the serial transaction, it will be masked and never reported.



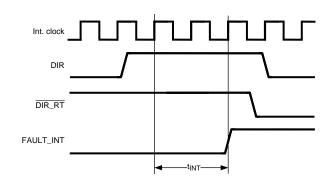


Figure 16. Direction failure (DIR rising case)

#### EMB1499 Fault

If there is a rising edge on DONE while EN is high, the EMB1428 will detect it as an EMB1499 fault. If this occurs, the EMB1428 will drive FAULT\_INT high. If FAULT[2:0]  $\neq$  000, then the EMB1428 will output the corresponding EMB1499 fault code.

The EMB1499 faults are masked during serial transactions. If an EMB1499 failure occurs between the start of a serial transaction and the falling edge of EN, it will be masked and never reported.

#### UVLO Tripping

if a UVLO event occurs, the internal signal bg\_good will be driven low. If a falling edge is seen on the internal signal bg\_good while the EMB1428 is in active mode, the EMB1428 will drive FAULT\_INT high.

#### Previous Command Not Completed

If  $\overline{CS}$  goes low and the EMB1428 has not completed its sequence from the previous command, this will generate a fault. These fault conditions will be generated immediately and the fault code will be shifted out in the current serial transaction. The EMB1428 will not drive FAULT\_INT high in any of these situations.

If  $\overline{CS}$  goes low and the EMB1428 is still waiting for DONE to go high (i.e. the EMB1428 is still waiting for the EMB1499 to stop charging or discharging so it can set up for the command it received on the previous serial transaction), then the EMB1428 will generate a fault.

If  $\overline{CS}$  goes low and the EMB1428 has set EN high but is still waiting for DONE to go low, the EMB1428 will generate a fault.

If CS goes low while slew is low or the EMB1428 is waiting for the falling edge of slew, the EMB1428 will generate a fault.

If  $\overline{CS}$  goes low while bg\_good is low and the current command is not 4'h0 (open all switches), the EMB1428 will generate a fault.

#### Clearing FAULT\_INT

The EMB1428 will clear FAULT\_INT between the 4th and 6th rising edges of the SCLK. Faults from the EMB1499 that occur between the falling edge of  $\overline{CS}$  and the point where DIR is set in the control sequence will be ignored. This way, the user can be assured that triggered faults are always related to the current serial command.

TEXAS INSTRUMENTS

www.ti.com

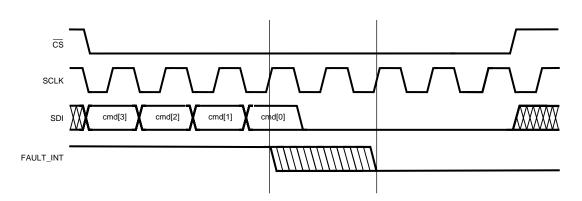


Figure 17. Clearing FAULT\_INT

#### **Generating Fault Codes**

The EMB1428 will generate FAULT[3:0] according to the following table. This table is in order of priority. So if multiple fault conditions occur, the fault code that is higher in the table will be generated.

Failure Description	fault[3:0]	FAULT_INT triggered?
DONE went high while EN was high and FAULT[2:0] ≠ 000	{1'b0, FAULT[2:0]}	yes
DONE went high while EN was high and FAULT[2:0] = 000	1100	yes
SDI sampled high when it should be low	1101	yes
9th SCLK rising edge seen while $\overline{CS}$ is low		
DIR_RT is not the opposite of DIR	1110	yes
CS falling edge while the EMB1428 is still waiting for a transition on DONE (rising or falling edge)	1000	no
CS falling edge while slew is low or the EMB1428 is waiting for it to go high	1001	no
CS falling edge while bg_good is low and the current command is not 4'h0 (open all switches)	1011	no
bg_good went low after it was sampled high		yes
No fault condition	1010	yes

#### **Table 3. Fault Codes**



SNVS812A - MAY 2012 - REVISED MAY 2013

## **REVISION HISTORY**

Ch	nanges from Original (April 2013) to Revision A P	Page
•	Changed layout of National Data Sheet to TI format	. 22



### **PACKAGING INFORMATION**

Orderable part number	Status	Material type	Package   Pins	Package qty   Carrier	RoHS	Lead finish/	MSL rating/	Op temp (°C)	Part marking
	(1)	(2)			(3)	Ball material	Peak reflow		(6)
						(4)	(5)		
EMB1428QSQ/NOPB	Active	Production	WQFN (RHS)   48	1000   SMALL T&R	Yes	SN	Level-2-260C-1 YEAR	-40 to 125	EMB1428Q
EMB1428QSQ/NOPB.A	Active	Production	WQFN (RHS)   48	1000   SMALL T&R	Yes	SN	Level-2-260C-1 YEAR	-40 to 125	EMB1428Q
EMB1428QSQE/NOPB	Active	Production	WQFN (RHS)   48	250   SMALL T&R	Yes	SN	Level-2-260C-1 YEAR	-40 to 125	EMB1428Q
EMB1428QSQE/NOPB.A	Active	Production	WQFN (RHS)   48	250   SMALL T&R	Yes	SN	Level-2-260C-1 YEAR	-40 to 125	EMB1428Q
EMB1428QSQX/NOPB	Active	Production	WQFN (RHS)   48	2500   LARGE T&R	Yes	SN	Level-2-260C-1 YEAR	-	EMB1428Q
EMB1428QSQX/NOPB.A	Active	Production	WQFN (RHS)   48	2500   LARGE T&R	Yes	SN	Level-2-260C-1 YEAR	-40 to 125	EMB1428Q

<sup>(1)</sup> Status: For more details on status, see our product life cycle.

<sup>(2)</sup> Material type: When designated, preproduction parts are prototypes/experimental devices, and are not yet approved or released for full production. Testing and final process, including without limitation quality assurance, reliability performance testing, and/or process qualification, may not yet be complete, and this item is subject to further changes or possible discontinuation. If available for ordering, purchases will be subject to an additional waiver at checkout, and are intended for early internal evaluation purposes only. These items are sold without warranties of any kind.

<sup>(3)</sup> RoHS values: Yes, No, RoHS Exempt. See the TI RoHS Statement for additional information and value definition.

<sup>(4)</sup> Lead finish/Ball material: Parts may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

<sup>(5)</sup> MSL rating/Peak reflow: The moisture sensitivity level ratings and peak solder (reflow) temperatures. In the event that a part has multiple moisture sensitivity ratings, only the lowest level per JEDEC standards is shown. Refer to the shipping label for the actual reflow temperature that will be used to mount the part to the printed circuit board.

<sup>(6)</sup> Part marking: There may be an additional marking, which relates to the logo, the lot trace code information, or the environmental category of the part.

Multiple part markings will be inside parentheses. Only one part marking contained in parentheses and separated by a "~" will appear on a part. If a line is indented then it is a continuation of the previous line and the two combined represent the entire part marking for that device.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.




# PACKAGE OPTION ADDENDUM

23-May-2025



## TAPE AND REEL INFORMATION



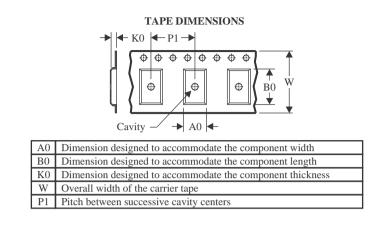

#### QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



*All dimensions are nominal												
Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
EMB1428QSQ/NOPB	WQFN	RHS	48	1000	330.0	16.4	7.3	7.3	1.3	12.0	16.0	Q1
EMB1428QSQE/NOPB	WQFN	RHS	48	250	178.0	16.4	7.3	7.3	1.3	12.0	16.0	Q1
EMB1428QSQX/NOPB	WQFN	RHS	48	2500	330.0	16.4	7.3	7.3	1.3	12.0	16.0	Q1



# PACKAGE MATERIALS INFORMATION

31-Oct-2024



\*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
EMB1428QSQ/NOPB	WQFN	RHS	48	1000	356.0	356.0	36.0
EMB1428QSQE/NOPB	WQFN	RHS	48	250	208.0	191.0	35.0
EMB1428QSQX/NOPB	WQFN	RHS	48	2500	356.0	356.0	36.0


# **RHS0048A**



# **PACKAGE OUTLINE**

# WQFN - 0.8 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

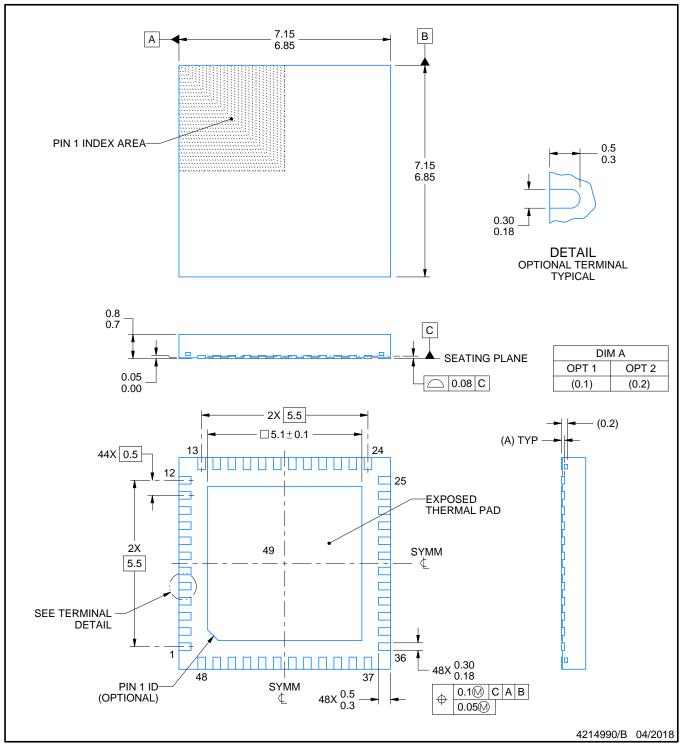

#### NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M. 2. This drawing is subject to change without notice.
- 3. The package thermal pad must be soldered to the printed circuit board for thermal and mechanical performance.




# **RHS0048A**

# **EXAMPLE BOARD LAYOUT**

## WQFN - 0.8 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

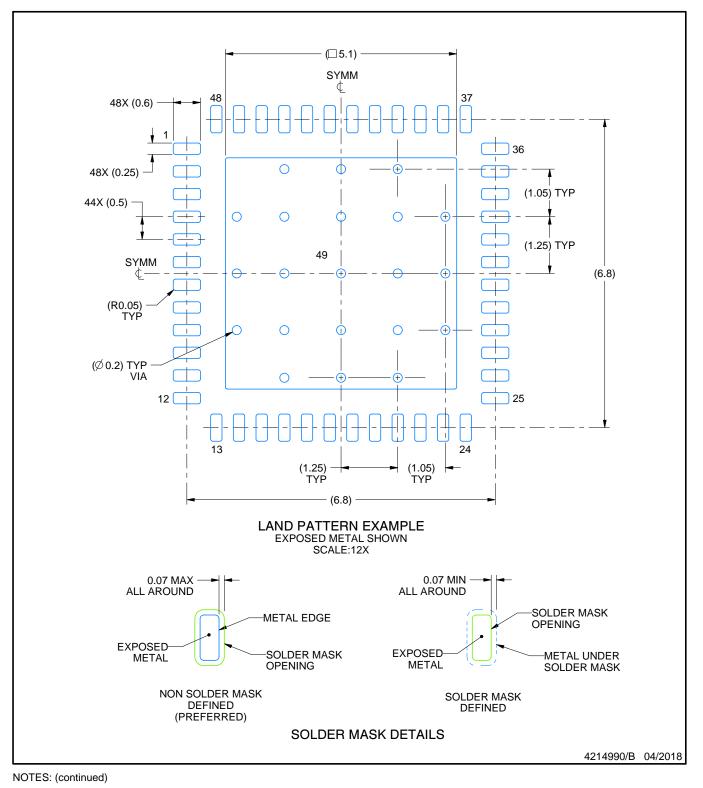

4. This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature number SLUA271 (www.ti.com/lit/slua271).

 Vias are optional depending on application, refer to device data sheet. If any vias are implemented, refer to their locations shown on this view. It is recommended that vias under paste be filled, plugged or tented.




# **RHS0048A**

# **EXAMPLE STENCIL DESIGN**

# WQFN - 0.8 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

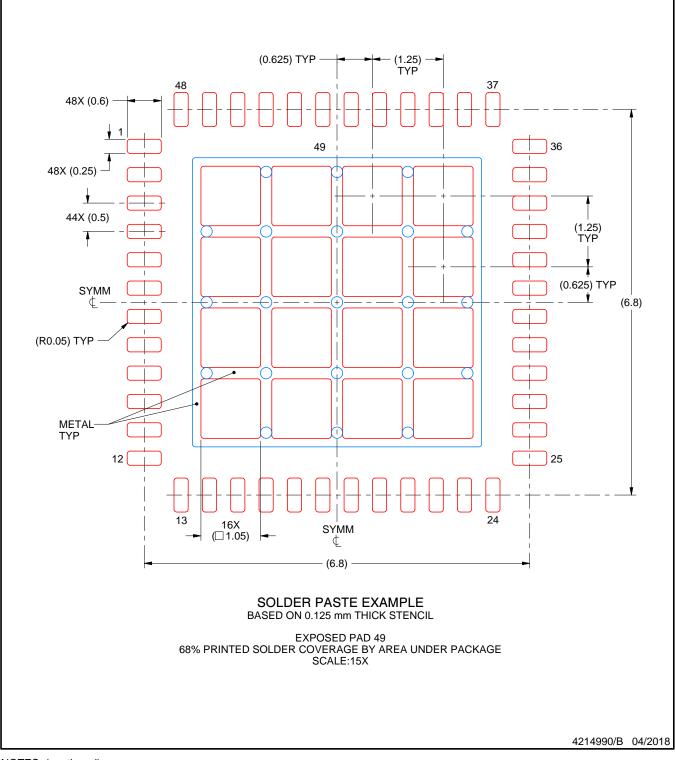

NOTES: (continued)

6. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2025, Texas Instruments Incorporated