


MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

# Thermo J Click



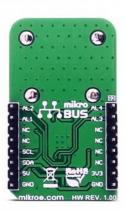

PID: MIKROE-2811

**Thermo J Click** is a temperature measurement click board <sup>™</sup>, which uses a thermocouple type-J probe, connected to a PPC-SMP-J onboard connector. The active part of the Thermo J click is <u>MCP9600</u> by <u>Microchip</u> - a thermocouple EMF to temperature converter, with 1.5°C of maximum accuracy. The onboard PCC-SMP-J connector ensures the secure connection and accurate readings for the connected thermocouple.

The main advantage of the thermocouples over some other types of temperature measuring devices, is a wide range of temperatures that they can measure. With the addition of four programmable ALERT lines routed to the mikroBUS™ pins, Thermo J click is an ideal solution for the temperature measurements in extreme conditions, hard to reach places, machinery, and similar applications.

**Thermo J Click** is a temperature measurement click board <sup>™</sup>, which uses a thermocouple type-J probe, connected to a PPC-SMP-J onboard connector. The active part of the Thermo J click is <u>MCP9600</u> by <u>Microchip</u> - a thermocouple EMF to temperature converter, with 1.5°C of maximum accuracy. The onboard PCC-SMP-J connector ensures the secure connection and accurate readings for the connected thermocouple.

The main advantage of the thermocouples over some other types of temperature measuring devices is a wide range of temperatures that they can measure. With the addition of four programmable ALERT lines routed to the mikroBUS $^{\text{m}}$  pins, Thermo J click is an ideal solution for the temperature measurements in extreme conditions, hard to reach places, machinery, and

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.





ISO 27001: 2013 certification of informational security management system.
ISO 14001: 2015 certification of environmental management system.
OHSAS 18001: 2008 certification of occupational health and safety management system.



ISO 9001: 2015 certification of quality management system (QMS).



MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

similar applications.

### How does the click work?

Thermo J click utilizes the thermoelectric principles for measuring the temperature. When the thermocouple joint, made of two different conductive materials, is exposed to a measuring temperature (hot end), a potential difference will be generated at the open ends of the circuit (cold end). The generated electromotive force (EMF) at the open ends of the circuit can be measured and converted into a digital form, by the 18-bit delta-sigma AD converter section of the MCP9600 IC.

www.mikroe.com

To obtain the desired measurement of the temperature, the cold end temperature needs to be known, too. Since the MCP9600 features an integrated measurement of the ambient temperature (cold junction compensation), error corrected value can be read directly from the registers, using the I2C bus protocol.

The generated EMF depends on the materials that are used for the thermocouples. Those materials are standardized and categorized by types. This click uses the type-J thermocouples, composed of iron and constantan. The measuring range of this device for the type J probes, is from -150°C to 1200°C, but it depends on the used probes. Thermo J click uses a specially

constructed PPC-SMP-J onboard connector for easy and secure thermocouple connection.

There are four ALERT lines present on the MCP9600. Those lines can be programmed by the I2C to be set to a HIGH logic level when certain temperature thresholds are reached. The lines are routed to the AN, RST, PWM and INT pins of the mikroBUS™.

The I2C address can be selected with the ADDR SEL onboard SMD jumper. The I2C address can be changed by this jumper, allowing for more than one of these click boards to be used on a system, each with the different I2C address.

The click board<sup>™</sup> can be set to work with both 3.3V or 5V, selectable from the mikroBUS<sup>™</sup>. This can be done by the onboard SMD jumper, labeled as PWR SEL. This allows for this click board <sup>™</sup> to be used on a wide range of different MCUs, both 3.3V and 5V tolerant.

**Note:** Thermo J click needs Thermocouple Type-J probes which are sold separately.

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system.
ISO 14001: 2015 certification of environmental management system.
OHSAS 18001: 2008 certification of occupational health and safety management system.



MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918
Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

www.mikroe.com

# **Specifications**

Туре	Temperature & humidity		
Applications	Ideal solution for the temperature measurements in extreme conditions, hard to reach places, machinery, and similar applications.		
On-board modules	MCP9600 a thermocouple EMF to temperature converter		
Key Features	Measuring wide range of temperatures, ranging from -150°C to 1200°C - depending on the used probes, comes with the PCC-SMP-Type-J connector for the secure connecting of the thermocouple probes, integrated cold junction compensation.		
Interface	GPIO,I2C		
Feature	No ClickID		
Compatibility	mikroBUS™		
Click board size	M (42.9 x 25.4 mm)		
Input Voltage	3.3V or 5V		

# **Pinout diagram**

This table shows how the pinout on **Thermo J click** corresponds to the pinout on the mikroBUS $^{\text{m}}$  socket (the latter shown in the two middle columns).

Notes	Pin	mikro™ BUS				Pin	Notes
Alert 4 output	ALER T4	1	AN	PWM	16	ALER T2	Alert 2 output
Alert 3 output	ALER T3	2	RST	INT	15	ALER T1	Alert 1 output
	NC	3	CS	RX	14	NC	
	NC	4	SCK	TX	13	NC	
	NC	5	MISO	SCL	12	SCL	I2C clock
	NC	6	MOSI	SDA	11	SDA	I2C data
Power supply	3V3	7	3.3V	5V	10	5V	Power supply
Ground	GND	8	GND	GND	9	GND	Ground

# Thermo J click electrical specifications

Description	Min	Тур	Max	Unit
I/O pins voltage ratings	2.7		5.5	V
I2C clock frequency	10		100	kHz
Measuring range	-150		1200	°C

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system.
ISO 14001: 2015 certification of environmental management system.
OHSAS 18001: 2008 certification of occupational health and safety management system.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

for the Type J		
probes		

# **Onboard settings and indicators**

Label	Name	Default	Description
JP1	PWR SEL	Left	Power supply voltage selection. Left position 3.3V, right position 5V
JP2	ADDR SEL	Left	I2C address selection. Left position is 1100000x, right position is 1100111x.
PWR	Power LED	-	Power LED indicates that the click is powered on

# **Software support**

We provide a library for the Thermo J click on our <u>LibStock</u> page, as well as a demo application (example), developed using MikroElektronika <u>compilers</u>. The demo can run on all the main MikroElektronika <u>development boards</u>.

## **Library Description**

The library contains functions which are used to communicate and control the Thermo J click. Temperature read and write functions require the I2C slave address as an argument - so that more than one device with the different slave addresses can be used on the same I2C bus.

#### **Key functions**

float THERMOJ\_getTemperature(uint8\_t slaveAddress) - Returns current temperature in Celsius

void THERMOJ\_write\_byte(uint8\_t slaveAddress, uint8\_t registerAddress, uint8\_t value) - Writes single byte to any register

uint8\_t THERMOJ\_read\_byte(uint8\_t slaveAddress, uint8\_t registerAddress) - Reads single byte from any register

### **Examples Description**

The application is composed of three sections:

- System Initialization Initializes pins, I2C peripheral, UART used for logging
- Application Initialization -Initializes driver and configures module
- Application Task (code snippet) Sequential temperature measurement every 500 milliseconds. Measurement readings will be logged to UART

The full application code, and ready to use projects can be found on our <u>LibStock</u> page.

void applicationTask()
{

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system.
ISO 14001: 2015 certification of environmental management system.
OHSAS 18001: 2008 certification of occupational health and safety management system.





Time-saving embedded tools

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

```
temperature = THERMOJ_getTemperature(_THERMOJ_ADDRESS_GND);
FloatToStr(temperature,text);
LOG_write("Current temperature: ", _LOG_TEXT);
LOG_write(text, _LOG_LINE);
Delay_ms(500);
```

Other MikroElektronika libraries used in the example:

UART

}

Conversions

#### Additional notes and information

Depending on the development board you are using, you may need <u>USB UART click</u>, <u>USB UART</u> 2 click or RS232 click to connect your PC for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika compilers, or any other terminal application of your choice can be used to read the message.

#### Resources

mikroBUS™ Standard specifications

Click board™ Catalog

Click Boards™

## **Downloads**


Thermo I click schematic

MCP9600 datasheet

Thermo J click example on Libstock

Thermo I click 3D file

Thermo I click dxf file

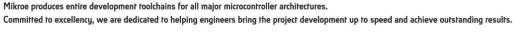

health and safety management system.





