

1628496

https://www.phoenixcontact.com/us/products/1628496

Please be informed that the data shown in this PDF document is generated from our online catalog. Please find the complete data in the user documentation. Our general terms of use for downloads are valid.



M23, Device connector front mounting, series: M23 PRO Signal, angled rotatable, shielded: yes, for standard and ONECLICK fast locking system, No. of pos.: 17, Direction of rotation: Standard, contact connection type: Pin, Crimp connection, flange dimensions: 26 mm x 26 mm, coding: N, Item is lead-free in accordance with RoHS II without Exemption 6c (Pb < 0.1 %)

Your advantages

- · Solutions with cross-manufacturer compatibility for standard and fast locking systems
- · Modern, consistent design for highly convenient operation
- · Crimping connection: vibration- and temperature-resistant assembly
- · All housing can be fitted with pin or socket contacts
- · Safe use in the field, thanks to high degree of protection

Commercial data

Item number	1628496
Packing unit	1 pc
Minimum order quantity	1 pc
Sales key	AB30
Product key	ABRABM
Catalog page	Page 77 (C-2-2019)
GTIN	4055626622118
Weight per piece (including packing)	117.6 g
Weight per piece (excluding packing)	100.846 g
Customs tariff number	85366990
Country of origin	DE



1628496

https://www.phoenixcontact.com/us/products/1628496

Technical data

Notes

Order 17 x 1 mm crimp contacts separately Notes on operation Affety note WARNING: The connectors may not be plugged in or disconnected under load. Ignoring the warning or improper use may damage persons andror property. WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective protocuts immediately. Replace damaged products. Replais are not possible. *WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes. The qualified personnel may install and operate must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. The products are suitable for applications in plant, controller, and electrical device engineering. **When operating the connectors in outdoor applications, they must be separately protected against environmental influences. **Assembled products may not be manipulated or improperly opened. **Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). **When using the product in direct connection with third-party manufacturers, the user is responsible. **Por operating voltages > 50 V AC, conductive connector housings must be grounded **Ensure that the protective or functional ground has been properly connected. **Only use tools recommended by Phoenix Contact **The installation notes/Design in documents online on the download page at phoenixcontact.com/products must be observed for this product. **Operate the connector only when it is fully plugged in and interlocked. **Characte the connector only when it is fully plugged in and interlocked. **Characte the connector only when it is fully plugged in and interlocked. **Charact			
afety note WARNING: The connectors may not be plugged in or disconnected under load. Ignoring the warming or improper use may damage persons and/or property. • WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basic of electrical elenginering. They must observe the following safety notes. The qualified personnel must be familiar with the basic of electrical elenginering. The relevant symbol on the packaging indicates that only personnel familiar with electrical elenginering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 01001.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector only use tools recommended by Phoenix Contact • The installation notes/Design in documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interfocked. • Ensure that when laying the ca	Order information:	Order 17 x 1 mm crimp contacts separately	
WARNING: The connectors may not be plugged in or disconnected under load. Ignoring the warming or improper use may damage persons and/or property. • WARNING: Commission property functioning products only. The products must be regularly inspected for dramage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes: The qualified personnel must be familiering with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familier with electrical electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familier with electrical electrical engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mailing connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixocntact.com/products.) • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/197 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector. • Only use tools recommended by Phoenix Contact • The installation notes/Design in documents online on the download page at phoenixocntact com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed	Notes on operation	Please observe the derating curve.	
disconnected under load. Ignoring the warning or improper use may damage persons and/or property. • WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able the following safety notes. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperty opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoeniscontact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1975 § 411.13.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector. • Only use tools recommended by Phoenix Contact. • The installation notes/Design In documents online on the download page at phoenix contact. Com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interfocked. • Charter that when laying the cable, the	afety note		
The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenix connection with third-party manufacturers, the user is responsible. • For operating voltages > 500 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design in documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it.	Safety note	disconnected under load. Ignoring the warning or improper use	
operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenix contact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 01001-97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenix contact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it.		The products must be regularly inspected for damage. Decommission defective products immediately. Replace	
and electrical device engineering. When operating the connectors in outdoor applications, they must be separately protected against environmental influences. Assembled products may not be manipulated or improperly opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are	
must be separately protected against environmental influences. Assembled products may not be manipulated or improperly opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		· · · · · · · · · · · · · · · · · · ·	
opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenix contact. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.			
data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.			
manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		data of the standards listed (e.g. the ones listed in the product	
housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it.			
properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it. • The connector warms up in normal operation. Depending on the			
are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		·	
The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the		are applicable when combining several circuits in a cable and/or	
download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the		Only use tools recommended by Phoenix Contact	
 Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the 		download page at phoenixcontact.com/products must be	
connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the			
cable without twisting it. • The connector warms up in normal operation. Depending on the		connectors does not exceed the upper limit specified in the	



1628496

https://www.phoenixcontact.com/us/products/1628496

	warm up. In this case, the user is responsible for posting warnings (e.g. DIN EN ISO 13732-1:2008-12).
duct properties	
Product type	Circular connectors (device side)
terial specifications	
Flammability rating according to UL 94	V0
nnector	
miector	
nsulating body	
Coding	N
Insulation body material	PA 6.6
Insertion/withdrawal cycles	100
Connection method	Crimp connection
Contact switching type	Pin
Application	Signal
Number of positions	17
Direction of rotation	Standard
Connection profile	17
Contact diameter Signal contacts	1 mm
Litz wire cross-section Signal contacts min.	0.08 mm²
Litz wire cross-section Signal contacts max.	1 mm²
Nominal current per signal contact	8 A
Note	for max. connection cross section
Rated voltage Signal contact	125 V
Rated surge voltage	2 kV
Overvoltage category	III
Degree of pollution	3
Installation height	2000 m
lousing	
Thread type	M23
Type of locking	for standard and ONECLICK fast locking system
Pg screw connection	none
Mounting type	Front mounting (4x Ø 3.1 mm)
Flange dimensions	26 mm x 26 mm
Housing material	GD-Zn
Degree of protection (plugged in)	IP66 / IP68 (2 m / 24 h)

Environmental and real-life conditions

Am	bient	conditions
~111	DICIIL	COHUITIONS

, and one conditions		
Degree of protection	IP68	



1628496

https://www.phoenixcontact.com/us/products/1628496

Ambient temperature (operation)	-40 °C 105 °C (see to derating)
Permanent temperature	125 °C (DIN EN 60512-9-2 / 1000 h)





1628496

https://www.phoenixcontact.com/us/products/1628496

Drawings

Dimensional drawing

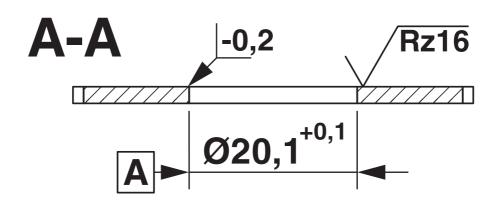

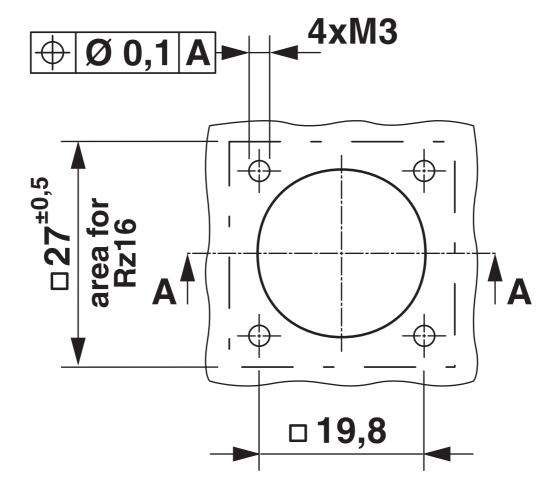


Installation dimensions



1628496

https://www.phoenixcontact.com/us/products/1628496

Schematic diagram

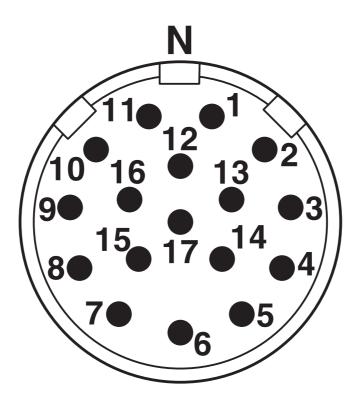


Connector pin assignment



1628496

https://www.phoenixcontact.com/us/products/1628496

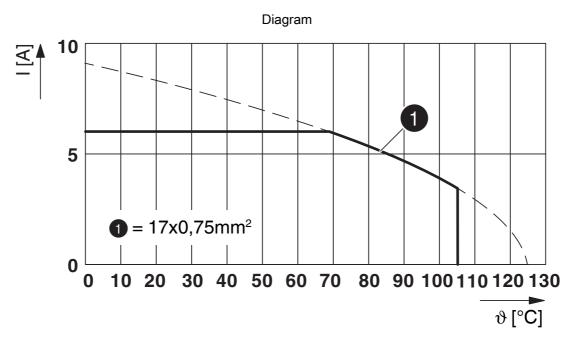

I = current strength, ϑ = ambient temperature, 17x 6 A



1628496

https://www.phoenixcontact.com/us/products/1628496

Approvals

To download certificates, visit the product detail page: https://www.phoenixcontact.com/us/products/1628496

cUL Recognized Approval ID: E335019-20141210				
	Nominal voltage U_N	Nominal current I _N	Cross section AWG	Cross section mm ²
	150 V	3.5 A	20	-

UL Recognized Approval ID: E335019-20141210		0141210			
		Nominal voltage U _N	Nominal current I _N	Cross section AWG	Cross section mm ²
		150 V	4.5 A	20	-

cULus Recognized



1628496

https://www.phoenixcontact.com/us/products/1628496

Classifications

ECLASS

	ECLASS-11.0	27440109
	ECLASS-12.0	27440109
	ECLASS-13.0	27440109
ET	TIM	
	ETIM 9.0	EC003569

UNSPSC



1628496

https://www.phoenixcontact.com/us/products/1628496

Environmental product compliance

EU RoHS

Fulfills EU RoHS substance requirements	Yes, No exemptions
China RoHS	
Environment friendly use period (EFUP)	EFUP-E
	No hazardous substances above the limits
EU REACH SVHC	
REACH candidate substance (CAS No.)	No substance above 0.1 wt%

Phoenix Contact 2025 @ - all rights reserved https://www.phoenixcontact.com

Phoenix Contact USA 586 Fulling Mill Road Middletown, PA 17057, United States (+717) 944-1300 info@phoenixcon.com